

Icecore 1 - Soft Postmix Beverage (Cold / Ambient Carbonated) + Alcoholic Beverage (R290) Hydrocarbon Shelf Cooler

Installation Manual

Original instructions

English Version – EN

German - DE

Norwegian - NOR

Swedish - SWE



Appliance types covered:

Model

02-1310-xx

02-3000-xx

01-3001-xx

Type

Icecore 1 Soft Drink Postmix (Ambient)

Icecore 1 Soft Drink Postmix (Cold Carbonated)

Icecore 1 Beer Soft Drink Premix

PART No.

REVISION:

ISSUE DATE:

PI56788-DE

No. 1

22/2/2018

Dear Customer

Please read the User Guide and Installation Manual carefully before operating this unit.

Please keep the User Guide and Installation safe and with the unit.

Examine the equipment immediately after supply for transport damage. Contact your equipment supplier and/or carrier if necessary. Damage, which arises by inappropriate treatment or operation, is not subject to guarantee \ warranty.

Equipment manufactured or supplied by Welbilt (Halesowen) Limited complies with the current legislation and standards of the EU and represents the current standard of technology. Safety during operation may only be assured by following the instructions in this guide.

Reproduction of any kind without previously written permission of Welbilt (Halesowen) Limited is prohibited.

Welbilt (Halesowen) Limited typically designs for a 5-10 year product lifetime dependent upon the type of equipment.

Section 1 – Warnings	4-8
Section 2 – General description and function of the unit	9-10
Section 3 – Installation & Commissioning of the unit Wiring and system schematics	11-22
Section 4 – Maintenance and cleaning	23-28
Section 5 – Spare parts list	29-32
Section 6 – Fault finding charts	33-36
Section 7 – Technical Specification	37-38
Section 8 – Declaration of conformity	40


Section 1 – Warnings

WARNING: THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.

WARNING: THERE ARE NO END USER SERVICEABLE PARTS. ANY FAULT OR PROBLEM WITH THE EQUIPMENT MUST ONLY BE RECTIFIED BY A QUALIFIED SERVICE ENGINEER.

WARNING: ALTHOUGH EVERY CARE IS TAKEN DURING MANUFACTURE, DAMAGE TO THE METALWORK DURING TRANSPORT, INSTALLATION AND GENERAL USE MAY OCCUR. THIS MAY RESULT IN SHARP OR JAGGED EDGES. AVOID CONTACT WITH METAL EDGES OR OTHER POTENTIAL HAZARDS.

WARNING: PLEASE REFER TO MANUAL HANDLING GUIDELINES WHEN LIFTING THIS EQUIPMENT.

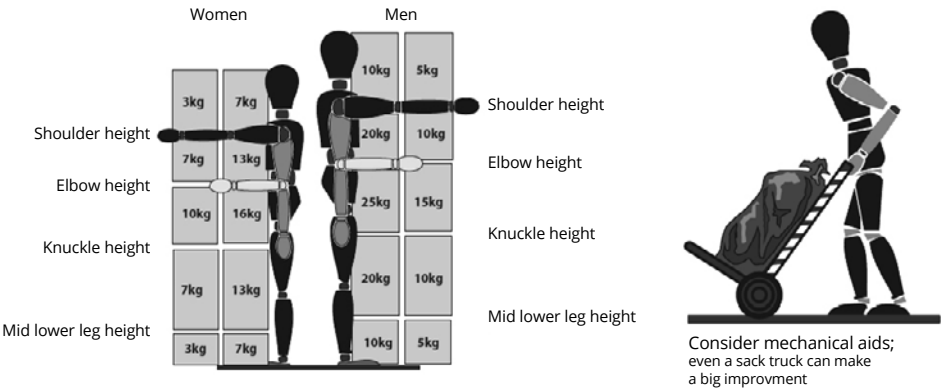

BEFORE LIFTING OR MOVING THIS EQUIPMENT IT IS RECOMMENDED THAT ALL PERSONS PERFORMING THESE TASKS SHOULD RECEIVE RELEVANT TRAINING IN SAFE HANDLING.

ALL PERSONS LIFTING OR MOVING THIS EQUIPMENT MUST BE WEARING THE CORRECT PERSONAL PROTECTIVE EQUIPMENT.

TO PREVENT PERSONAL INJURY WHERE PRACTICAL, TRANSPORTING OF THE UNIT OVER EXTENDED DISTANCES SHOULD BE DONE USING A MECHANICAL AID.

WHEN NOT USING A MECHANICAL AID, WELBILT RECOMMEND A 2 MAN LIFT.

ALWAYS TRANSPORT THE UNIT IN THE CORRECT UPRIGHT POSITION, NEVER ON ITS SIDE OR TOP.

IT IS UNSAFE TO LIFT OR ATTEMPT TO MOVE THE COOLER DURING CLEANING OR AT ANY OTHER TIME WHILE THE UNIT IS OPERATING.

WARNING: ONLY USE EQUIPMENT FOR ITS INTENDED USE AS DESCRIBED IN THE INSTALLATION MANUAL. THERE ARE NO OTHER RECOMMENDED USES FOR THIS EQUIPMENT. UNINTENDED USE OF THE EQUIPMENT WILL INVALIDATE YOUR WARRANTY.

WARNING: WELBILT (HALESOWEN) LIMITED HAS DONE A COMPLETE QUALITY AND FUNCTION CHECK ON EACH UNIT. NEVERTHELESS, LEAKAGES ON WATER LINES DURING OPERATION CAN NOT BE EXCLUDED TOTALLY. REGULARLY INSPECT THE EQUIPMENT FOR SIGNS OF LEAKAGE.

WARNING: DO NOT DAMAGE THE REFRIGERANT CIRCUIT.

WARNING: KEEP ALL VENTILATION OPENENINGS IN THE APPLIANCE CLEAR OF OBSTRUCTION.

WARNING: THIS EQUIPMENT CAN CONTRIBUTE TO THE AMBIENT TEMPERATURE. MAXIMUM AND MINIMUM OPERATIONAL AMBIENT TEMPERATURES.

MINIMUM 5 °C
MAXIMUM 32 °C

FAILURE TO KEEP THE CONDENSER CLEAN WILL RESULT IN THE UNIT MALFUNCTIONING AND OVERHEATING. IF THIS HAPPENS THE SAFETY CUT OUT ON THE COMPRESSOR WILL OPERATE, PREVENTING THE UNIT FROM WORKING UNTIL SUCH TIME AS IT HAS COOLED DOWN. IF THIS HAPPENS THE CONDENSER AND FILTER (IF FITTED) MUST BE CLEANED BEFORE USING AGAIN.

WARNING: DO NOT USE MECHANICAL DEVICES OR OTHER MEANS TO ACCELERATE THE DEFROSTING PROCESS, OTHER THAN THOSE RECOMMENDED BY THE MANUFACTURER.

WARNING: THE EVAPORATION TEMPERATURE IN THE REFRIGERATION CIRCUIT CAN TYPICALLY BE -10°C. WITHOUT TAKING PREVENTATIVE STEPS THIS CAN BE A POTENTIAL SOURCE OF INJURY.

WARNING: THE COMPRESSOR, CONDENSER, HIGH PRESSURE REFRIGERATION TUBES AND MOTORS WILL BECOME HOT DURING OPERATION. CONTACT WITH THESE PARTS DURING OPERATION SHOULD BE AVOIDED.

WARNING: SOME COMPONENTS WILL ROTATE FOR A SHORT PERIOD AFTER THE POWER TO THE UNIT HAS BEEN SWITCHED OFF. THESE COMPONENTS SHOULD BE AVOIDED UNTIL STATIONARY.



Warning

THIS EQUIPMENT IS CHARGED WITH R290 REFRIGERANT (PROPANE).

ONLY QUALIFIED SERVICE ENGINEERS HOLDING A VALID HANDLING CERTIFICATE FOR CARE 40 (PROPANE) CAN WORK ON THE REFRIGERATION SYSTEM OF THIS EQUIPMENT. PLEASE READ THE INFORMATION BELOW BEFORE ANY WORK IS CARRIED OUT.

Refrigeration R290 (Care 40, Propane)

Note: Only engineers who have been trained in the safe handling and use of hydrocarbon refrigerants should work on this system.

- Work on this system in a well ventilated area or outside.
- Use a local leak detector to indicate if there is hydrocarbon in the air around the system (place it at a low level as HCs are heavier than air)
- Ensure there are no sources of ignition (flames or sparking electrical components) within 3m (10 feet) of your work area.
- If replacing components use like for like replacements.
- Take great care when brazing to ensure all HC has been removed from the system.

Use refrigerant grade propane (R290 or Care 40)



WARNING: DO NOT DISPOSE OF THE UNIT WITHOUT FIRST REMOVING ALL R290 REFRIGERANT. THIS PROCESS CAN ONLY BE PERFORMED BY AN ENGINEER QUALIFIED TO HANDLE HYDROCARBON REFRIGERANTS.

WARNING: THIS EQUIPMENT SHOULD BE FITTED WITH A CORRECTLY FUSED AND WIRED 13 AMP PLUG FITTED WITH A 5 AMP FUSE OR ALTERNATIVELY A STANDARD EURO PLUG TO IEC83:1975. BEFORE COMMENCING ANY CLEANING ISOLATE THE UNIT BY:

1. SWITCH OFF THE SOCKET THAT THE PLUG IS INSTALLED INTO.
2. REMOVE THE PLUG FROM THE SOCKET.

ALL INSTALLATIONS MUST BE CHECKED THAT THEY MEET LOCAL ELECTRICAL REGULATIONS AND NATIONAL CODES BEFORE THE APPLIANCE IS TURNED ON.

WARNING: IF THE MAINS LEAD FITTED TO THIS EQUIPMENT IS IN ANY WAY DAMAGED IT MUST BE REPLACED BY WELBILT (HALESOWEN) LIMITED, OUR SERVICE AGENT OR A QUALIFIED ELECTRICAL ENGINEER. THE MAINS LEAD CONNECTION IS A 'Y' TYPE.

WARNING: THIS EQUIPMENT MUST BE EARTHED.

WARNING: THE CARBONATOR IS AN INTEGRAL PART OF THE UNIT AND IT SHOULD BE NOTED THAT THE CARBONATION PROCESS INVOLVES THE USE OF HIGH PRESSURE AND POTENTIALLY NOXIOUS GAS. AS SUCH SUE CARE MUST BE TAKEN WHEN USING THE EQUIPMENT.

WARNING: CARBON DIOXIDE LEAKS ARE POTENTIALLY FATAL IF CONCENTRATIONS RISE TO A DANGEROUS LEVEL. IN VIEW OF THIS THE INSTALLATION SHOULD BE REGULARLY CHECKED FOR INTEGRITY AND THE GENERAL AREA OF INSTALLATION PROPERLY VENTILATED AT ALL TIMES.

IT IS RECOMMENDED THAT A CO₂ LEAK DETECTOR IS FITTED IN THE VICINITY OF THE EQUIPMENT.

WELBILT RECOMMEND THAT ONLY 5 OR 7 KG CO₂ CYLINDERS BE USED WITH THE ALBI APPLIANCE.

THE CARBON DIOXIDE CONCENTRATION IN A ROOM AFTER A TIME - T - CAN BE CALCULATED AS.

$$C = (Q / N V) [1 - (1 / E N T)] + (C_0 - C_i) (1 / E N T) + C_i (1).$$

WHERE:

C = CARBON DIOXIDE CONCENTRATION IN THE ROOM (M³/M³)

Q = CARBON DIOXIDE SUPPLIED TO THE ROOM (M³/H)

V = VOLUME OF THE ROOM (M³)

E = THE CONSTANT 2.718

N = NUMBER OF AIR SHIFTS PER HOUR (1/H)

T = TIME (HOUR, H)

C_i = CARBON DIOXIDE CONCENTRATION IN THE INLET VENTILATION AIR (M³/M³)

C₀ = CARBON DIOXIDE CONCENTRATION IN THE ROOM AT START,

T = 0 (M³/M³)

THE VENTILATION IN THE ROOM WHERE THE UNIT IS INSTALLED SHOULD NOT ALLOW THE CO₂ CONCENTRATION TO EXCEED 5000PPM WORK PLACE 8 HOUR EXPOSURE LIMIT.

BEFORE INSTALLATION A WORK PLACE RISK ASSESSMENT MUST BE PERFORMED CONSIDERING THE RISK ASSOCIATED WITH THE USE OF CO₂.

CO2 CYLINDER SAFETY INFORMATION



**DANGEROUS
WARNING**



1. ALWAYS

connect the CO₂ or gas cylinder to a REDUCING VALVE.

2. NEVER

try to connect cylinder directly to product container.

3. NEVER

interconnect soft drinks, CO₂ or
gas cylinder equipment with other equipment.

4. ALWAYS

secure cylinder upright whilst in use.

5. ALWAYS

keep cylinder away from heat.

6. NEVER

drop or throw cylinders.

7. NEVER

try to unscrew fittings from containers.

8. ALWAYS

ventilate area after CO₂ leakage.

This information should be displayed in a position adjacent
to the CO₂ supply cylinder at all times.

WARNING:

IN ORDER TO COMPLY WITH UK WATER REGULATIONS A WRAS APPROVED
DOUBLE NON RETURN VALVE MUST BE INSTALLED ON THE INCOMING
MAINS WATER SUPPLY BEFORE THE APPLIANCE IN THE SYSTEM.

FOR INSTALLATION OF EQUIPMENT ACROSS EUROPE A CLASS 3
PROTECTIVE DEVICE AS DEFINED BY EN1717, APPROVED FOR THE COUNTRY
OF INSTALLATION MUST BE INSTALLED ON THE INCOMING MAINS WATER
SUPPLY BEFORE THE APPLIANCE IN THE SYSTEM.

WARNING:

DO NOT DISPOSE OF THIS EQUIPMENT AS UNSORTED MUNICIPAL WASTE,
CONTACT YOUR DISTRIBUTOR OR SERVICE AGENT FOR THE COLLECTION
AND SAFE DISPOSAL OF THIS EQUIPMENT. WELBILT (HALESOWEN) LTD. IS A
REGISTERED MEMBER OF A WEEE PRODUCER COMPLIANCE SCHEME.

Section 2 – General description and function of the unit

- This equipment is a hermetically sealed refrigeration unit in the form of a shelf cooler.
- This equipment uses hydrocarbon refrigerant (R290), and having intelligent ice bank water bath control, the ICECORE-1 is capable of delivering substantial energy savings over conventional shelf coolers, whilst providing the same level of service.
- This equipment is designed to be installed under bars & counters and carbonate, recirculate and chill mains potable water and chill soft drink syrup.
- This equipment should be installed in the system between the bulk storage area and the drinks dispense font(s).

For Carbonated Soft Drinks Applications:

- This equipment provides cooling to the water and up to 4 syrup products by means of cooling coils within a water filled tank in which an ice bank will form when the unit is switched on. This ice bank size is controlled by the electronic controller and is factory pre-set.
- This equipment has an integral carbonator which carbonates mains potable water using CO₂. The carbonated water is recirculated through cooling coils from the carbonator via an internal recirculation pump through a python to a dispense font(s).

For Alcoholic Beverage applications:

- The equipment can provide cooling for p to 3 products and can recirculate cooling water from the water bath via an internal recirculation pump through a python to a dispense font(s) and is capable of producing condensation on the dispense font(s).
- There are **NO** other recommended uses for this equipment.

WAYS THE EQUIPMENT SHOULD NOT BE USED

- This equipment should be used only in accordance with the instructions above. It should not be used for any other purpose.
- Do not use the product coils to chill other products than those stated above.
- Do not operate the equipment in a wet environment, any spillage must be wiped dry immediately.

- The unit should not be installed in small enclosed spaces such as cupboards or pantries, where fresh air flow is restricted.
- Keep the unit free from excessive heat and cold. Minimum and maximum ambient temperatures are:

Minimum: 5°C

Maximum: 32°C

- Misuse or use of the equipment for any other purpose than those identified above will invalidate any warranty, and may constitute a danger to yourself and others.

Section 3 – Installation & Commissioning

Installation and connection instructions for putting this equipment to use.

Unpack the unit from its transportation packing and visually check for any signs of damage. Place the unit in a convenient location in the cellar or room where it is to be sited. Always site the cooler on a dry, level surface to avoid spillage and any unnecessary noise or vibration. If mounting the unit off the floor, ensure that:-

- The surface is clean, flat and dry
- The surface is of sufficient size to support the unit without it overhanging,
- The surface can support the weight of the full, operational unit
- The unit, when mounted, is stable and cannot slip or be pushed off the surface. If necessary, secure the unit and/or mounting surface to a solid fixing point such as an outside wall.
- Do not site unit beside heat sources, e.g. dishwashers.
- Make sure that a mains electricity supply is within 2 meters and in an area allowing free circulation of air.
- The unit should be fitted with a correctly fused and wired 13 amp plug fitted with a 5 amp fuse or alternatively a standard Euro Plug to IEC83:1975.

Installation of Cold Carbonated appliances

1. Connect the mains water feed to the connection at the rear of the unit labelled WATER IN. It is recommended that the maximum \ minimum water pressure to the unit is 50 \ 20 psi (0.344MPa/0.138MPa). An inline water pressure regulator set at 50 psi and a stop tap or other water shut off device should also be installed in line to shut off the water feed to the unit should an internal leak occur within the unit. (Do not turn water on yet)
2. Connect the CO2 feed to the connection labelled CO2 IN at the rear of the unit. It is recommended that the maximum \ minimum CO2 pressure supply to the unit is 80 \ 75 psi (0.55MPa/0.52MPa). At pressures below this, it is possible that the unit will not carbonate the water correctly resulting in flat drinks.(Do not turn the CO2 on yet)
3. Remove the bath filler cap and fill the unit with clean cold water until the top evaporator coil is covered.

Note: *Welbilt recommend that the water bath overflow is plumbed to drain*

4. Dose the water bath (IF REQUIRED) with Aquacid CS cooler water control agent in accordance with instructions supplied on the bottle, taking note of health & safety instructions.
5. Connect the syrup inlet lines to the syrup coils labelled coils 1 - 4.

6. Connect the appropriate lines within the python to the cooler, identifying from the labels on the cooler, the soda recirc flow and return, the other end of the syrup coils 1-4 and the still water coil (if required). Insulate all connections made using appropriately sized tube insulation.
7. Connect the other end of the python to the dispense head.


Note: Ensure that the recirc run is not excessive, and that the python is routed away from external heat sources. Maximum lift for the recirc pump is 6m. Maximum recommended run is 12 metres.

8. When all connections have been made, turn on the CO2 supply and allow the system to fill with CO2. Lift the relief valve on the top of the integral carbonator bowl which is found underneath the coil deck lid to expel any air from the bowl.

Note: Any unused syrup coils should remain capped both for personal protection, and to prevent the ingress of debris.

Note: If the fridge unit is to be operated to make the ice-bank whilst the installation is being completed, isolate the carbonator pump and the soda recirc pump by switching off the two switches on the end panel. If the carbonator pump switch is left in the off position, the time out feature will operate after 1min 30 secs, the LED will flash and the soda recirc pump will cut out. To reset, the power to the unit must be switched off for 5 seconds and then back on .

CARB PUMP AND SODA PUMP ISOLATION SWITCH LOCATION

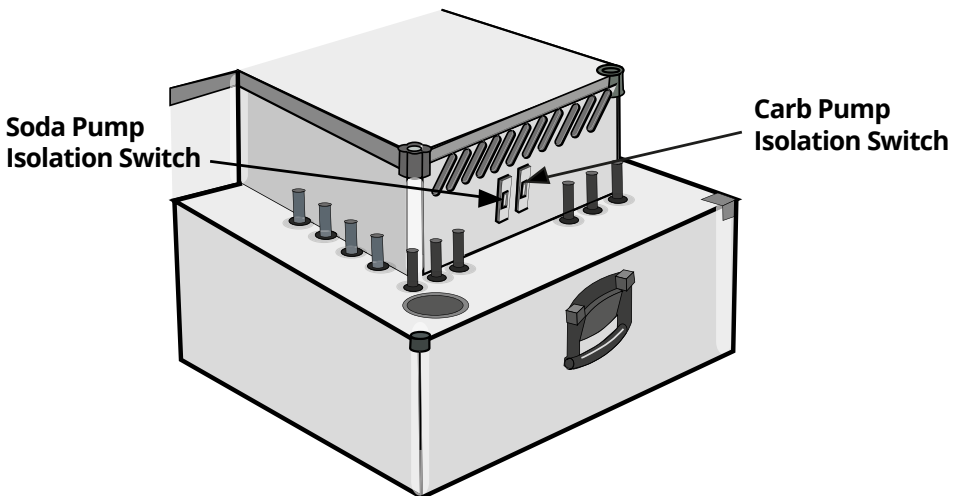

9. Operate the dispense valves to expel any air from the python.
10. Check the installation for any gas leaks. Rectify if any are found before proceeding.
11. Ensure the soda pump switch is in the off position.
12. Turn on the water supply and again check for leaks.
13. Ensure the carbonator pump switch is in the ON position.
14. Plug the unit into the mains supply and switch on.

Note: *There is approximately a one minute delay from switching the cooler on, to the compressor starting.*


15. Allow the carbonator to fill and then by opening the dispense valves, bleed the gas pockets from the system until the python is full of carbonated water.
16. Switch the soda recirc pump on and allow the system to make its ice bank and chill the python down.
17. Connect the syrup supply and brix the system when down to temperature.

BI-LEVEL CARBONATOR CONTROLLER TIME OUT SAFETY FEATURE

The carbonator has a time out feature that will shut the carbonator pump off and the soda recirculation pump off if the bowl does not fill in 1 min 30 seconds. This is to protect both pumps in the event of the water starvation.

If the time out feature operates, the small LED on the front panel will flash and the carbonator pump and soda recirc pump will shut off. To reset, ensure the water supply has been restored, turn off the power to the unit for 5 seconds and then switch back on. If the bowl still fails to fill, then the fault must be investigated and rectified before the unit can be operated.

Location of time out LED

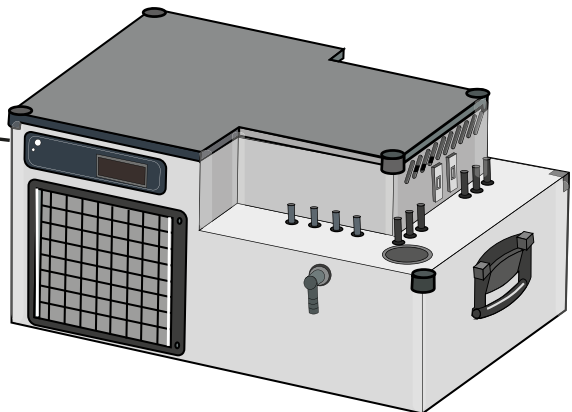

Installation of Ambient Carbonated appliances

1. Connect the carbonated water feed from the ambient carbonator to the tube at the front of the unit labeled CARB WATER IN. It is recommended that the maximum/minimum CARBONATED WATER pressure to the unit is 80/75 psi (0.55MPa/0.52MPa).
2. Remove the red bath filler cap and fill the water bath with clean cold water until the top evaporator coil is covered which can be seen through the aperture.

Note: *Welbilt recommend that the water bath overflow is plumbed to drain*

3. Dose the water bath (IF REQUIRED) with Aquacid CS cooler water control agent in accordance with instructions supplied on the bottle, taking note of health & safety instructions.
4. Connect the syrup inlet lines to the syrup coils labeled coils 1- 4.
5. Connect the appropriate lines within the python to the cooler, identifying from the labels on the cooler, the soda recirc flow and return, the other end of the syrup coils 1-4 and the still water coil (if required).
Insulate all connections made using appropriately sized tube insulation.
6. Connect the other end of the python to the dispense head.


Note: *Ensure that the recirc run is not excessive and that the python is routed away from external heat sources. Maximum lift for the recirc pump is 6m. Maximum recommended run is 12 meters.*

7. When all connections have been made, turn on the CO2 supply to the ambient carbonator and allow the system to fill with CO2. Lift the relief valve on the top of the carbonator bowl in the ambient carbonator to remove any trapped air.

Note: *Any unused syrup coils should remain capped both for personal protection, and to prevent the ingress of debris.*

Note: *If the fridge unit is to be operated to make the ice-bank whilst the installation is being completed, isolate the soda recirc pump by switching off the switch on the end panel as shown below.*

SODA PUMP ISOLATE SWITCH LOCATION

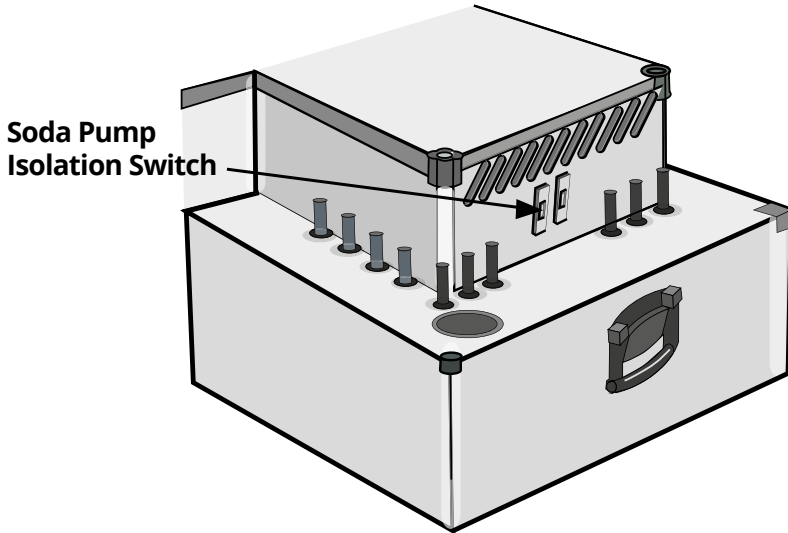

8. Operate the dispense valves to expel any air from the python.
9. Check the installation for any gas leaks. Rectify if any are found before proceeding.
10. Ensure the soda pump switch is in the off position.
11. Turn on the water supply to the ambient carbonator and switch the carbonator on allowing it to fill until it cuts out. Again check for leaks.
12. Plug the unit into the mains supply and switch on.

Note: *There is approximately a one minute delay from switching the cooler on, to the compressor starting.*

13. Open the dispense valves, & bleed the gas pockets from the system until the python is full of carbonated water.
14. Switch the soda recirc pump on and allow the system to make its ice bank and chill the python down.
15. Connect the syrup supply and brix the system when down to temperature.

Installation of Alcoholic Beverage appliances

1. Remove the bath filler cap and fill the water bath to the overflow with cold clean water. Catch any excess water flowing out of the overflow in an appropriate container to avoid spillage.
2. Connect the appropriate tubes within the python to the cooler and dispense

font using appropriate fittings, identifying the connections from the labels on the cooler and font. Insulate all connections made using appropriately sized tube insulation to prevent condensation.

3. Ensure that the python run is not excessive, and is routed away from external heat sources. Maximum lift is 3.5 meters and maximum run is 6 meters when using 3/8" o/d tubing for recirculation. Longer runs are possible if 1/2" o/d tubing is used.
4. Connect the tubing from the product supply to the cooler identifying the connections from the labels on the cooler and pressurize the lines with product ensuring there are no leaks.
5. Do not block the overflow and ensure that it is facing downwards.

Note: *Welbilt recommend that the bath overflow is plumber to drain*

6. Plug the cooler's mains lead into the mains socket and switch the unit on.
7. Ensure that the water is recirculating to the font and back and ensure there are no leaks from any of the connections.
8. The water level must be checked and topped up once the lines have been primed.

Note: *If the fridge unit is operated to make the ice-bank whilst the installation is being completed, fit a short loop to the recirculation pump line and leave the pump running whilst the ice is building. This will stop any over-icing or ice quality problems that might otherwise occur.*

ELECTRONIC CONTROLLER SETTINGS AND ADJUSTMENT INSTRUCTIONS.

DFX SERIES 1E CONTROLLER AND PROBE:

The controller is electronic, and is supplied with a temperature probe. The cut-out and cut-in temperatures are factory set at Welbilt (Halesowen) Limited, and should not require any adjustment.

They are as follows:

- **Cut-out -2.0°C**
- **Cut-in +0.5°C**

However, the controller has a built-in feature that allows each individual account operating profile to be set-up to optimise power usage. This feature conserves energy by powering down the cooler overnight, during the account closed period. There is a 7-day timer in the software, with factory default settings which shut the cooler down at 11:00pm and re-start the cooler at 11:00am. For accounts where this profile is inappropriate, the timer must be set-up to suit the individual account, in order to maximise energy savings. Please refer to the 'Dfx Series 1e Instruction Manual' sent with the unit for guidance on setting up this feature.

Adjustment Guide:

Note: The Cut-out (1.) and Differential temperature (2.) are factory set at Welbilt (Halesowen) Limited. Any adjustment to these settings may affect the performance, energy saving characteristic and ice weight of the unit. It is not recommended that either of these parameters is adjusted without consultation with Welbilt (Halesowen) Limited Engineering Department.

1. To adjust the Cut-out temperature:

- a. Carefully remove the lens from the front of the controller.
- b. Press and hold the button. Release after 2 seconds.
- c. The display will change from Current temperature to Current set-point.
- d. Adjust the temperature up or down using the (+) or (-) button.
- e. To store the new set-point, scroll through all menu options to the screen which displays The controller will then revert to the current temperature.
- f. The display will then show the differential temperature. If no differential adjustment is necessary, replace the lens. The unit will revert to the Current Temperature after 30 seconds.

2. To adjust the differential (cut-in) temperature:

- a. Follow steps (a) and (b) above.
- b. The display will change from Current Temperature to Current Set-point.
- c. Press and hold the **S** button again. Release after 2 seconds.
- d. The display will change from current set-point to current differential.
- e. Adjust the temperature up or down using the (+) or (-) button.
- f. To store the new set-point, scroll through all menu options to the screen which displays The controller will then revert to the current temperature.
- g. The display will then show the Diagnostic Mode, or 9999. Ignore this mode. Replace the lens. The unit will revert to the Current Temperature after 30 seconds.

Example: If the cut-out temperature is set at -2.0°C, the differential must be set to 2.5°C to cause the unit to cut-in at 0.5°C.

3. To adjust the opening and closing hours:

Note: This feature allows up to 2 opening and closing sessions per day. The Welbilt default setting assumes a single 13-hour operating profile per day, with a 10-hour shutdown period at night. However, instructions are included on how to set-up a second dispense period per day, if required.

Opening and closing hours set-up, beginning Sunday:

- a. Carefully remove the lens from the front of the controller.
- b. Press and hold the (S) button. Release after 2 seconds.
- c. The display will change from Current Temperature to Current Set-point.
- d. Continue to scroll through the menu, by pressing the (S) button for 2 seconds, then releasing, until the display shows "HOUR".
- e. Press and release the ⏮ button to enter the Opening/Closing hours mode.
- f. The display begins with Sunday (displayed as sun). Note: the first 3 letters of each day is displayed digitally by LEDs, and is not particularly easy to decipher for some of the days.
- g. To adjust the trading hours for Sunday, in 10 minute increments, follow this procedure....
- h. Press and release the ⏮ button again. A small LED flashes in the top left-hand corner of the display. This is the Opening Time.
- i. Adjust the time up or down by using the (+) or (-) buttons.
- j. When the desired time is displayed, press and release the ⏮ button again.
- k. The top left LED is extinguished, and a small LED flashes in the bottom left-hand corner of the display. This is the **Closing Time**.
- l. Adjust the time up or down by using the (+) or (-) buttons.
- m. When the desired time is displayed, press and release the ⏮ button again.
- n. The bottom left LED is extinguished, and a small LED flashes in the top right-hand corner of the display. This is the second opening time for Sunday.

Single opening/closing profile per day:

- o. If no 'Second Opening Time' is required, press and release the (+) button until the time scrolls past 24:00, and the next increment displayed is "**OFF**".
- p. Press and release the ⏮ button twice to save the settings and move on to the next day (Monday).

Two opening and closing profiles per day:


- q. If a 'Second Opening Time' and 'Closing Time' are required on the same day, this action should follow stage (n) above....
- r. Adjust the 'Second Opening Time', using the (+) or (-) buttons.
- s. When the desired time is displayed, press and release the ⏮ button again.
- t. The top right LED is extinguished and a small LED flashes in the bottom right-hand corner of the display. This is the Second Closing Time.
- u. Adjust the time by using the (+) or (-) buttons.
- v. When the desired time is displayed, press and release the ⏮ button again.
- w. The display will now show Monday (displayed as mon).

Rest of the week...


- x. Use the same procedure to adjust opening and closing hours for each day.
- y. When the necessary adjustments have been made for all 7 days, press and release the button. The display will show Python Refresh Mode (displayed as pytn). Ignore this mode.
- z. Carefully replace the lens. The display will revert back to Current Temperature within 30 seconds.

No other adjustments should be necessary. Please contact Welbilt (Halesowen) Limited before changing any other parameters, as they may impact on energy savings, performance and ice build.


02-1310-xx Icecore 1 Soft Drink Postmix (Ambient) Wiring Schematic

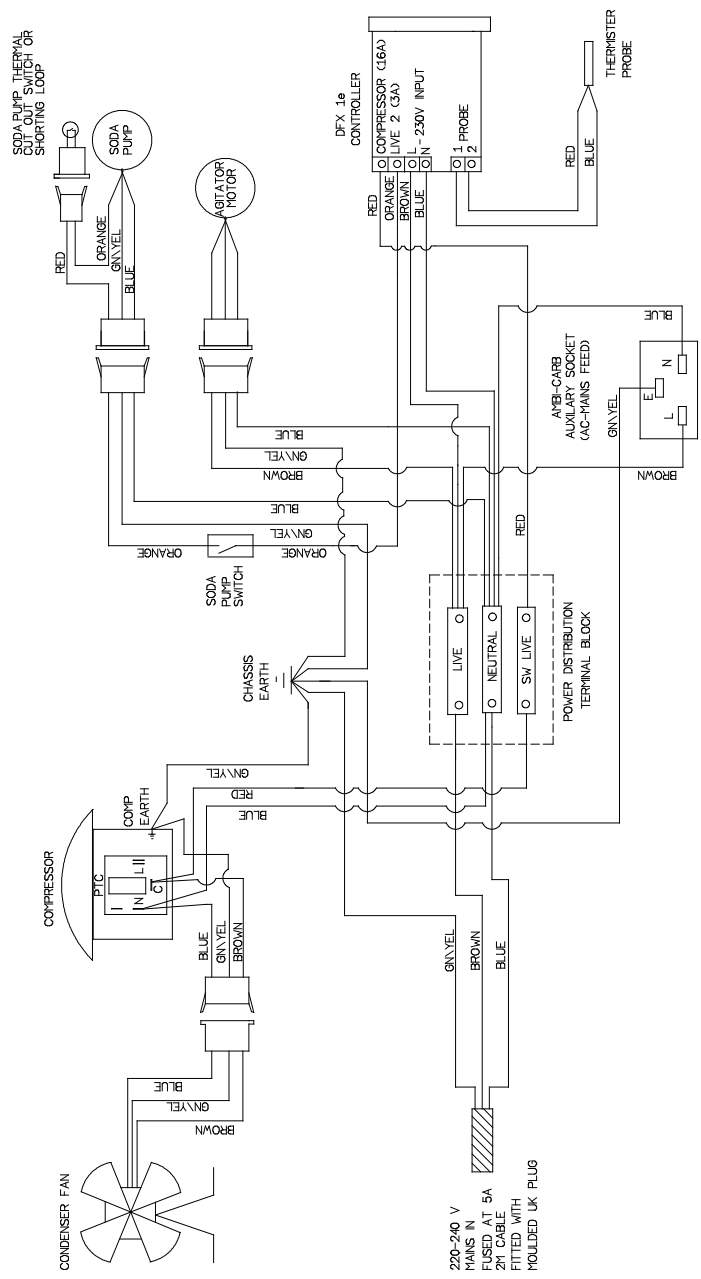

02-3000-xx Icecore 1 Soft Drink Postmix (Cold Carbonated)
Wiring Schematic

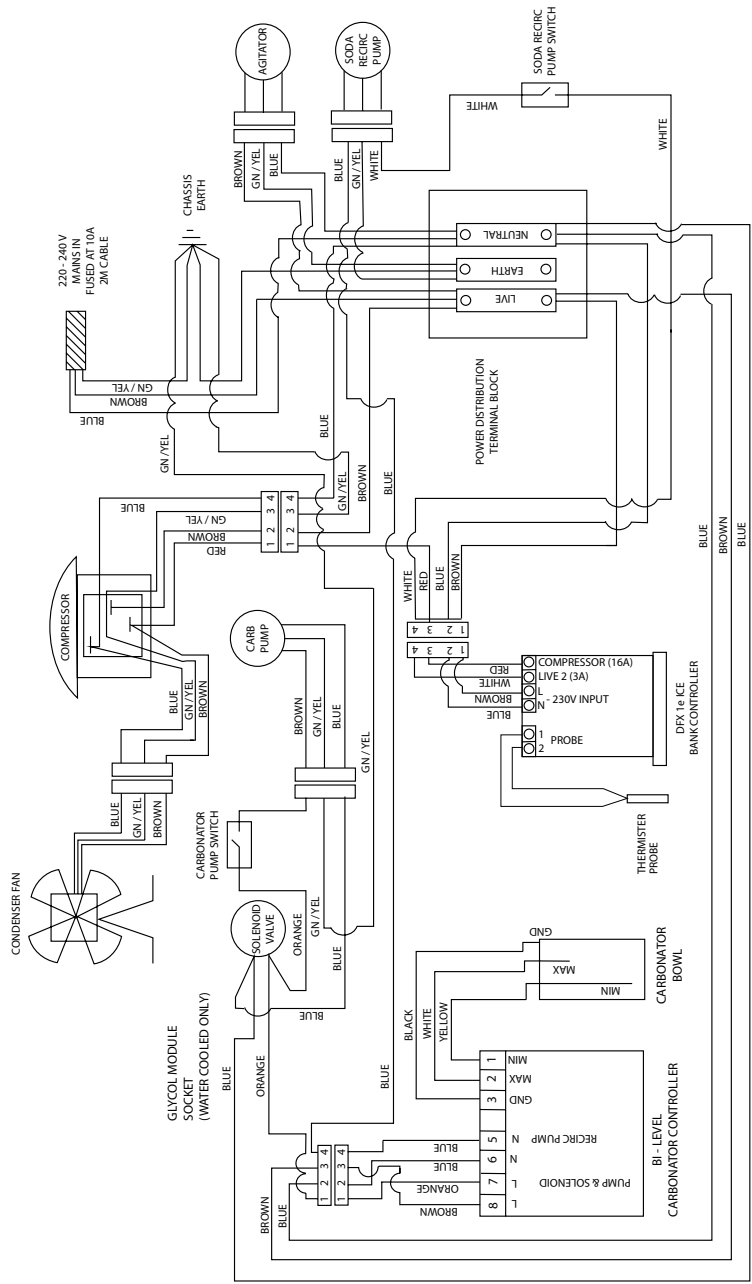

01-3001-xx Icecore 1 Beer Soft Drink Premix Wiring Schematic

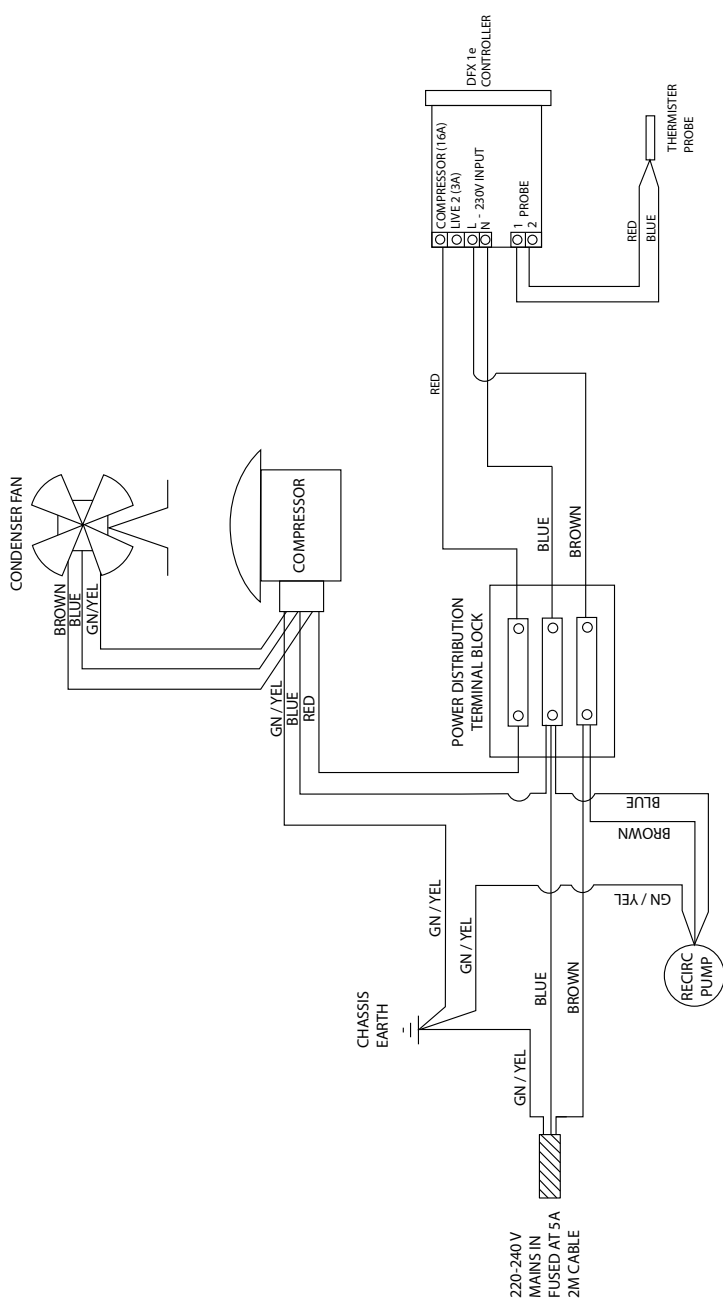

Section 4 – Maintenance and cleaning

- Service & Maintenance of the equipment should only be carried out by Welbilt (Halesowen) Limited. trained, competent, technicians, abiding by all the relevant statutory regulations and industry recommendations.
- Before removing the panels from the equipment the mains supply must be disconnected, either by removal of the plug from the wall socket, or in the case of hard wired equipment, switched off at the isolator. In both cases the equipment must be locked off to prevent the equipment inadvertently being powered up.
- Live testing must be avoided wherever possible, in most cases components can be tested with a multi-meter or insulation tester. Where live testing becomes necessary, all possible precautions to prevent injury to the maintenance technician and other people within the vicinity must be taken.
- In the event of the unit freezing up, disconnect the unit from the mains power supply and leave the unit to defrost until all the ice in the water bath has disappeared. Check the plumbing on the unit for leaks, (in the event of a leak call your service provider). If the unit has no leaks, reconnect the power to the unit and leave for 2 hours to rebuild the ice bank. Check for normal operation of the unit. In the event that the unit freezes up a second time or fails to operate as normal you **MUST** notify your service provider of a fault with the system.

WARNING:

- Persons performing cleaning/ sanitizing operations **MUST** be competent and fully trained in safe methods of use of cleaning/sanitising agents and their applications.
- Personal protective equipment should always be used.
- Flush sanitising solution from the unit thoroughly. Residual cleaning fluids or chemicals left in the system could create a health hazard.
- Do not use a water jet or steam hose to clean the appliance at any time.
- Regarding the cleaning and sanitising procedures please refer to national/EU regulations.
- The appliance must be thoroughly sanitised upon installation and before commissioning.
- For reasons of hygiene it is necessary that the system be flushed thoroughly after extended periods without use.

For the UK please follow the procedure below:

BASIC INSPECTION CHECKS BY THE END USER

DAILY:

1. Remove the dispense nozzle from the dispense valve and sanitise using unscented bleach or commercial sanitizer with hot water to a concentration of 100ppm available chlorine.

2. Empty the drip trays and sanitise as above together with the cup-rest.
3. Remove any splashed product from the dispense area.

WEEKLY:

There is no end user training required on this appliance other than understanding the weekly basic checks for safe unit operation. It is not recommended that the end user makes any adjustments or carries out any maintenance other than:

1. Visually check the condition of the mains lead and plug.
2. Visually check the unit and its pipework for evidence of leaks.
3. For Alcoholic Beverage applications clean and sanitize the cooling coils and product lines using a proprietary cleaner/sanitizer of the Alkaline Hypochlorite type, in accordance with the manufacturer's recommendations.

Welbilt recommends the use of "Pipeline" beer line cleaner, which changes colour according to the condition of the product lines. It is available from beer and soft drinks wholesalers, or direct from:

Chemisphere UK Ltd, 143-149 Bath Road, Kettering, Northants NN16 8NE.

METHOD OF POWER ISOLATION

1. Switch off the unit at the plug socket.
2. Remove the plug from the socket.

IMPORTANT – Always replace the mesh filter and securing grille after cleaning.

MONTHLY:

1. Isolate the appliance from the mains power supply when maintaining the equipment.
2. Remove any extraneous debris from the unit or its casing using a vacuum cleaner or brush.

TWICE ANNUALLY:

1. Isolate the unit from the mains electricity supply.
2. Clean and sanitize the product lines following the syrup suppliers\service providers instructions. Welbilt recommend sanitisation of the potable water circuit every 6 months when chlorine is not added to the municipal mains potable water supply. Cleaning with an off the shelf proprietary agent should have a 30 minute soak time minimum.


ANNUALLY:

1. Clean the condenser - (insert here information on cleaning the condenser from earlier note)
2. Check the BRIX ratio
3. Dose the water bath with a bacterial growth inhibitor such as Aquacid, as per the growth inhibitor manufacturer's instructions.

Instructions for cleaning the condenser & mesh filter (where fitted)

The condenser and filter (if fitted) at the front of the unit should be cleaned weekly using a soft brush or vacuum cleaner to remove any extraneous debris.

To remove the mesh filter (if fitted) undo the screws securing the metal grille. Replacement is the reverse of removal.

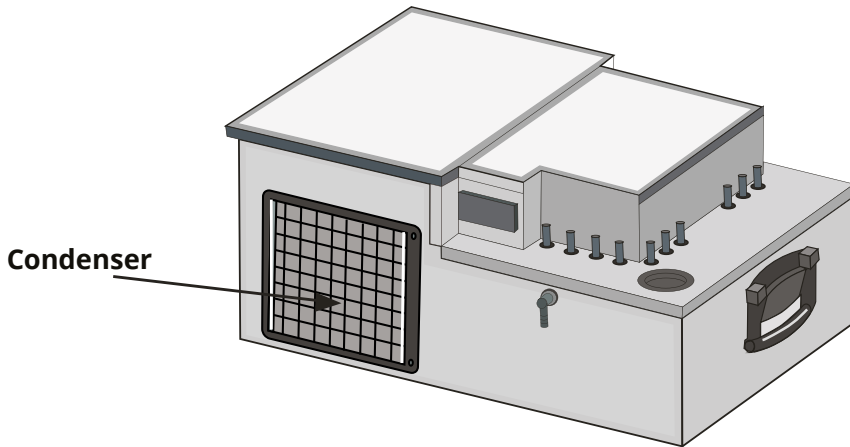

IMPORTANT – Always replace the mesh filter and securing grille after cleaning.

Cleaning instructions for “Pipeline” beer line cleaner:

1. Draw clean water through the syrup coils until all traces of product have disappeared.
2. Mix the beer line cleaner with clean water, in the ratio specified in the instructions [typically 1 capful per 4.5 litres (gallon)]. The solution will be purple in colour.
NOTE: Use the appropriate personal protective equipment, to avoid splash burns or damage to eyes from splashes.
3. Connect the line cleaning solution to the lines to be cleaned.
4. Draw the line cleaning solution through the dispense tap. If the lines are particularly contaminated with yeast or bacterial growth, the run-off will be green/grey/black.
5. Close the tap and leave for 10 minutes.

6. Repeat stages 4 and 5 twice, or until the run-off is purple in colour.
7. The purple colour denotes lines which are clean and free from contamination.
8. Disconnect the line cleaning solution and draw fresh water through the system. Dispense some water into a glass or other clear vessel and check that there is no purple colour remaining. If necessary, draw more clean water through the system until the run-off is clear.
9. The lines are now clean, safe and ready for reconnection to the product. Reconnect the Keg in the storage/cellar area and pull beer through to the tap.

Sanitizing BEVERAGE SYSTEM CLEANING


Sanitize the beverage system at initial start-up as well as regularly scheduled cleaning. The drain pan must be in place under soda valves, to carry away detergent and sanitizing agents that will be flushed through valves.

BAG-IN-BOX SYSTEM SANITATION



The procedure below is for the sanitation of one syrup circuit at a time. Repeat to sanitize additional circuits.

You will need the following items to clean and sanitize the Bag-in-Box (BIB) beverage system:

- Three (3) clean buckets.
 - Plastic brush or soft cloth.
 - Mild detergent.
 - Unscented bleach (5% Na CL O) or Commercial sanitizer.
 - Bag-In-Box bag connector.
1. Prepare the following in the buckets:
 - Bucket 1 — warm to hot tap water for rinsing.
 - Bucket 2 — mild detergent and warm to hot water.
 - Bucket 3 — mix a solution of unscented bleach(5% Na CL O) or commercial sanitizer and warm to hot water. Mixture should supply 100 PPM available chlorine (1/4 oz. bleach to 1 gallon water).
 2. Disconnect the “syrup-line side” of the BIB connector
 3. Rinse connector with warm tap water

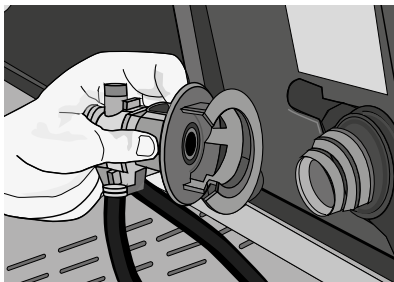

4. Connect syrup connector to BIB connector and immerse both into Bucket 1. A “bag-side” connector can be created by cutting the connector from an empty disposable syrup bag.
5. Draw rinse water through system until clean water is dispensed. Most beverage valves allow the syrup side to be manually activated by depressing the syrup pallet.
6. Connect Bucket 2 to system.
7. Draw detergent solution through system until solution is dispensed.
8. Repeat steps 2-7 until all syrup circuits contain detergent solution.
9. Allow detergent solution to remain in the system for 5 minutes.
10. Connect Bucket 3 to system.
11. Draw sanitizing solution through system until solution is dispensed.
12. Repeat step 11 until all syrup circuits contain sanitizer solution.
13. Allow sanitizer solution to remain in system for 15 minutes.
14. Remove nozzles and diffusers from beverage valves.
15. Scrub nozzles, diffusers and all removable valve parts (except electrical parts with a plastic brush or a soft cloth and the detergent solution.
16. Soak nozzles, diffusers and removable valve parts (except electrical parts) in sanitizer for 15 minutes.
17. Replace nozzles, diffusers and valve parts.
18. Connect Bucket 1 to system.
19. Draw rinse water through system until no presence of sanitizer is detected.
20. Attach syrup connectors to BIBs.
21. Draw syrup through system until only syrup is dispensed.
22. Discard first 2 drinks.

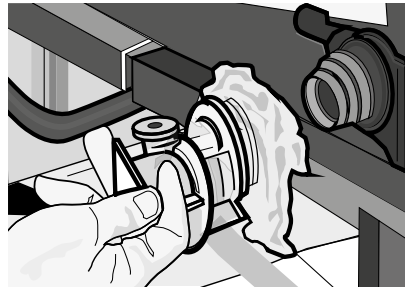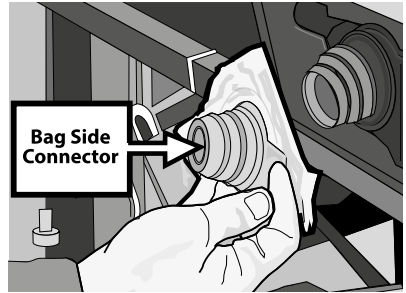

PREVENTION OF FREEZING / ACTION REQUIRED IF FREEZING OCCURS

This unit must not be sited in such a way as not to expose it to temperatures likely to cause freezing i.e. below 0°C.

If the unit is to be sited in an unheated area then it would be wise to insulate all pipe work and provide some form of emergency heating which should be controlled by a Frost Stat, and sited in the close proximity to the Unit.

In the event of 'freezing up' occurring, the following action is recommended:-

1. Isolate the unit from Mains Electricity Supply.
2. Isolate Product Supply from unit and de-pressurise the system.
3. Apply gentle warmth to the general area of the unit and its Pipe work.
4. Check for obvious leaks.
5. Turn product supply on / re-pressurise the system whilst continually watching for leaks.
6. Reconnect Mains Electricity supply Observe the unit running for a short period watching out for leaks, strange noises or any other form of malfunction. If no problems are observed then normal operation of the unit may be resumed.


DISMANTLING / DECOMMISSIONING PROCEDURE

1. Isolate the unit from Mains Supply.
2. Turn off the water supply.
3. Drain the system down using the CO2 pressure to empty the carbonator bowl, soda recirculation lines and syrup lines.
4. Turn off the CO2 supply at the bottle and de-pressurise the system.
5. Disconnect the unit from the python product lines and the water and CO2 supply.
6. Siphon or pump out the water from the bath.

IMPORTANT:


FAILURE TO REMOVE ALL COOLANT COULD RESULT IN SUBSTANTIAL AMOUNTS OF COOLANT BEING RELEASED FROM THE UNIT WHICH MAY BE DETRIMENTAL TO THE UNIT AND/OR ITS SURROUNDINGS. COULD ALSO INCREASE THE MAXIMUM WEIGHT OF THE UNIT IF NOT REMOVED.

Section 5 – Spare parts list
02-1310-xx Icecore 1 Soft Drink Postmix (Ambient)

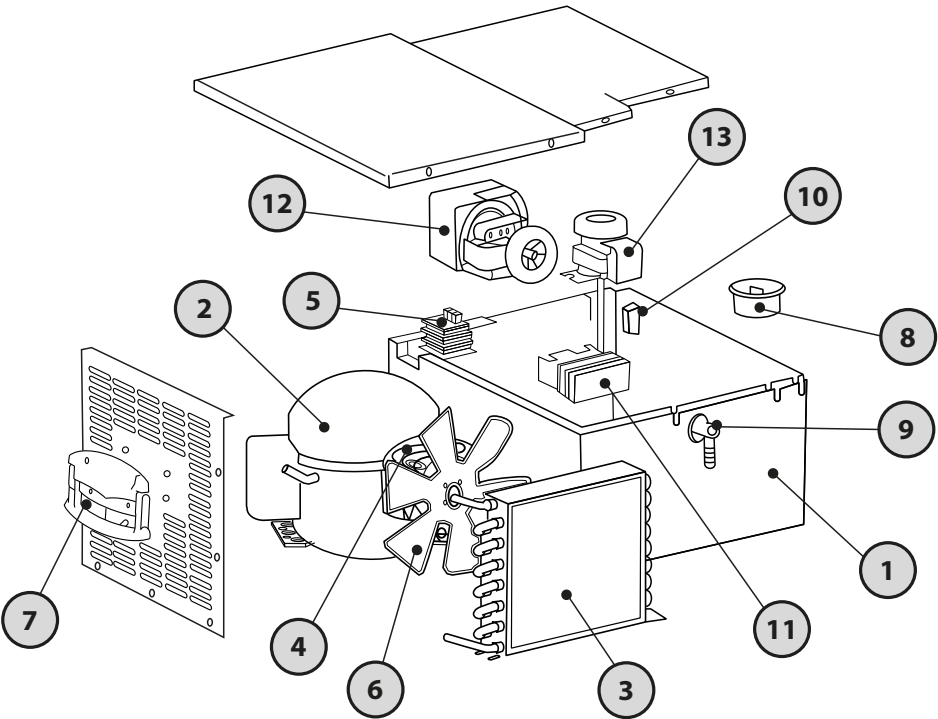


REF	PART No.	DESCRIPTION	QTY
1	BA45137	OPTIMA 7 WATER BATH	1
2	CM56083	TL5CN COMPRESSOR	1
3	CN55546	CU-FE CONDENSER	1
4	SA57020	IQ 3612 CONDENSER MOTOR	1
5	OP70072	TERMINAL BLOCK	1
6	OP73807	FAN BLADE	1
7	P147648	MOULDED PLASTIC LIFTING HANDLE	1
8	P149067	FILLER CAP	1
9	P156179	LONG OVERFLOW WITH VENT	1
10	P156363	SLIDE SWITCH	1
11	P156613	DFXTE C/W SHORT PROBE	1
12	SA53096	SODA RECIRC PUMP	1
13	SA53097	AGITATOR MOTOR	1

02-3000-xx Icecore 1 Soft Drink Postmix (Cold Carbonated)

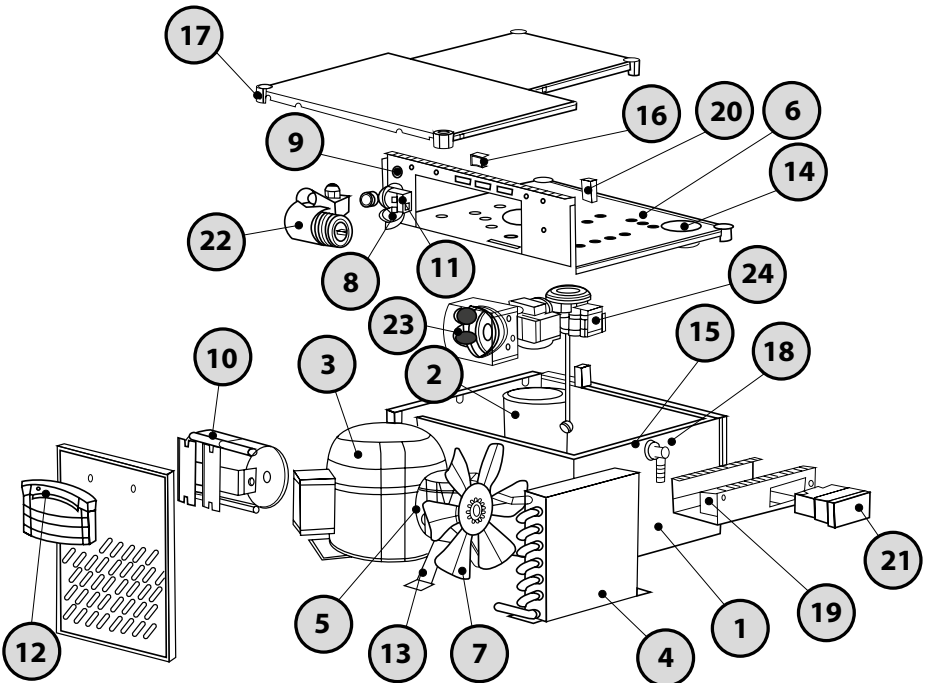


IF IN DOUBT ASK

REF	PART No.	DESCRIPTION	QTY
1	BA45137	OPTIMA 7 WATER BATH	1
2	CB56100	CARBONATOR BOWL	1
3	CM58083	TL5CN COMPRESSOR	1
4	CN55546	COPPER/ALUMINIUM CONDENSER	1
5	MO48894	EBM 9W UL FAN MOTOR	1
6	OP73636	8MM (5/16") BLACK SNAP BUSH	10
7	OP73807	FAN BLADE	1
8	OP73838	3/8" X 3/8" BULKHEAD FITTING	1
9	OP73972	IMM MAINS CABLE STRAIN RELIEF	1
10	PI42126	RPM MOTOR	1
11	PI47525	WATER SOLENOID VALVE JG 3/8 ENDS	1
12	PI47648	MOULDED PLASTIC LIFTING HANDLE	1
13	PI48892	FAN BRKT 58 HIGH EBM	1
14	PI49067	FILLER CAP	1
15	PI49133	GROMMET	1
16	PI49187	RIVETABLE EARTH STUD	1
17	PI56129	LID CORNER MouldING	6
18	PI56179	LONG OVERFLOW WITH VENT	1
19	PI56242	BI-LEVEL CARB CONTROL MK 2	1
20	PI56363	SLIDE SWITCH	2
21	PI56613	DFX1E C/W SHORT PROBE	1
22	PU70172-01	PROCON BRASS PUMP	1
23	SA53096	SODA RECIRC PUMP	1
24	SA53097	AGITATOR MOTOR	1
	PI56643	COMPRESSOR PTC START DEVICE (NOT SHOWN)	1

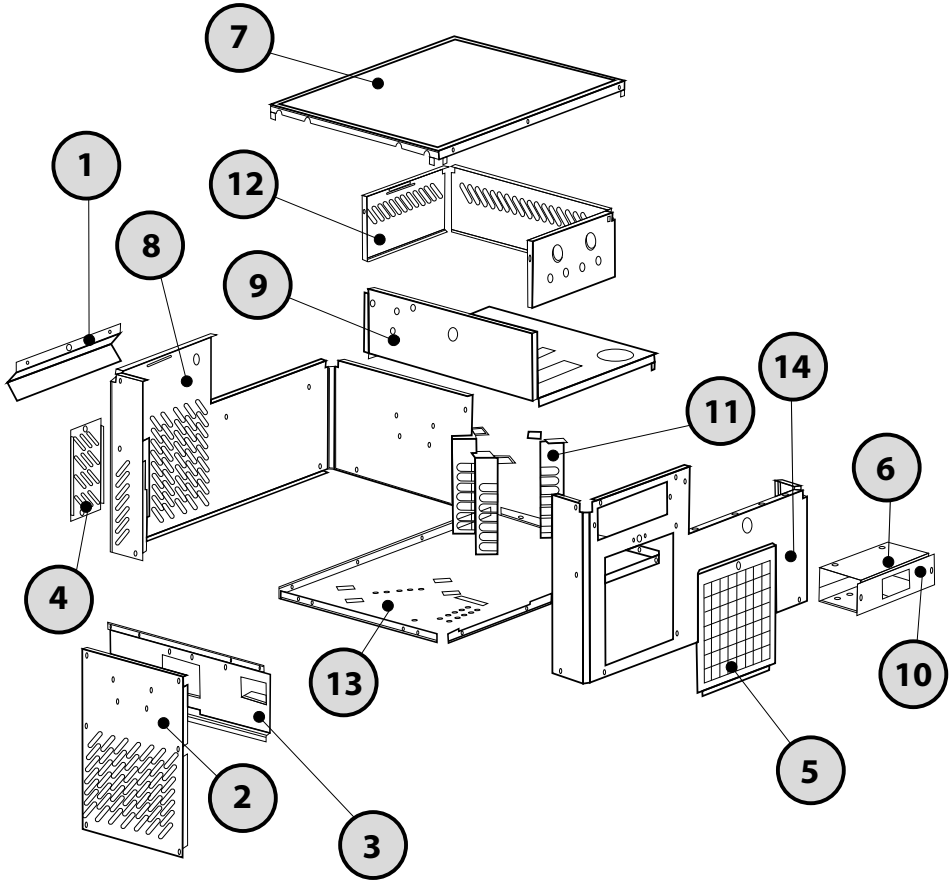01-3001-xx Icecore 1 Beer Soft Drink Premix


REF	PART No.	DESCRIPTION	QTY
1	MM44751	ICECORE 1 BACK SPACER	1
2	MM56121	ICECORE 1 SIDE PANEL	1
3	MM56147	ICECORE 1 CARB PUMP BRACKET	1
4	MM56364	ICECORE 1 COMPRESSOR ACCESS PANEL	1
5	MM56401	CONDENSER GRILL	1
6	MM56491	ICECORE 1 SPLASHGUARD	1
7	MM56555	ICECORE 1 PREMIX FRIDGE DECK LID	1
8	MM56557	ICECORE 1 PREMIX REAR PANEL	1
9	MM56558	ICECORE 1 PREMIX WATERBATH DECK	1
10	MM56559	ICECORE 1 PREMIX CONTROL PANEL BRACKET	1
11	MM56560	ICECORE 1 PREMIX COIL SPACER	3
12	MM56561	ICECORE 1 PREMIX COIL DECK SURROUND	1
13	MM56762	ICECORE 1 PREMIX BASEPLATE	1
14	MM56763	ICECORE 1 PREMIX FRONT PANEL	1


01-3001-xx Icecore 1 Beer Soft Drink Premix

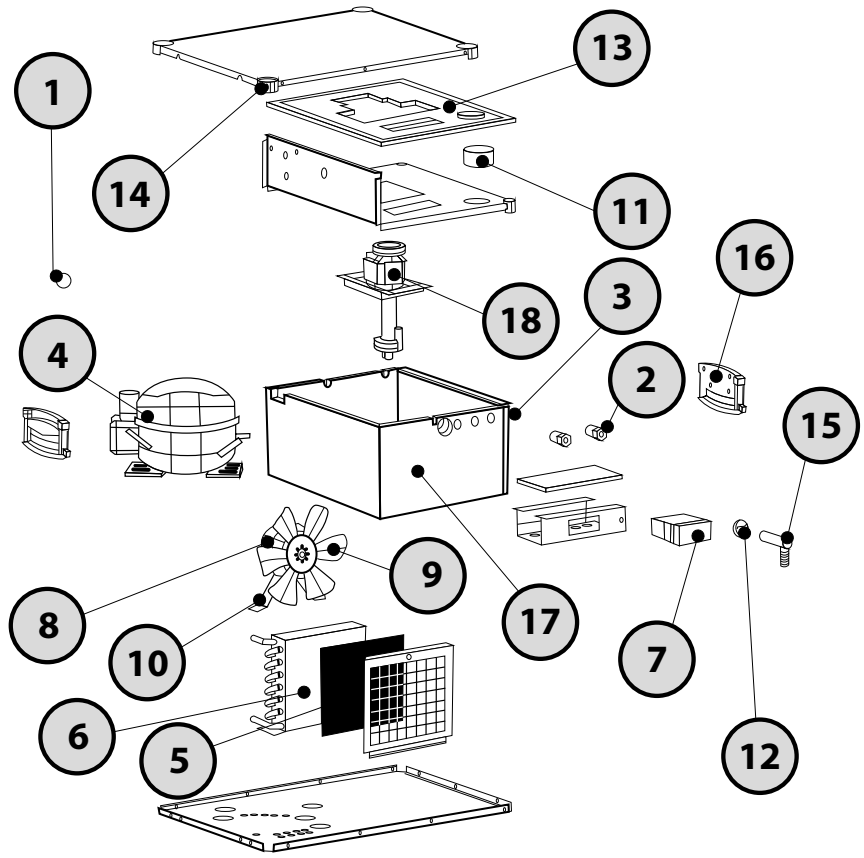

REF	PART No.	DESCRIPTION	QTY
1	OP73972	IMM MAINS CABLE STRAIN RELIEF	1
2	OP73838	3/8" X 3/8" BULKHEAD FITTING	2
3	OP73636	8mm (5/16) BLACK SNAP BUSH	4
4	CM56313	COMPRESSOR 6CC R290	1
5	P156450	CONDENSER FILTER - HEINEKEN	1
6	CN55546	CU-FE CONDENSER	1
7	P155916	DFX SERIES 1E CONTROLLER	1
8	M048894	EBM 9W UL FAN MOTOR	1
9	OP73807	FAN BLADE	1
10	P148892	FAN BRACKET 58 HIGH EBM	1
11	P156761	FILLER CAP HEINEKEN SPEC	1
12	P149133	GROMMET	1
13	P156781	IC1 PREMIX/BEER DECK INSULATION	1
14	P156129	LID CORNER MOULDING	6
15	P156179	LONG OVERFLOW WITH VENT	1
16	P147648	MOULDED PLASTIC LIFTING HANDLE	2
17	BA45137	OPTIMA 7 WATER BATH	1
18	PU74659-VER2	TOTTON SPC 12/4 PUMP AGITATOR	1


Section 6 – Fault finding charts

Refrigeration system \ Warm drinks

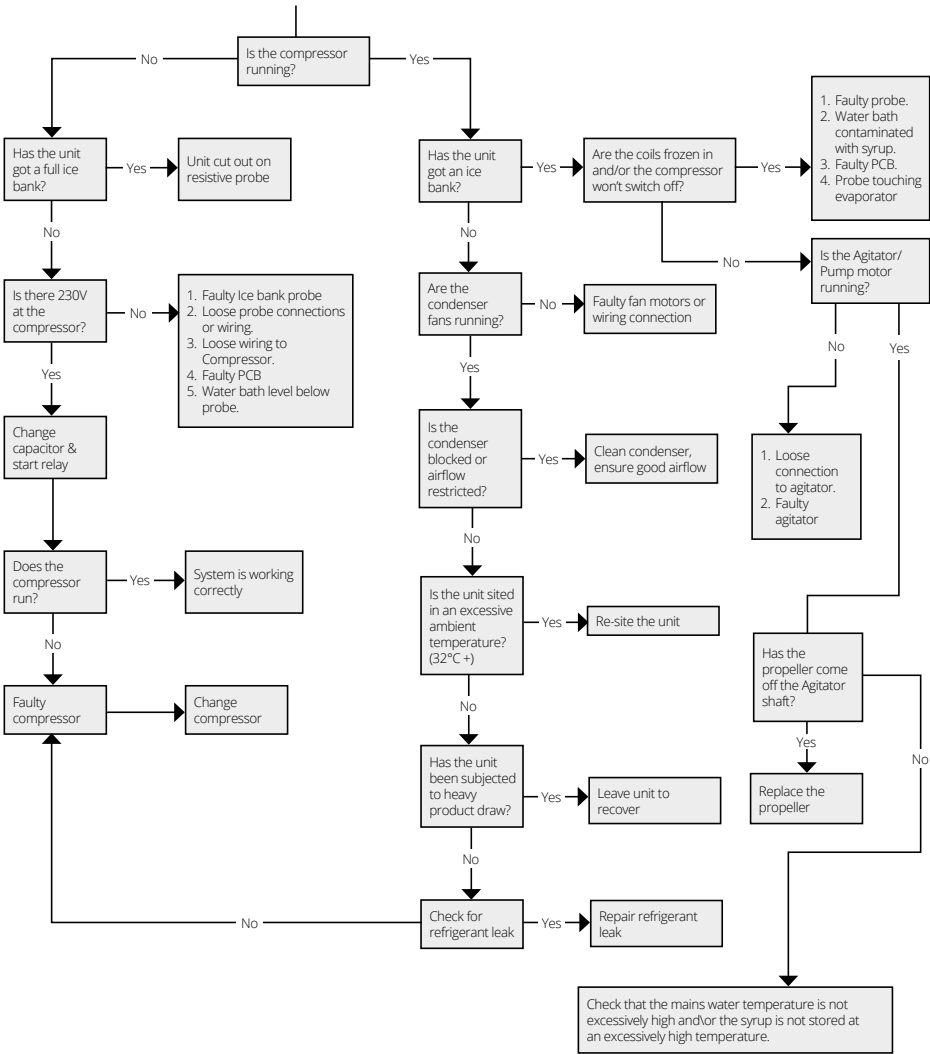


Fault finding charts

Unit will not dispense drinks and/or gas only

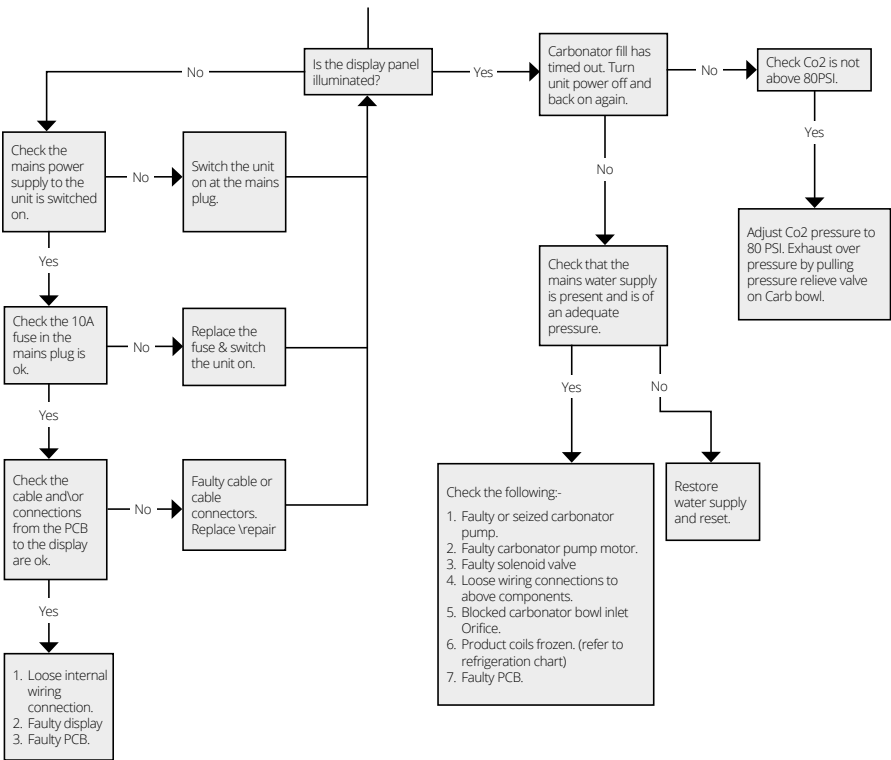


Fault finding charts

Flat drinks

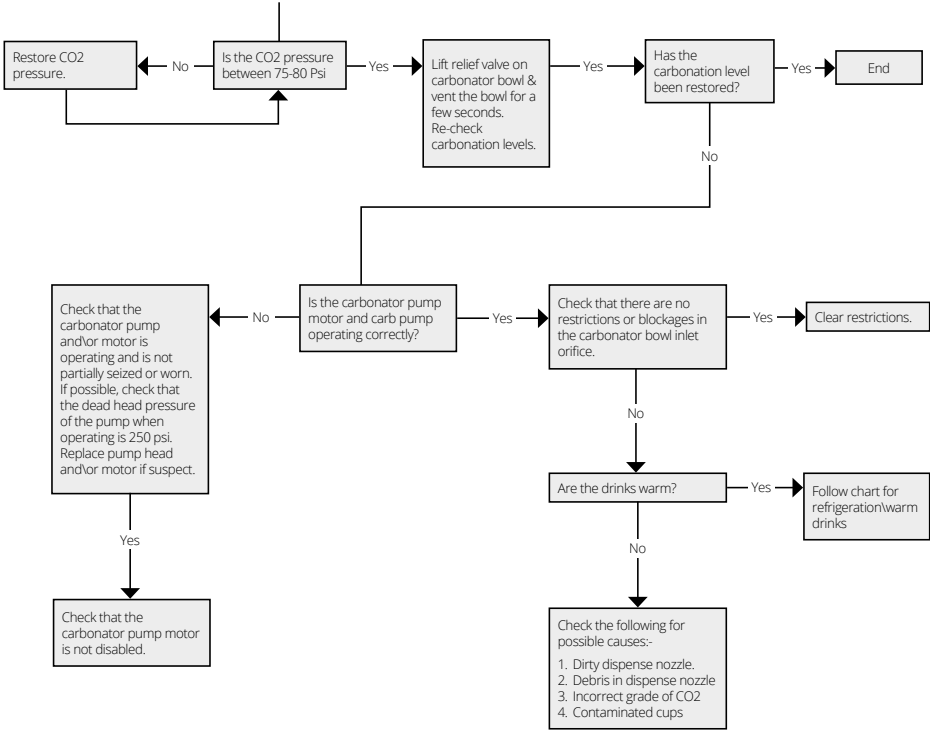

Fault finding charts

Incorrect mixture ratio (Weak or strong drinks)

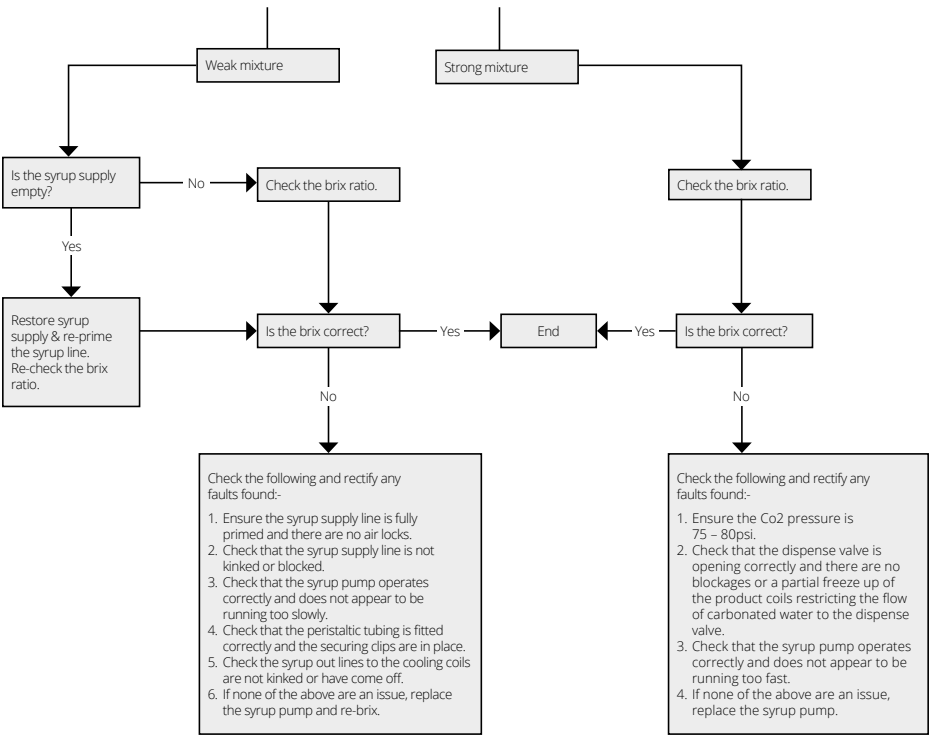

Section 7 – Technical Specification

Specifications

02-1310-XX / 02-3000-XX		Icecore 1 Soft Drink Postmix (Ambient) (02-1310-XX)	Icecore 1 Soft Drink Postmix (Cold Carbonated) (02-3000-XX)
Physical Data			
	Height	265mm	285mm
	Width	620mm	605mm
	Depth	420mm	401mm
	Waterbath	10.4ltrs nominal	10.4ltrs
	Dry Weight	24.5kg	30.5kg
	Operating Weight	35.5kg	40.9kg
Performance			
	Ice Bank Pull Down	2hrs (No Python)	1hr 42mins (No Python)
	Ice Bank Weight	4kg Nominal	4kg Nominal
	Peak Dispense Capacity	60 x 284ml drinks at nominal 4°C	58 x 300ml drinks below 4.4°C
	Optimised Ambient Temperature	24°C	24°C
	Max Operating Ambient Temperature	32°C	32°C
	Noise level	Less than 70dB(A)	Less than 70dB(A)
Electrical			
	Mains Voltage	220-240V / 50Hz	230V / 50Hz Single Phase
	Run Current	2.2 amps	4.09 amps
	Fuse Rating	5 amps	10 amps
Refrigeration			
	Compressor Size	5cc	5cc
	Duty @ -10°C Evaporation	340W	345W
	Refrigerant	R290	R290
	Climate Class	3	3
	Charge	75g	75g
Controls			
	Ice Bank Control	Electronic - Thermistor	Electronic - Thermistor
	Carbonator Level	N/A	Electronic - Resistive Probes
Carbonation System			
	Bowl Reserve	N/A	0.6 hours
	Fill Pump	N/A	100 gal/hr Brass Pump
	Recirc Pump	ITT/TOTTON - HBR 6/8 Re-gen Pump	ITT HBR/8 Re-gen Pump
System protection			
	Compressor	Thermal Switch, Self Re-setting	Thermal Switch, Self Re-setting
	Carbonator Pump	N/A	1min 30 sec Timeout if Bowl Does Not Refill
	Recirc Pump	Thermal switch; self-resetting	1min 30 sec Timeout if Bowl Does Not Refill
Coils			
	Syrup	5/16" (7.9mm) OD x 1.5m 316 SS - Qty 3	
	Pre-Chill	5/16" (7.9mm) OD x 7.2m 316 SS - Qty 1	
	Soda Recirculation	5/16" (7.9mm) OD x 8m 316 SS - Qty 1	
	Still Water	5/16" (7.9mm) OD x 2.2m 316 SS - Qty 1	

Specifications

01-3001-XX

Icecore 1
Beer Soft Drink Premix
(01-3001-XX)

Physical Data	
Height	290mm
Width	630mm
Depth	415mm
Waterbath	10.5ltrs
Dry Weight	25kg
Operating Weight	33.5kg
Performance	
Ice Bank Pull Down	1hr 42mins +/- 15mins (No Python)
Ice Bank Weight	4kg Nominal
Peak Dispense Capacity	112 pints
Optimised Ambient Temperature	24°C
Max Operating Ambient Temperature	32°C
Noise level	less than 70dB(A)
Electrical	
Mains Voltage	220 - 240V / 50Hz Single Phase
Run Current	2.5 amps
Fuse Rating	5 amps
Refrigeration	
Compressor Size	6cc
Duty @ -10°C Evaporation	540W
Refrigerant	R290
Climate Class	3
Charge	69g
Controls	
Ice Bank Control	Electronic - Thermistor
Carbonator Level	N/A
Carbonation System	
Bowl Reserve	N/A
Fill Pump	N/A
Recirc Pump	ITT/TOTTON, Shaded Pole/4m Lift Pump & Agitator
System protection	
Compressor	Thermal and over current protection
Carbonator Pump	N/A
Recirc Pump	Thermal protection (self-reset)
Coils	
Product Coil 1	3/8" (9.5mm) diamter x 5.4m (outer)
Product Coil 2	3/8" (9.5mm) diameter x 4.8m (inner)

Climate class ISO 23953-2:2005(E)

TEST ROOM CLIMATE CLASS	DRY BULB TEMPERATURE °C	RELATIVE HUMIDITY %	DEW POINT °C	WATER VAPOUR MASS IN DRY AIR g/kg
0	20	50	9.3	7.3
1	18	80	12.6	9.1
2	22	65	15.2	10.8
3	25	60	16.7	12
4	30	55	20	14.8
5	27	70	21.1	15.8
6	40	40	23.9	18.8
7	35	75	30	27.3
8	23.9	55	14.3	10.2
NOTE The water vapour mass in dry air is one of the main points influencing the performance and the energy consumption of the cabinets.				

Section 8 – Declaration of conformity



EC Declaration of Conformity In accordance with the EC Guidelines

- Regulation (EC) No 765/2008 + Decision No 768/2008/EC + Regulation (EC) No 1221/2009 – New Legislative Framework Directives
- 2001/95/EC – General Product Safety Directive
- 2006/42/EC - Machinery Directive
- 2014/68/EU – Pressure Equipment Directive
- 2014/30/EU - EMC Directive
- 2011/65/EU - RoHS Directive
- 2002/96/EC – WEEE Directive
- 1935/2004/EC - Food Safety Regulation
- 10/2011/EU - Plastic Materials in Contact with Food Regulation
- 2023/2006/EC - Good Manufacturing Practice for Articles in Contact with Food Regulation
- 1907/2006/EC – REACH Regulation
- 517/2014/EU – F GAS Regulation
- 1005/2009/ EC – Ozone depleting substances Regulation- Water Supply (Water Fittings) Regulations of 1999

Marking of the equipment:

- | | |
|---------------------|---|
| - 02-1310-xx | Icecore 1 Soft Drink Postmix (Ambient) |
| - 02-3000-xx | Icecore 1 Soft Drink Postmix (Cold Carbonated) |
| - 01-3001-xx | Icecore 1 Beer Soft Drink Premix |

The above named appliances have been developed, built and manufactured in agreement with above listed EC Guidelines in sole responsibility of the company Welbilt (Halesowen) Limited

The following coordinated standards have been applied:

- EN 1672-2:2005+A1:2009
- EN 50581:2012
- EN 55014-1:2006 + A1:2009 + A2:2011
- EN 55014-2:1997 + A1:2001 + A2:2008
- IEC 60335-1:2010 fifth edition
- EN 60335-1: 2012
- EN 60335-2-89:2010
- EN 61000-3-2:2014
- EN 61000-3-3: 2013
- EN 62233:2008
- Italian Ministerial Decree 21.3.1973 + further ammendments
- BFR XXI commodities based on Natural and Synthetic rubber
- BS6920-1:2014

A complete technical documentation is available. A quality safety system according to ISO 9001 is installed in the business.

Head Office

Welbilt (Halesowen) Limited
Chancel Way, Halesowen
West Midlands, B62 8SE, UK

Tel: +44.121.501.2566
Fax: +44.121.500.0873
www.welbilt.com