
Cascade Base Ballasting Instructions

CORTECH

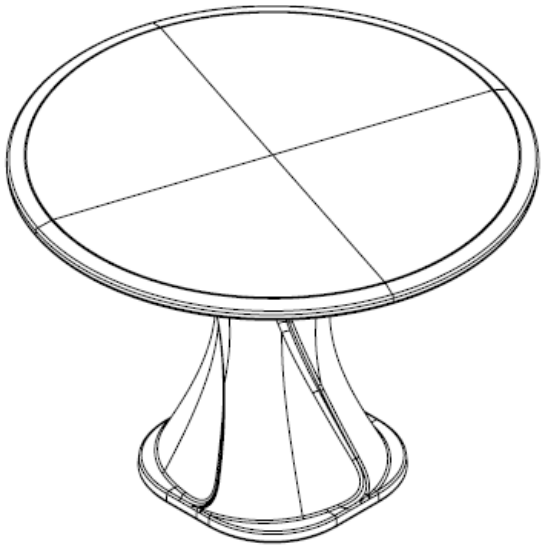

You will need:


Not Included:



1x
Screwdriver
With Tamper Resistant Torx Bit

Weighted Ballasts


Included:

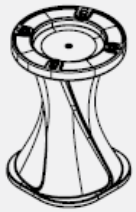


1x
Twisted Table Base



1x
Ballast Port Door

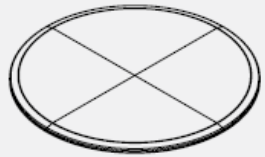

1x
42" Round Table Top

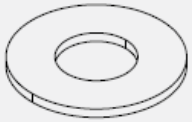

4x
5/16" Washer
.344" ID .75" OD




4x
5/16" - 18 x 3"
Security Torx Bolts



4x
Ballast Port Door Screws


Cascade Base Ballasting Instructions

1.

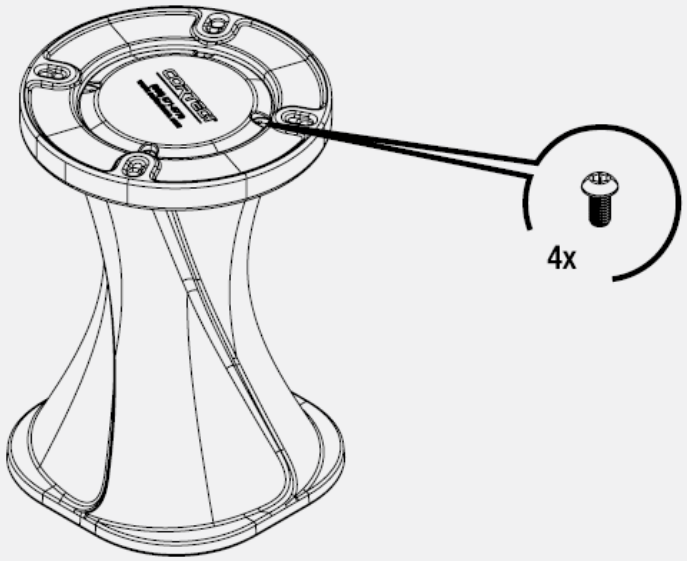


Position table in desired location. Remove the four panel screws using T27 Torx Bit Screwdriver.

2.

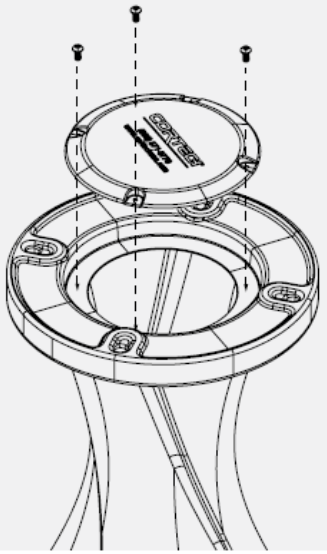


Add weighted ballasts into cavity and replace ballast door and panel screws. Tighten panel screws 3-5 turns past finger tight.

3.

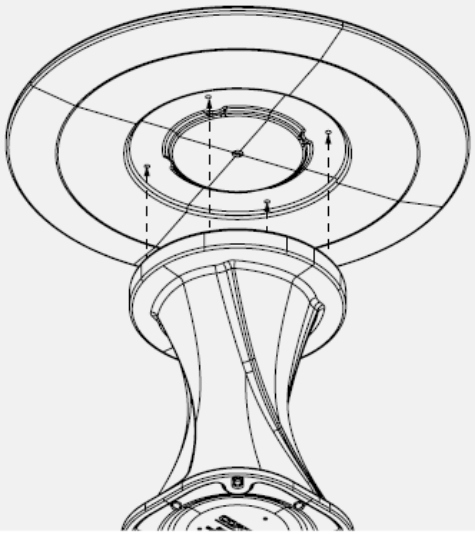

Align the table base to the center of the tabletop. Check fitment and make any necessary adjustments.

4.

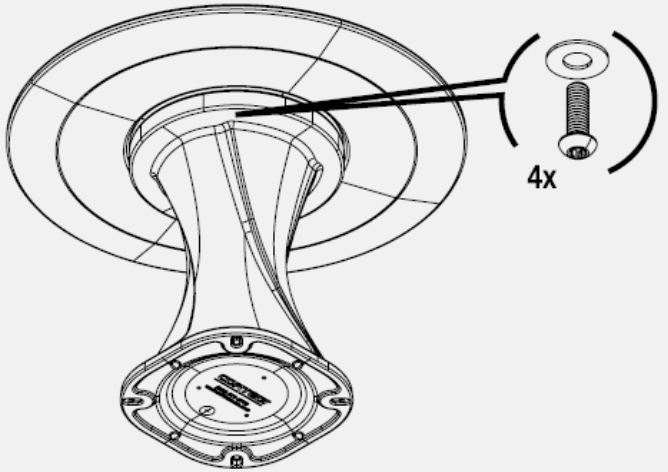

Insert and tighten each tabletop screw and washer 3–5 turns past finger tight.