
Round Base Table
Ballast Installation

CORTECH

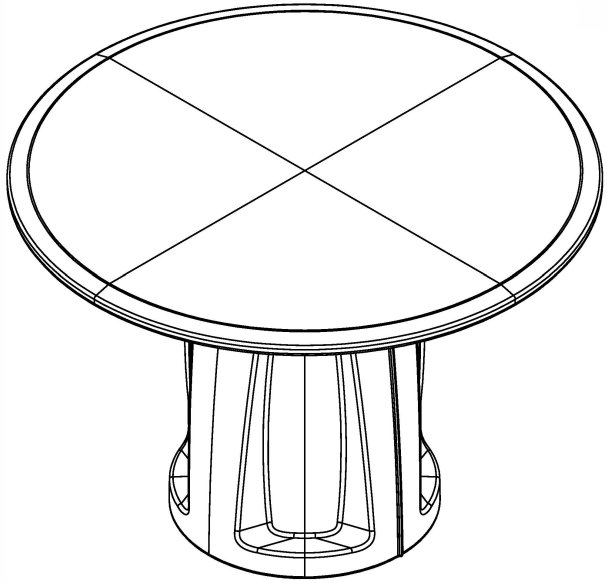

You will need:


Not Included:



1x
Screwdriver
With Tamper Resistant Torx Bit

Weighted Ballasts


Included:

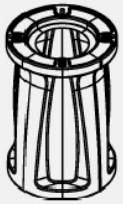


1x
Cylinder table base



1x
Ballast Port Door

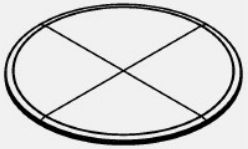

1x
42" Round Table Top



4x
5/16" Washer
.344" ID .75" OD




4x
5/16" - 18 x 3"
Security Torx Bolts



4x
Ballast Port Door Screws


Round Base Table Ballast Installation

1.

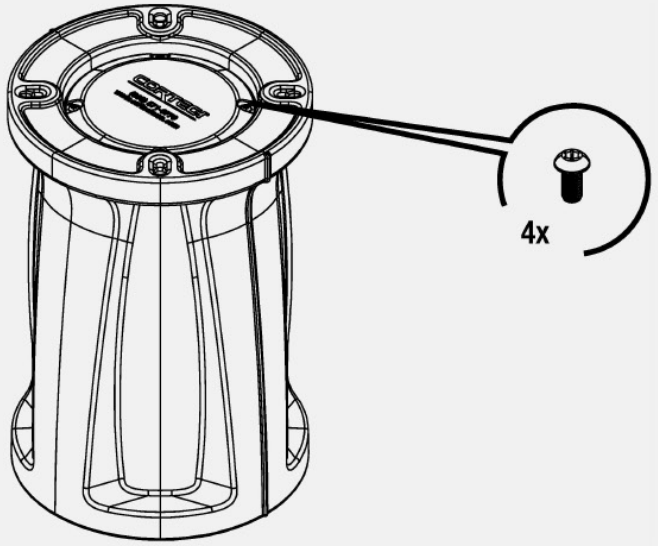


Position table in desired location. Remove the four panel screws using T27 Tone Bit Screwdriver.

2.

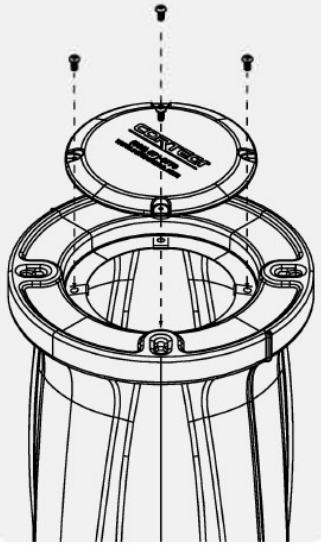


Add weighted ballasts into cavity and replace ballast door and panel screws. Tighten panel screws 3-5 turns past finger tight.

3.

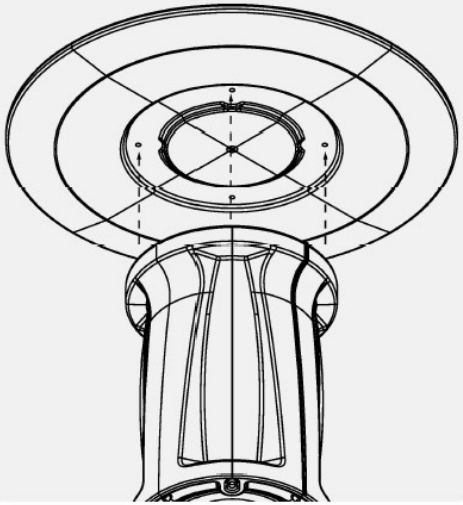

Align the table base to the center of the table top. Check fitment and make any necessary adjustments.

4.

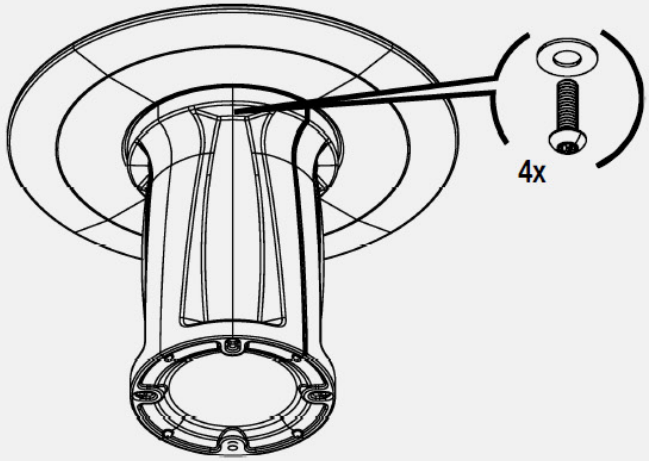

Insert and tighten each table top screw and washer 3-5 turns past finger tight.