


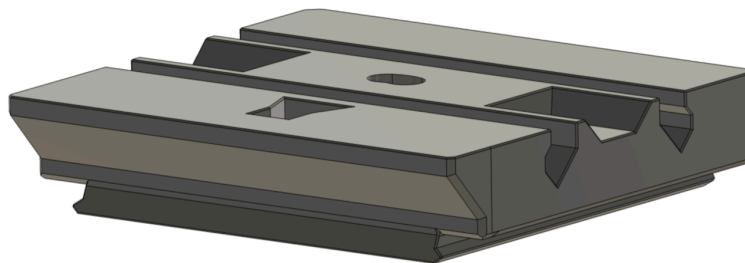

Cargo Containers: Adapter – Underdesk



User Guide

Resources, Print Settings and Assembly

Before You Start..

What's Included

The below files and documents are included within your download:

1. **Ready to Print (.3mf file)** – All the parts in one place and ready to print on Bambu Lab printers.
2. **User Guide (.pdf file)** – A complete 'User Guide' to help you print and assemble the model.
3. **Individual parts (.stl files)** – All the 3D printable parts you need to make the complete base model, compatible with most slicers.

What We Used

Printers:

Bambu Lab P1S

You can get the printers we used here (affiliate link) – **Bambu Lab P1S***

Filaments:

Cargo Connect tiles – Bambu Lab PLA Basic Dark Grey

Modular Case – Bambu Lab PLA Basic Dark Grey

Containers – Bambu Lab PLA Matte Scarlett Red and Marine Blue

You can get the filaments we used here (affiliate link) – **Bambu Lab Filament***

*Some links in this document are affiliate links, which means we may earn commission if you purchase through them.


Print Settings

Important Note:

The print settings listed here are the ones that worked best for us and for our specific needs, using our own printers, materials, and environment. However, every setup is different – so you may need to adjust these settings to suit your printer, filament, and your specific needs.

Ready to Print Project

A .3mf file named **'1.Ready to Print'** is included in the download. This file is a pre-prepared Bambu Studio project, which includes the settings we used.

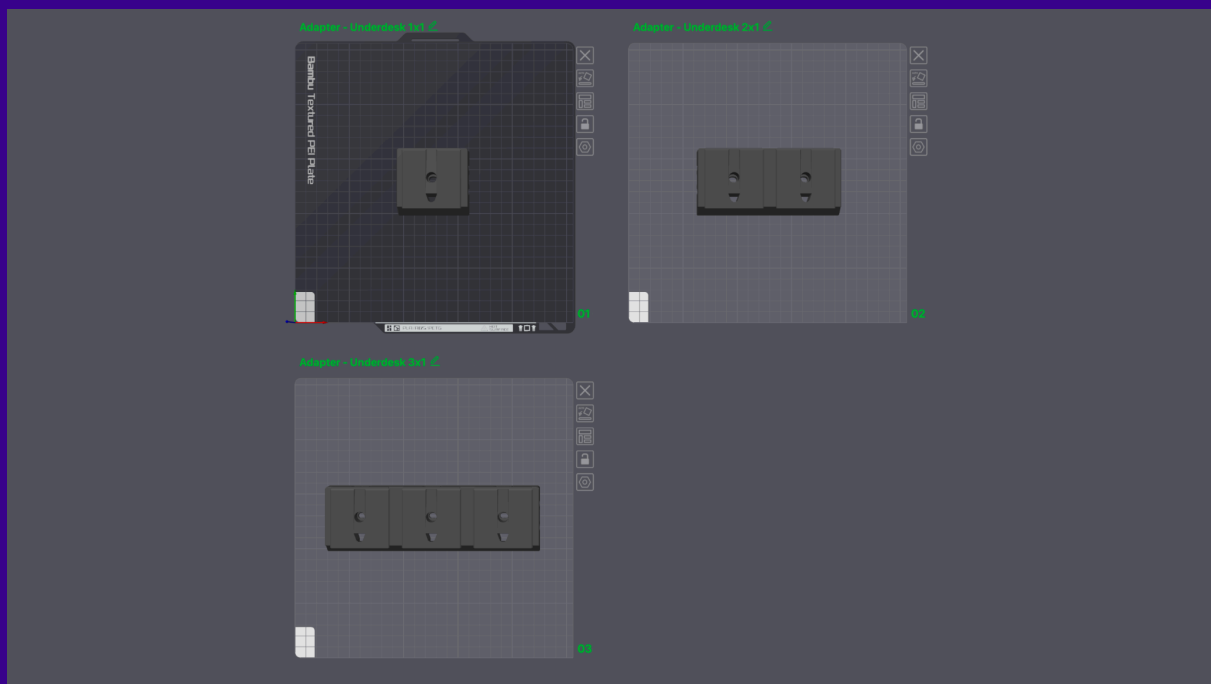

Individual Part Settings


Adapter - Underdesk 1x1

Basic Settings:

- **Printer** - Bambu Lab P1S
- **Outer Walls** - 2
- **Infill** - 15%
- **Supports** - None
- **Brim** - Auto

Estimations:

- **Print Time** - 31m 11s
- **Filament Used** - 20.12g

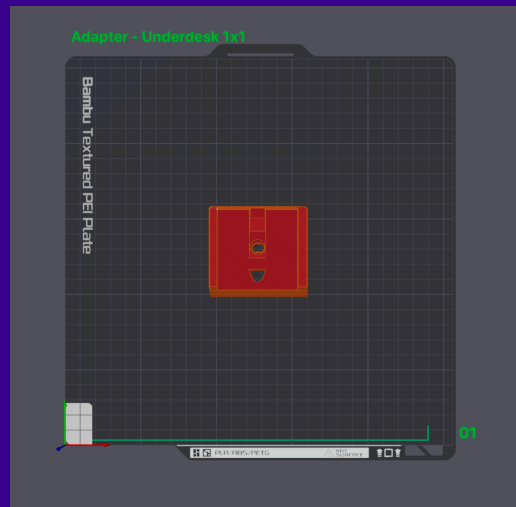


Adapter - Underdesk 2x1

Basic Settings:

- **Printer** - Bambu Lab P1S
- **Outer Walls** - 2
- **Infill** - 15%
- **Supports** - None
- **Brim** - Auto

Estimations:

- **Print Time** - 59m 42s
- **Filament Used** - 39.67g

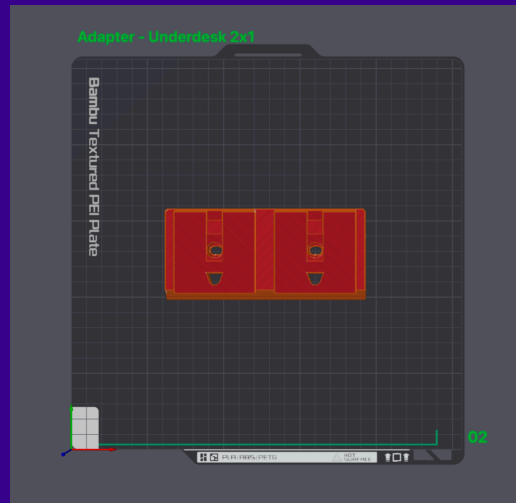


Adapter - Underdesk 3x1

Basic Settings:

- **Printer** - Bambu Lab P1S
- **Outer Walls** - 2
- **Infill** - 15%
- **Supports** - None
- **Brim** - Auto

Estimations:

- **Print Time** - 1hr 28m
- **Filament Used** - 59g

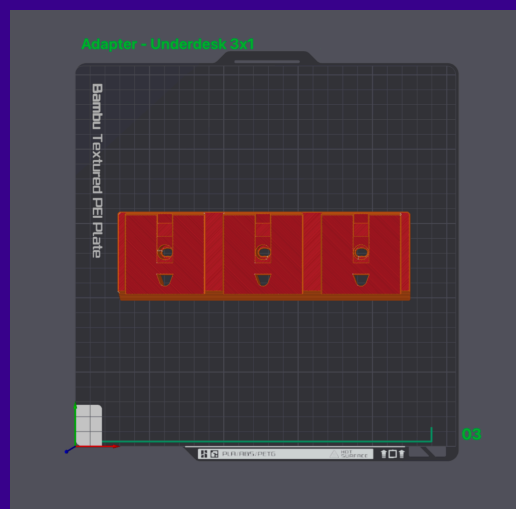

Assembly Guide


Important Note:

Once all parts are printed, remove any supports and check for any imperfections or poorly printed areas – *these may need post processing work or reprinting.*

Step 1 – Choosing Your Adapter Size



Included in the downloaded files are three Adapter sizes to match the standard Cargo Containers: 1x1, 2x1, and 3x1.

Each Adapter is fully interchangeable and can be combined in different ways to suit your setup. For example, to mount a 3x1 container, you could use a **3x1 Adapter**, a **2x1 and 1x1**, or even three **1x1 Adapters**. The Adapters were designed this way to give you maximum flexibility, in case you want to change the layout of your containers at any point.

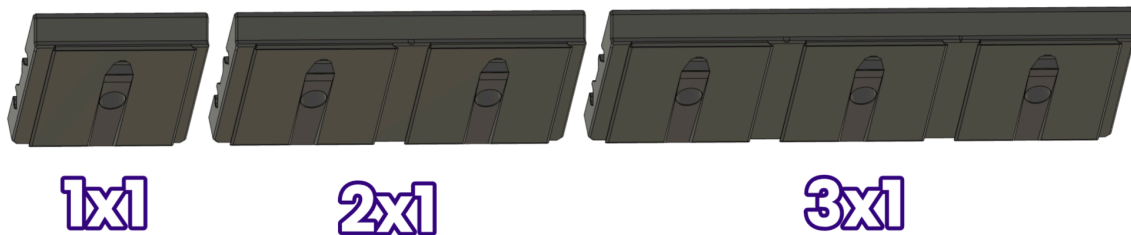

Step 2 – Connecting Containers

Each Adapter simply slides into the modular slot on top of the Cargo Container. Once fully inserted, you should hear a click as the container's locking tab snaps into place, securing the connection.

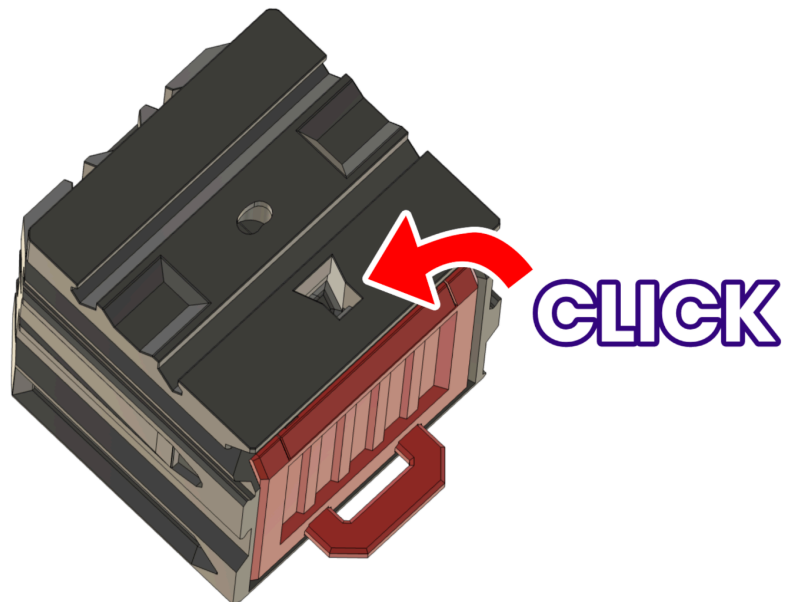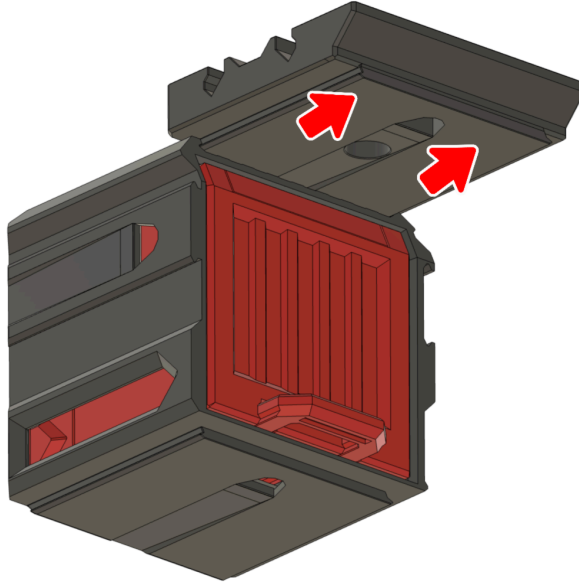


Step 2 *continued...*

Important Note

While the locking tab provides built-in stability to help prevent the container from pushing out of the Adapter when being closed, this can vary depending on your printer's tolerances and the materials used.

To improve stability, you should attach **at least two containers** together when using the Adapters, as shown below. The modular side connections between Cargo Container cases help secure them in place and provide added support during regular use.

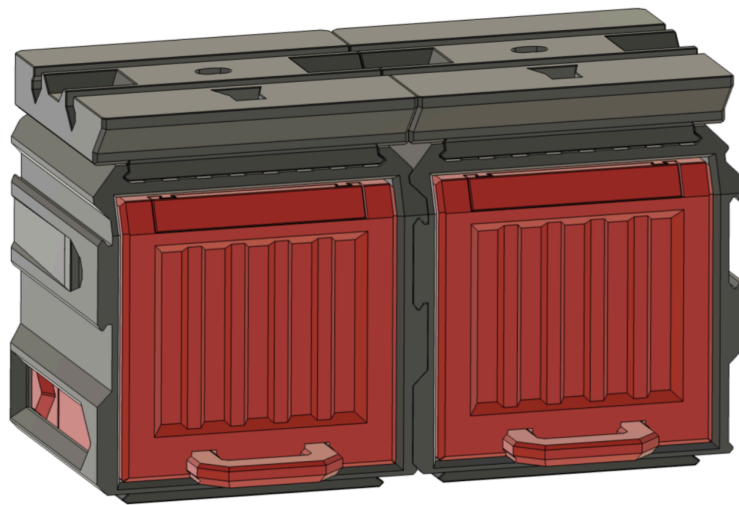

***Minimum Two Connected**


Step 3 - Mounting

Each Adapter includes two mounting options built in, so you can choose whichever suits your setup best:

Fixed Mounting

For a permanent setup, the Adapter can be mounted directly to the underside of a desk, shelf, or workspace using the screw hole located in the centre of the Adapter.

The Adapters are designed to sit flush side-by-side, so if you're installing multiple units, you can simply butt them up against each other to get perfect spacing for your Cargo Containers - no need to measure gaps or calculate alignment.

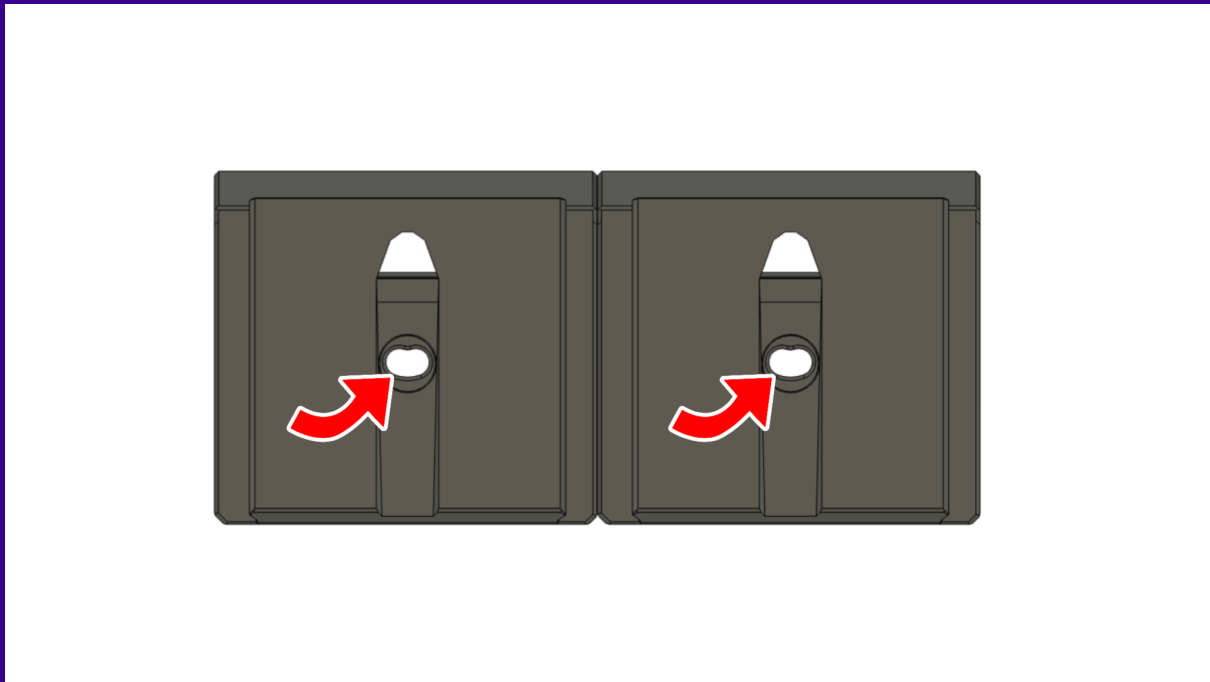

Important Note


You'll need a minimum of two screw fixings per Adapter to ensure proper stability and prevent the Adapter from rotating during use.

If you're using 1x1 Adapters, you should use at least two, fully mounted units side by side for a secure, balanced setup — as mentioned in Step 2.

Step 3 *continued...*

Sliding Rail Mounting (Cargo Connect: Rails)

The Adapter also features rail track cutouts on the back, allowing it to slot onto Cargo Connect: Rails. This enables your Cargo Containers to slide smoothly along rails mounted on the underside of your workspace - perfect for flexible, under-desk storage that can move with you.

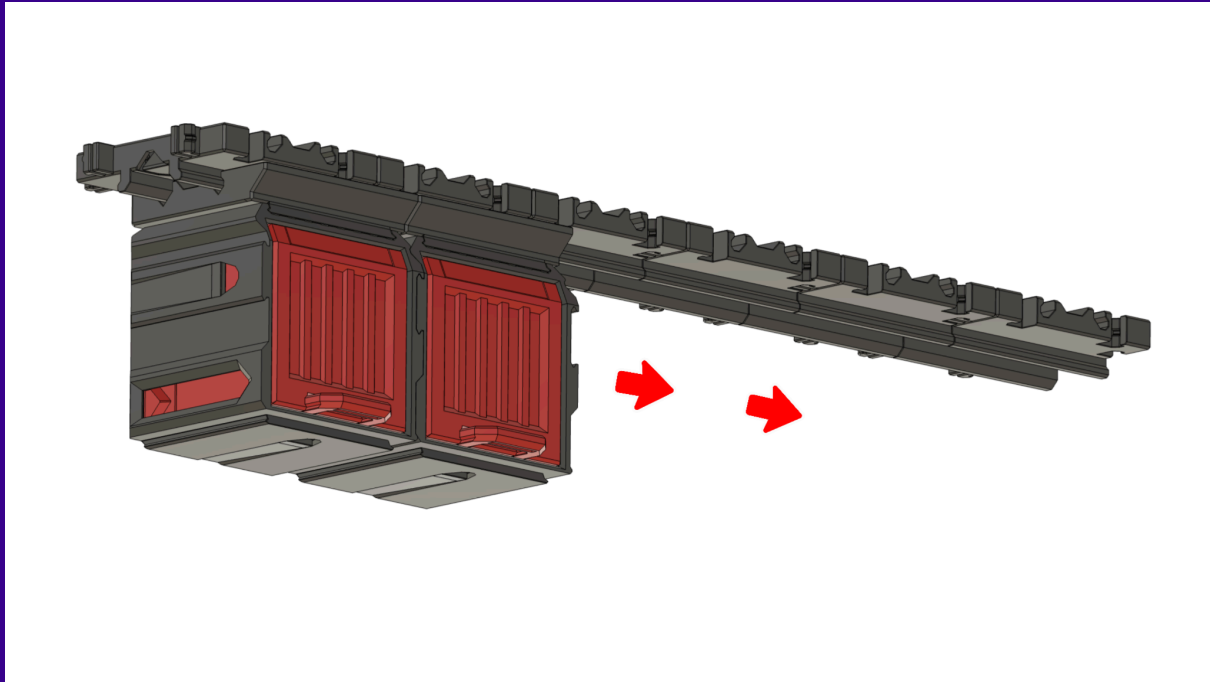

Troubleshooting

We put a lot of time into making our designs as easy to print and use as possible, testing extensively with various filaments and printers. That said, we understand that occasional issues can occur – below are some potential solutions that may be useful:

Warping and Bed Adhesion

Warping is a common challenge in FDM 3D printing, often caused by poor bed adhesion, rapid cooling, or inconsistent ambient temperatures.

It's important that tiles and components come off the bed as flat as possible, as warping may impact features like interlocking pegs, sliding fits, or hinge alignment. If you notice lifting corners or uneven bases, try adding a brim or applying a suitable adhesive directly to the build plate to improve bed adhesion.

Ensuring consistent ambient temperatures and proper first-layer calibration can also go a long way in reducing warping across prints.

Tolerances

The Cargo Modular System is designed to be as print-friendly as possible, and we've worked hard to make tolerances as forgiving as possible across a wide range of printers. However, the unique features and functionality of our designs can rely on tight tolerances to work as intended – especially for parts that slide, hinge, or interlock.

If you're experiencing issues with fit or movement, it's worth checking your printer calibration – including flow rate, retraction settings, and nozzle temperature – to ensure accurate extrusion. Also make sure your filament is dry and of consistent quality, and that your slicer profile is correctly set up for your printer and material.

If problems still persist, we recommend printing a tolerance test model to help identify where your setup might need fine-tuning. These are widely available from reputable sources such as Thangs.

Use Disclaimer

Every Play Conveyor model has been designed and tested with care, but results will vary depending on your printer, materials, settings, and environment. Because of this, we cannot guarantee print outcomes across all setups.

You are responsible for ensuring that both the printing and assembly of any models are completed to a safe and functional standard. Always test your prints — especially components that are wall-mounted, load-bearing, or move — and check them regularly for wear or failure.

This user guide is provided as a general reference to support your build, but it is not exhaustive or guaranteed to suit all applications. Use your judgment where needed to suit your specific setup.

All files are provided “as is” and without warranty. Play Conveyor Ltd accepts no responsibility for any injury, damage, or loss resulting from the use or misuse of our designs.

This disclaimer highlights some of the key points when using our models, but it does not replace or override the official ‘License Agreement’.

The ‘License Agreement’ associated with your subscription tier is the official document that defines your permitted use of the model, any restrictions, and your responsibilities. Please ensure you review the relevant license agreement to confirm proper usage.

Thangs Members

- Maker tier: covered by the **Personal License** (for personal use only)
- Merchant tier: covered by the **Commercial License** (includes permitted commercial use)

Your applicable license can be found under each model’s listing on our Thangs page.

Patreon Members

- The license for all Patreon ‘Maker Access’ tiers is included within the downloadable files for each design.

It is your responsibility to review and follow the terms of your applicable license.