


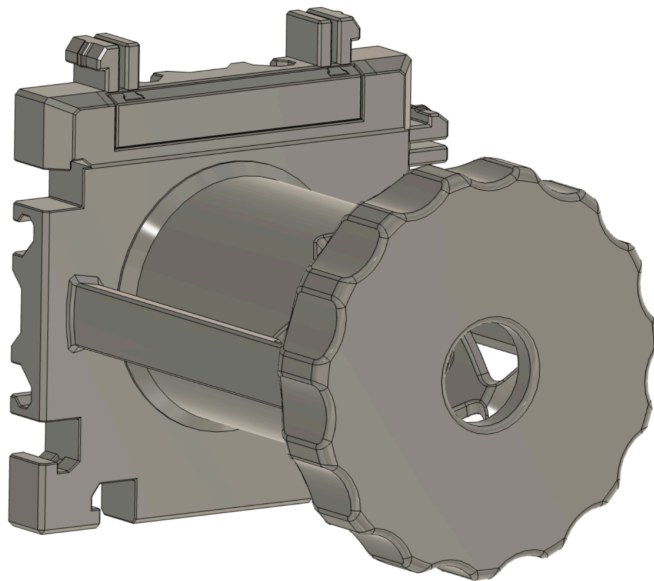

CARGO CONNECT: CABLE ORGANISER



User Guide

Resources, Print Settings and Assembly

Before You Start..

What's Included

The below files and documents are included within your download:

1. **Ready to Print (.3mf file)** – All the parts in one place and ready to print on Bambu Lab printers.
2. **User Guide (.pdf file)** – A complete 'User Guide' to help you print and assemble the model.
3. **Individual parts (.stl files)** – All the 3D printable parts you need to make the complete base model, compatible with most slicers.
4. **Assembly View Only file (Do Not Print)** – This file is to view the fully assembled model only and not for printing.
5. **Optional Parts (.zip folder)** – A selection of optional parts that can be used with the base model. This .zip folder also includes an 'Previous Versions - Archive' (*more information on current compatibility and the archive can be found at the end of this 'User Guide'*).

What We Used – Cargo Modular System

Printers:

Bambu Lab P1S

You can get the printers we used here (affiliate link) – **Bambu Lab P1S***

Filaments:

Cargo Connect: Tiles – *Bambu Lab PLA Basic Dark Grey*

Cargo Containers – *Bambu Lab PLA Matte Scarlett Red and Marine Blue*

Cargo Containers: Modular Case – *Bambu Lab PLA Basic Dark Grey*

You can get the filaments we used here (affiliate link) – **Bambu Lab Filament***

*Some links in this document are affiliate links, which means we may earn commission if you purchase through them.

Important Notice on Downloaded Files

Play Conveyor models are only available to new members via **Thangs**, or to our existing members on **Patreon**. If you obtained these files from any other source, they are **unauthorised, not licensed for use, and may constitute illegal copies**. Such files may have been altered, could be malicious, and must not be used.

Print Settings

Important Note:


The print settings listed here are the ones that worked best for us and for our specific needs, using our own printers, materials, and environment. However, every setup is different – so you may need to adjust these settings to suit your printer, filament, and your specific needs.

Basic Settings

- **Nozzle** – 0.4mm
- **Layer Height** – 0.2mm
- **Outer Walls** – 2
- **Infill** – 15%
- **Supports** – None
- **Brim** – Auto

Ready to Print Project

A .3mf file named **'1.Ready to Print'** is included in the download. This file is a pre-prepared Bambu Studio project, which includes the settings we used.

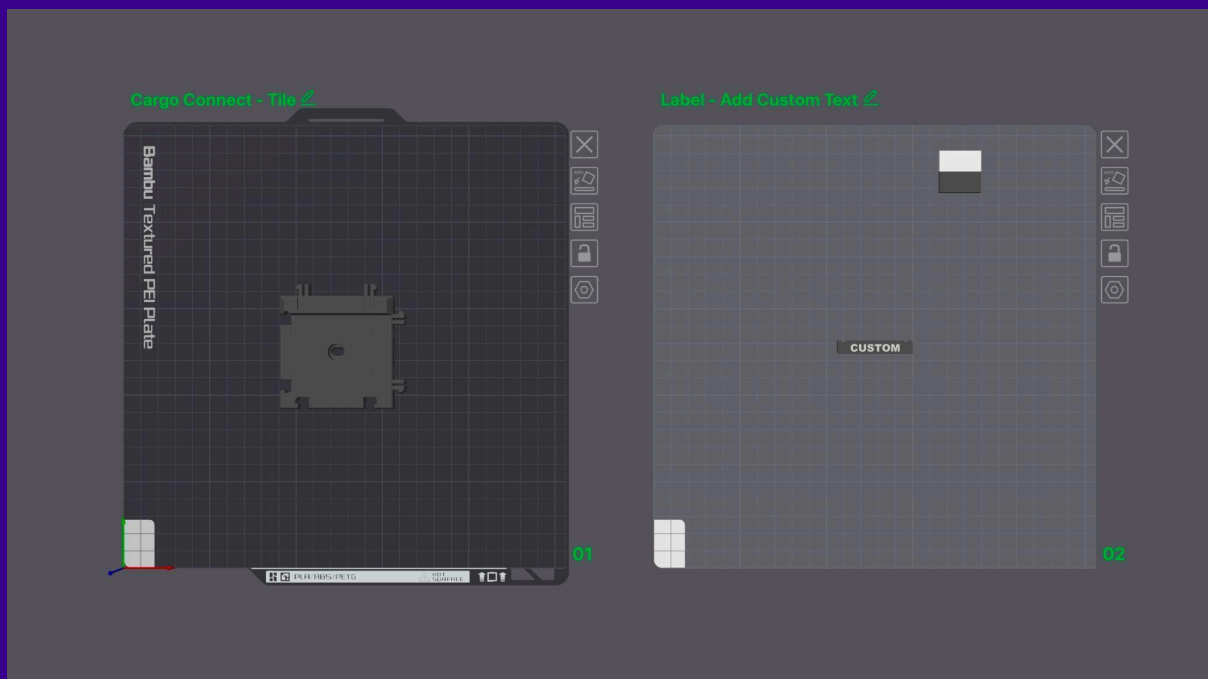

Example of included Bambu Studio .3mf project

Assembly Guide


Important Note:

Once all parts are printed, remove any supports and check for any imperfections or poorly printed areas – *these may need post processing work or reprinting.*

Step 1 – Preparation


The Cable Organiser assembles in two main parts: the **Base Tile** and the **Spool** – as shown in the images below.

1. Place the Base Tile on a flat surface with the connector facing upwards.
2. Push the Spool down onto the connector until you feel it **click** into place, making sure to align the two cable guides on either side of the connector with the track cut into the underside of the top of the Spool.
3. Once correctly seated, the guide arms should be fully inserted into the track, the base of the Spool should be sitting flush against the Base Tile, and it should spin freely without lifting off easily.

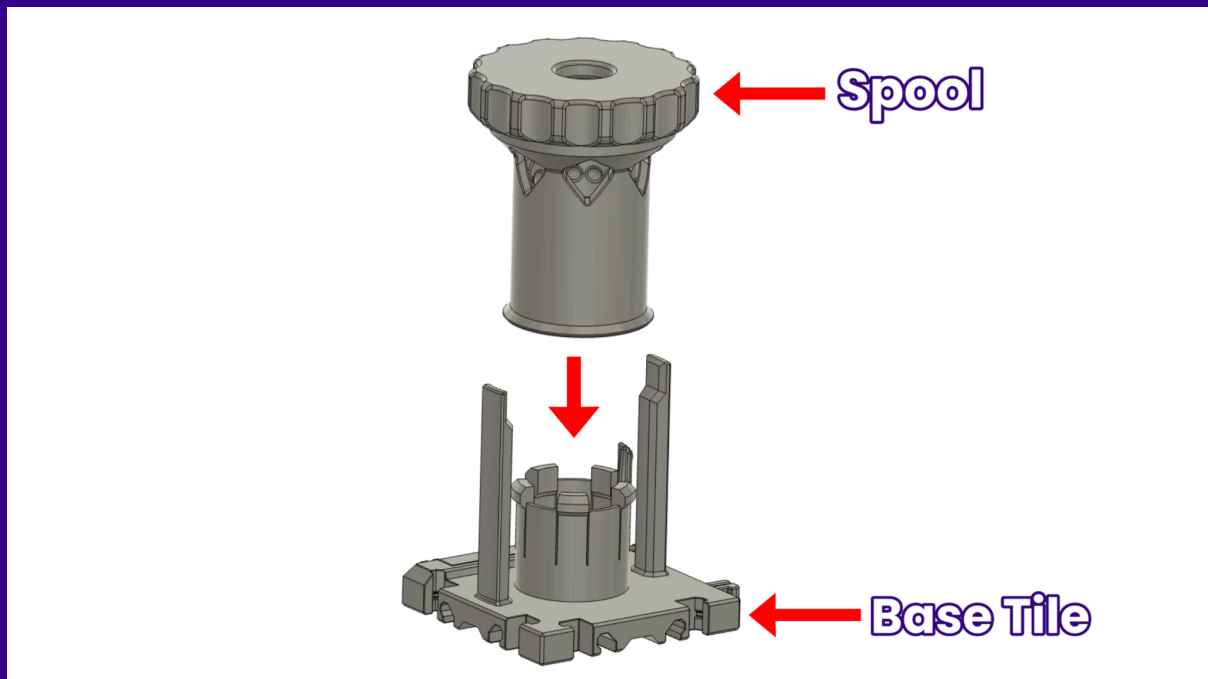


Step 2 - Interlocking Tiles

The Cargo Modular System is designed to be fully expandable - each Cargo Connect tile can connect to any other on all four sides using the system's jigsaw-style connectors.

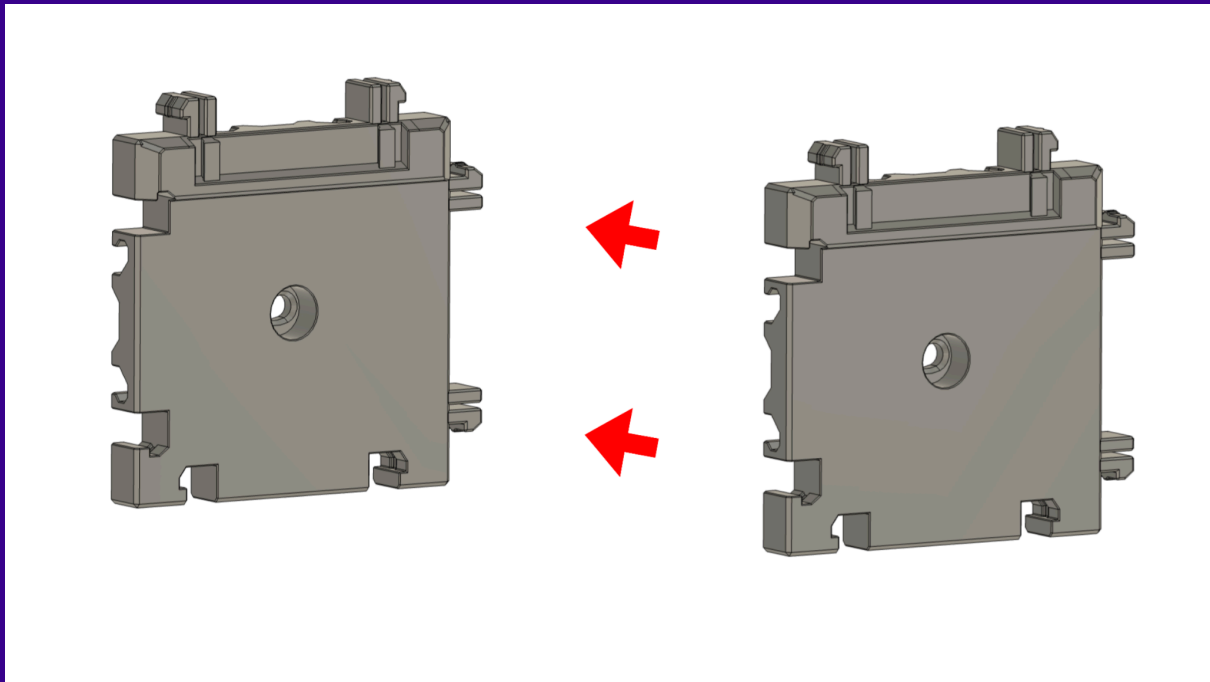


Lay the tiles on a hard, flat surface and press them together until you hear a click. The connectors are designed to align easily and provide a snug, stable fit as you build out your wall.

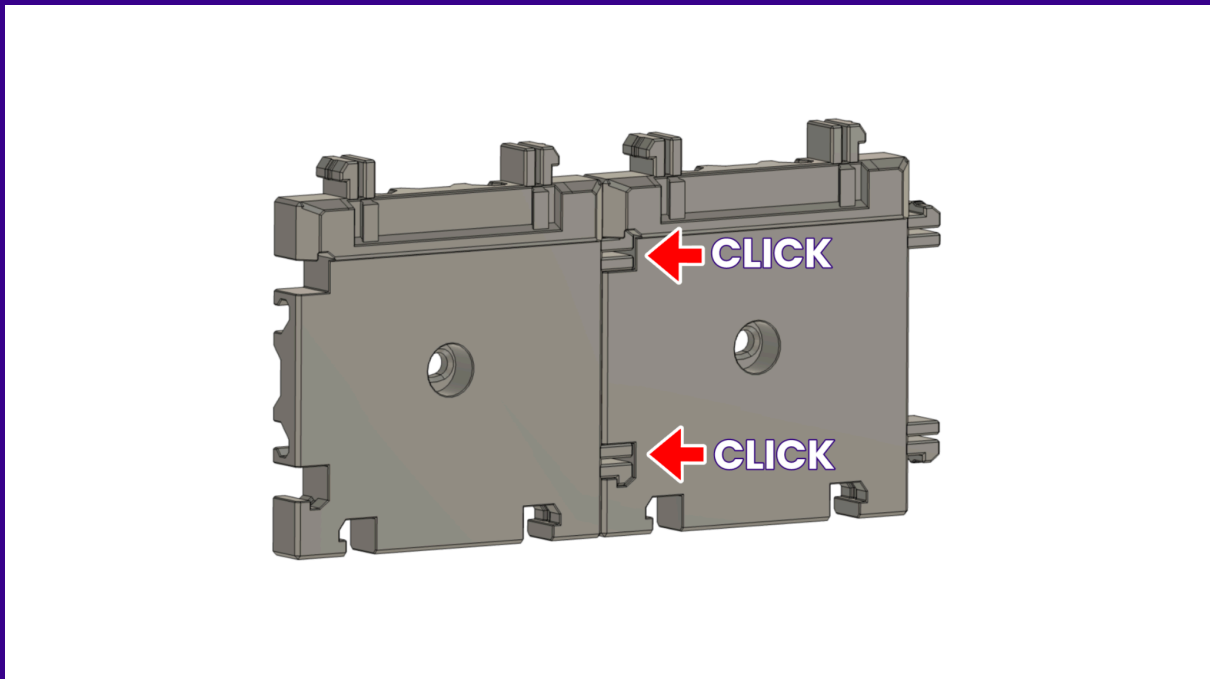

Step 3 - Mounting

Each Cargo Connect tile includes a central screw hole for wall mounting. While the interlocking design provides inherent stability across the system, we recommend adding an appropriate screw fixing to each tile – especially if it will support items under tension, weight, or regular use.

As each tile has only one screw hole, you should mount **a minimum of two connected tiles** and secure both to the wall. This helps prevent rotation or shifting during everyday use.

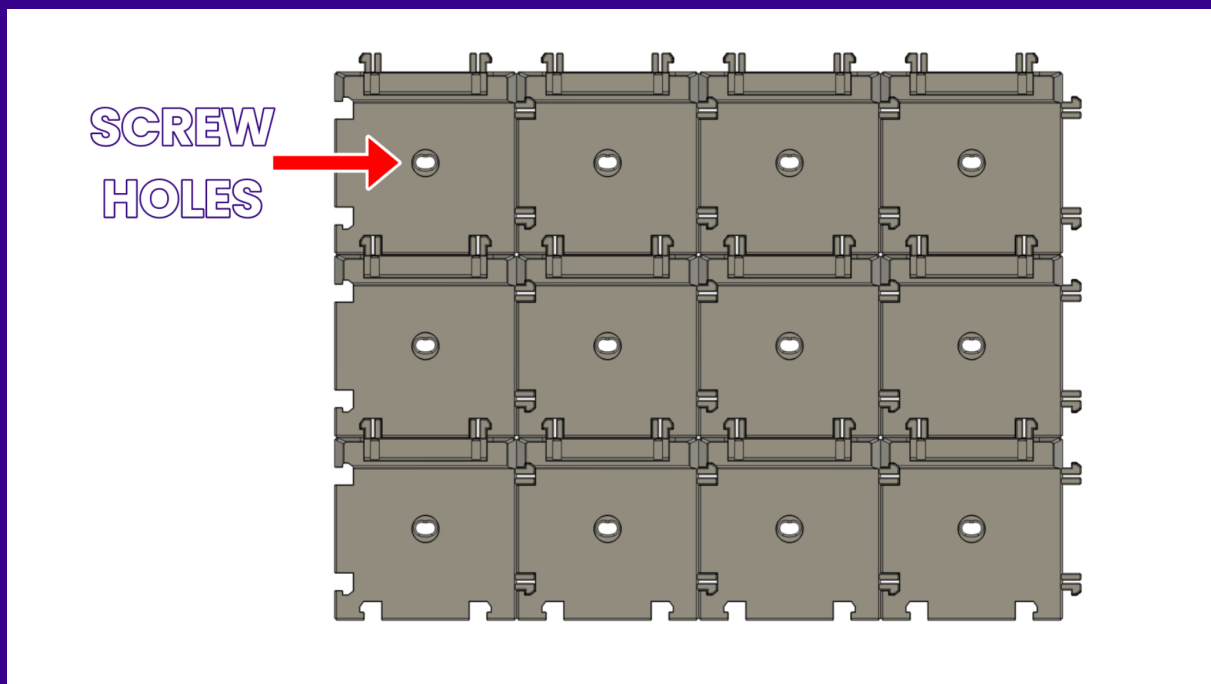

Important Note on Use





The number and placement of tiles and screws used for the Cargo Modular System is **entirely at your discretion**, subject to the strength of your wall and the intended weight of your stored items. **You should thoroughly test the stability and strength of your wall and the system before use and inspect the system at regular intervals to ensure the materials used have not deteriorated.**

Step 4 - Custom Labels

There is a label slot on the top of each tile. We have included a preset editable label inside the '1. Ready to Print' Bambu Studio .3mf file. To alter the text in Bambu Studio, follow the steps below:



(There is also a 'Blank Label.stl' included for use with other slicers).

1. Navigate to the 'Objects' tab
2. Click on the drop down for the 'Label - Add Custom Text' STL file
3. Right click on the 'Custom Text' object and select 'Edit Text'
4. In the 'Text Box', you can change the text using the 'Input Text' box. (You can also edit the size, font etc during this process)
5. If you want to make numerous labels, you can right click on the whole 'Label - Add Custom Text' STL and select clone, then choose how many copies you need and follow the process above for each label.
6. The Custom Label object has already been centered, however when you alter the text, depending on the letters you use, it will likely un-center the text horizontally. If you select the 'Custom Text' part and select 'move', you can realign the green lines shown in the picture and this should re-center the text.

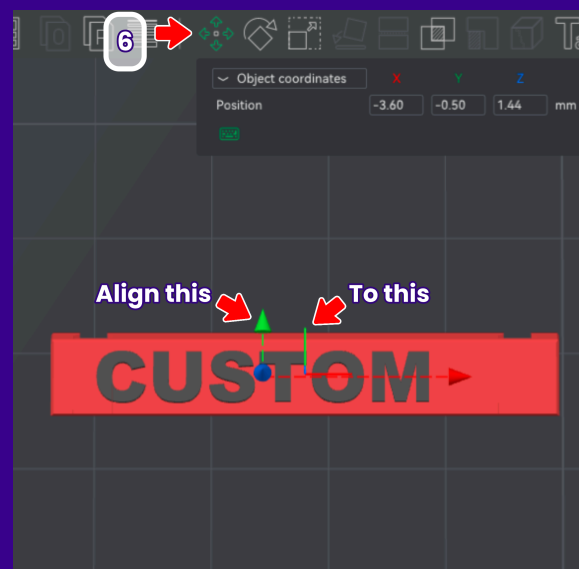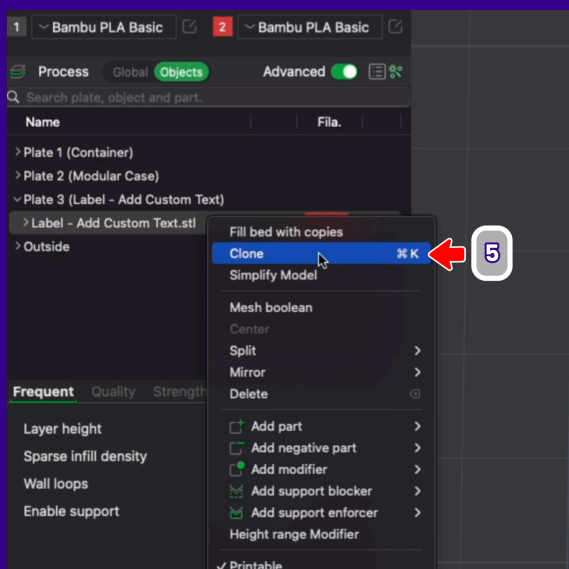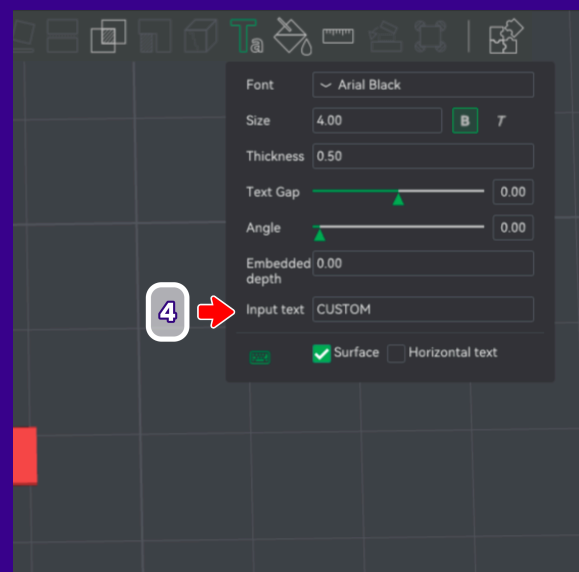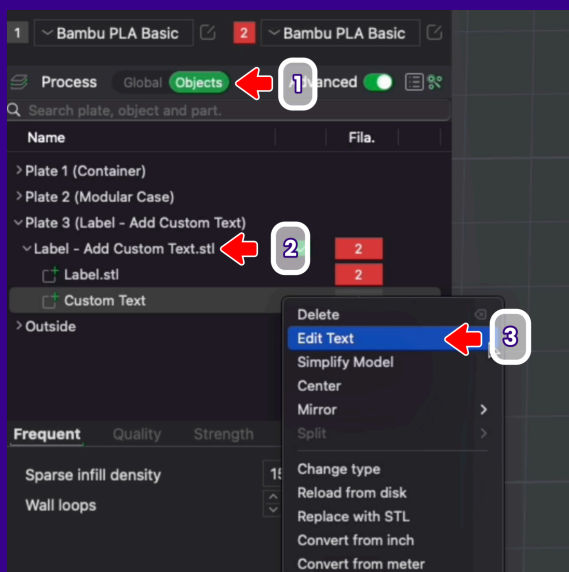

Step 4 *continued..*

Once you have printed the labels, they slide into place on top of each tile.

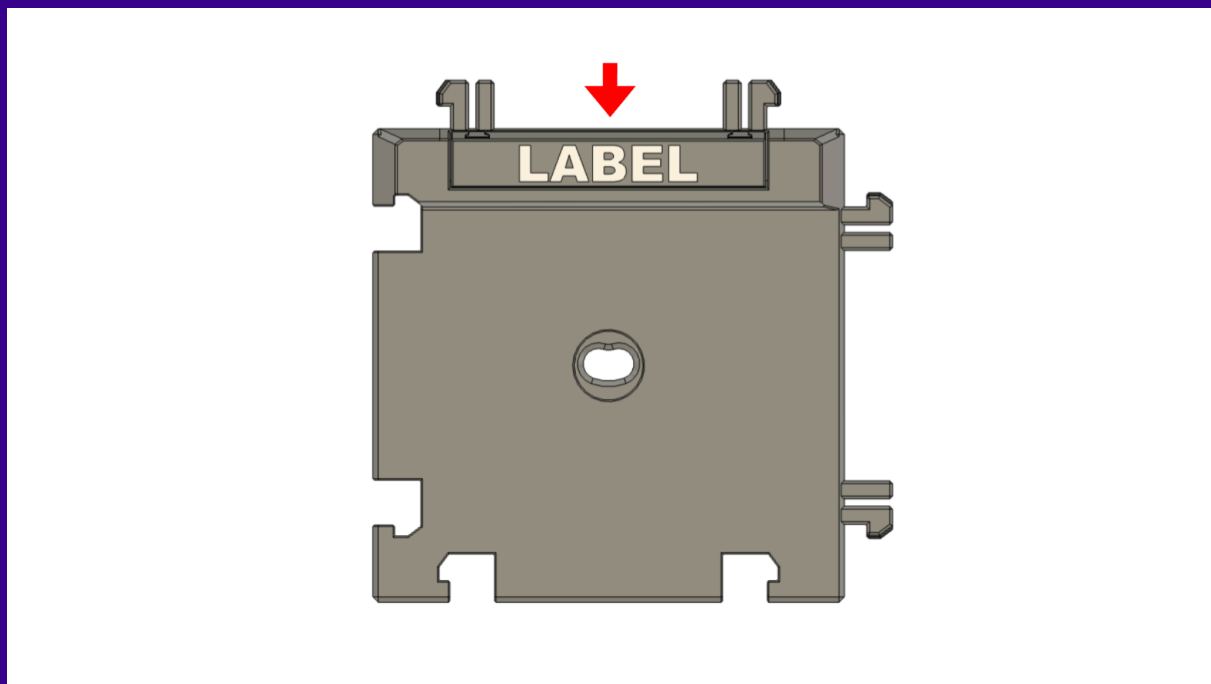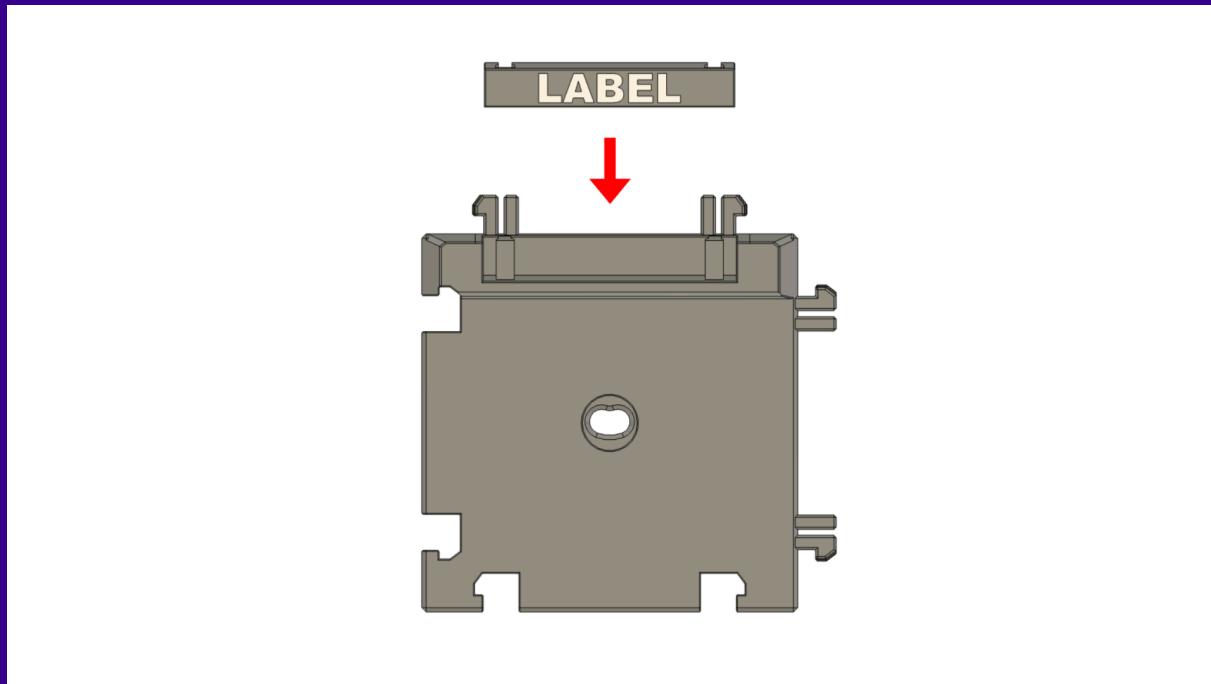


Step 4 - Use

Loading Cables:

1. Push one end of the cable through one of the diamond-shaped cutouts on the Spool and thread it through the centre hole at the top of the Spool.

We recommend using one of the diamond cutouts that is facing downwards, as shown in the images below, as this will make winding easier.

2. Once the cable is in position, turn the Spool clockwise to begin winding.
3. As the cable winds, ensure it does not become tangled. To help with this, allow the cable to hang directly below the Cable Organiser while winding - avoid pulling the cable towards the front or sides, as this will make winding more difficult.
4. The guide arms will help position the cable evenly around the Spool. However, depending on the type of cable being used, you may need to guide the cable manually to ensure it winds evenly.
5. The Spool is designed to hold the cable wrapped once around its circumference - not multiple layers stacked on top of each other.
6. The length of the tube will accommodate approximately **1.3m** of cable with a **3.5mm** maximum cable thickness.

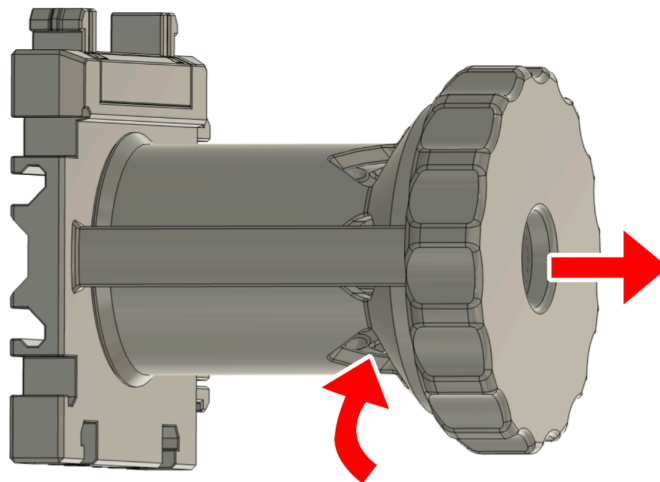


Step 4 *continued..*

Unloading Cables:

1. Locate the loose end of the cable at the outer edge of the Spool – this is the end that was wound in last, not the section protruding from the centre hole at the top of the Spool.
2. Gently pull this loose end to begin unwinding the cable. The cable should unwind freely – do not force it.
3. Continue pulling until only the final loop of cable remains on the Spool.
4. Carefully thread the cable out through the centre hole and then back through the diamond-shaped cutout it was originally inserted into.

If the cable does not fully unwind so that the original diamond cutout used is positioned at the bottom, manually rotate the Spool **anticlockwise** to return it to this position before unthreading the end of the cable.

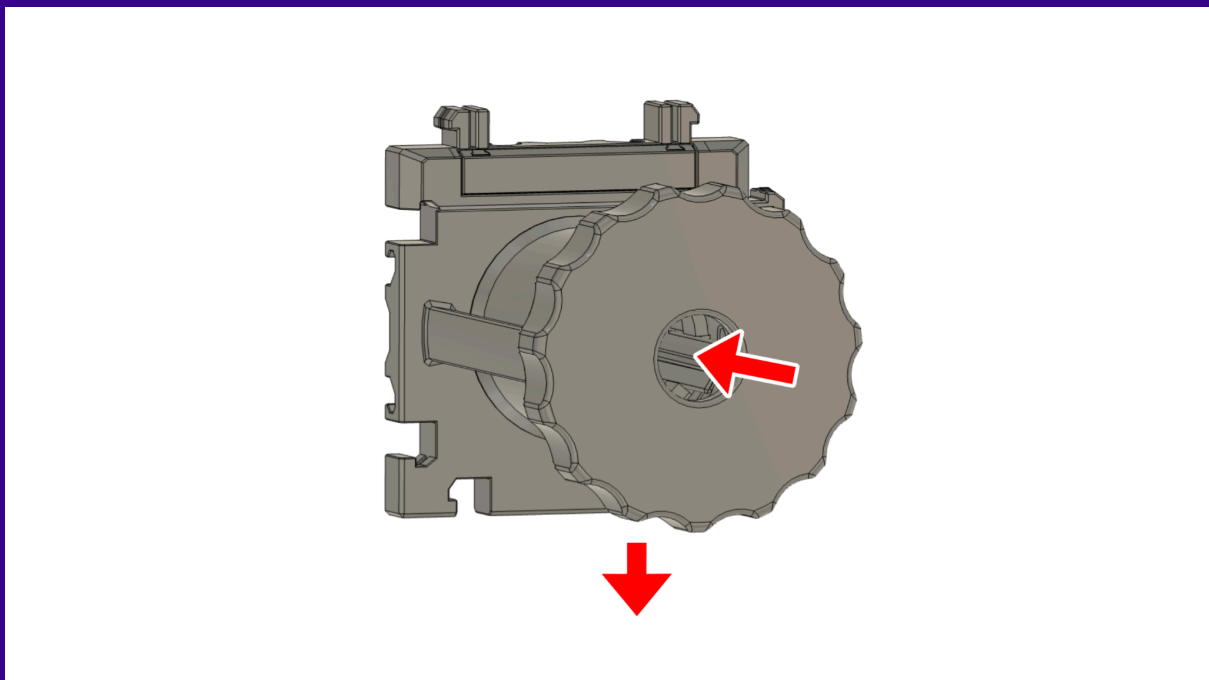

Important Note on Use

The Cargo Connect: Cable Organiser is designed to help organise and store cables in a tidy, accessible way, while avoiding tight bends where possible. However, cable sizes and materials can vary significantly, which may affect performance.

Always ensure the cable you're storing is suitable for this type of storage, is not under excessive strain, and is inspected for wear or damage before use.

Cables should wind and unwind freely. If you encounter resistance, do not force the cable. Instead, inspect the Organiser to identify where the friction is occurring and resolve the issue before continuing use.


Previous Versions – Archive

(Only relevant if you have already printed previous versions of the Cargo Modular System)

The Cargo Modular System evolves over time as we continue to improve usability and functionality, making it the best it can be for everyday use. When a new release isn't fully compatible with older prints, we include a “**Previous Versions – Archive**” folder in the downloadable files (see image below for location). This allows you to keep expanding with the version you already started, or switch to the latest design.

Please note: We'll continue to maintain the archive, but as the system develops, some older versions may no longer work with new updates.

See **Current Compatibility** below for the Cable Organizer's latest updates and compatibility details.

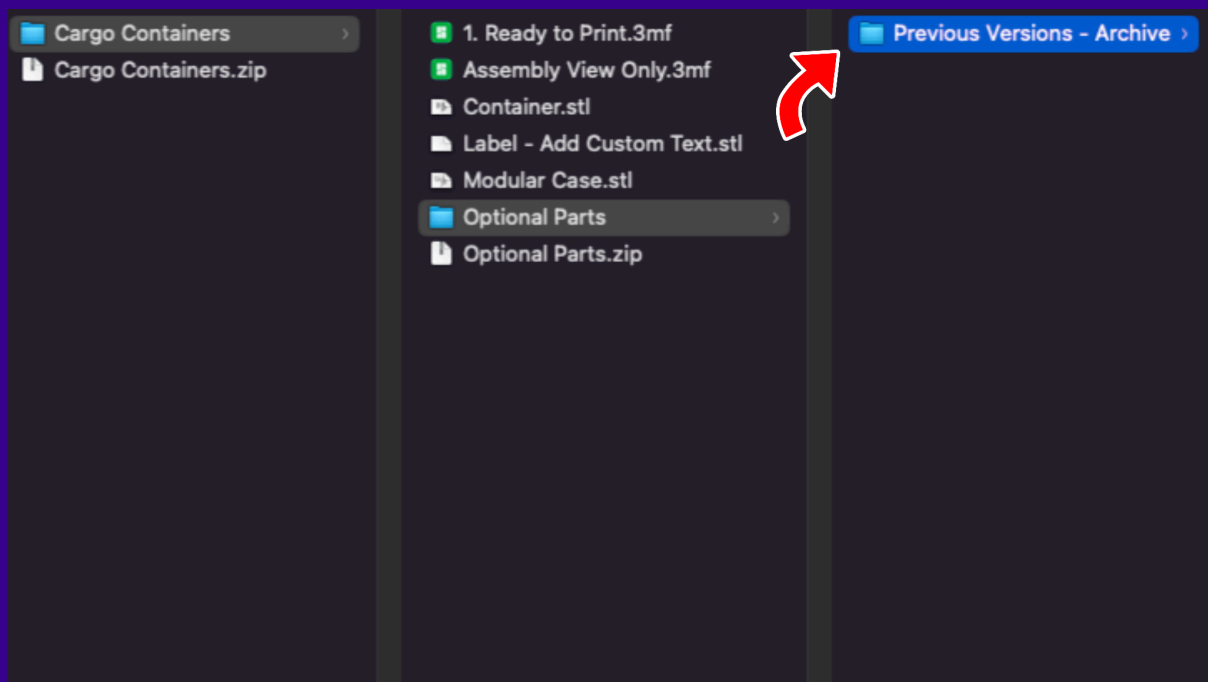

Current Compatibility

14th August 2025:

The original Cable Organizer with a fixed cable tube has been upgraded to **Version 2**. The Cable Organizer v2 still utilises the Cargo Connect tile system, so you can add it straight into your existing setup.

Troubleshooting

We put a lot of time into making our designs as easy to print and use as possible, testing extensively with various filaments and printers. That said, we understand that occasional issues can occur – below are some potential solutions that may be useful:

Warping and Bed Adhesion

Warping is a common challenge in FDM 3D printing, often caused by poor bed adhesion, rapid cooling, or inconsistent ambient temperatures.

It's important that tiles and components come off the bed as flat as possible, as warping may impact features like interlocking pegs, sliding fits, or hinge alignment. If you notice lifting corners or uneven bases, try adding a brim or applying a suitable adhesive directly to the build plate to improve bed adhesion.

Ensuring consistent ambient temperatures and proper first-layer calibration can also go a long way in reducing warping across prints.

Tolerances

The Cargo Modular System is designed to be as print-friendly as possible, and we've worked hard to make tolerances as forgiving as possible across a wide range of printers. However, the unique features and functionality of our designs can rely on tight tolerances to work as intended – especially for parts that slide, hinge, or interlock.

If you're experiencing issues with fit or movement, it's worth checking your printer calibration – including flow rate, retraction settings, and nozzle temperature – to ensure accurate extrusion. Also make sure your filament is dry and of consistent quality, and that your slicer profile is correctly set up for your printer and material.

If problems still persist, we recommend printing a tolerance test model to help identify where your setup might need fine-tuning. These are widely available from reputable sources such as Thangs.

Use Disclaimer

Every Play Conveyor model has been designed and tested with care, but results will vary depending on your printer, materials, settings, and environment. Because of this, we cannot guarantee print outcomes, weight capacities, or the structural performance of any printed items.

You are responsible for ensuring that both the printing and assembly of any models are completed to a safe and functional standard. Always test your prints — especially components that are wall-mounted, load-bearing, or move — and check them regularly for wear or failure.

This user guide is provided as a general reference to support your build, but it is not exhaustive or guaranteed to suit all applications. Use your judgment where needed to suit your specific setup.

All files are provided “as is” and without warranty. Play Conveyor Ltd accepts no responsibility for any injury, damage, or loss resulting from the use or misuse of our designs.

This disclaimer highlights some of the key points when using our models, but it does not replace or override the official ‘License Agreement’.

The ‘License Agreement’ associated with your subscription tier is the official document that defines your permitted use of the model, any restrictions, and your responsibilities. Please ensure you review the relevant license agreement to confirm proper usage.

Thangs Members

- Maker tier: covered by the **Personal License** (for personal use only)
- Merchant tier: covered by the **Commercial License** (includes permitted commercial use)

Your applicable license can be found under each model’s listing on our Thangs page.

Patreon Members

- The license for all Patreon ‘Maker Access’ tiers is included within the downloadable files for each design.

It is your responsibility to review and follow the terms of your applicable license.