


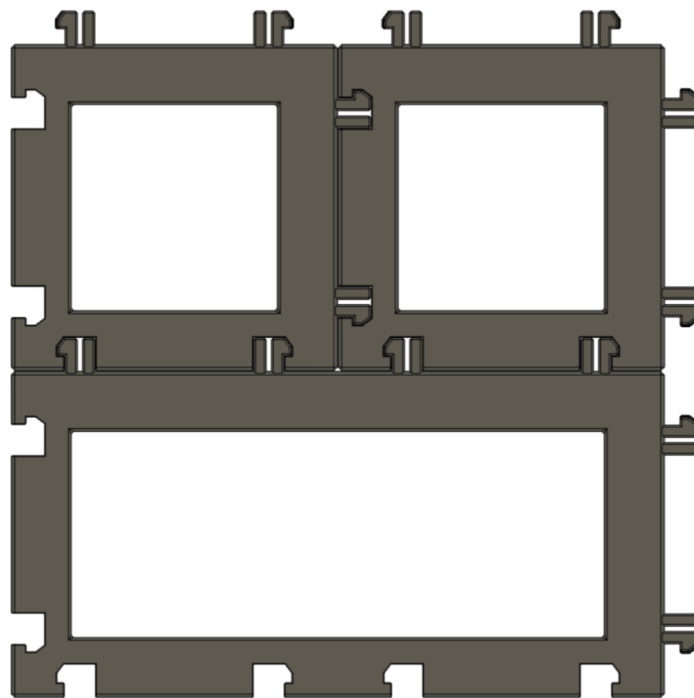

CARGO CONNECT: SPACER (LITE)



User Guide

Resources, Print Settings and Assembly

Before You Start..

What's Included

The below files and documents are included within your download:

1. **Ready to Print (.3mf file)** – All the parts in one place and ready to print on Bambu Lab printers.
2. **User Guide (.pdf file)** – A complete 'User Guide' to help you print and assemble the model.
3. **Individual parts (.stl files)** – All the 3D printable parts you need to make the complete base model, compatible with most slicers.
4. **Assembly View Only file (Do Not Print)** – This file is to view the fully assembled model only and not for printing.

What We Used

Printers:

Bambu Lab P1S

You can get the printers we used here (affiliate link)* – **[Bambu Lab P1S](#)**

Filaments:

Spacer – Bambu Lab PLA Basic Dark Grey

You can get the filaments we used here (affiliate link)* – **[Bambu Lab Filament](#)**


*Some links in this document are affiliate links, which means we may earn commission if you purchase through them.

Cargo Connect: Spacer – Variations

The Cargo Connect Spacer is available in two options shown below, you can find them all to download on our [Thangs](#) page.


Cargo Connect: Spacer

A solid spacer including a screw hole fixing. Perfect for added stability where needed or to add sliding functionality to the Cargo Connect: Hooks or Shelves using the rail cutouts on the back.

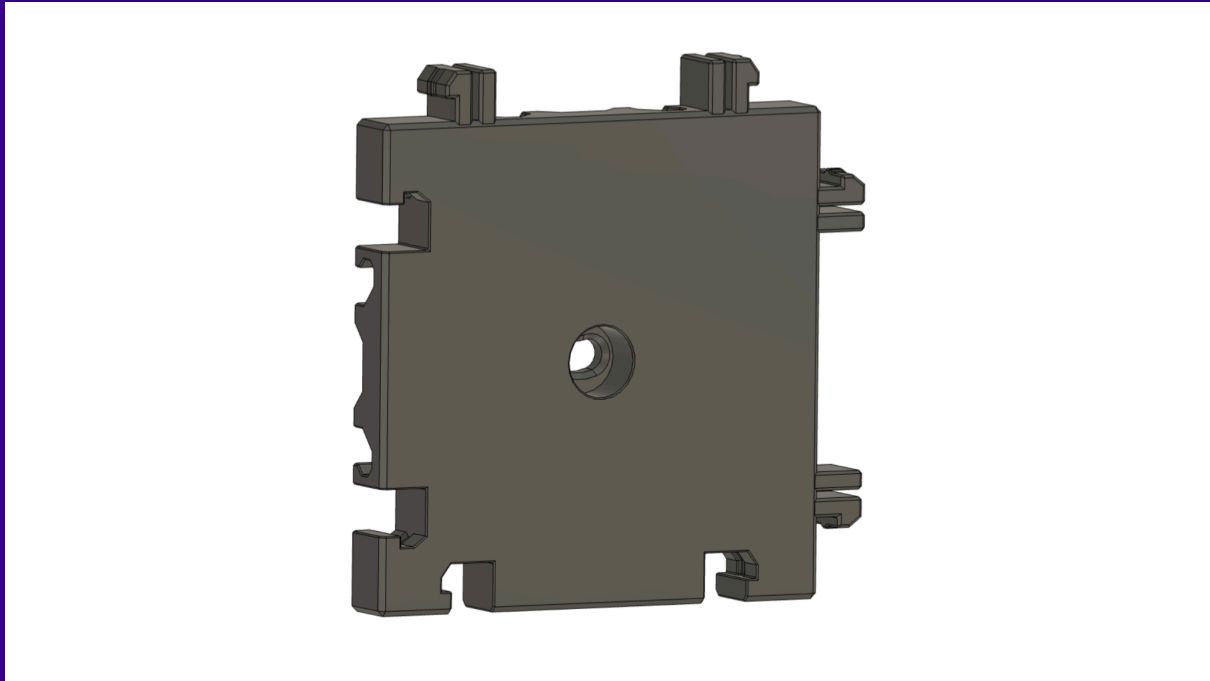

Cargo Connect: Spacer (Lite)

A streamline version of the original Spacer, designed to save filament and print time. Perfect for simple spacing of the Cargo Modular System. Available in 1x1, 2x1 and 1x2 sizes.

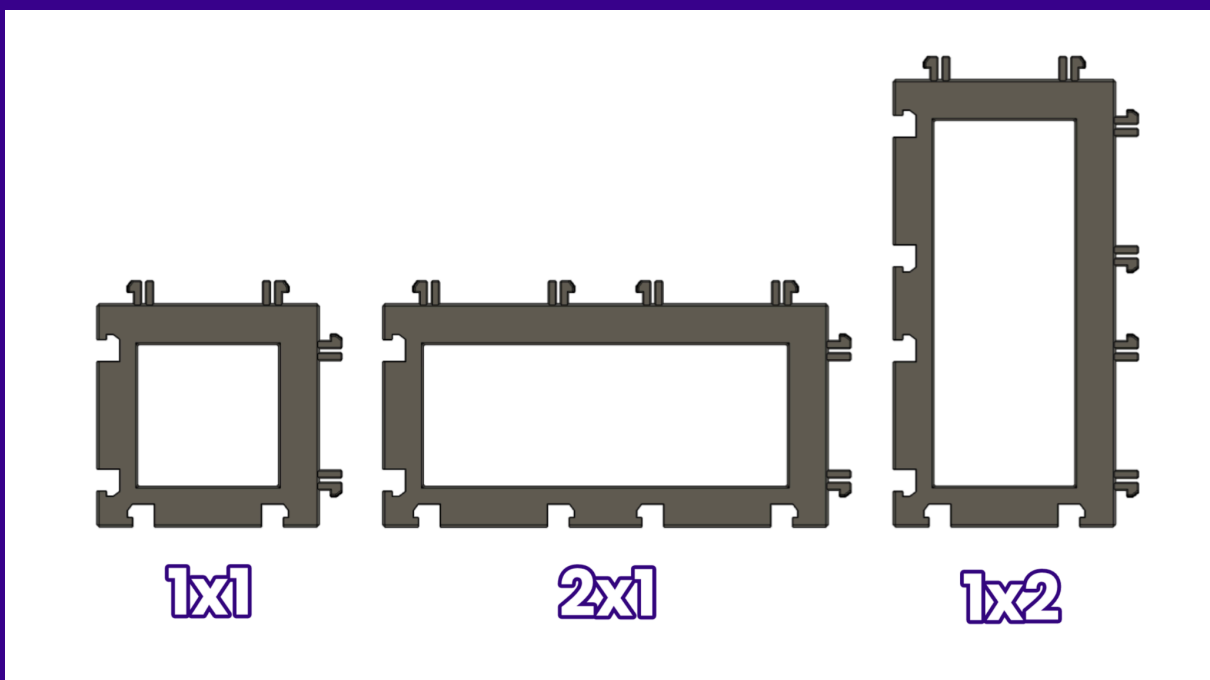

Print Settings


Important Note:

The information detailed in this 'Print Settings' document is the settings we found gave the best results for us. Your printer, materials and printing conditions are unique to you, and due to these widely varying aspects you will know what settings work best for your printers.

Ready to Print Project

A .3mf file named '**1. Ready to Print**' is included in the download. This file is a pre-prepared Bambu Studio project, which includes the settings we used.

(As mentioned above, these settings worked best for us and for our needs, however, you may need to adjust these settings to suit your printing setup and needs)

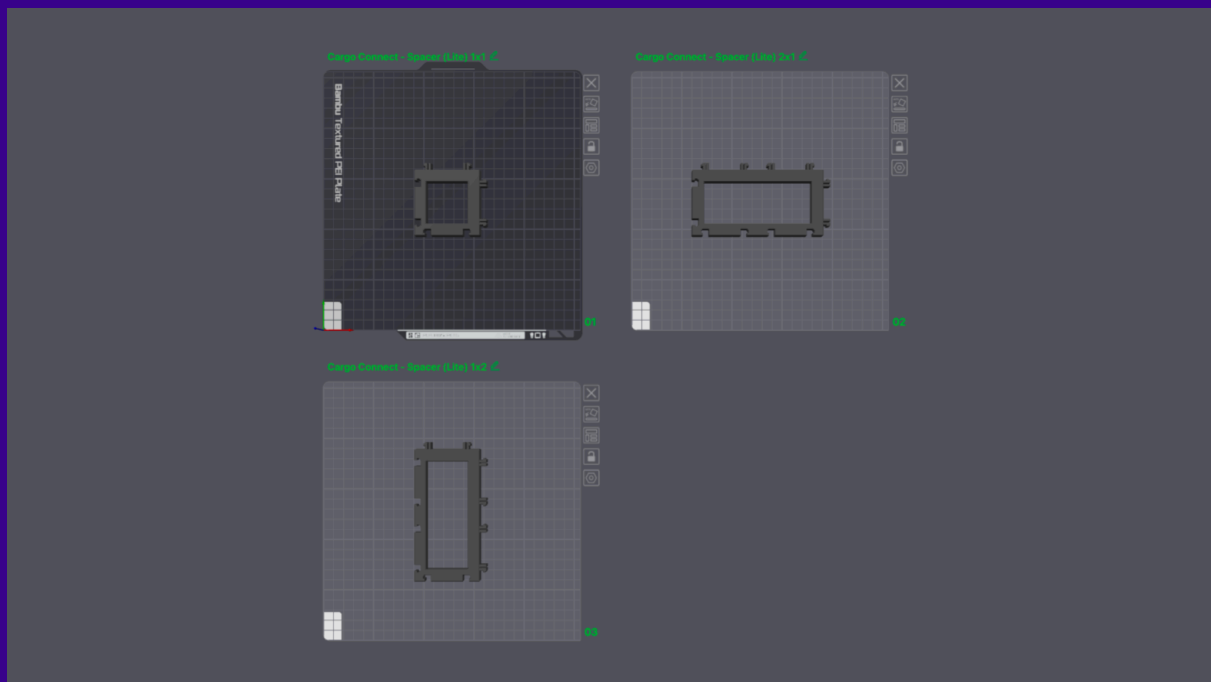

Individual Part Settings


Spacer (Lite) - 1x1

Basic Settings:

- **Printer** - Bambu Lab P1S
- **Outer Walls** - 2
- **Infill** - 15%
- **Supports** - None
- **Brim** - Auto

Estimations:

- **Print Time** - 22m 28s
- **Filament Used** - 12.78g

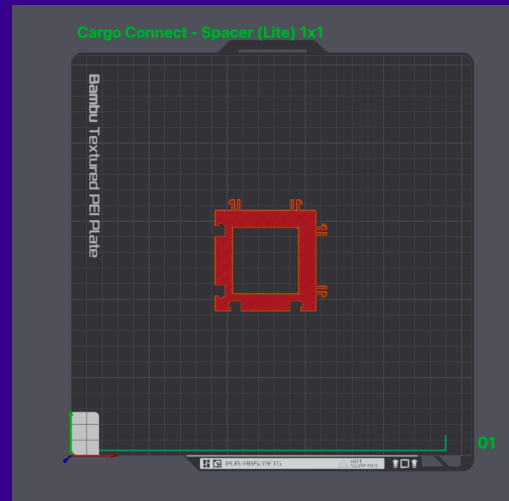


Spacer (Lite) - 2x1

Basic Settings:

- **Printer** - Bambu Lab P1S
- **Outer Walls** - 2
- **Infill** - 15%
- **Supports** - None
- **Brim** - Auto

Estimations:

- **Print Time** - 34m 36s
- **Filament Used** - 20.27g

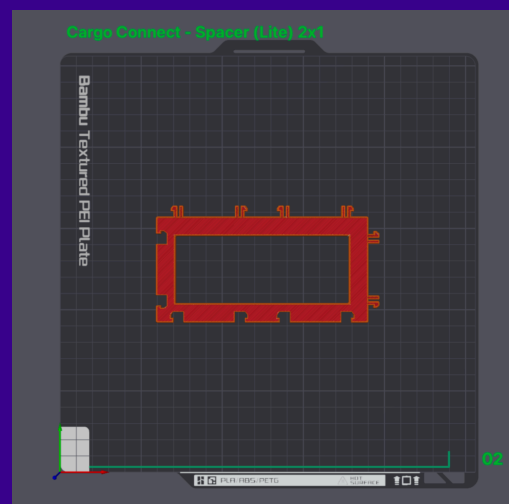


Spacer (Lite) - 1x2

Basic Settings:

- **Printer** - Bambu Lab P1S
- **Outer Walls** - 2
- **Infill** - 15%
- **Supports** - None
- **Brim** - Auto

Estimations:

- **Print Time** - 34m 43s
- **Filament Used** - 20.29g

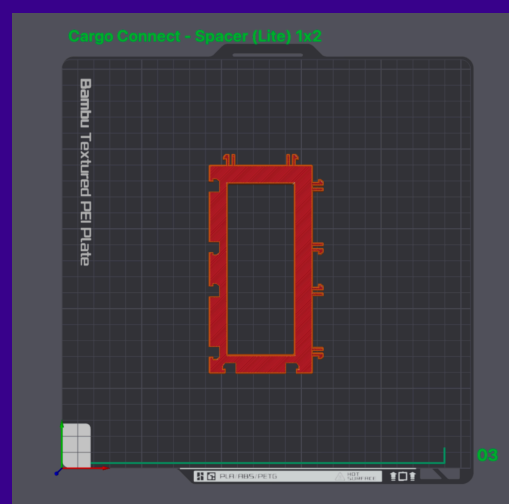


Assembly Guide

Important Note:


Once all parts are printed, remove any supports and check for any imperfections or poorly printed areas – *these may need post processing work or reprinting.*

Step 1 – Interlocking Parts

Each tile connects to another tile on any of the four sides using a 'Jigsaw' like connection.

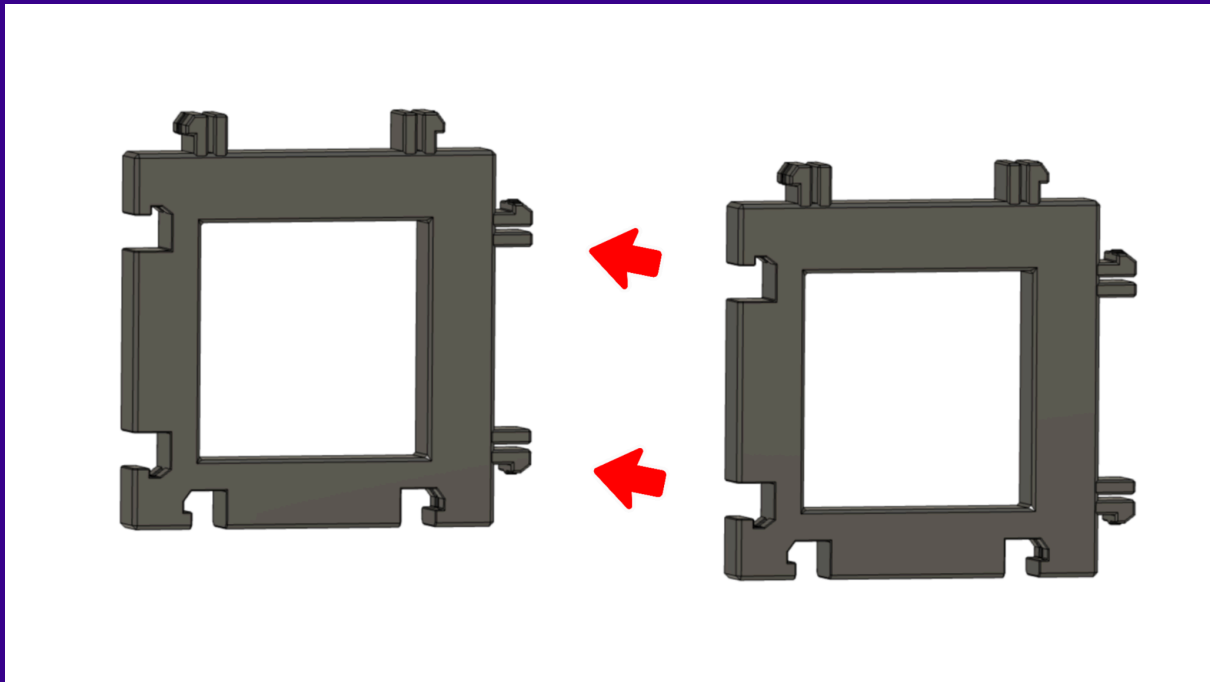

Lay the tiles on a hard flat surface and push them together until you hear the parts click together.

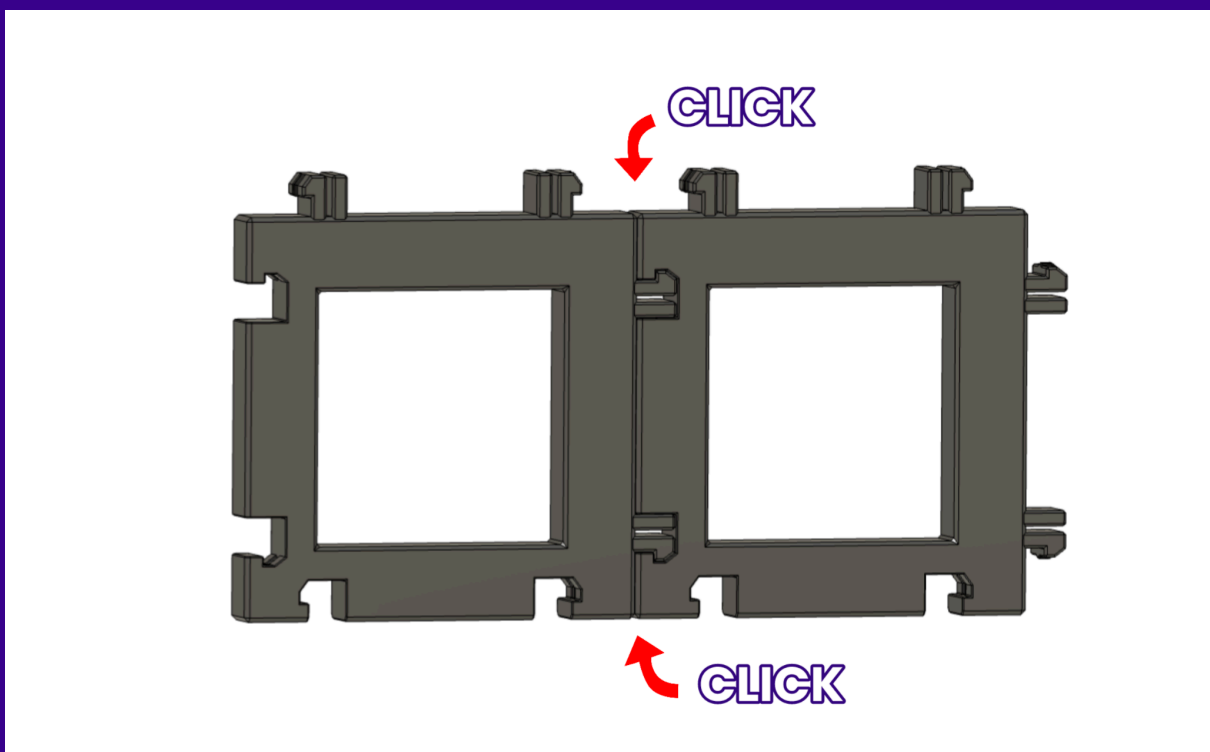


Step 2 - Mounting

Each Spacer (Lite) tile relies on the interlocking pegs around each side to remain securely fixed to the Cargo Modular System.

The Cargo Connect: Spacer (Lite) is **not** a load bearing part and has been designed to help organise your wall storage system by connecting to existing screw mounted tiles. This allows for quick removal of Cargo Containers or creating functional spaces using minimal filament.

Screw Holes

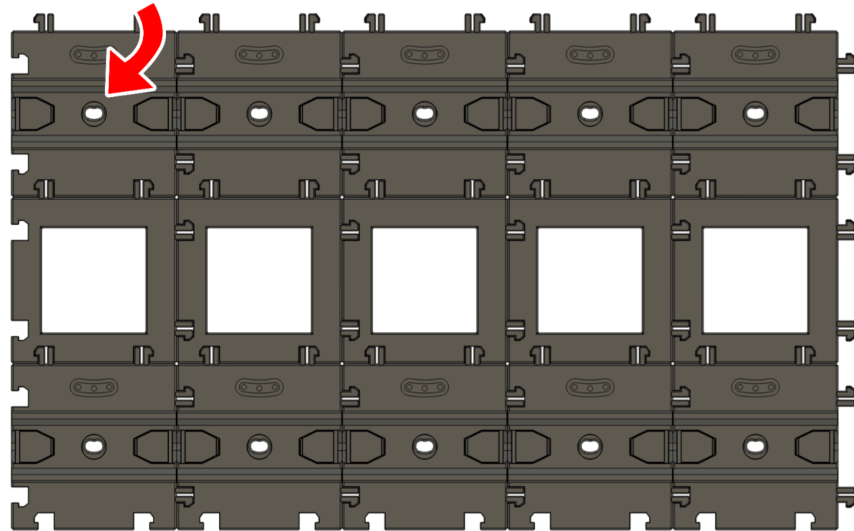

Important Note


The number and placement of tiles and screws used for the Cargo Modular System is **entirely at your discretion**, subject to the strength of your wall and the intended weight of your stored items. **You should thoroughly test the stability and strength of your wall and the system before use and inspect the system at regular intervals to ensure the materials used have not deteriorated.**

Compatible Components

The Cargo Connect: Spacer (Lite) is designed to bring ultimate flexibility to your system and is compatible with all other Cargo Connect tiles.


Removing/Adding Cargo Containers

You can add Spacer (Lite) tiles at certain intervals in your wall system to allow the Cargo Containers to slide off without having to slide them all the way to the end of your system. This is particularly useful for larger systems or systems that are up against another wall.

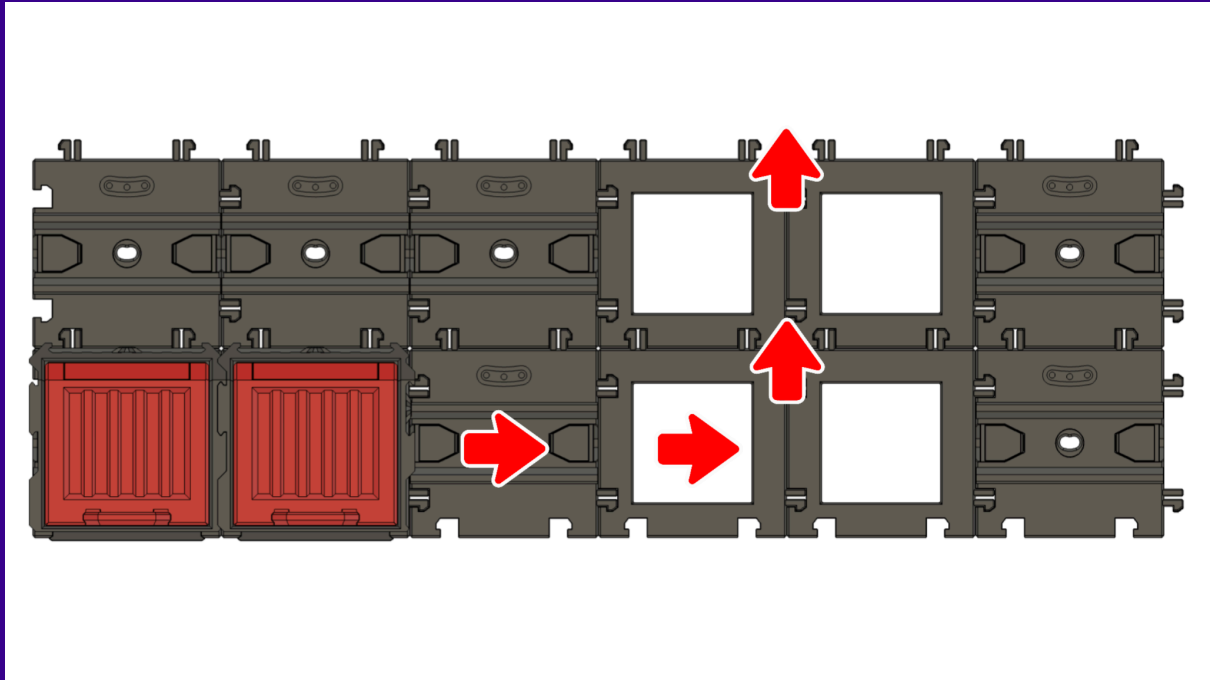

Adding 'Blank Rows' in between Cargo Containers

If you want two separate rows of Cargo Containers that don't interlock together, therefore moving separately, the spacers are a great way to add a blank row so Containers can move freely past each other.

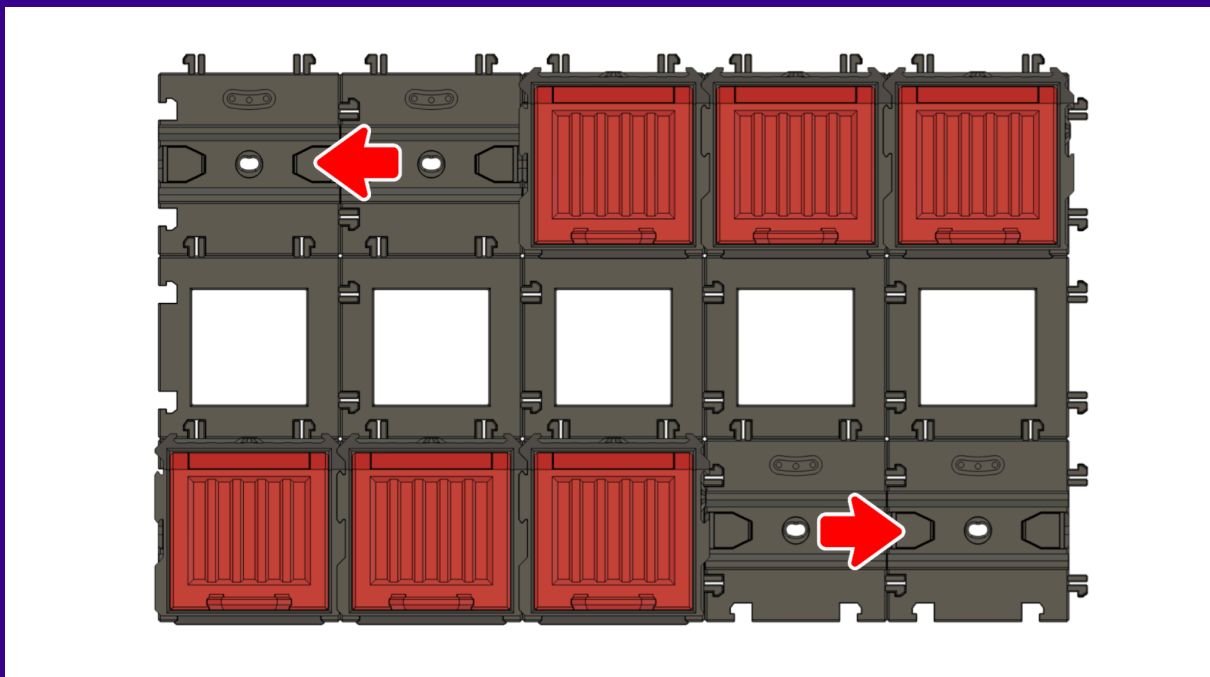

Troubleshooting

We put a lot of time into making our designs as easy to print and use as possible, testing extensively with various filaments and printers. That said, we understand that occasional issues can occur – below are some potential solutions that may be useful:

Warping and Bed Adhesion

Poor bed adhesion or inconsistent room temperatures can cause the print to warp off the build plate during printing.

The Cargo Connect tiles should come perfectly flat off your print bed, if they do not this may affect functionality like the interlocking pegs and sliding along the rails. Using a brim or an appropriate glue for your build plate may help with this.

If Problems Continue:

If the above has not resolved any issues, we recommend printing a variety of comprehensive tolerance tests on your printer. You can download and print these online from various reputable websites such as Thangs.

These tests will help determine the capabilities of your specific printer and where improvements may be needed..

Use Disclaimer

Every Play Conveyor model has been designed and tested with care, but results will vary depending on your printer, materials, settings, and environment. Because of this, we cannot guarantee print outcomes across all setups.

You are responsible for ensuring that both the printing and assembly of any models are completed to a safe and functional standard. Always test your prints — especially components that are wall-mounted, load-bearing, or move — and check them regularly for wear or failure.

This user guide is provided as a general reference to support your build, but it is not exhaustive or guaranteed to suit all applications. Use your judgment where needed to suit your specific setup.

All files are provided “as is” and without warranty. Play Conveyor Ltd accepts no responsibility for any injury, damage, or loss resulting from the use or misuse of our designs.

This disclaimer highlights some of the key points when using our models, but it does not replace or override the official ‘License Agreement’.

The ‘License Agreement’ associated with your subscription tier is the official document that defines your permitted use of the model, any restrictions, and your responsibilities. Please ensure you review the relevant license agreement to confirm proper usage.

Thangs Members

- Maker tier: covered by the **Personal License** (for personal use only)
- Merchant tier: covered by the **Commercial License** (includes permitted commercial use)

Your applicable license can be found under each model’s listing on our Thangs page.

Patreon Members

- The license for all Patreon ‘Maker Access’ tiers is included within the downloadable files for each design.

It is your responsibility to review and follow the terms of your applicable license.