XTS TRANSPORT LAYER

ST_STATION_PARAMETER: placement of 4 parallel synced working XtsStations
with common PosWait, PosStop[1] > 0, Release Distance > 0

Direction → forward

Ex04

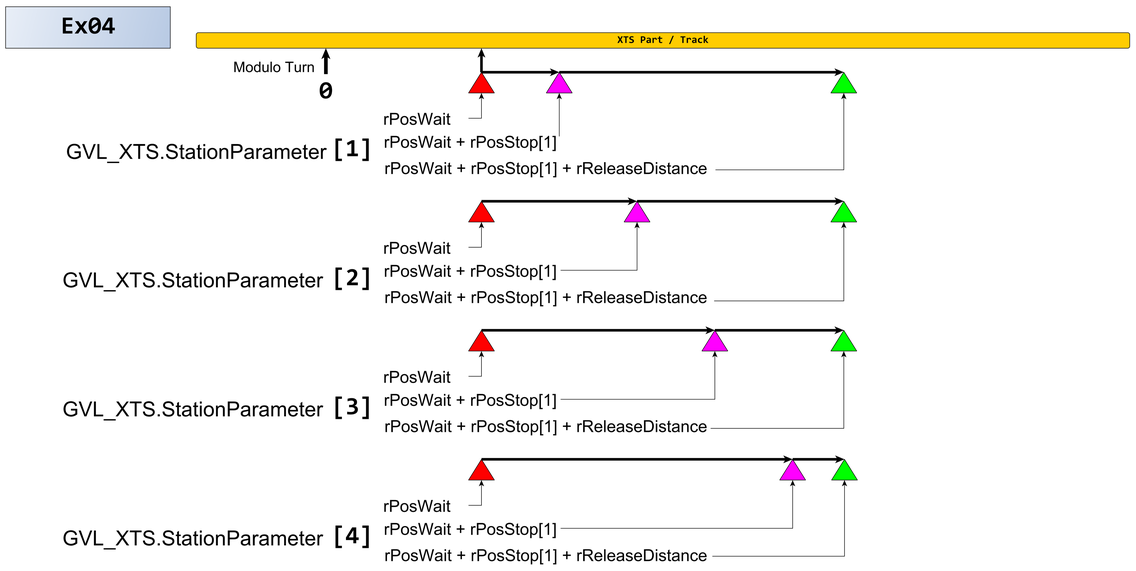

ST_STATION_PARAMETER: placement of 4 parallel synced working XtsStations
with PosWait, PosStop[1] = 0, Release Distance > 0

Direction → forward

Ex05.1

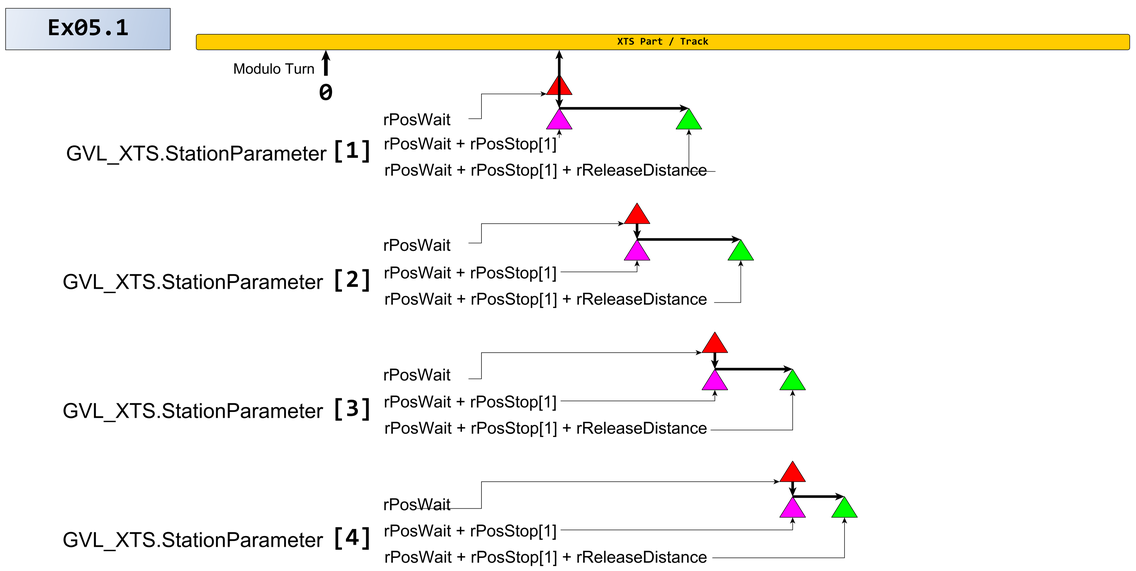

ST_STATION_PARAMETER: placement of 4 parallel synced working XtsStations
with PosWait, PosStop[1] = 0, Release Distance > 0

Direction → forward

Ex05.2

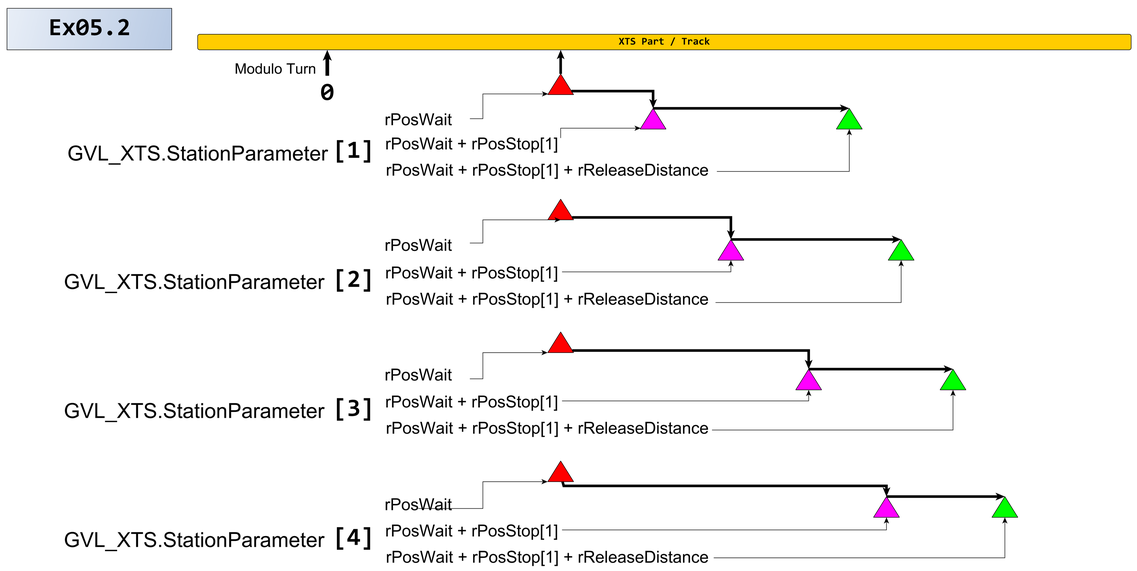

ST_STATION_PARAMETER: placement of 6 parallel synced working XtsStations
with PosWait, PosStop[1] = 0, Release Distance > 0

Direction → forward

Ex06