



ALLPLAN SHARE MANUAL

ALLPLAN 2022

Manual

Allplan Share

This documentation has been produced with the utmost care.

ALLPLAN GmbH and the program authors have no liability to the purchaser or any other entity, with respect to any liability, loss, or damage caused, directly or indirectly by this software and its documentation, including but not limited to, any interruptions of service, loss of business, anticipatory profits, or consequential damages resulting from the use or operation of this software and its documentation. In the event of discrepancies between the descriptions and the program, the menu and program lines displayed by the program take precedence.

Information in this documentation is subject to change without notice. Companies, names, and data used in examples are fictitious unless otherwise noted. No part of this documentation may be reproduced or transmitted in any form or by means, electronic or mechanical, for any purpose, without the express written permission of ALLPLAN GmbH.

Allfa® is a registered trademark of ALLPLAN GmbH, Munich.

Allplan® is a registered trademark of the Nemetschek Group, Munich.

Adobe®, Acrobat®, and Acrobat Reader® are trademarks or registered trademarks of Adobe Systems Incorporated.

AutoCAD®, DXF™, and 3D Studio MAX® are trademarks or registered trademarks of Autodesk Inc., San Rafael, CA.

BAMTEC® is a registered trademark of Häussler, Kempten, Germany.

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the United States and Europe. All rights reserved.

Microsoft® and Windows® are either trademarks or registered trademarks of Microsoft Corporation.

MicroStation® is a registered trademark of Bentley Systems, Inc.

Parts of this product were developed using LEADTOOLS, (c) LEAD Technologies, Inc. All rights reserved.

Parts of this product were developed using the Xerces library of "The Apache Software Foundation".

fyiReporting Software LLC developed parts of this product using the fyiReporting library, which is released for use with the Apache Software license, version 2.

Allplan update packages are created using 7-Zip, (c) Igor Pavlov.

Cineware, render engine, and parts of the user documentation; copyright 2020 MAXON Computer GmbH. All rights reserved.

All other (registered) trademarks are the property of their respective owners.

© ALLPLAN GmbH, Munich. All rights reserved.

1. Auflage, März 2022

Document no. 220deu01m07-1-PSDM0322

Contents

Welcome	1
General information.....	3
What is Allplan Share?	3
How Allplan Share and Allplan Bimplus interact	4
Working together on an Allplan Share project.....	6
Data storage in an Allplan Share project.....	6
Syncing the local file storage to Bimplus cloud storage.....	7
User rights in Allplan Share.....	8
Roles and rights at team level.....	8
Roles and rights at project level.....	9
Requirements for Allplan Share	10
Hardware requirements and software requirements	10
Further requirements	11
Setting up Allplan Share	13
Bimplus account and Bimplus team	13
Create Bimplus account	13
Creating a Bimplus team	13
Licensing Allplan Share	15
Purchasing licenses.....	15
Assigning licenses to users	15
Licensing for students and teachers	18

Working with Allplan Share projects	21
Creating Allplan Share projects	21
Creating new Allplan Share projects in new Bimplus projects	22
Integrating new Allplan Share projects into existing Bimplus projects.....	24
Convert existing Allplan projects to Allplan Share projects	27
Inviting members to an Allplan Share project	30
Working on Allplan Share projects in Allplan.....	32
Open Allplan Share projects	32
Close Allplan Share projects	33
Manage lock information for Allplan Share projects.....	34
Uploading the BIM model From the Allplan Share project to Bimplus	35
Copying or moving Allplan Share projects off Bimplus cloud storage	37
Backing up and restoring Allplan Share project data.....	38
Backing up Allplan Share projects	38
Restoring project data from a backup.....	39
Delete Allplan Share projects.....	42
 FAQs	 43

Welcome

This guide gives you a detailed overview of the various options offered by using Allplan Share.

In the following chapters, you will learn how to set up Allplan Share, purchase and assign licenses, and use Allplan to work on an Allplan Share project.

In the last chapter, you will find a short and concise summary of Q&As about Allplan Share.

Have fun with Allplan Share! We wish you every success!

General information

What is Allplan Share?

By means of the **Allplan Share** option, you can use cloud computing to edit native Allplan project data. You save and manage the Allplan project data on the openBIM platform **Allplan Bimplus**, which is hosted by ALLPLAN GmbH.



By combining Allplan and Allplan Share, you can directly collaborate with planning partners all over the world on one and the same Allplan project. Allplan Share not only reduces your administrative costs and staff costs but also helps you avoid extra costs. You do not need to buy, install, or maintain a local server because Allplan Bimplus uses cloud storage to save the data.

In addition, the  [BIMPLUS web portal](#), which is based on the open-BIM platform Allplan Bimplus, provides additional functionality, such as the issue management tool named **Issue Manager**, document management, and much more. When you use Allplan Bimplus to maintain your Allplan specialist model, **BIM Explorer** as a model viewer gives you a clear impression of your Allplan specialist model or the complete coordination model of the construction project anytime and anywhere.

How Allplan Share and Allplan Bimplus interact


With **Allplan Share**, you can use the openBIM platform **Allplan Bimplus** only for cloud storage of native Allplan project data and for collaboration on projects across locations.

However, if you want to take it one step further, you can integrate your Allplan Share projects directly in the BIM-compliant planning process by including the specialist models created in Allplan Share in the BIM coordination model of the construction project. Thus, all planning partners involved in the construction project gain insight into your planning status, regardless of their planning tools. The specialist model integrated in the coordination model and the Allplan Share project can be automatically synced afterward.

Note: You can find more information about BIM-compliant planning in the [Bimplus User Manual](#).

Allplan Share is closely linked with Allplan Bimplus:

- Bimplus uses cloud storage to save the native Allplan data.
- Bimplus manages the users for Allplan Share projects.
- Each Allplan Share project is linked with exactly one Allplan Bimplus project. When you create an Allplan Share project, you can either create this Bimplus project as a new project or select it from existing Bimplus projects that do not contain Allplan Share data yet.
- Considering network performance, the native Allplan data in an Allplan Share project does *not automatically* create a specialist model in Bimplus. However, you can upload the model data of the Allplan Share project *directly* to Bimplus at any time.
- When you include a specialist model for the Allplan Share project in the BIM coordination model of the Allplan Bimplus project, you can transfer the Allplan model data manually or automatically and sync the Allplan Bimplus project.
 - **Manual:** Click  **Upload Model to Bimplus.**
 - **Automatic:** Select the **Auto-sync to Bimplus model** option in the **Upload Model to Bimplus** dialog box.

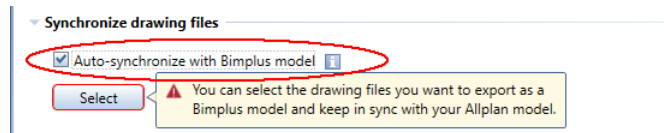


Note: This does *not* sync the native Allplan data (for example, drawing files, layouts) but the Allplan specialist model in the Bimplus project.

Working together on an Allplan Share project

Several users can work on the same Allplan Share project at the same time. This is just like working on an “ordinary” Allplan project. Drawing files, layouts, and filesets that have been opened by a user are locked and cannot be edited by any other user at the same time. However, locked drawing files can be opened in reference mode by other users.

To manage lock information manually, a function is available in the Services application that allows the Allplan administrator to view the lock information for each project and delete it manually if necessary (see “[Manage lock information for Allplan Share projects](#)” on page 34). This ensures that documents do not remain unnecessarily locked just because an internet connection does not work properly.

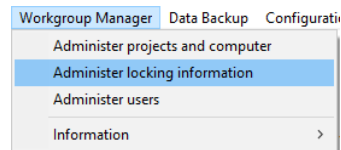

You can also manage locking information by selecting this tool on the shortcut menu of a project in the **New Project, Open Project** dialog box.

Data storage in an Allplan Share project

When working with Allplan Share projects, the original data of the project in the Bimplus cloud is not accessed directly; instead, a local copy of the data to be edited is used. This local copy is located in the Windows folder **Documents** of the respective user in the subfolder **... \Nemetschek \Share** (under Windows 10 usually **C : \Users \username \Documents \Nemetschek \Share**).

The *first* time you open an Allplan Share project, all rudimentary project data (except drawing files, filesets, and layouts) will be copied from Bimplus cloud storage to the local folder. As soon as you open a drawing file, layout, or fileset in an Allplan Share project, this document will be copied from Bimplus cloud to the local file storage folder and opened from there.

The following subsection “Syncing the local file storage to Bimplus cloud storage” (on page 7) explains when the locally processed data is written back to the original project data in the Bimplus Cloud.

Syncing the local file storage to Bimplus cloud storage

Changed drawing files and layouts will automatically be copied to Bimplus cloud storage when you ...

- close a drawing file or open it in reference mode.
- close a project.
- switch to layout editor.
- open ProjectPilot.
- select  **Save** to upload changed drawing files or layouts.
- change Allplan resources. These resources will be copied from the local file storage folder to Bimplus cloud storage as soon as you close a project. Other users will not see these changes until they close and reopen the project.

User rights in Allplan Share

User rights for Allplan Share are assigned on 2 levels:

- The first level relates to rights at **team level**. Here, the Allplan Share licenses and members of the entire team are managed, as well as their access rights to the general project management. These rights are assigned by the team owner and team administrators via the [Allplan Shop](#).
- The second level relates to rights at **project level**. The project members and their access rights within the individual Allplan Share projects are managed here. These rights are assigned by the project administrators authorized for the respective project via the  [BIMPLUS web portal](#).

Roles and rights at team level

The following roles are available at team level:

- **Team owner:** Rights such as "Team Administrator", additionally purchase Allplan Share licenses / role cannot be changed.
- **Team administrator:** Invite and remove team members / determine and delete other team administrators / manage licenses usage permissions / create and delete projects / determine and delete project administrators / project administrator in each Bimplus project.
- **Team member:** no rights at team level; can be assigned any role at project level.


Team administrators and team members are managed in the **Allplan Shop** (see "[Assigning licenses to users](#)" on page 15).

Roles and rights at project level

The following roles are available at project level:

- **Project administrator:** same rights as a project editor; plus: deleting models; deleting documents; inviting and removing members; assigning member roles at project level; assigning a property set template
- **Project editor:** same rights as a project viewer, plus: creating, uploading, and downloading models; creating revisions; uploading documents; creating, editing, and deleting issues; editing project properties; checking for clashes
- **Project viewer:** viewing models, documents, and issues; downloading documents

The roles and therefore the rights of the project members are managed in the  **BIMPLUS** web portal via the **project members** item. Memberships and access rights are limited to the currently selected project.

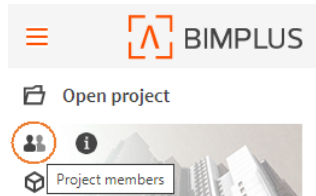

Notes:

- If you have copied an existing Allplan project to Bimplus cloud storage as an Allplan Share project, you will have to redefine the designated project members and their access rights.
- You must assign user rights for print sets and privilege sets again in Allplan.

Requirements for Allplan Share

Hardware requirements and software requirements

Network

- An internet connection that is stable and uninterrupted.
 - **Minimum requirements:** 10 Mbps for upload; 20 Mbps for download; the latency must be less than 50 milliseconds (you can check this by means of Allplan Diagnostics, for example).
 - **Recommended:** 50 Mbps for upload; 100 Mbps for download; the latency must be less than 10 milliseconds (you can check this by means of Allplan Diagnostics, for example).
- Current network drivers
- Network connections based on LAN (better than WLAN)

Local file storage folder

- If possible, use a local (SSD) hard drive for the local file storage folder; network drives slow down access. The local file storage folder must not be shared between several users; this might cause massive problems. The Services window shows the path of the local file storage folder.
- You can find information about how to change the path of the local file storage folder in an FAQ on Allplan Connect; for example, enter the following search term: "local file storage folder Allplan Share".

Hardware

- The hardware requirements are the same as those for Allplan.

Further requirements

- You are registered with Allplan web services either via [Allplan Connect](#) or via [Allplan Campus](#) (see "Create Bimplus account" on page 13).
- A Bimplus team is set up (see "Creating a Bimplus team" on page 13).
- If you want to create Allplan Share projects, you are a Bimplus team owner or team administrator (see "User rights in Allplan Share" on page 8).
- You have one or more Allplan Share licenses (see "Purchasing licenses" on page 15).

Setting up Allplan Share

Bimplus account and Bimplus team


Create Bimplus account

If you are already registered for Allplan web services via **Allplan Connect** or **Allplan Campus**, you do not need to do anything else. In this case, you are automatically a registered Bimplus user. To sign in to Bimplus, you can use the same details as for signing in to **Allplan Connect** or **Allplan Campus**.

If you do not yet have an Allplan account, please register first via [Allplan Connect](#) or [Allplan Campus](#).

Creating a Bimplus team

Create a Bimplus team in [Allplan Connect](#) or [Allplan Campus](#).

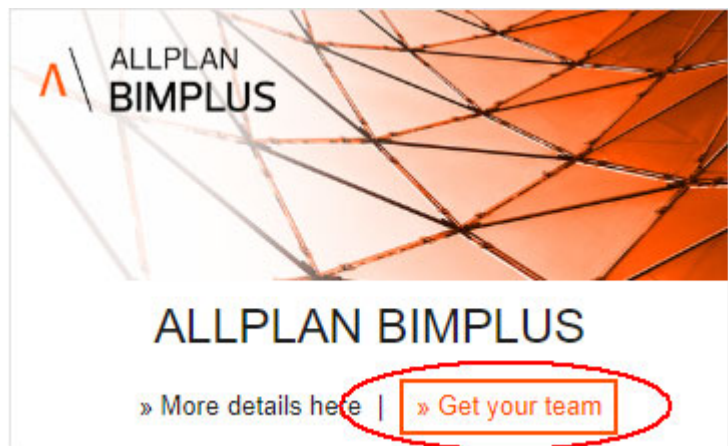

Please note the following when creating a Bimplus team:

- Each registered email address with **Allplan Connect** or **Allplan Campus** can open exactly *one* Bimplus team. We recommend that you use a generic email address (for example, info@company.com) instead of a personal email address of an employee because the email address *cannot* be changed anymore.
- The person behind the email address automatically becomes the team owner. This role *cannot* be transferred or changed later.
- The team name is automatically the company name behind the email address in Allplan Connect. The team owner can change the Bimplus team name *at any time*.
- When you – as a project editor – are invited to join an Allplan Share project, you do *not* need your own Bimplus team.

Licensing Allplan Share

Note: If you are a student or a teacher, go to "Licensing for students and teachers" (on page 18).

Allplan Share licenses can be subscribed exclusively by team owners for their Bimplus team. The term can be selected after consultation with a sales representative.

For each Allplan Share license, the Bimplus team gets 100 GB of memory on the openBIM platform **Allplan Bimplus**. If you need more memory, subscribe to additional licenses.

The team owner or a team administrator assigns the licenses to the team members or external project participants. Authorized users can then work on all projects within the Bimplus team for which they are given the appropriate status (at least project editor).

Purchasing licenses

The **Allplan Share** option is already included in some Allplan packages. Should this not apply to you, you can purchase Allplan Share licenses *exclusively* as a team owner.

Please contact your Allplan sales partner for this: They will create a Bimplus team for you. The team created gets the licenses purchased.


Assigning licenses to users

Each project member who is to work on an Allplan Share project must have an Allplan Share license. This can be the project member's own license or a team license assigned to this project member.

As team owner or team administrator, you manage the Allplan Share licenses available for the Bimplus team in the [Allplan Shop](#), which you can access either via the  [BIMPLUS web portal](#) or directly.

To assign an Allplan Share license to a team member

- ➡ You are the owner or an administrator of the Bimplus team.
- 1 Sign in to the  **BIMPLUS** web portal and click  **Team members** on the navigation menu.

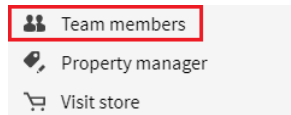


Tip: If the navigation menu is not visible, click  **Show navigation menu** on the title bar of the  **BIMPLUS** web portal.

This opens the **Allplan Shop**; you can see the **Subscriptions & users** section.

Or:

Open the **Allplan Shop** directly and click **Subscriptions & users** on the **User menu**.

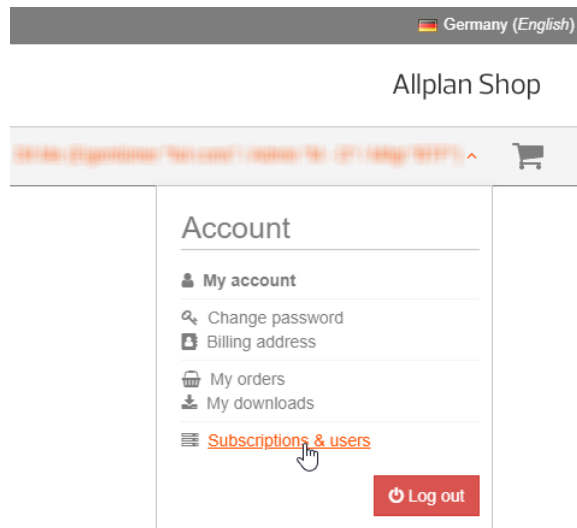


The **Subscriptions & users** section opens.

- 2 *Only if you are the owner or administrator of several Bimplus teams:*

Use the list box under **List of available teams** to select the team whose rights of use you want to manage for Allplan Share.

- 3 The **Bimplus Team Management** tab lists all members of the current Bimplus team and all employees of your company who are registered with Allplan Connect.


If the list does not include the required person, click **Invite user to Bimplus team**.

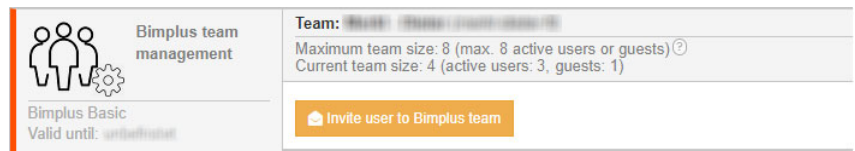

Important: Do not assign the role of **team administrator** to a new team member unless this is absolutely necessary because this role has more rights than the role of project administrator. You can create project administrators in the user management of the Bimplus project.

You can find the new member in the member list of the team as soon as this person has accepted the invitation.

- 4 Under **Subscriptions**, select the **Allplan Share** tab.

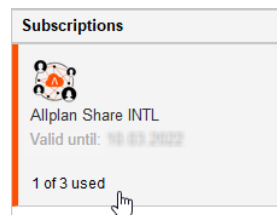

5 Assign Allplan Share licenses to the required team members.

To do this, select the check box in the **Ass.** column for the respective team member. . Clear the check box to remove a li-
cense assigned.

Ass.?	Name	Company	St.?	Email	Role?
☒	Team administrator	Team administrator	✓	Team administrator	Team administrator
☒	Guest	Guest	✓	Guest	Guest


Licensing for students and teachers

Each student or teacher whose Allplan student license is registered and verified can get a free license for Allplan Share. The Allplan Share license will be assigned automatically.

Note: The available memory is 2 GB for student licenses.

To get a license for Allplan Share Student

- 1 Sign in to Allplan Campus.
- 2 Click **Get options**.

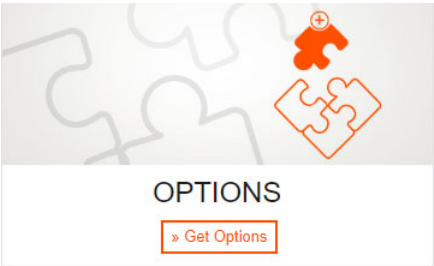


Tip: For more information on the **Allplan Shop**, click **Allplan Share: Guided Tour** below the button.

- 3 Read the information on the **Options** page and make sure that you meet the requirements mentioned.

- 4 Click **Go to Allplan Shop**.

to the Allplan Shop

- 5 Click the Allplan logo in the upper-left area of the **Allplan Shop** to go to the home page.
- 6 Click **Education**. Go to **Allplan Share Student** and click **More information**.

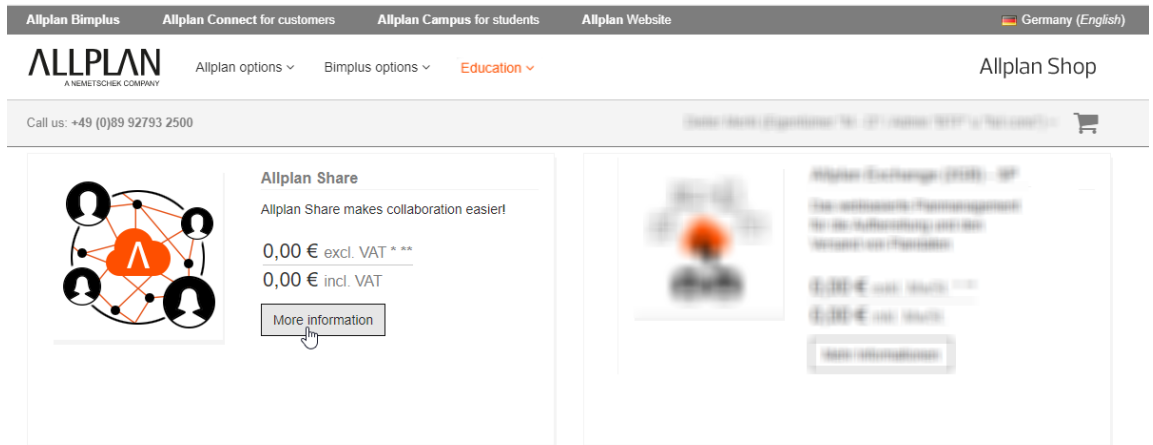

- 7 Follow the instructions.

Working with Allplan Share projects

Creating Allplan Share projects

You have three options for creating an Allplan Share project:

- You create a *new* Allplan project from the outset as a pure Allplan Share project. The automatically generated Bimplus project does not contain any other data besides the Allplan Share project, but is used exclusively for administration purposes (including project members and their access rights).
- You create a *new* Allplan project as an Allplan Share project in an existing Bimplus project. In addition to the Allplan Share project, the planning data of other planning partners involved in the construction project are usually also available in the Bimplus project.
- You copy an *existing* Allplan project from your local workstation or from a workgroup to the Bimplus cloud. You can choose whether you want to create a new Bimplus project for the Allplan Share project or integrate it into an existing Bimplus project.

Important! Since each Bimplus project can generally contain only one Allplan Share project, it must not contain any other Allplan Share project when using an existing Bimplus project.

You can recognize this by the icon in the **New Project, Open Project** dialog box:


 = Bimplus project *without* Allplan Share project

 = Bimplus project *with* Allplan Share project

- 4 In the **New Project – Specify Project Name** dialog box, enter the name of the new Allplan Share project in **Project name**.

The same project name is also used for the newly created Bimplus project.


- 5 For **location**, select **Bimplus**.

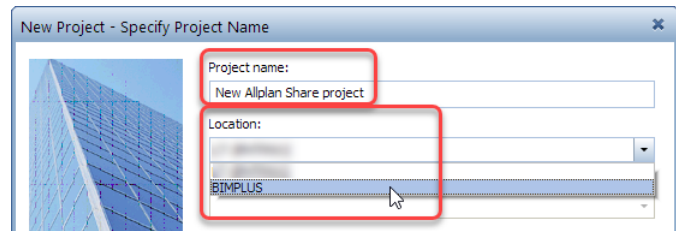

- 6 *Only if you are the owner or administrator of several Bimplus teams:*

Use the **Team** list box to select the Bimplus team that is going to edit the Allplan Share project.

- 7 Under **Bimplus model name**, enter the same name for the Allplan model under which it is to be entered in the Bimplus project management.

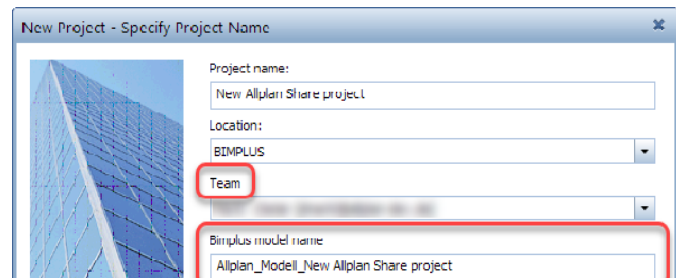


- 8 Click **Next**.

The Bimplus project is created and the connection between Allplan and this Bimplus project is established.

- 9 Click **Finish** in the **New Project – Additional Project Settings** dialog box.

The Allplan Share project is created in the newly created Bimplus project.

- 10 You can now go directly to the Bimplus project management, e.g. to invite other members to the project (see "[Inviting members to an Allplan Share project](#)" on page 30).

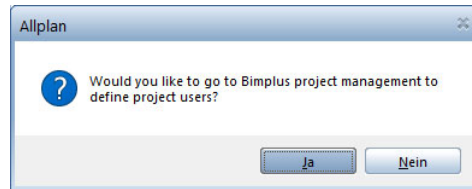


Integrating new Allplan Share projects into existing Bimplus projects

New Allplan Share projects can also be integrated directly into existing Bimplus projects. In this case, the Allplan Share project automatically takes on the project name of the Bimplus project.

The prerequisite is that the intended Bimplus project does not yet contain another Allplan Share project.

To create an new Allplan Share project in an existing Bimplus project

- ➡ You are the owner or administrator of the Bimplus team.
- 1 Start Allplan and make sure that you are logged in to Allplan web services.

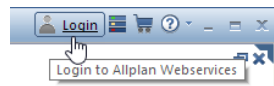

- 2 Click  **New Project, Open Project.**

- 3 In the left column of the **New Project, Open Project** dialog box, select the  **Share** project data path.
- 4 *Only if you are the owner or administrator of several Bimplus teams:*
In the **Team** column, select the Bimplus team that will work on the Allplan Share project.
- 5 In the **Project name** column, click the Bimplus project in which you want to create the Allplan Share project, and then click **OK**.

Or:


In the **Project name** column, click the Bimplus project in which you want to create the Allplan Share project, and then click

 **New Project**.

Or:


Click **New Project** in the shortcut menu of the Bimplus project.

Important! In any case, please make sure that you select a Bimplus project that does not contain another Allplan Share project yet (icon:  = Bimplus project without Allplan Share project).

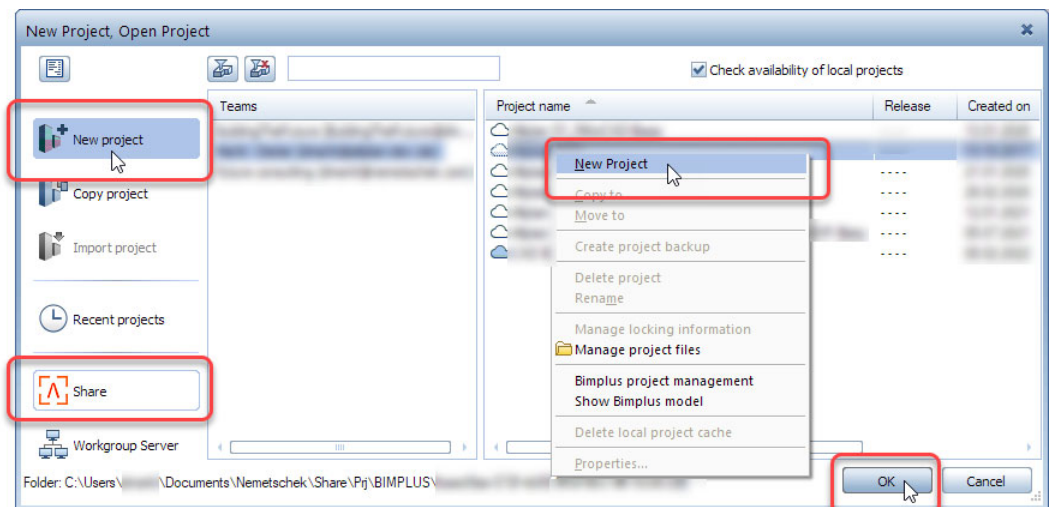


- 6 In the **New Project – Specify Project Name** dialog box, the project name, location and Bimplus team are predefined.

Under **Bimplus model name**, enter the same name for the Allplan model under which it is to be entered in the Bimplus project management.

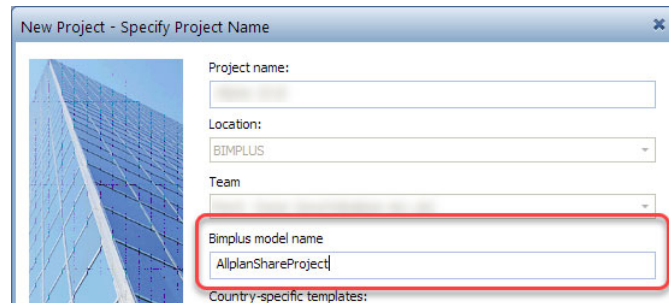

- 7 Click **Next**.
- Allplan is connected to the Bimplus project.
- 8 Click **Finish** in the **New Project – Additional Project Settings** dialog box.
- The Allplan Share project is created in the selected Bimplus project.
- 9 You can now go directly to the Bimplus project management, e.g. to invite other members to the project (see "[Inviting members to an Allplan Share project](#)" on page 30).

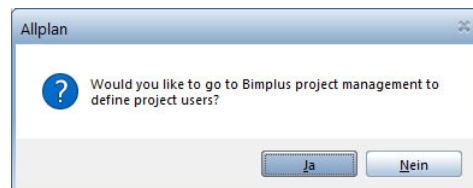


Convert existing Allplan projects to Allplan Share projects

You can share existing Allplan projects (i.e. local Allplan projects or projects edited in a workgroup) with Allplan Share projects. To do this, simply copy the Allplan project to the Bimplus cloud.

Important! The original Allplan project and the Allplan Share project will *no longer be connected* after copying. Please make sure that you *only* use the appropriate project version for further editing.

To convert an existing Allplan project into an Allplan Share project


- You are the owner or administrator of the Bimplus team, or administrator of an existing Bimplus project
- 1 Start Allplan and make sure that you are logged in to Allplan web services.

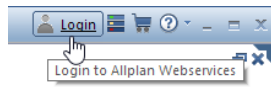


- 2 Click  **New Project, Open Project**.
- 3 In the left column of the **New Project, Open Project** dialog box, select the project data path  **Local** or  **Workgroup Server**.
- 4 In **Project name** column, click the project you want to copy, and then click  **Copy project**.

Or:

Open the shortcut menu of the project that you want to copy and click **Copy to**.

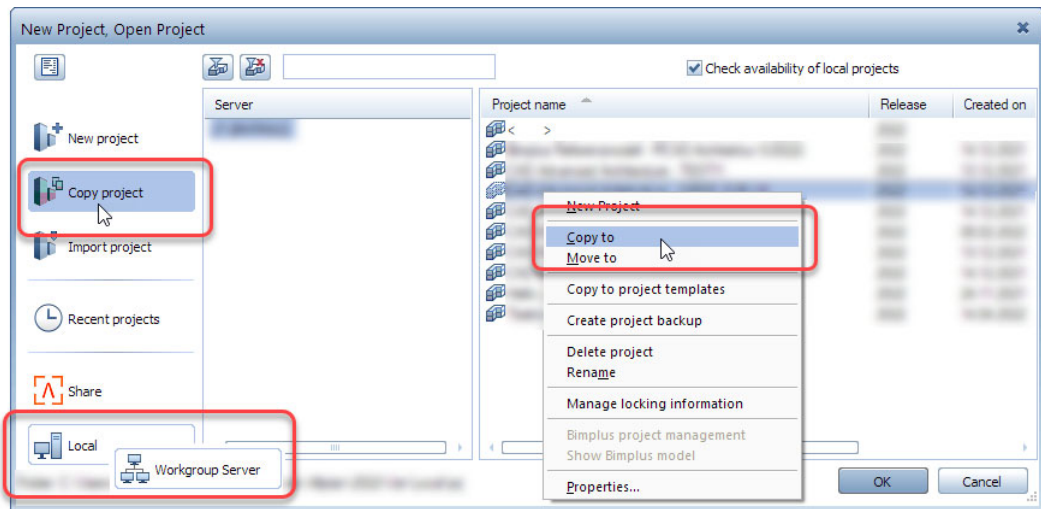

- 5 Select **BIMPLUS** as storage location.

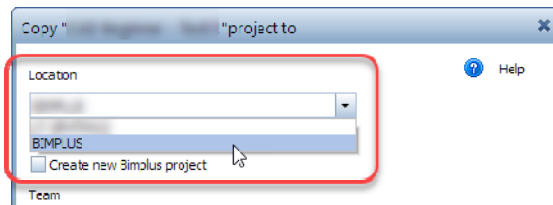

- 6 If you want to create a new Bimplus for the Allplan Share project:
Select the **Create new Bimplus project** check box.

Note: You can *only* create new Bimplus projects if you are the owner or an administrator of the Bimplus team.

Or:

If you want to create the Allplan Share project in an existing Bimplus project:

Clear the **Create new Bimplus project** check box.

- 7 Use the **Team** list box where applicable to select the Bimplus team that is going to edit the Allplan Share project.

- 8 *Only if you selected the **Create new Bimplus project** option in step 6:*

Enter the name for the new Bimplus project in **Project name**.

This project name is used in identical notation for both the newly created Bimplus project and the Allplan Share project.

Or:

*Only if you did not select the **Create new Bimplus project** option in step 6:*

For the **Project**, select the Bimplus project in which you want to store the Allplan Share project.

The Allplan Share project automatically receives the name of the Bimplus project.

Important! Please make sure that you select a Bimplus project that does *not* contain another Allplan Share project yet (icon:  = Bimplus project *without* Allplan Share project).

- 9 For **model name**, enter a name for the Allplan model that matches the name you want to use for the Bimplus project management.
- 10 Click **OK**.

This copies the native Allplan project data as an Allplan Share project to the selected Bimplus project. The Allplan Share project contains *only* native Allplan data. Considering network performance, the BIM specialist model will *not automatically* be created.

Important! If you want to include the Allplan Share project as a BIM specialist model in Bimplus and make it visible in BIM Explorer, you need to upload the model data of the Allplan Share project to Bimplus (see "[Uploading the BIM model From the Allplan Share project to Bimplus](#)" on page 35).

Note: After having copied the project to Bimplus cloud storage, you must assign user rights for print sets and privilege sets again.

Inviting members to an Allplan Share project

All members of a Bimplus project are automatically also members of an Allplan Share project stored in it. If you want to invite new members to an Allplan Share project, add them to the Bimplus project, giving them the rights intended for editing the Allplan Share project.

To invite a new project member an Allplan Share project


- Allplan is running.
 - You have signed in to the Allplan the web service platform.
 - You are the owner or administrator of the Bimplus team. or administrator of an existing Bimplus project
- 1 Click  **New Project, Open Project**.
 - 2 In the left column of the **New Project, Open Project** dialog box, please select the  **Share** project data path.
 - 3 *Only if you are a member of several Bimplus teams:*
In the **Team** column, select the Bimplus team that will work on the Allplan Share project.
 - 4 Click **Bimplus project management** on the shortcut menu of the project.
The  **BIMPLUS** web portal opens. **Manage project members** is already selected.
 - 5 Click  **Invite member**.
 - 6 In the **Invite member** dialog box, enter the email address of the new project member.

You can select all members of the Bimplus team in which the project is being worked on directly in the **email** list box.

However, you can also enter a non-team email address. In this case, the invitee is not only included in the project, but also automatically in the team.

- 7 Select the member role and optionally enter an additional message to the invitee.

Important! Do not assign the role of **project administrator** to the new team member unless this is absolutely necessary because this role has more rights than the the project editor or observer. You can change the member role at any time in **Manage project members**.

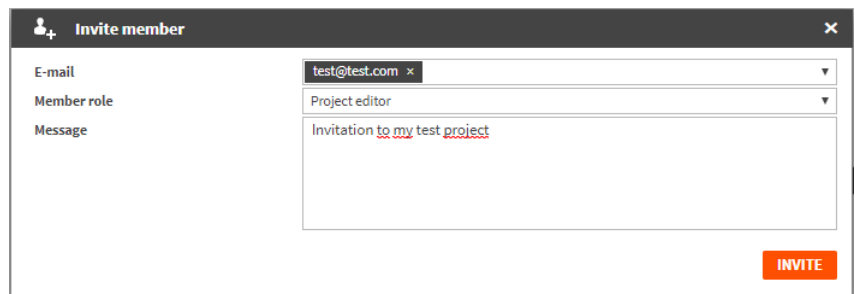

- 8 Click **INVITE**.

If the specified email address is already registered for Allplan web services, then its owner is immediately visible as active in the project.

Or:

If the specified email address is not registered for Allplan web services yet, an invitation will be sent. When the invitee accepts and confirms the invitation, this email address is automatically re-registered for Allplan web services and its owner is not only included in the project but also automatically in the team

- 9 *Only if the new project members do not have their own Allplan Share license*

Assign the new project member an Allplan Share license (see ["Assigning licenses to users"](#) on page 15).

Working on Allplan Share projects in Allplan

The procedure for working on an Allplan Share project is almost exactly the same as that for working on an „ordinary“ Allplan project. You need to be logged in to Allplan web services, have an Allplan Share license and be registered as a project member in the relevant Allplan Share project.

Open Allplan Share projects

You can open an Allplan Share project in the same way as an Allplan project saved locally or in the workgroup.

To open an Allplan Share project

- Allplan is running.
 - You have signed in to the Allplan the web service platform.
 - You are a project member of the Allplan Share project
- 1 Click  **New Project, Open Project**.
 - 2 In the left column of the **New Project, Open Project** dialog box, please select the  **Share** project data path.
 - 3 *Only if you are a member of several Bimplus teams:*
In the **Team** column, select the Bimplus team that will work on the Allplan Share project.
 - 4 In the **Project name** column, click the Allplan Share project that you wish to open.

Note: All existing Bimplus projects in the selected Bimplus team are displayed in this column. You can recognize Bimplus projects that contain an Allplan Share project by the icon:  = Bimplus project *with* Allplan Share project or =  Bimplus project *without* Allplan Share project.

- 5 Click **OK**.
-

Close Allplan Share projects

An Allplan Share project you are working on is always closed completely when you open another Allplan (Share) project or exit Allplan. Your local work status is automatically synchronized with the Allplan Share project. No further action is required by you.

The lock information generated for you on drawing files and other resources of the project is also completely removed, so that other colleagues can edit the project again without any restrictions.

Important! Therefore, always close an Allplan Share project you are working on when you take a break or have finished editing it.

Manage lock information for Allplan Share projects

As the owner or administrator of the Bimplus team or administrator of the Bimplus project, you can view and manage the lock information of an Allplan Share project.

To manage locking info of an Allplan Share project

- Allplan is running.
 - You have signed in to the Allplan the web service platform.
 - You are the owner or administrator of the Bimplus team. or administrator of an existing Bimplus project
- 1 Click  **New Project, Open Project**.
 - 2 In the left column of the **New Project, Open Project** dialog box, please select the  **Share** project data path.
 - 3 *Only if you are a member of several Bimplus teams:*
In the **Team** column, select the Bimplus team that will work on the Allplan Share project.
 - 4 Click **Manage locking information management** on the shortcut menu of the project.

The **Locking Information Administration** dialog box opens.
 - 5 In the left column, select the project for which you want to receive the locking info.

If necessary, click **Refresh** below the column to display the current state.
 - 6 Click **Remove locking information** in the right column of a drawing file's context menu to delete the lock information for the drawing file.

If necessary, click **Refresh** again below the column to display the current state.
 - 7 Close the **Locking Information Administration** dialog box.
-

Uploading the BIM model From the Allplan Share project to Bimplus

If you want to include the Allplan Share project as a BIM specialist model in Bimplus (for example, in the coordination model of an existing Bimplus project) and make it visible in BIM Explorer, you need to upload the model data of the Allplan Share project to Bimplus.

Note: See "Handling projects with Allplan Bimplus" in the Allplan Help for more information about handling projects in a BIM-compliant manner with Bimplus, the web service offered by ALLPLAN GmbH.

To upload model data Allplan Share project data to Bimplus

- ➡ Allplan is running.
- ➡ You have signed in to the Allplan the web service platform.
- ➡ You are a project member of the Allplan Share project

- 1 Click  **Upload Model to Bimplus**.

The **Upload Model to Bimplus** dialog box opens.

- 2 Go to the **Setting** area and decide whether you want to update the existing model, overwrite it, or create a new revision:
 - **Synchronize the model data (existing model data will be merged into Bimplus).**
New model data are added to the current model data, changed ones are updated.
 - **Replace model data of the last revision completely**
Replaces the current model completely with the new model data.
 - **and create new revision**
In addition, select this option if a new revision level of the model is to be created; the original version remains unchanged and can still be viewed and edited via the  **BIMPLUS** web portal.

- 3 Go to the **Synchronize drawing files** area and decide whether you want to automatically sync the BIM specialist model when there are changes in the drawing files selected in the **Select drawing files** area in the Allplan Share project.

Select the **Auto-sync to Bimplus model** check box and click **Select** to select the required drawing files.

Note: You can also update the BIM specialist model at any time by uploading the model data from the Allplan Share project again.

- 4 Click **OK**.

This uploads the model data to Bimplus.

- 5 Click **OK** to confirm the message that appears when the upload is completed.
-

Copying or moving Allplan Share projects off Bimplus cloud storage

You can copy or move Allplan Share projects from Bimplus cloud storage to the local workstation drive or the workgroup server.

Important! The original Allplan Share project and the local Allplan project or the Allplan project in the workgroup *are no longer connected* after copying. Please make sure that you *only* use the appropriate project version for further editing.

To copy or move an Allplan Share project from Bimplus cloud storage

- Allplan is running.
 - You have signed in to the Allplan the web service platform.
 - You are the owner or administrator of the Bimplus team. or administrator of an existing Bimplus project
 - You also need to be an Allplan administrator if you wish to copy or move an Allplan Share project to an Allplan Workgroup server.
- 1 Click  **New Project, Open Project**.
 - 2 In the left column of the **New Project, Open Project** dialog box, please select the  **Share** project data path.
 - 3 *Only if you are a member of several Bimplus teams:*
In the **Team** column, select the Bimplus team that will work on the Allplan Share project.
 - 4 Open the shortcut menu of the project that you wish to copy or move and click **Copy to** or **Move to**.
 - 5 Select the local computer or workgroup server for the **location**.
-

Backing up and restoring Allplan Share project data

Backing up Allplan Share projects

PLEASE NOTE The Allplan Share projects stored in the Bimplus cloud are *not backed up* individually or specifically by ALLPLAN GmbH! Please make sure to save your Allplan Share projects at regular intervals *at your own discretion*.

To create a backup copy of an Allplan Share project, open the **New Project, Open Project** dialog box, right-click the project that you want to back up, and choose one of the two options:

- **Copy to:** You can use this tool to create a copy of the selected project from the **Copy, move project** dialog box. As soon as Allplan has copied the selected project, this dialog box closes and Allplan switches to the new project.
- **Create project backup:** Use this tool this to compress a project and save it as a ZIP file. For example: A planning partner can add a compressed project to the project list by using drag-and-drop editing.

In addition, a backup copy of each drawing file or layout that has been changed and uploaded will automatically be saved in the local file storage folder in `backup\Ndw` (drawing files) or `backup\Layout` (layouts). Allplan saves the last three versions of each drawing file and layout, naming the files according to the following pattern: `[file name]_[yyyymmdd]_[hhmm]`.

Restoring project data from a backup

You can restore not only an entire project but also one or more drawing files or layouts from a data backup. By means of **Allplan Share Project Explorer**, you can also restore any other Allplan data and resources.

Restoring an entire project

Use this procedure when you want to replace an entire Allplan Share project with a project backup. Create a new Allplan project (on the local computer or on a workgroup server) from the project backup, delete the existing Allplan Share project, and copy the new project to the Bimplus project, which is now empty.

To restore an entire Allplan Share project from a project backup

- Allplan is running.
 - You have signed in to the Allplan the web service platform.
 - You are the owner or administrator of the Bimplus team. or administrator of an existing Bimplus project
- 1 Click  **New Project, Open Project.**
 - 2 Add the project from the project backup to the project list by using drag-and-drop editing.
This creates a new Allplan project.
 - 3 Delete the Allplan Share project that you want to replace (see ["Delete Allplan Share projects"](#) on page 42).
 - 4 Copy the new project to Allplan Share into the Bimplus project, which is now empty (see ["Convert existing Allplan projects to Allplan Share projects"](#) on page 27).
-

Restoring individual layouts

You can restore individual layouts from a file (*.np1) or a project backup.

To restore individual layouts

- 1 Open the Allplan Share project in which you want to restore layouts from a backup.
 - 2 Switch to layout editor and click  **Open on a Project-Specific Basis**.
 - 3 Right-click the layout that you want to replace and select **Replace layout** on the shortcut menu. Make sure that the layout is not open or was open shortly before.
 - 4 Proceed in either of the following ways:
 - Select the layout (*.np1) in any folder (for example, a project) and click **Open**.
 - Select **ZIP files** in the lower-right area of the dialog box and double-click a project backup saved as a ZIP file. Select the layout that you want to restore and click **OK**.
-

Restoring other resources (for example: building structure, textures, and so on)

Apart from drawing files and layouts, you can also restore other resources, such as building structures or textures.

Important: Do this only if you know exactly how the individual resources work and how changes affect the resources!

To restore any resources in an Allplan Share project

- Allplan is running.
- You have signed in to the Allplan the web service platform.
- You are the owner or administrator of the Bimplus team. or administrator of an existing Bimplus project

- 1 Click  **New Project, Open Project**.
- 2 In the left column of the **New Project, Open Project** dialog box, please select the  **Share** project data path.
- 3 Right-click the project in which you want to restore resources, then select **Manage project files**.

This opens **Allplan Share Project Explorer**, which you can use to download files from Allplan Share or upload files to Allplan Share.

- 4 You can do the following by using the shortcut menu (multiple selection is possible):
 - **Download file:** Downloads the selected files in the Allplan TMP folder.
 - **Upload file:** Uploads files from any folder to Allplan Share.
 - **Open, edit file:** Opens the file in the linked application.
 - **Delete file:** Deletes the selected objects.
 - **Open download folder:** Opens the Allplan TMP folder that contains the files that you downloaded from Allplan Share.
-

Delete Allplan Share projects

When you delete an Allplan Share project, only the native Allplan project data is deleted. The remaining data of the Bimplus project (e.g. models, documents, etc.) as well as the Bimplus project as such remain intact.

To delete an Allplan Share project

- ➡ Allplan is running.
 - ➡ You have signed in to the Allplan the web service platform.
 - ➡ You are the owner or administrator of the Bimplus team. or administrator of an existing Bimplus project
- 1 Click  **New Project, Open Project**.
 - 2 In the left column of the **New Project, Open Project** dialog box, please select the  **Share** project data path.
 - 3 *Only if you are a member of several Bimplus teams:*
In the **Team** column, select the Bimplus team that will work on the Allplan Share project.
 - 4 Open the shortcut menu of the project that you want to delete and click **Delete project**.
 - 5 Click **Yes** to confirm the prompt.

The symbol for the project changes from  (project with Allplan data) to  (project without Allplan data).

ATTENTION! This also deletes the data from the local file storage folder!

FAQs

What is Allplan Share?

Allplan Share is a cloud solution; you use cloud computing to edit and store native Allplan project data.

By combining Allplan Share, Allplan Architecture or Allplan Engineering, and an Allplan Bimplus account, you can directly collaborate with planning partners all over the world on one and the same Allplan project. Being based on the openBIM platform Allplan Bimplus, Allplan Share provides additional functionality, such as Model Viewer, Issue Manager (the tool for issue management), revision control, and much more. Allplan Share not only reduces your administrative costs and staff costs but also helps you avoid extra costs. You do not need to buy, install, or maintain a local server because Allplan Bimplus uses cloud storage to save the data.

What do I need to use Allplan Share?

- An internet connection that is stable and uninterrupted; at least 10 megabits for upload and 20 megabits for download; the latency must be less than 50 milliseconds; recommended: 50 megabits for upload; 100 megabits for download, the latency must be less than 10 milliseconds.
- The hardware requirements are the same as those for Allplan.
- Current network drivers

Further requirements

- Bimplus account or Allplan Connect account
- Bimplus team
- At least one license for Allplan Share
- If possible, use a local (SSD) hard drive for the local file storage folder; network drives slow down access. The local file storage folder must not be shared between several users; this might cause massive problems.

How do I create an Allplan Bimplus account?

Register with [Allplan Connect](#) or [Allplan Campus](#).

How do I create a Bimplus team?

Create a Bimplus team in [Allplan Connect](#) or [Allplan Campus](#).

We recommend that you use a generic email address (for example, info@company.com) because you cannot change the email address later. The team name is automatically the company name behind the email address in the Allplan Connect account. The team owner can change the Bimplus team name at any time.

How does licensing of Allplan Share work?

Allplan Share licenses can be subscribed exclusively by team owners for their Bimplus team. The term can be selected after consultation with a sales representative.

For each Allplan Share license, the Bimplus team gets 100 GB of memory on the openBIM platform **Allplan Bimplus**. If you need more memory, subscribe to additional licenses.

The team owner or a team administrator assigns the licenses to the team members or external project participants. Authorized users can then work on all projects within the Bimplus team for which they are given the appropriate status (at least project editor).

How and where can I purchase licenses for Allplan Share?

Your sales partner will be happy to provide you with a license for Allplan Share.

Note: The available memory is 2 GB for trial licenses.

How can I assign licenses for Allplan Share?

Allplan Share licenses can be assigned or removed by the team owner in the [Allplan Shop](#) in the **My account – Subscriptions and users** area or by the team owner or team administrator in the  [BIMPLUS web portal](#) in the **Team members** area.

How does licensing work for students and teachers?

If you are a student or teacher, you can use the free student version of Allplan Share. The only requirement is that your Allplan student

license is registered and verified. Do the following to get the Allplan Share license:

Register with [Allplan Campus](#); click **Get options**; click **Go to Allplan Shop**; click the upper-left Allplan logo; click **Education**; add the free **Allplan Share Student** option to the shopping cart; follow the instructions.

The Allplan Share license will be assigned automatically.

Note: The available memory is 2 GB for student licenses.

How can I create a new Allplan Share project or copy an existing Allplan project to Allplan Share?

Create a new project in Allplan and select BIMPLUS for the location (team administrator or team owner only).

You can use the shortcut menu to copy existing Allplan projects to Allplan Share. In doing so, you can either create a new Bimplus project (requires at least the role of team administrator) or use an existing project that does not yet contain any Allplan data (requires at least the role of project administrator).

Which actions make Allplan upload edited data to Allplan Share?

- Close a drawing file or open it in reference mode.
- Close the project.
- Switch to layout editor.
- Open ProjectPilot.

In addition, you can use  **Save** to manually save and upload all changed drawing files or layouts to Allplan Share.

How can I create a backup of an Allplan Share project?

Open the dialog box for managing projects in Allplan, right-click the project you want to save and select **Copy project** or **Create project backup**.

How can I restore an Allplan Share project from a data backup?

- **Restoring an entire project from a project backup:** Drag the project backup into the dialog box for selecting projects in Allplan

(this creates a new project); delete the Allplan Share project; copy the new Allplan project to the existing Bimplus project.

- **Restoring individual layout:** Open the dialog box and click on **Replace layout** in the shortcut menu.
- **Restoring other resources:** Open the dialog box for selecting projects; right-click an Allplan Share project; select **Manage project files** on the shortcut menu; replace the resources in **Allplan Share Project Explorer**.

What are the rights in an Allplan Share project and where are they managed?

The Bimplus portal manages both Bimplus users and Allplan Share users. Rights consist of two levels: the first level is the access rights at team level; the second level is the access rights at project level.

Roles at team level

- Team owner
- Team administrator
- Team member

Roles at project level

- Project administrator
- Project editor
- Project viewer

ABOUT THE COMPANY

ALLPLAN is a global provider of Building Information Modeling (BIM) solutions for the AEC industry. For more than 50 years ALLPLAN has pioneered the digitalization of the construction industry. Always focused on our clients we provide innovative tools to design and construct projects – inspiring users to realize their visions.

Headquartered in Munich, Germany, ALLPLAN is part of the Nemetschek Group. Around the world over 400 dedicated employees continue to write the ALLPLAN success story.

ALLPLAN IS A MEMBER OF:



More information:

allplan.com

ALLPLAN GmbH
Konrad-Zuse-Platz 1
81829 Munich
info@allplan.com
allplan.com