

See-Through Mobile Viewer

MOVERIO

BT-200

EPSON
EXCEED YOUR VISION

Reference Guide

Contents

About the Reference Guide	5
App List	5
Settings List	5
Troubleshooting	5
Support Information	5
Information Desk	5
Authentication Information	5
App List	6
Apps for watching movies, listening to music, and browsing websites	6
Other apps	7
Gallery	8
Launch Gallery	8
Watch movies and view still images	8
Play still images as a slideshow	8
Edit still images	8
Set a still image as wallpaper	9
Launch Camera	9
Music	10
Launch Music	10
Listen to music	10
Add a track to the playlist	10
Browser	12
Launch Browser	12
Search for a website	12
Use the Browser menu	12
Change the Browser homepage	13
Search	14
Search	14
MOVERIO Mirror	15
Launch MOVERIO Mirror	15
Connect to the product and receive content	15
Connect to the product and send content	15
Set the operation for when connection fails	16
Operate the product from the target device	16
SEViewer	17
Launch SEViewer	17
Copy and move files	17
Delete a file	17

Rename folders and files	17
Create a new folder	18
Camera	19
Launch Camera	19
Take a photo	20
Make a movie	20
View your movies and photos in the Gallery	20
Read a QR code	21
Set the camera default shooting mode	21
Change the location where your photos are saved	21
Moverio APPS Market	22
Launch Moverio APPS Market	22
Settings List	23
WIRELESS & NETWORKS	23
DEVICE	23
PERSONAL	24
SYSTEM	24
Wi-Fi	25
Connect to a Wi-Fi network	25
Bluetooth	26
Connect to a Bluetooth device	26
More	27
Airplane mode	27
Wi-Fi direct	27
Turn on Wi-Fi direct	27
Connect to an external device	28
Sound	29
Volumes	29
Silent mode	29
Dolby Digital Plus	29
Screen lock sound	30
Display	31
Wallpaper	31
Font size	31
Location services	32
GPS satellites	32
Security	33
Screen lock	33
Owner info	34
Make passwords visible	34
Device administrators	34

Unknown sources	34
Trusted credentials	34
Language & input	35
Language	35
Spelling correction	35
Personal dictionary	35
Tap to mute	35
Display status of directional keys	35
Auto-rotate trackpad	36
Default	36
Text-to-speech output	36
Pointer speed	36
Backup & reset	37
Factory data reset	37
Date & time	38
Automatic date & time	38
Set date	38
Set time	38
Select time zone	39
Use 24-hour format	39
Select date format	39
Troubleshooting	40
Play	41
Cannot play movies or music	41
The image is distorted	41
Communication	42
Cannot connect to the network	42
Cannot connect to an external device	42
App data	43
Cannot install an app	43
Cannot use an app	43
Cannot find data copied from my PC	43
Cannot change a folder/file name, or cannot create a folder	43
Settings	44
Date and time are incorrect	44
The product needs to be initialized	44
Support Information	45
System update	45
Installing apps	45
Options and recommended peripherals	45

Information Desk	46
Authentication Information	51

About the Reference Guide

The Reference Guide provides a detailed explanation of how to use the apps and their settings.

The Reference Guide is organized as shown below.

[App List](#)

Refer to this list for information on using and selecting settings for apps that come preinstalled in the product.

➔ "App List"

[Settings List](#)

Refer to this list for information on the various settings available with the product.

➔ "Settings List"

[Troubleshooting](#)

This section explains how to fix problems with the product.

Refer to this section if you encounter a problem.

The Reference Guide explains how to fix problems with the product while wearing the headset.

For problems that occur before wearing the headset, see the User's Guide.

➔ "Troubleshooting"

[Support Information](#)

Information about available apps and options for getting the most from your product.

➔ "Support Information"

[Information Desk](#)

Refer to this section to request repairs or make inquiries about the product.

➔ "Information Desk"

[Authentication Information](#)

➔ "Authentication Information"

App List

Apps for watching movies, listening to music, and browsing websites

App Name	Outline
 Gallery	View movies and still images. ⇒See a detailed explanation
 Music	Listen to music. ⇒See a detailed explanation
 Browser	View websites. ⇒See a detailed explanation
 Search	Enter keywords to search the web. ⇒See a detailed explanation
 MOVERIO Mirror	Connect wirelessly to a Miracast device. This allows you to stream movies from a smartphone to the product, or stream movies from the product to a TV. ⇒See a detailed explanation

Other apps

App Name	Outline
 SE Viewer	Manage files. ►See a detailed explanation
 Settings	Check and modify settings. ►See details of the settings
 Camera	Capture movies and still images with the built-in camera and read QR codes. ►See a detailed explanation
 Moverio APPS Market	Download apps for use with the product. ►See a detailed explanation
 Download	View and run files downloaded to the product via a network.
 Calendar	Display the Calendar and manage your schedule.
 Email	Setup accounts and send, receive, and view email.
 Clock	Check the time and use alarms.
 People	Manage all of your contacts in one place.
 Sound Recorder	Record your voice. An earphone microphone is required.
 Calculator	Perform simple calculations.

Gallery

You can watch movies saved to the product's internal storage or on a commercially available microSD card, and view and edit still images.

To save movies and still image data to the product, connect the product to your PC with the supplied USB cable. Once your PC recognizes the product as a portable device, copy the data to the portable device.

For more details, see the Start Guide.

Launch Gallery

Tap [] on the App List screen.

The main Gallery screen is displayed.

Watch movies and view still images

1. On the main Gallery screen, tap the folder containing the data you want to view.
A list of the data in the folder is displayed.
2. Tap the data you want to view.
The selected data is displayed.
Tap [] to play a movie.



Operations during playback

- [] : Pause
- [] : Playback position slider

Play still images as a slideshow

With a still image displayed, tap [] - [Slideshow].

The slideshow starts.

Edit still images

You can make edits to still images such as cropping them and adjusting their colors.

1. With a still image displayed, tap [] - [Edit].
The Edit screen is displayed.

2. When you have finished editing, tap [Save].
The edited still image is saved as a separate file.

Set a still image as wallpaper


1. With a still image displayed, tap [] - [Set picture as].
The Set as screen is displayed.
2. Tap [Wallpaper] on the Save picture as screen.
3. Select the area of the picture that you want to save as the wallpaper and tap [Crop].
The selected area of the picture is set as the wallpaper.

Note

Tap [Contact photo] on the Set as screen to save the selected picture as your Contacts photo.

Launch Camera

- Tap [] on the main Gallery screen.
The Camera starts, and the image displayed switches to the camera image.
See the following for more information on using the Camera.
- ➡"Camera"

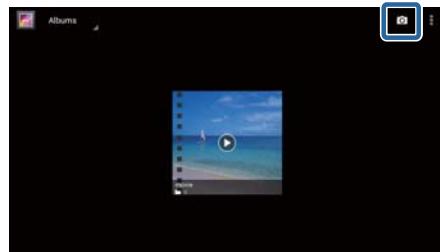

Music

You can play music saved to the product's internal storage or on a commercially available microSD card.

To save music data to the product, connect the product to your PC with the supplied USB cable. Once your PC recognizes the product as a portable device, copy the data to the portable device. For more details, see the Start Guide.

Launch Music

Tap [] on the App List screen.

The main Music screen is displayed.

Listen to music

Tap the track you want to play on the main Music screen.

The selected track starts.


Operations during playback

- [] : Play
- [] : Pause
- [] : Skip to the previous track
- [] : Skip to the next track
- [] : Playback position slider
- [] : Track list
- [] : Shuffle playback
- [] : Repeat playback



Add a track to the playlist

1. On the main Music screen, press and hold the track you want to add to the playlist.
2. Tap [Add to playlist].
3. Tap the playlist you want to add the track to.
The selected track is added to the playlist.

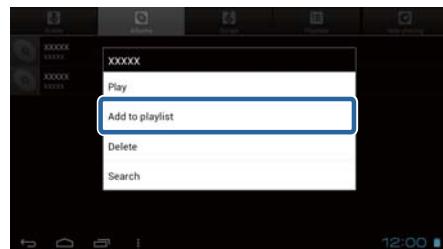

Note

To create a new playlist, tap [Add to playlist] - [New]. Enter a name for the playlist, and then tap [SAVE].

Browser

You can connect to the Internet and view websites.

Check the following items before using the Browser.

- [Wi-Fi] is turned on in the settings.
- The wireless LAN environment is working properly.

For more information about the product's network settings, see the Start Guide and the User's Guide.

Launch Browser

Tap [] on the App List screen.

The Browser launches and displays the website set as the homepage.

Search for a website

1. Tap the URL input field.

The keyboard is displayed.

2. Enter a URL or a search string, and then tap [] on the keyboard.

The website for the URL you entered or the search results are displayed.

Use the Browser menu

Tap [] to display the Browser menu.



[Refresh]

The page is refreshed.

[Forward]

The page displayed before pressing []

in the Browser or [] on the controller is displayed.

This can only be used if you have pressed [] or [] at least once.

[New tab]

Opens a new tab.

[New incognito tab]

Opens a new incognito tab (pages displayed in the tab are not recorded in your browser history).

[Share page]

Share the current website by email or social media.

[Find on page]

Search within the current page using keywords.

[Request desktop site]

Switch to the PC version of the page.

This can only be used if you are viewing the smartphone version of a page.

[Save for offline reading]

Save the current page to read it offline.

Tap  - [Saved pages] to show the list of saved pages.

[Page info]

Displays detailed page information.

[Settings]

Change the various Browser settings.

Change the Browser homepage

Set the homepage (the page displayed when the Browser is launched).

1. Tap .

2. Tap [Settings] - [General] - [Set homepage].

The [Set homepage] screen is displayed.

3. Tap the type of page that you want to set.

- Current page: Sets the current web page as the homepage.
- Blank page: Sets a blank page as the homepage.
- Default page: Sets the default web page as the homepage.
- Most-visited site: Sets your most visited web page as the homepage.
- Other: Enter the URL of the website you want to use as the homepage.

Search

Enter keywords for searching the web.

Placing the Find widget on the home screen allows you to search directly from the Home screen.


Search

1. Tap [🔍] on the App List screen.
An input field is displayed.
2. Enter a search string in the input field, and then tap [Go] on the keyboard.
The search results are displayed.



Note

Tap [🔍] to the left of the input field to select the information category for the search results.

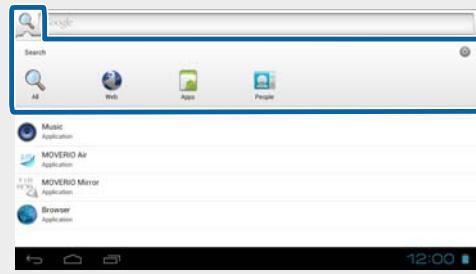

MOVERIO Mirror

You can connect the product wirelessly to a PC, smartphone, or television that supports Miracast and stream content from a PC or smartphone to your product, or stream content playing on the product to a television or other device.

Miracast technology allows you to transmit data wirelessly between supported devices. Use the Wi-Fi direct function to connect to other devices.

Check the following items before using MOVERIO Mirror.

- Your device supports Miracast.
If it is not supported, use the supplied or optional Wireless Mirroring Adapter.
- Wi-Fi direct is turned on in the settings.


Launch MOVERIO Mirror

Tap [] on the App List screen.

The main MOVERIO Mirror screen is displayed.

Connect to the product and receive content

1. Tap [Sink] on the main MOVERIO Mirror screen.
2. Tap [Target Device].
3. Check the product's ID on the Wi-Fi Direct settings screen, and then press the [] key.
The product enters standby mode.
4. Select the ID of this product on the device you want to connect to when you make Wi-Fi direct connection.
The screen for the connected device is displayed on the product's screen.

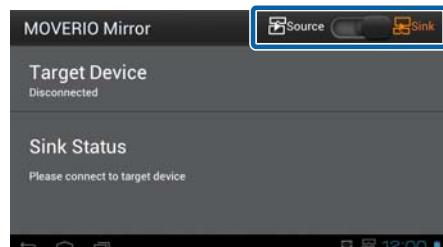

Connect to the product and send content

1. Tap [Source] on the main MOVERIO Mirror screen.
2. Tap [Target Device].



3. Tap the ID of the device you want to connect to, and then press the [↻] key.
The product's screen is displayed on the connected device.
4. Launch Gallery to select the content you want to play.
The application selection screen is displayed.
When you select MOVERIO Mirror, the content is played on the connected device, and the product's screen turns black.
When you select a Video player, the content is played on both this product and the connected device but audio is only output from this product.

Set the operation for when connection fails

If you cannot connect, you can change the connection settings. Normally, you do not have to change these settings.

1. Press [☰] on the controller, and then tap [Settings].
2. Tap [Connection Adjustments].
3. Set the number of retries and the timeout interval for when connection fails.

Operate the product from the target device

You can operate the product using the target device.

1. Press [☰] on the controller, and then tap [Settings].
2. Tap [Allow to be controlled by Sink device].

SEViewer

You can manage files on the product.

Launch SEViewer

Tap [SEV] on the App List screen.
The product's data folder is displayed.

Copy and move files

1. Press and hold the file you want to copy or move.
2. Tap [Copy] or [Move].
The file is saved temporarily to the clipboard.
3. Open the folder where you want to copy or move the file.
4. Tap [Clipboard].
The file in the clipboard is pasted in the folder.

Delete a file

1. Press and hold the file you want to delete.
2. Tap [Delete].
The selected file is deleted.

Rename folders and files

1. Press and hold the folder or file you want to rename.
2. Tap [Rename].
An input field is displayed.
3. Enter the new name, and then tap [OK].
The new name of the folder or file is saved.

Check the following if [Rename failed.] is displayed.

➔"Cannot change a folder/file name, or cannot create a folder"

Create a new folder

1. Press [] where you want to create a new folder.

2. Tap [New folder].

An input field is displayed.

3. Enter a folder name, and then tap [OK].

The new folder is saved.

Check the following if [Create folder failed] is displayed.

➔**"Cannot change a folder/file name, or cannot create a folder"**

Camera

You can capture movies and still images and read QR codes with the built-in camera.

⚠ Attention

- Do not infringe copyright laws when editing, copying, or sharing data captured or recorded with the product.
- Do not infringe the personality rights of other people when using, altering, or sharing their images or names without permission.
- Follow the instructions at performances, business promotions, exhibitions, and so on where photography is prohibited or restricted.
- Punishments may be imposed according to local laws and regulations for public disturbance or improper behavior caused by using the product.

Note

The product does not have a built-in microphone. Use the supplied earphone microphone for recording voice and sound when capturing movies.

Launch Camera

Tap [CAMERA] on the App List screen.

The image displayed switches to the camera image.

While the Camera is running, the indicator flashes.

Note

At initial startup, the screen for selecting the shooting mode is displayed.

Select [Camera mode] or [QR Code Scanning Mode].

The shooting mode selected at initial startup is set as the default mode when the Camera is turned on. You can change the default shooting mode in the settings.

➡"Set the camera default shooting mode"

Take a photo

Tap [].

A photo is taken and saved automatically in the product's internal storage.



Note

- You can change the location where your photos are saved.
►"Change the location where your photos are saved"
- Tap [] to make detailed settings for the photo.

Make a movie

1. Tap [].

The product switches to movie capture mode.

2. Tap [].

Movie capture starts.

3. Tap [].

When you finish filming, the captured movie is saved automatically in the product's internal storage.

Note

Tap [] to make detailed settings for the movies.

View your movies and photos in the Gallery

1. Tap the image displayed at the upper-right of the image capture screen.

2. Tap [].

The Gallery opens, displaying a list of your movies and photos.



Check the following if you notice quality issues in your movies or photos.

- Is your hand or your hair obstructing the camera lens?
- Is the lens dusty or greasy?

Read a QR code

1. Tap [QR].
 2. Align the QR code with the red lines on the screen.
- The QR code is recognized.



Set the camera default shooting mode

1. Press [] on the controller, and then tap [Settings].
 2. Tap [Mode Settings].
 3. Tap the shooting mode you want to set as the default.
- The selected shooting mode is set.

Change the location where your photos are saved

1. Press [] on the controller, and then tap [Settings].
 2. Tap [Storage location].
 3. Tap the place where you want to save your photos (product's internal storage or micro SD card).
- The location for saving your photos is changed.

Moverio APPS Market

You can download apps for use with the product.

Launch Moverio APPS Market

Tap [] on the App List screen.

The Moverio APPS Market screen is displayed.

Follow the on-screen instructions to create an account, log in, and download applications.

Settings List

WIRELESS & NETWORKS

Item Name	Outline
Wi-Fi	Connect to a Wi-Fi network. ➡ See a detailed explanation
Bluetooth	Connect to Bluetooth devices. ➡ See a detailed explanation
Data usage	Check the volume of data communication for each app.
More	Set the Airplane mode and Wi-Fi direct connection. ➡ See a detailed explanation

DEVICE

Item Name	Outline
Sound	Adjust the volume and sound quality of movies and music. ➡ See a detailed explanation
Display	Change the wallpaper and set the size of text. ➡ See a detailed explanation
Storage	Check the free space in the product's internal storage and microSD card, and remove the microSD card.
Battery	Check the level of the battery.
Apps	Manage installed apps.

PERSONAL

Item Name	Outline
Location services	Turn GPS satellites on or off. ➡See detailed settings
Security	Set Screen Lock and app installation permissions. ➡See detailed settings
Language & input	Set the language and keyboard. ➡See detailed settings
Backup & reset	Restore the product data and settings. ➡See detailed settings

SYSTEM

Item Name	Outline
Date & time	Set the date and time. ➡See detailed settings
Accessibility	Set text size and text-to-speech.
Developer options	Settings for developers.
Device info	Check device information including battery level and OS version.

Wi-Fi

You can connect to a Wi-Fi network.

Using Wi-Fi, you can use the Internet and communicate with other devices.

Related applications

- Browser
- Email
- Search

Connect to a Wi-Fi network

1. Tap [] on the App List screen.
2. In the [Wi-Fi] menu, tap [OFF] to set it to [ON].
Available SSID (network names) are displayed.
3. Tap the SSID that you want to connect to.
The Enter Password screen is displayed.
4. Enter a password, and then tap [Connect].
When [] is displayed on the status bar, the product has successfully connected to a Wi-Fi network.



Try the following if the SSID you want to connect to is not displayed.

- Check that the access point is turned on and that the settings are correct.
- Tap [Scan].
- If the SSID that you want to connect to is not displayed even if you tap [Scan], tap [Add network], and then enter the SSID directly.



Bluetooth

You can connect the product to a Bluetooth compatible device wirelessly.

Perform pairing before connecting for the first time (Pairing allows devices to communicate with each other).

Check the following items before connecting.

- The Bluetooth device is turned on.
- The Bluetooth device supports HSP/A2DP/HID/OPP/SPP/AVRCP profiles.


Connect to a Bluetooth device

1. Tap [] on the App List screen.
2. In the [Bluetooth] menu, tap [OFF] to set it to [ON].

Available devices are displayed.

3. Tap the device that you want to connect to.

When [] is displayed on the status bar, the product has successfully connected to the device.

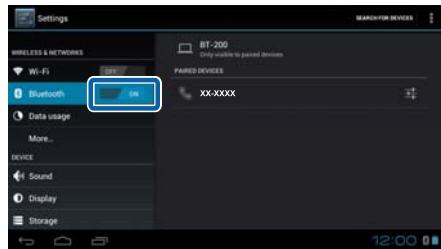

Try the following if the device you want to connect to is not displayed.

- Check that the Bluetooth device is turned on.
- Tap [Search for devices].

More

Airplane mode

Turning on Airplane mode turns off all communication functions such as Wi-Fi, Wi-Fi direct, and Bluetooth.

When using the product on an airplane, turn on Airplane mode.

1. Tap [] on the App List screen.
 2. Tap [More] - [Airplane mode].
- Airplane mode is on if this is selected.



Wi-Fi direct

You can connect to a smartphone or other external device on a 1-to-1 basis.

When using MOVERIO Mirror, turn on Wi-Fi direct.

When Wi-Fi direct is on, it is no longer possible to connect to Wi-Fi using an access point.

Related applications

MOVERIO Mirror

Turn on Wi-Fi direct

1. Tap [] on the App List screen.
2. Tap [More] - [Wi-Fi direct].
3. Tap [Wi-Fi direct].

Wi-Fi direct is on if this is selected.



Connect to an external device

1. Tap [Wi-Fi direct].
Available devices are displayed.
2. Tap the name of the device that you want to connect to.
3. Follow the on-screen instructions for this product and the device that you want to connect to.

If [Connected] is displayed under the name of the external device, the Wi-Fi direct connection is successful.



Note

- You can use MOVERIO Mirror, which comes preinstalled on the product, to view content on the screen of an external device connected to this product.
- Use MOVERIO Mirror to stream movie content from the product to an external device. When playing movies using the Video player in Gallery, audio is only output from this product.

Sound

Volumes

You can adjust the volume of movies, music, alerts, and alarms.

1. Tap [] on the App List screen.
 2. Tap [Sound] - [Volumes].
- The Adjust Volume screen is displayed.
3. Drag [] to adjust the volume.
 4. Tap [OK].
- The volume is set.



Silent mode

The Silent mode setting mutes all sounds.

1. Tap [] on the App List screen.
 2. Tap [Sound] - [Silent mode].
- The Silent Mode screen is displayed.
3. Tap [Mute].
- The silent mode is set.



Dolby Digital Plus

Adjust the sound quality when playing content.

This makes the sound of certain content more vivid.

1. Tap [] on the App List screen.
 2. Tap [Sound] - [Dolby Digital Plus].
- The Dolby Digital Plus screen is displayed.
3. Tap the sound quality that you want to set.
- The selected sound quality is set.



Screen lock sound

You can turn on or off the sound made when the screen is locked and unlocked.
This is set to off by default.

1. Tap [] on the App List screen.
2. Tap [Sound] - [Screen lock sound].
The screen lock sound is on if this is selected.

Display

Wallpaper

You can set the wallpaper of the Home screen.

1. Tap [] on the App List screen.
2. Tap [Display] - [Wallpaper].
3. Tap the type of wallpaper that you want to set.
The Wallpaper List screen is displayed.
4. Select the wallpaper you want to set.
The selected wallpaper is set.

Note

You can also set wallpaper from the Gallery.

→"Set a still image as wallpaper"

Font size

1. Tap [] on the App List screen.
2. Tap [Display] - [Font size].
The Font Size screen is displayed.
3. Tap the font size that you want to set.
The font size changes.

Location services

GPS satellites

The product is equipped with GPS.

Turning on GPS satellites enables the product to acquire locational information.

1. Tap [] on the App List screen.
2. Tap [Location services] - [GPS satellites].

GPS satellites is on if this is selected.

Security

Screen lock

You can lock the screen at startup and in sleep mode.

1. Tap [] on the App List screen.
2. Tap [Security] - [Lock the screen].
3. Tap the type of lock that you want to set.

Category	Unlocking the Screen
None	Screen locking is disabled.
Slide	 <p>Unlock the screen by sliding the lock icon.</p>
Pattern	 <p>Unlock the screen by tracing a pattern.</p>
PIN	 <p>Unlock the screen by entering a 4-digit PIN (personal identification number).</p>
Password	 <p>Unlock the screen by entering a password.</p>

Owner info

Set owner information. The owner's information (name, address, and so on) is displayed on the locked screen.

Make passwords visible

Select to show the password as you enter it.

Device administrators

Enable or disable device administrators. Enable this when using applications that require device administrators.

Unknown sources

Permit the installation of apps from unknown sources (apps downloaded from sources other than Google play).

Select this when installing apps downloaded from Moverio APPS Market.

Trusted credentials

Enable or disable digital certificates for identifying devices.

Digital certificates are used for connecting to networks and authenticating servers.

To install a digital certificate in the product, insert a microSD card with a certificate saved on it into the product, and then tap [] - [Security] - [Install from SD card].

To remove all certificates, tap [Clear credentials].

Language & input

Language

Set the language.

1. Tap [] on the App List screen.
2. Tap [Language & input] - [Language].
The language list is displayed.
3. Tap a language.
The selected language is set.

Spelling correction

Turn Spelling correction on or off.

Use spelling correction to check your spelling and display corrections when entering text.

Personal dictionary

Enter frequently used words in the Personal dictionary.

Tap to mute

Turn the mute knock function on or off. This temporarily hides images and mutes audio when you tap the side of the headset lightly twice.

You can turn off this feature if necessary.

Display status of directional keys

Turn the following displays on or off when using the trackpad arrow key function.



- Up and down key operation: [] []
- Left and right key operation: [] []
- OK key operation: []

Auto-rotate trackpad

Set this to on if you want to hold the controller sideways and use the trackpad.

Default

Set the default keyboard for entering text.

Text-to-speech output

Set the text-to-speech function.

Adjust the speaking speed and listen to voice samples.

Pointer speed

Change the speed at which the pointer moves.

Backup & reset

Factory data reset

You can return the product to its original settings.

Factory data reset deletes all of the data saved in the product's internal storage.

Make a backup of data that you want to keep before resetting the product.

1. Tap [] on the App List screen.
2. Tap [Backup & reset] - [Factory data reset].
The type of data to be deleted is displayed.
3. Check the information displayed, and then tap [Reset device].
All of the data in the product is deleted.

Date & time

Automatic date & time

When Automatic date & time is turned on, the date and time is obtained automatically from the network.

You need an Internet connection to use automatic date and time.

Turn off this setting if you want to set the date and time manually.

1. Tap [] on the App List screen.
2. Tap [Date & time] - [Automatic date & time].

Automatic date & time is on if this is selected.

Set date

Set the date manually.

Turn off [Automatic date & time] if you want to set the date and time manually.

1. Tap [] on the App List screen.
2. Tap [Date & time] - [Set date].

The Date screen is displayed.

3. Select a date or tap the date that you want to set, and then tap [Set].

The date is set.



Set time

Set the time manually.

Turn off [Automatic date & time] if you want to set the date and time manually.

1. Tap [] on the App List screen.
2. Tap [Date & time] - [Set time].

The Time screen is displayed.

3. Select a time, and then tap [Set].

The time is set.



Select time zone

Set the time zone where the product is used.

Use 24-hour format

Set the time display format.

Select date format

Set the date display format.

Troubleshooting

The Reference Guide explains how to fix problems with the product while wearing the headset.

For problems that occur before wearing the headset, such as charging and maintenance, see the User's Guide.

Item	Outline
Play	Troubleshoot problems with playing movies and music. ➡"Play"
Communication	Troubleshoot problems with network connections and communication with external devices. ➡"Communication"
App data	Troubleshoot problems with installing apps and copying data. ➡"App data"
Settings	Troubleshoot problems with device settings. ➡"Settings"

Play


Cannot play movies or music

- Check the supported formats.
 - Gallery: MP4 (MPEG4 + AAC/Dolby Digital Plus), MPEG2 (H.264+AAC/Dolby Digital Plus)
 - MOVERIO Mirror: MPEG2 (H.264+AAC/Dolby Digital Plus)
 - Music: WAV, MP3, AAC
- When the controller LED is light-blue, the sound may be muted.
Tap the right side of the headset lightly twice to turn off the mute function.

The image is distorted

- Switch between 2D and 3D.

Press the controller switch key (1), and then select 2D/3D mode. Switch between 2D and 3D with the up and down keys (2).

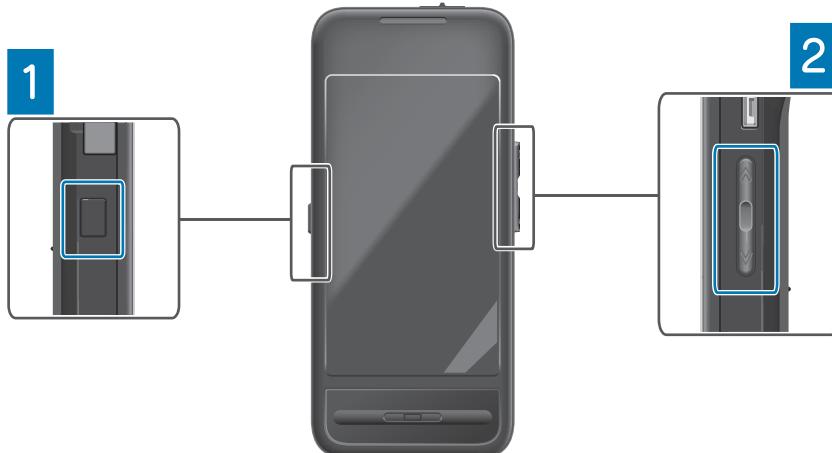

- Check that the file that you want to play is not corrupted.

Try playing it on a different playback device.

Communication

Cannot connect to the network

- Check that wireless LAN (Wi-Fi) is available in your location.
- Check that the wireless LAN (Wi-Fi) setting on the product is on.
When connecting to the network, turn on Wi-Fi.

Using the product at home

- Check that the wireless LAN router or access point is turned on.
- Check the SSID and security password of the wireless LAN router or access point.
For more details, see the documentation supplied with the wireless LAN router or access point.

Using a public wireless LAN service

- Check that you can use the public wireless LAN service.
- To use a public wireless LAN service, you need to have an agreement in place with the service provider.

Cannot connect to an external device

When using MOVERIO Mirror

- Check that the Wi-Fi direct setting on the product is on.
Note that even if the Wi-Fi setting is on, communication is not possible if the Wi-Fi direct setting is off.
- Check that the external device supports Miracast.
- If it is not supported, use the supplied or optional Wireless Mirroring Adapter.

When using Bluetooth

- Check that the Bluetooth setting on the product is on.
- Check that the external device supports Bluetooth.
- Check that the external device supports Bluetooth HSP/A2DP/HID/OPP/SPP/AVRCP profiles.
- Check that the external device is close to the product without any obstructions between them.
Bluetooth is a short-range wireless communication technology. It cannot communicate over long distances.

App data

Cannot install an app

Apps for use with the product are available from the Moverio APPS Market.

Connect to the Internet, and then tap the [] on the App List screen.

Cannot use an app

See the relevant app guide.

► "App List"

Cannot find data copied from my PC

- Search for the data using the following apps.
 - Movies and still images: Gallery
 - Music: Music
- Use SEViewer to check whether the data has been copied to a folder in the product.
Data copied from your PC is saved in the following folders.
 - Internal storage: [sdcard] folder
 - microSD card: [sdcard2] folder

Cannot change a folder/file name, or cannot create a folder

- Check that the folder name or file name is not the same as another folder or file.
- Check that the folder name or file name does not include unsupported characters (< > : * ? " / \ |).
- Check that the folder name or file name is not blank.
- Check if you have write privileges for the selected folder or file.

If you do not have write privileges, you cannot change names or create folders.

Settings

Date and time are incorrect

- Check that [Automatic date & time] is on.
- When [Automatic date & time] is on, check that the product is connected to the network.
⇒ "Cannot connect to the network"
- When the product is not connected to the network, set the date and time manually.

The product needs to be initialized

Initialize the data from the Settings menu.

Factory data reset deletes all installed apps and downloaded data.

Make a backup of data that you want to keep.

Support Information

System update

Connect the product to the Internet and update the system to the latest version.

Use [System updates] to check for system updates.

Follow the on-screen instructions to update the system.

Installing apps

Apps for use with the product are available from the Moverio APPS Market.

Options and recommended peripherals

Options and recommended peripherals help you make the most of the product.

For more information, see <http://www.epson.com>.

Information Desk

< EUROPE, MIDDLE EAST & AFRICA >

ALBANIA :

ITD Sh.p.k.
 Gjergji Center
 Rr Murat Toptani
 04000 Tirana
 Albania
 Tel: 00355 4 2256031
 Fax: 00355 4 2256013
<http://www.itd-al.com>

AUSTRIA :

Epson Deutschland GmbH
 Europark Donau Inkustrasse
 1-7 / Stg. 6 / 2. OG
 A-3400 Klosterneuburg
 Austria
 Tel: +43 (0) 2243 - 40 181 - 0
 Fax: +43 (0) 2243 - 40 181 - 30
<http://www.epson.at>

BELGIUM :

Epson Europe B.V.
Branch office Belgium
 Belgicastraat 4 - Keiberg,
 B-1930 Zaventem
 Belgium
 Tel: +32 2/ 7 12 30 10
 Fax: +32 2/ 7 12 30 20
 Hotline: 070 350120
<http://www.epson.be>

BOSNIA AND HERZEGOVINA :

NET d.o.o. Computer Engineering
 Vukovarska 24
 88000 Mostar
 Bosnia and Herzegovina
 Tel: 00387 36449660
 Fax: 00387 36449669
 E-mail: info@net.com.ba
<http://www.net.com.ba>

BULGARIA :

Epson Service Center Bulgaria
 c/o ProSoft Central Service
 Akad. G. Bonchev SRT. bl.6
 1113 Sofia, Bulgaria
 Tel: 00359 2 979 30 75
 Fax: 00359 2 971 31 79
 E-mail: info@prosoft.bg
<http://www.prosoft.bg>

CROATIA :

MR servis d.o.o.
 Dugoselska cesta 5
 10370 Rugvica, Croatia
 Tel: 00385 16401111
 Fax: 03485 13654982
 E-mail: info@mrservis.hr
<http://www.mrservis.hr>

CYPRUS :

Mechatronic Ltd.
 88 Digenis Akritas Avenue
 "Loizides Centre 2" 2nd Floor
 CY-1061 Nicosia, Cyprus
 Tel: 00357 22582258
 Fax: 00357 22582222
<http://www.mechatronic.com.cy>

CZECH REPUBLIC :

Epson Europe B.V.
Branch Office Czech Republic
 Slavickova 1a 63800 Brno
 Czech Republic
 Hotline: 800 142 052
 E-mail: infoline@epson.cz
<http://www.epson.cz>

DENMARK :

Epson Denmark
 Transformervej 6
 2730 Herlev, Denmark
 Tel: 44508585
 Fax: 44508586
 Hotline: 80808047
 E-mail: danmark@epson.dk
<http://www.epson.dk>

ESTONIA :

Epson Service Center Estonia
 c/o Kulbert Ltd.
 Sirge 4,
 10618 Tallinn, Estonia
 Tel: 00372 671 8160
 Fax: 00372 671 8161
<http://www.epson.ee>

FINLAND :

Epson Finland
 Rajatorpantie 41 C FI-01640
 Vantaa, Finland
 Hotline: 0201 552090
<http://www.epson.fi>

FRANCE & DOM-TOM TERRITORY :

Epson France S.A.
 150 rue Victor Hugo BP 320
 92305 Levallois Perret
 Cedex, France
 Hotline: 0821017017
<http://www.epson.fr>

GERMANY :

Epson Deutschland GmbH
Otto-Hahn-Strasse 4 D-40670
Meerbusch, F.R. Germany
Tel: +49-(0) 2159-538 0
Fax: +49-(0) 2159-538 3000
Hotline: 01805 2341 10
<http://www.epson.de>

GREECE :

Oktabit S.A.
Gounari 26,
15343 Agia Paraskevi
Greece
Tel: 0030 210 6067181
Fax: 0030 210 6067180
<http://www.oktabitgr.com>

HUNGARY :

Epson Europe B.V.
Branch Office Hungary
Infopark Setany 1.
HU-1117 Budapest, Hungary
Hotline: 06 800 14 783
E-mail: infoline@epson.hu
<http://www.epson.hu>

IRELAND :

Epson (UK) Ltd.
Westside, London Road
Hemel Hempstead
Herts HP3 9TD, U.K.
Hotline: 01 679 9015
<http://www.epson.ie>

ISRAEL :

Epson Israel
2 Habonim st.
Ramat Gan, Israel
Tel: +972-3-5751833
Fax: +972-3-575161
<http://www.epson.co.il>

ITALY :

Epson Italia s.p.a.
Via M. Vigano de Vizzi, 93/95
20092 Cinisello Balsamo
Mirano, Italy
Tel: +39 02. 660321
Fax: +39 02. 6123622
Hotline: +39 06.60521503
<http://www.epson.it>

KAZAKHSTAN :

Epson Kazakhstan Rep. Office
97, Samal-2, bldg A1, 5th floor
Business Center
"Samal Towers"
Almaty 050051, Kazakhstan
Tel: +7 727 3560260
Fax: +7 727 3560260
<http://www.epson.kz>

LATVIA :

Epson Service Center Latvia
c/o ServiceNet LV
Jelgavas 36
1004 Riga, Latvia
Tel: 00 371 746 0399
Fax: 00 371 746 0299
<http://www.epson.lv>

LITHUANIA :

Epson Service Center Lithuania
c/o ServiceNet
Gaiziunu 3
50128 Kaunas, Lithuania
Tel: 00 370 37 400 160
Fax: 00 370 37 400 161
<http://www.epson.lt>

LUXEMBURG :

Epson Europe B.V.
Branch office Belgium
Belgicastraat 4-Keiberg
B-1930 Zaventem
Belgium
Tel: +32 2/ 7 12 30 10
Fax: +32 2/ 7 12 30 20
Hotline: 0900 43010
<http://www.epson.be>

MACEDONIA :

Digit Computer Engineering
Bul. Partizanski Odredi
62 Vlez II mezanin
1000 Skopje, Macedonia
Tel: 00389 2 3093393
Fax: 00389 2 3093393
E-mail: digit@digit.com.mk
<http://www.digit.com.mk>

NETHERLANDS :

Epson Europe B.V.
Benelux sales office
Entrada 701
NL-1096 EJ Amsterdam
Netherlands
Tel: +31 20 592 65 55
Fax: +31 20 592 65 66
Hotline: 0900 5050808
<http://www.epson.nl>

NORWAY :

Epson Norway
Fjordveien 3
1363 Høvik, Norway
Tel: 4780030030
E-mail: kssl@telenor.com
<http://www.epson.no>

POLAND :

Epson Europe B.V.
Branch Office Poland
Ul. Bukserska 66 PL-02-690
Warszawa, Poland
Hotline: (0) 801-646453
<http://www.epson.pl>

PORTUGAL :

Epson Iberica S.A.U.
Branch Office Portugal
Rua Gregorio Lopes, Lote 1514,
Restelo, 1400 Lisboa, Portugal
Tel: 213035400
Fax: 213035490
Hotline: 707 222 000
<http://www.epson.pt>

ROMANIA :

Epson Europe B.V.
Branch Office Romania
Strada Ion Urdareanu nr. 34
Sector 5, 050688 Bucuresti
Romania
Tel: 00 40 21 4025024
Fax: 00 40 21 4025020
<http://www.epson.ro>

RUSSIA :

Epson CIS
Schepkina street, 42,
Bldg 2A, 3rd floor
129110, Moscow, Russia
Tel: +7 (495) 777-03-55
Fax: +7 (495) 777-03-57
<http://www.epson.ru>

UKRAINE :

Epson Kiev Rep. Office
Pimonenko street, 13,
Bldg 7B, Office 15
04050, Kiev, Ukraine
Tel: +38 (044) 492 9705
Fax: +38 (044) 492 9706
<http://www.epson.ua>

SERBIA :

AVG d.o.o. Beograd
Prve pruge 31c
11080 Zemun, Beograd
Republic of Serbia
Tel: 00381 11 3191868
E-mail: office@a-v-g.rs
<http://www.a-v-g.rs>

SLOVAKIA :

Epson Europe B.V.
Branch Office
Czech Republic
Slavickova 1a 63800 Brno
Czech Republic
Hotline: 0850 111 429
(national costs)
E-mail: infoline@epson.sk
<http://www.epson.sk>

SLOVENIA :

Birotehna d.o.o.
Litija Cesta 259
1261 Ljubljana - Dobrunje
Slovenia
Tel: 00 386 1 5853 410
Fax: 00386 1 5400130
E-mail: info@birotehna.si
<http://www.birotehna.si>

SPAIN :

Epson Ibérica, S.A.U.
Av. de Roma, 18-26
08290 Cerdanyola del Vallès
Barcelona, Spain
Tel: 93 582 15 00
Fax: 93 582 15 55
Hotline: 902 28 27 26
<http://www.epson.es>

SWEDEN :

Epson Sweden
Box 329 192 30 Sollentuna
Sweden
Tel: 0771-400134
<http://www.epson.se>

SWITZERLAND :

Epson Deutschland
GmbH
Branch office Switzerland
Zweigniederlassung Kloten
Steinackerstrasse 34
CH-8302 Kloten
Switzerland
Tel: +41 (0) 43 255 70 20
Fax: +41 (0) 43 255 70 21
Hotline: 0848448820
<http://www.epson.ch>

TURKEY :

Tecpro Bili̇gi Teknolojileri
Tlc. ve San. Ltd. Sti.
Telsizler Mah. Zincirlidere
Cad.No: 10 Kat 1-2
Kagithane 34410 Istanbul
Turkey
Tel: 0090 212 2684000
Fax: 0090 212 2684001
E-mail: epson@tecpro.com.tr
<http://www.tecpro.com.tr>

UK :

Epson (UK) Ltd.
Westside, London Road
Hemel Hempstead
Herts HP3 9TD, UK
Tel: (01442) 261144
Fax: (01442) 227227
Hotline: 08704437766
<http://www.epson.co.uk>

AFRICA :

Contact your dealer
Email: support@epson.co.za
<http://www.epson.co.za>
or
<http://www.epson.fr>

SOUTH AFRICA :

Epson South Africa
Grnd. Floor,
Durham Hse, Block 6
Fourways Office Park
Cnr. Fourways Blvd. & Roos Str.
Fourways, Gauteng
South Africa
Tel: +27 11 465 9621
Fax: +27 11 465 1542
Helpdesk: 0860 337766
or +27 11 201 7741
Email: support@epson.co.za
<http://www.epson.co.za>

MIDDLE EAST :

Epson (Middle East)
P.O. Box: 17383 Jebel Ali Free
Zone Dubai
UAE (United Arab Emirates)
Tel: +971 4 88 72 1 72
Fax: +971 4 88 18 9 45
Email: supportme@epson.eu
<http://www.epson.ae>

< NORTH, CENTRAL AMERICA & CARIBBEAN ISLANDS >

CANADA :

Epson Canada, Ltd.
 185 Renfrew Drive
 Markham, Ontario
 L3R 6G3
 Canada
 Tel: 905-709-9475
 or 905-709-3839
<http://www.epson.ca>

COSTA RICA :

Epson Costa Rica, S.A.
 De la Embajada Americana
 200 Sur y 300 Oeste
 Pavas, San Jose
 Costa Rica
 Tel: 800-EPSONCR
 (800-3776627)
<http://www.epson.co.cr>

MEXICO :

Epson Mexico, S.A. de C.V.
 Boulevard Manuel Avila Camacho 389
 Edificio 1, Conjunto Legaria Col Irrigación, C.P. 11500 México, DF
 Tel: (52 55) 1323-2052 / (52 55) 1323-2096 / (52 55) 1323-2127
<http://www.epson.com.mx>

U. S. A. :

Epson America, Inc.
 3840 Kilroy Airport Way
 Long Beach, CA 90806 USA
 Tel: 562-276-4394
<http://www.epson.com>

< SOUTH AMERICA >

ARGENTINA :

Epson Argentina S.R.L.
 Ave. Belgrano 970
 (1092) Buenos Aires
 Argentina
 Tel: (5411) 5167-0300
<http://www.epson.com.ar>

BRAZIL :

Epson do Brasil
 Av. Tucunaré,
 720 Tamboré Barueri,
 São Paulo, SP 06460-020
 Brazil
 Tel: (55 11) 3956-6868
<http://www.epson.com.br>

CHILE :

Epson Chile S.A.
 La Concepción 322, Piso 3
 Providencia, Santiago, Chile
 Tel: (562) 484-3400
<http://www.epson.cl>

COLOMBIA :

Epson Colombia Ltd.
 Calle 100 No 19-54 Piso 7
 Bogota, Colombia
 Tel: (571) 523-5000
<http://www.epson.com.co>

PERU :

Epson Peru S.A.
 Av. Canaval y Moreyra 590
 San Isidro, Lima, Perú
 Tel: (511) 418 0210
<http://www.epson.com.pe>

VENEZUELA :

Epson Venezuela S.A.
 Calle 4 con Calle 11-1
 La Urbina Sur.
 Caracas, Venezuela
 Tel: (58 212) 240-1111
<http://www.epson.com.ve>

< ASIA & OCEANIA >

AUSTRALIA :

Epson Australia Pty. Ltd.
 3 Talavera Road,
 North Ryde, NSW 2113,
 Australia
 Tel: 1300 361 054
<http://www.epson.com.au>

CHINA :

Epson (China) Co., Ltd.
 7F, Jinbao Building,
 No.89 Jinbao Street,
 Dongcheng District,
 Beijing,
 China, 100005
 Tel: (86-10) 85221199
 Fax: (86-10) 85221123
 Hotline: 400-810-9977
<http://www.epson.com.cn>

HONG KONG :

Epson Hong Kong Ltd.
 Unit 715-723, Trade Square,
 681 Cheung Sha Wan Road,
 Cheung Sha Wan, Kowloon,
 Hong Kong
 Support Hotline:
 (852) 2827 8911
 Fax: (852) 2827 4383
<http://www.epson.com.hk>

INDIA :

Epson India Pvt., Ltd.
12th Floor, The Millenia,
Tower A,
No. 1, Murphy Road,
Ulsoor,
Bangalore 560008
India
Tel: 1800 425 0011
/1860 3000 1600
<http://www.epson.co.in>

INDONESIA :

PT. Epson Indonesia
Wisma Keiai, 16th Floor,
Jalan Jenderal Sudirman Kav. 3,
Jakarta 10220, Indonesia
Tel: 021-5723161
Fax: 021-5724357
<http://www.epson.co.id>

JAPAN :

Selko Epson Co.
Toyoshina Plant
VP Customer Support Group:
6925 Toyoshinatazawa,
Azumino-shi, Nagano-ken,
399-8285 Japan
Tel: 0263-87-5814
Fax: 0263-87-5813
<http://www.epson.jp>

KOREA :

Epson Korea Co., Ltd.
27F DaeSung D-Polis A, 606,
Seobusaet-gil, Geumcheon-gu,
Seoul, 153-719 Korea
Tel : 82-2-558-4270
Fax: 82-2-558-4272
<http://www.epson.co.kr>

MALAYSIA :

Epson Malaysia Sdn. Bhd.
3rd Floor, East Tower,
Wisma Consplant 1,
No.2, Jalan SS 16/4,
47500 Subang Jaya,
Malaysia
Tel: 03 56 288 288
Fax: 03 56 212 088
<http://www.epson.com.my>

NEW ZEALAND :

Epson New Zealand
Level 2,
7-9 Fanshawe Street,
Auckland Central, 1010
New Zealand
Tel: 09 366 6855
Fax: 09 366 6865
<http://www.epson.co.nz>

PHILIPPINES :

Epson Philippines Co.
8th Floor, Anson's Center,
#23 ADB Avenue,
Pasig City 1605,
Philippines
Tel: 632-7062609
Fax: 632-7062663
<http://www.epson.com.ph>

SINGAPORE :

Epson Singapore Pte. Ltd.
1 HarbourFront Place,
#03-02 HarbourFront Tower 1,
Singapore 098633
Tel: 6586 3111
<http://www.epson.com.sg>

TAIWAN :

Epson Taiwan
Technology & Trading Ltd.
14F, No. 7, Song Ren Road,
Taipei, Taiwan
Tel: (02) 8786-6688
Fax: (02) 8786-6633
<http://www.epson.com.tw>

THAILAND :

Epson (Thailand) Co.,Ltd.
195 Empire Tower, 42nd Floor,
South Sathorn Road,
Yannawa, Sathorn,
Bangkok 10120, Thailand
Tel: 02 685 9888
Fax: 02 685 9889
<http://www.epson.co.th>

Authentication Information

United Arab Emirates

TRA REGISTERED No. :ER0126850/14
DEALER No. :0017829/09