
Assignment 00: Limit analysis Assigned: 22nd January 2020 Due: 27th January 2020

Perform short-term limit analyses (upper and lower bound solutions) of the slope shown below using the Optum G2 software.

- Compute the factor of safety using limit analysis (lower and upper bound)
- Plot the magnitude of displacement from the analyses
- List as many questions unresolved questions you may have regarding the analyses.

This assignment has step-by-step instructions on performing limit analyses using Optum G2.

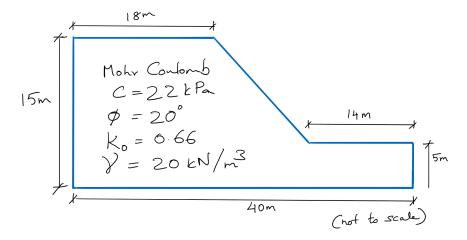

- 1. A free academic version of Optum G2 can be obtained by registering at: https://optumce.com/academic/academic-license/optumg2-register-new-user/
- 2. After installation using the student license, open a new project. For your convenience the geometry of the slope is provided to you as a CAD drawing (DXF file) in Canvas. Import the DXF to the Current Stage as shown below.
- 3. Select the geometry, this should highlight the slope and then choose the 'MA-TERIALS' tab from the top ribbon. Select the Mohr Coulomb material model (MC Basic). Specify the strength parameters, unit weight and K0 for the initial condition (which might be under Not relevant to analysis section). The material parameters are shown below. Set both dry and saturated unit weights to be the same.
- 4. The next step is to apply boundary conditions. This is done by selecting "Standard Fixities" in the "Features" tab. Roller boundaries will be applied on the sides allowing vertical displacements, but restraining horizontal movements. The bottom boundary is completely fixed.

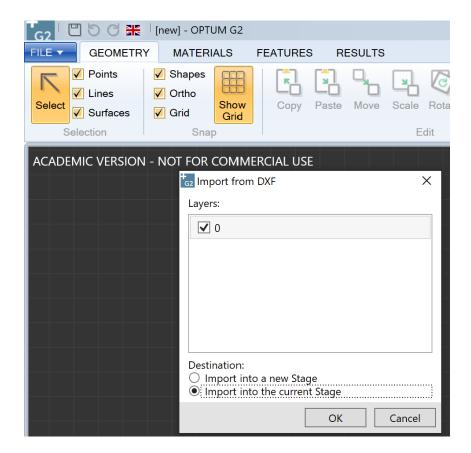


Figure 1: Import DXF

Properties	Values
cohesion (c)	22 kPa
friction $(\phi)$	$20^{o}$
unit weight $(\gamma)$	$20 \ kN/m^3$
K0	0.66

- 5. We are now ready to perform the analysis. Choose the "Stage manager" tab on the right bottom from the panel on the right. To perform a lower bound analysis, choose the Analysis type as "Limit Analysis" and the Element type in settings as "Lower". Ensure that a minimum of 100 elements are used in the analysis with adaptive meshing enabled. Under advanced settings, specify the multiplier as 'Gravity' this will increase the gravity in stages, until the slope fails. The analysis will be carried out to analyze the short-term stability of the slope.
- 6. To perform the upper bound analysis, clone the stage 1, which should be renamed as 'LB'. Then change the element type in the new stage 'UB' as "Upper". When ready choose "Run analysis" button.
- 7. The software will perform both the lower and upper bound analyses and present the factor of safety against failure. Comment on the factor of safety

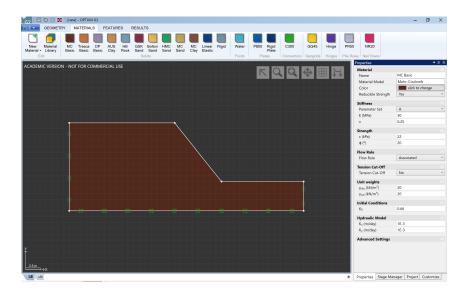


Figure 2: Apply material

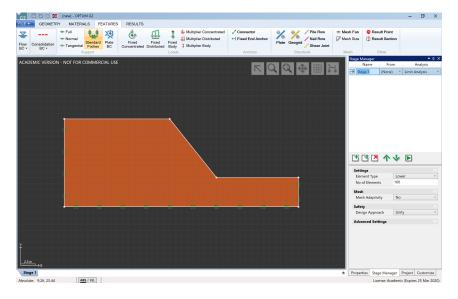


Figure 3: Apply boundary conditions

obtained from both the analyses. Plot the magnitude of displacement from both the analyses.

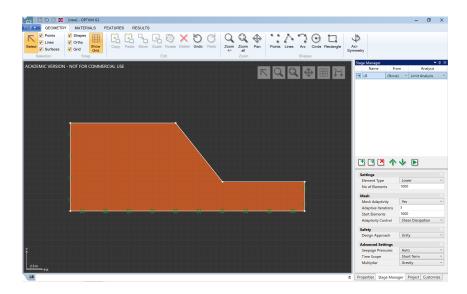


Figure 4: Lower bound analysis

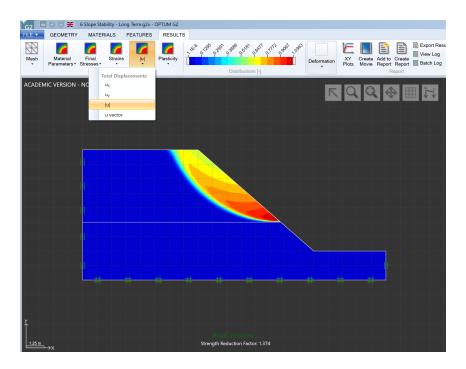


Figure 5: Magnitude of displacement (not the solution for this assignment).