

BungVision

How to run the camera inspection station, read a PASS or FAIL, clear a rejected battery, and check your production numbers.

For machine operators

Read start to finish once

Keep near the station

WHAT'S INSIDE

- | | |
|--|--|
| 1 What BungVision Does | 2 The Main Screen |
| 3 Starting and Stopping | 4 How PASS and FAIL Are Decided |
| 5 When a Battery Is Rejected | 6 Clearing a Reject (Reset Reject) |
| 7 Reset Reject vs Reset Counts | 8 The Heartbeat and the PLC |
| 9 Production Tracking | 10 Settings |
| 11 Everyday Tasks | 12 Fixing Common Problems |
| 13 Word List | |

1 What BungVision Does

BungVision is a camera that watches each battery as it goes down the line. It looks at the top of the battery and checks that every **Bunsen**

valve is in place. A Bunsen valve is the small round plug that seals each cell on top of the battery.

A good battery has all of its Bunsen valves. If a Bunsen valve is missing, or the Bunsen valves are in the wrong spots, the battery is bad.

BungVision uses a trained model (its "eyes and brain") to find the battery and count the Bunsen valves many times per second.


When BungVision sees a bad battery, it shows a big red **REJECT LATCHED** message and tells the machine (the PLC) to stop the line so the bad battery can be pulled off.

IN PLAIN WORDS

BungVision = an automatic set of eyes that counts Bunsen valves and stops the line when a battery is wrong.

2 The Main Screen

This is the screen you will use all shift. The big panel on the left is the live camera and the result. The column on the right has your buttons and the machine status.

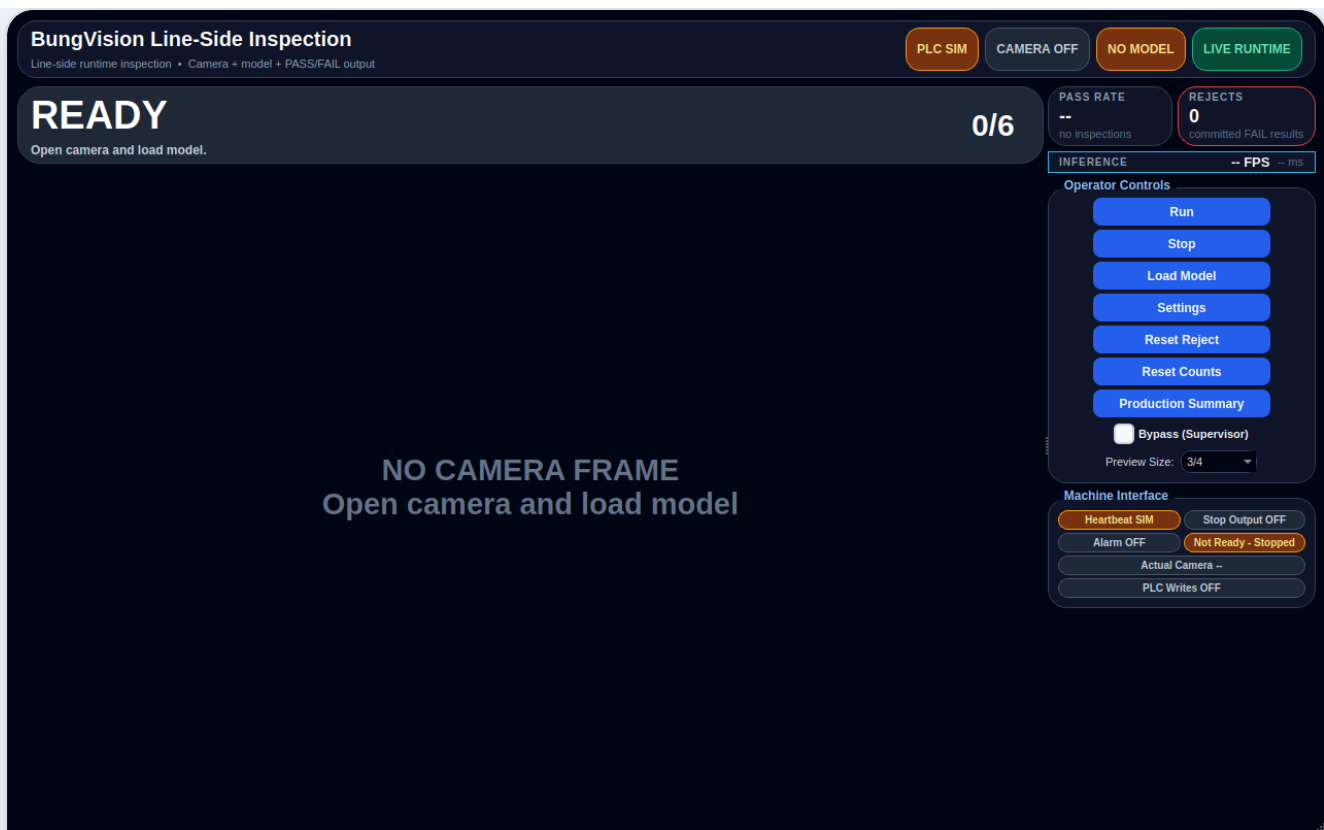

The main screen at startup. Left: the camera view and the big result panel. Right: your buttons (top) and the machine status lights (bottom).

The parts of the screen

- **Result panel** (big box, top left) — shows **PASS**, **FAIL**, or **WAIT** for the battery being checked, and the Bunsen valve count like **6/6**.
- **Camera view** (below the result) — the live picture from the camera.
- **Status chips** (top right corner) — quick health of the **PLC**, **Camera**, and **Model**.
- **Metric cards** — **Pass Rate**, **Rejects** this session, and **Inference** (how fast the camera is thinking, in frames per second).
- **Operator Controls** — the buttons you press: Run, Stop, Load Model, Settings, Reset Reject, Reset Counts, Production Summary.
- **Machine Interface** — the lights that show what BungVision is telling the machine (heartbeat, stop request, alarm, ready).

3 Starting and Stopping

Before the line runs, BungVision needs its **model** loaded and its **camera** open.

- 1 **Load the model.** Press **Load Model**. When it is ready, the **MODEL** chip at the top turns green. The model is the file that knows what a battery and a Bunsen valve look like.
- 2 **Start the camera.** Press **Run**. The camera view goes live and the **CAMERA** chip turns green.
- 3 **Watch the result panel.** As batteries pass, you will see PASS, FAIL, or WAIT for each one.
- 4 **To stop, press **Stop**.** The camera stops and BungVision tells the machine it is no longer running.

IF THE CAMERA FREEZES

Press **Run** again. That closes and re-opens the camera. If it keeps stopping after about a minute, tell maintenance — the camera's USB power may be turning off (there is a one-time fix for this on the Jetson).


4 How PASS and FAIL Are Decided

For every battery, BungVision does the same simple check:

- Find the battery in the picture.
- Count the Bunsen valves that belong to that battery.
- Compare the count to the number it should have (normally **6**).

A PASS


The battery has all 6 Bunsen valves, and the Bunsen valves sit in a correct shape. Then the panel turns green.

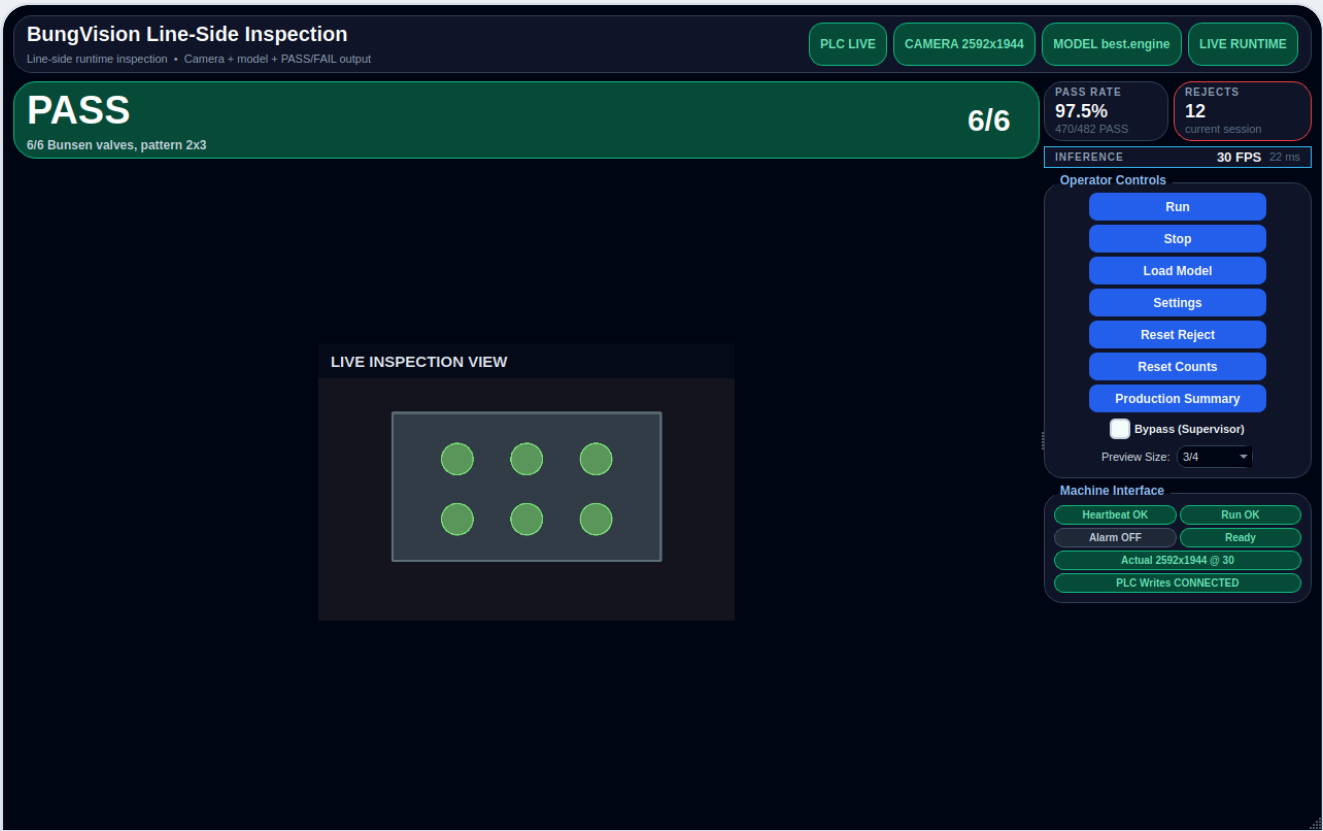

A PASS. All six Bunsen valves are found. The panel is green, it reads 6/6 , and the reason says 6/6 Bunsen valves, pattern 2x3 .

A FAIL

The battery does **not** have exactly 6 Bunsen valves, or the Bunsen valves are in the wrong shape. Then the panel turns red.

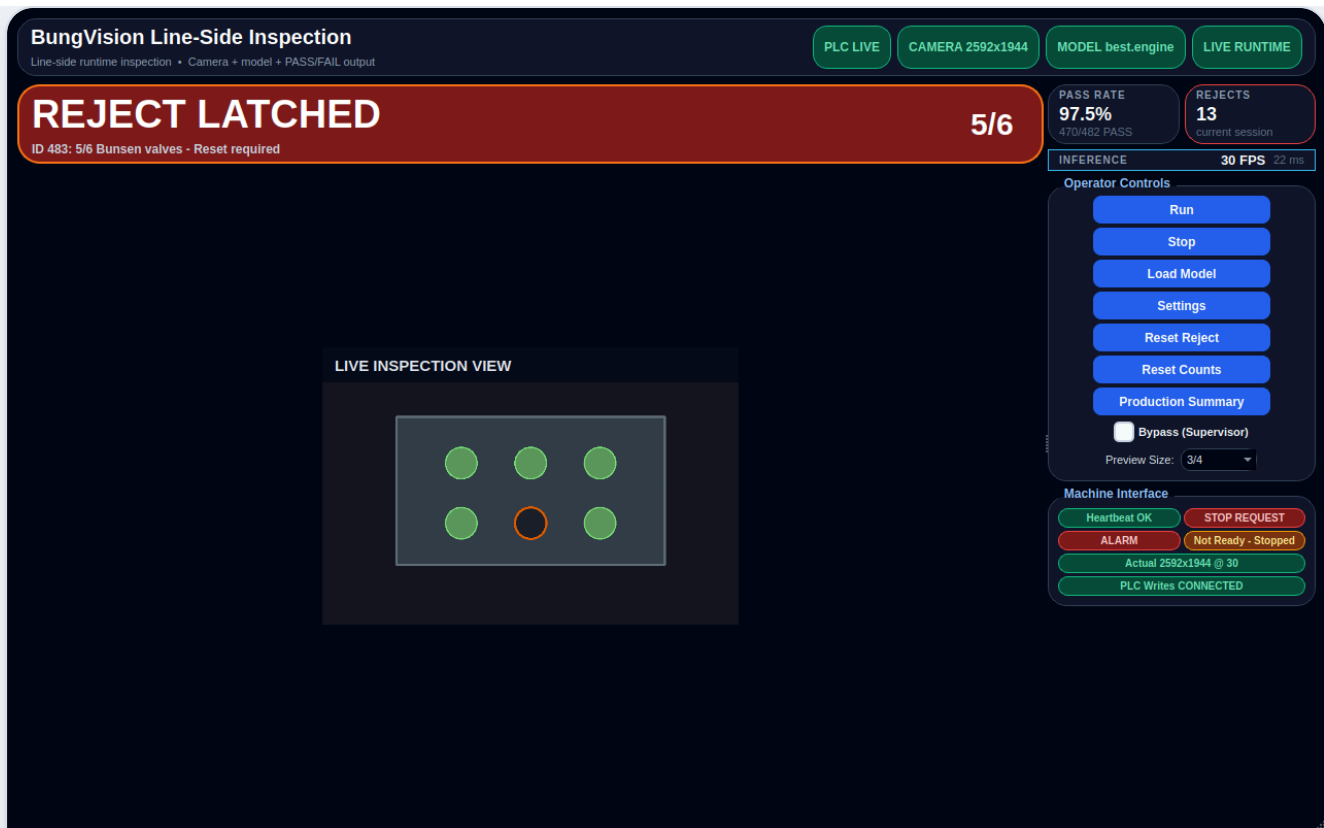

A FAIL. One Bunsen valve is missing, so the count is **5/6**. The panel turns red and locks on **REJECT LATCHED**.

What "WAIT" means

Sometimes you will see **WAIT**. That is normal. It means the battery is not all the way in view yet — it is still coming in from the edge of the picture. BungVision holds off on judging until it can see the whole battery. It will not call a battery bad just because it is half in frame.

The extra checks

A few settings make the check smarter. A supervisor sets these on the **Inspection** tab.

Runtime
Inspection
Capture
Display
PLC

Bunsen Valves
Expected Bunsen valve count per battery before a PASS can commit.

6

Entry Grace
WAIT frames after a new battery appears so Bunsen valves can enter view.

12

Match px
Maximum center movement allowed when matching a battery track.

180

Locked IoU %
Overlap required to keep a committed PASS/FAIL locked while visible.

25

Full View Margin %
Battery must be this far from the frame edge before PASS/FAIL grading can commit.

3

Pattern Tol %
How far off the fitted row/grid a valve may sit and still be counted. Higher = looser (more forgiving of skew, but off-pattern items are more likely to count).

25

Debounce
Frames a PASS/FAIL must stay stable before it is counted.

6

Clear Frames
Frames with no match before a tracked battery is cleared.

10

Track IoU %
Overlap threshold used to keep moving batteries tied to the same ID.

5

☒ **Require full view before grading**
Hold a partial infeed/edge battery in WAIT instead of grading it FAIL before the full lid is visible.

☒ **Validate Bunsen valve pattern**
Auto-detect the single-row or 2x3 layout and count only Bunsen valves that sit on it. Off-pattern detections (terminals, mounting holes, strays) are ignored so they cannot inflate the count. Row spacing is not constrained.

Apply
Save
Save + Close
Load Model
Cancel

Inspection settings. Bunsen Valves is how many each battery must have (6). **Require full view** turns on the WAIT behavior. **Validate Bunsen valve pattern** makes the count ignore anything off the pattern.

RULE	WHAT IT DOES
Bunsen Valves	How many Bunsen valves a good battery must have. Default is 6.
Require full view before grading	Holds a battery in WAIT until the whole battery is on screen, so an edge battery is not called bad by mistake.
Validate Bunsen valve pattern	Finds the row (or 2×3 grid) the Bunsen valves sit in, then counts only the ones on that pattern . Anything off the pattern — a battery post, a mounting hole, a stray — is ignored and does not add to the count. Uneven spacing along the row is fine.
Pattern Tol %	How far off the row or grid a Bunsen valve may sit and still be counted. Higher is more forgiving.

WHAT A PASS NEEDS

The whole battery in view **and** 6 Bunsen valves sitting on the pattern. BungVision works out the layout by itself — a single row or a 2×3 grid — so both battery styles are handled with no setup.

ONE THING THIS CANNOT CATCH

The pattern check only removes Bunsen valves that are **off** the pattern. If something is wrongly seen as a Bunsen valve right where a real Bunsen valve belongs (for example a deep empty hole), it is on the pattern and still counts. That kind of mistake has to be fixed by retraining the model, not by this setting.

5 When a Battery Is Rejected

The moment BungVision commits a FAIL, it does two things at once:

- 1 It counts the fail. Your **Rejects** number goes up by one. This number is how you know the system is catching bad batteries.
- 2 It **latches the reject**. "Latch" means it locks on and stays on. The panel shows **REJECT LATCHED** and BungVision turns on **STOP REQUEST** and **ALARM** to the machine so the line stops.

The reject stays locked until someone clears it. This is on purpose — it makes sure a bad battery cannot slip by without a person handling it.

LOOK AT THE MACHINE INTERFACE LIGHTS

On a reject you will see **STOP REQUEST** and **ALARM** turn red, and **Ready** changes to **Not Ready - Stopped**. That is BungVision telling the machine to hold.

Clearing a Reject (Reset Reject)

When the line stops for a reject, here is what you do:

- 1 **Fix the battery.** Pull off or repair the bad battery so the problem is gone.
- 2 **Press** `Reset Reject`. This unlocks the latch. BungVision sends a reset to the machine and goes back to `READY`.
- 3 **Let it re-inspect.** BungVision will look at the next (or fixed) battery again. It has to see a good battery before the line keeps running.

Reset Reject only clears the lock. It does **not** erase the fail from your count. That is on purpose — you still want to know how many bad batteries the system caught this shift.

THE MACHINE CAN RESET IT TOO

Your PLC can clear the reject on its own by turning on the

`BungVision_ResetRequest` tag. BungVision watches that tag and, when it turns on, does the same thing as pressing Reset Reject. Ask a supervisor if your line uses this.

Reset Reject vs Reset Counts

These two buttons look alike but do very different jobs. Do not mix them up.

BUTTON	WHAT IT DOES	WHEN TO USE IT
Reset Reject	Unlocks the current reject so the line can run again. Your counts stay the same.	Every time the line stops for a bad battery, after you fix it.
Reset Counts	Sets the Parts, Pass, and Reject counters back to 0 and starts a fresh session. It also clears any active reject.	At the start of a shift or when you change to a new product.

EASY WAY TO REMEMBER

Reset Reject = "let me keep going." **Reset Counts** = "start my numbers over." Use Reset Counts only at shift start, never just to clear a stop.

8 The Heartbeat and the PLC

The **PLC** is the machine's controller. BungVision talks to it over the network. A supervisor sets this up on the **PLC** tab, but you should understand the lights.

Runtime
Inspection
Capture
Display
PLC

PLC IP
Controller address for pylogix writes.
192.168.1.10

Heartbeat ms
How often the heartbeat bit toggles.
500

☐ **Enable Writes**
Turn on only after tags are verified.

Vision runtime running / active
TRUE when BungVision is actively running inspection or when Bypass is active.
BungVision_Running

Vision bypass active
TRUE when the operator has enabled Bypass.
BungVision_Bypass

Conveyor stop request
TRUE when BungVision has a committed reject/fault and Bypass is not active.
BungVision_StopRequest

Vision alarm active
TRUE when BungVision wants the operator/ PLC to treat the condition as an alarm.
BungVision_Alarm

Vision ready / permissive
TRUE only when BungVision is genuinely able to inspect: runtime running, camera open, recent good frame, model loaded, prediction not faulted, and no stop request.
BungVision_Ready

Communication heartbeat
BOOL that toggles while PLC writes are enabled.
BungVision_Heartbeat

Reset acknowledgement pulse
Momentary TRUE pulse when Reset is pressed in BungVision.
BungVision_Reset

Reset request (PLC -> Vision input)
BOOL INPUT written by the PLC.
BungVision_ResetRequest

Test Conn
Test HB
Test Stop

Apply
Save
Save + Close
Load Model
Cancel

PLC settings. Each line is a "tag" — a named signal shared with the machine. The heartbeat, ready, stop, and reset tags live here.

What the heartbeat is

The **heartbeat** is a signal that turns on and off over and over, like a pulse, the whole time BungVision is alive and talking to the PLC. The machine watches this pulse. As long as it keeps beating, the machine knows BungVision is awake and working.

If the heartbeat **stops** beating, the machine knows something is wrong with BungVision (it froze, lost power, or lost the network) and can stop the line for safety. Think of it like a person nodding "I'm still here" every half second.

The Machine Interface lights

LIGHT	MEANING
Heartbeat	The pulse that proves BungVision is alive. It should keep changing.
Stop / Run	Green when running normally; red STOP REQUEST when a reject wants the line stopped.
Alarm	Turns on with a reject, for the stack light or horn.
Ready	Green only when everything is healthy: running, camera open, model loaded, and no stop. Not green means BungVision is not ready to inspect.
Actual Camera	The real camera size and speed, like <code>2592x1944 @ 30</code> .
PLC Writes	Shows if BungVision is really connected to the PLC.

Bypass (supervisor only)

The **Bypass (Supervisor)** check box lets a supervisor keep the line moving even when BungVision would ask it to stop. It is for setup and troubleshooting only. Bypass does **not** make the machine "Ready" — it only stops BungVision from sending the stop. Use it with care.

9 Production Tracking

Press **Production Summary** to see how the line is doing. This screen only shows numbers — you cannot break anything here.

Current Session (since last Reset Counts)

PARTS

482

committed

PASS

470

PASS

REJECTS

12

FAIL

PASS RATE

97.5%

470/482 PASS

Since 2026-08-08 15:28 • 3h 12m elapsed • 151 parts/hr

Today

PARTS

1527

all sessions

PASS

1464

PASS

REJECTS

63

FAIL

PASS RATE

95.9%

1464/1527 PASS

Today — Reject Breakdown

Reject Reason	Count	% of Rejects
pattern invalid	21	33%
4/6 Bunsen ...	18	29%
5/6 Bunsen ...	9	14%
7/6 Bunsen ...	9	14%
battery_down	6	10%

Last 7 Days

Date	Parts	PASS	Rejects	Pass Rate
2026-08-08	1527	1464	63	95.9%
2026-08-07	1446	1407	39	97.3%
2026-08-06	1500	1449	51	96.6%
2026-08-05	2524	2437	87	96.6%
2026-08-04	2476	2420	56	97.7%
2026-08-03	2542	2460	82	96.8%
2026-08-02	2324	2249	75	96.8%

Today — By Hour

Refresh

Export CSV

Open Logs Folder

Close

Production Summary. Your current session at the top, then all of today, a breakdown of why batteries failed, and the last 7 days.

- **Current Session** — Parts, Pass, Rejects, and Pass Rate since the last **Reset Counts**. It also shows parts per hour.
- **Today** — the same numbers for the whole day, across every session.

- **Today — Reject Breakdown** — the reasons batteries failed (like 5/6 Bunsen valves), so you can see the most common problem.
- **Last 7 Days** — one row per day, with the pass rate for each.
- **Today — By Hour** — parts and rejects broken down by hour (scroll down to see it).

SAVE THE NUMBERS

Press Export CSV to save a spreadsheet of the history, or Open Logs Folder to find the saved files. This history stays even after BungVision restarts.


10 Settings

Press Settings to open the setup window. It has tabs across the top. Most operators never need to change these — a supervisor sets them.

The screenshot shows the 'Runtime' tab of the BungVision Settings window. The window has a dark theme and a tabbed interface at the top with 'Runtime', 'Inspection', 'Capture', 'Display', and 'PLC'. The 'Runtime' tab is active, showing various configuration options for the camera and model. The settings are organized into two columns. The left column includes 'Backend' (OpenCV), 'OpenCV API' (Auto), 'Cam FPS' (30), 'Height' (1944), 'Manual us' (5000), 'Enable Basler ROI' (checkbox), 'ROI Offset X' (0), 'ROI Width' (2592), 'Model Task' (Auto), and 'Class Names'. The right column includes 'OpenCV Src' (0), 'Basler SN' (blank), 'Width' (2592), 'Exposure' (Manual), 'Gain' (0), 'ROI Offset Y' (0), 'ROI Height' (1944), 'Device' (blank), and 'Image Size'. At the bottom, there are buttons for 'Apply', 'Save', 'Save + Close', 'Load Model', and 'Cancel'.

Setting	Value
Backend	OpenCV
OpenCV API	Auto
Cam FPS	30
Height	1944
Manual us	5000
Enable Basler ROI	☐
ROI Offset X	0
ROI Width	2592
Model Task	Auto
Class Names	
OpenCV Src	0
Basler SN	
Width	2592
Exposure	Manual
Gain	0
ROI Offset Y	0
ROI Height	1944
Device	
Image Size	

Runtime tab. Which camera to use, its size and speed, and which model file to load.

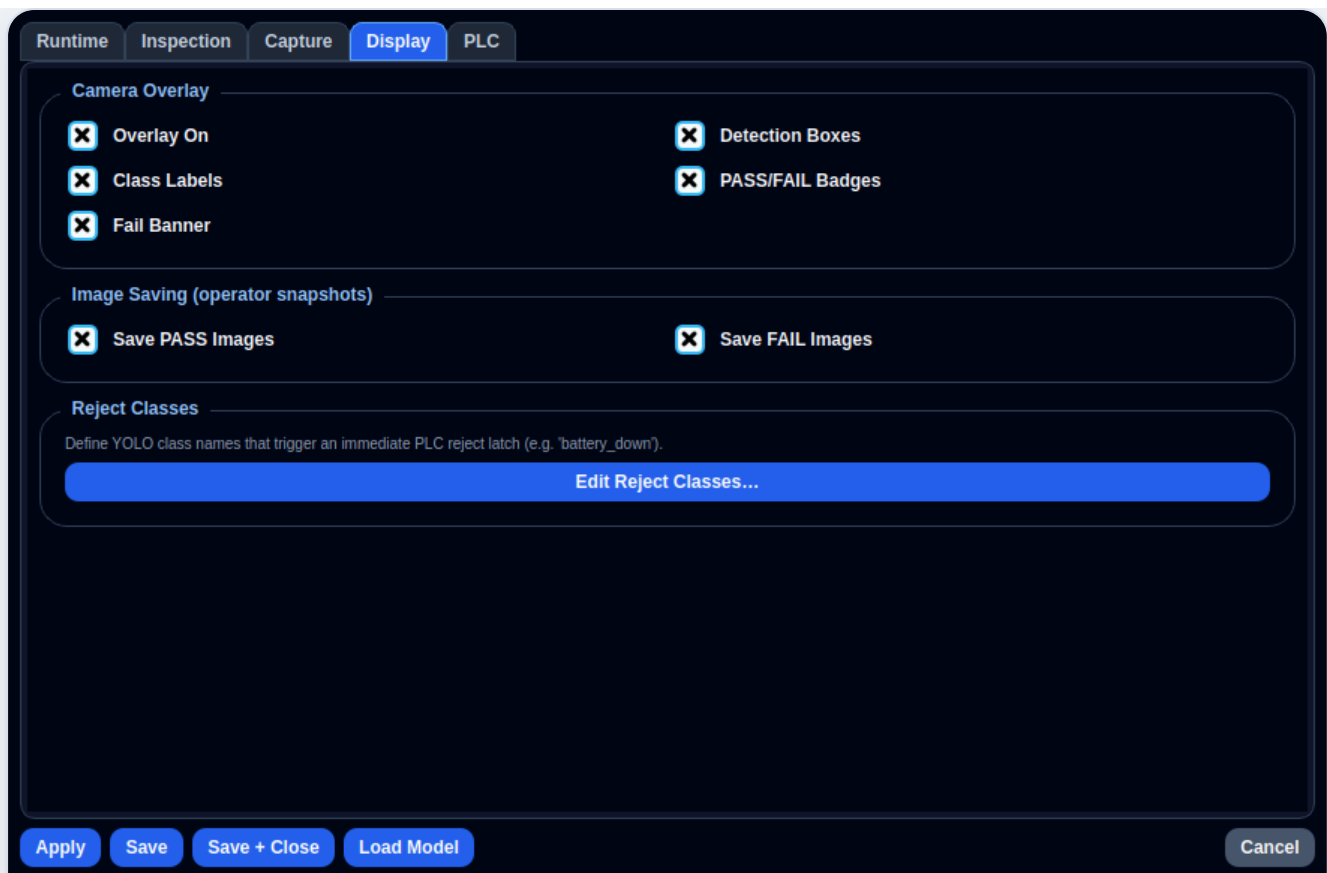

Display tab. Turn the camera overlay boxes on or off, choose whether to save PASS and FAIL pictures, and open the reject class list.

The **Reject Classes** list lets you name shapes that should stop the line right away — for example a tipped-over battery. If the camera sees that shape, it rejects at once, without counting Bunsen valves.

Add YOLO class names below. When any detection matches one of these labels the PLC reject latch fires immediately, regardless of Bunsen valve count. Names are case-insensitive. Example: **battery_down**

battery_down
label_missing

e.g. battery_down

Add

Remove Selected

OK

Cancel

Reject Classes. Type a class name (like `battery_down`) to make it an instant reject.

Everyday Tasks

YOU WANT TO...	DO THIS
Start inspecting	Press Load Model , then Run .
Stop inspecting	Press Stop .
Clear a stopped line after a reject	Fix the battery, then press Reset Reject .
Start a new shift's numbers	Press Reset Counts .
See how the shift is going	Press Production Summary .
Un-freeze the camera	Press Run again.

Fixing Common Problems

PROBLEM	WHAT IS LIKELY WRONG	WHAT TO TRY
Camera stops on its own after about a minute	The camera's USB power is turning off	Press Run to restart. Tell maintenance so they can apply the one-time USB power fix.
Picture is very dark	Camera exposure is set too low	Tell a supervisor to check the exposure setting for this camera.
Frames per second look low	The camera decode is slow	Supervisor: set the camera to the GStreamer option so the hardware helps decode.
Good batteries show FAIL	Pattern check is too strict, or a Bunsen valve is dirty/hidden	Clean the battery top. If it keeps happening, a supervisor can raise the Pattern Tolerance.
Machine will not run even on PASS	PLC not connected, or not "Ready"	Check the PLC Writes and Ready lights. If not green, get a supervisor.
Says model is not loaded	The model file did not load	Press Load Model . If it still fails, get a supervisor.

WORD	MEANING
Bunsen valve	The round plug that seals a cell on top of the battery. BungVision counts these.
Model	The trained file that knows how a battery and a Bunsen valve look. BungVision needs it loaded to inspect.
PLC	The machine's controller. BungVision tells it when to stop and go.
Heartbeat	A signal that pulses on and off to prove BungVision is alive and talking to the PLC.
Latch	To lock on and stay on. A reject latches so a bad battery cannot slip by.
WAIT	The battery is not fully in view yet, so BungVision holds off judging it.
Inference	The camera "thinking" — how fast it checks frames, shown as frames per second (FPS).
Bypass	A supervisor switch that lets the line run even when BungVision would stop it. For setup only.
Session	Your run of counting since the last Reset Counts.

BungVision Line-Side Inspection · Operator Manual. Screens shown with sample data for teaching; your live screen will show your camera and your real numbers. Keep this guide at the station.