


PISOFI BASIC CONNECTION DIAGRAM

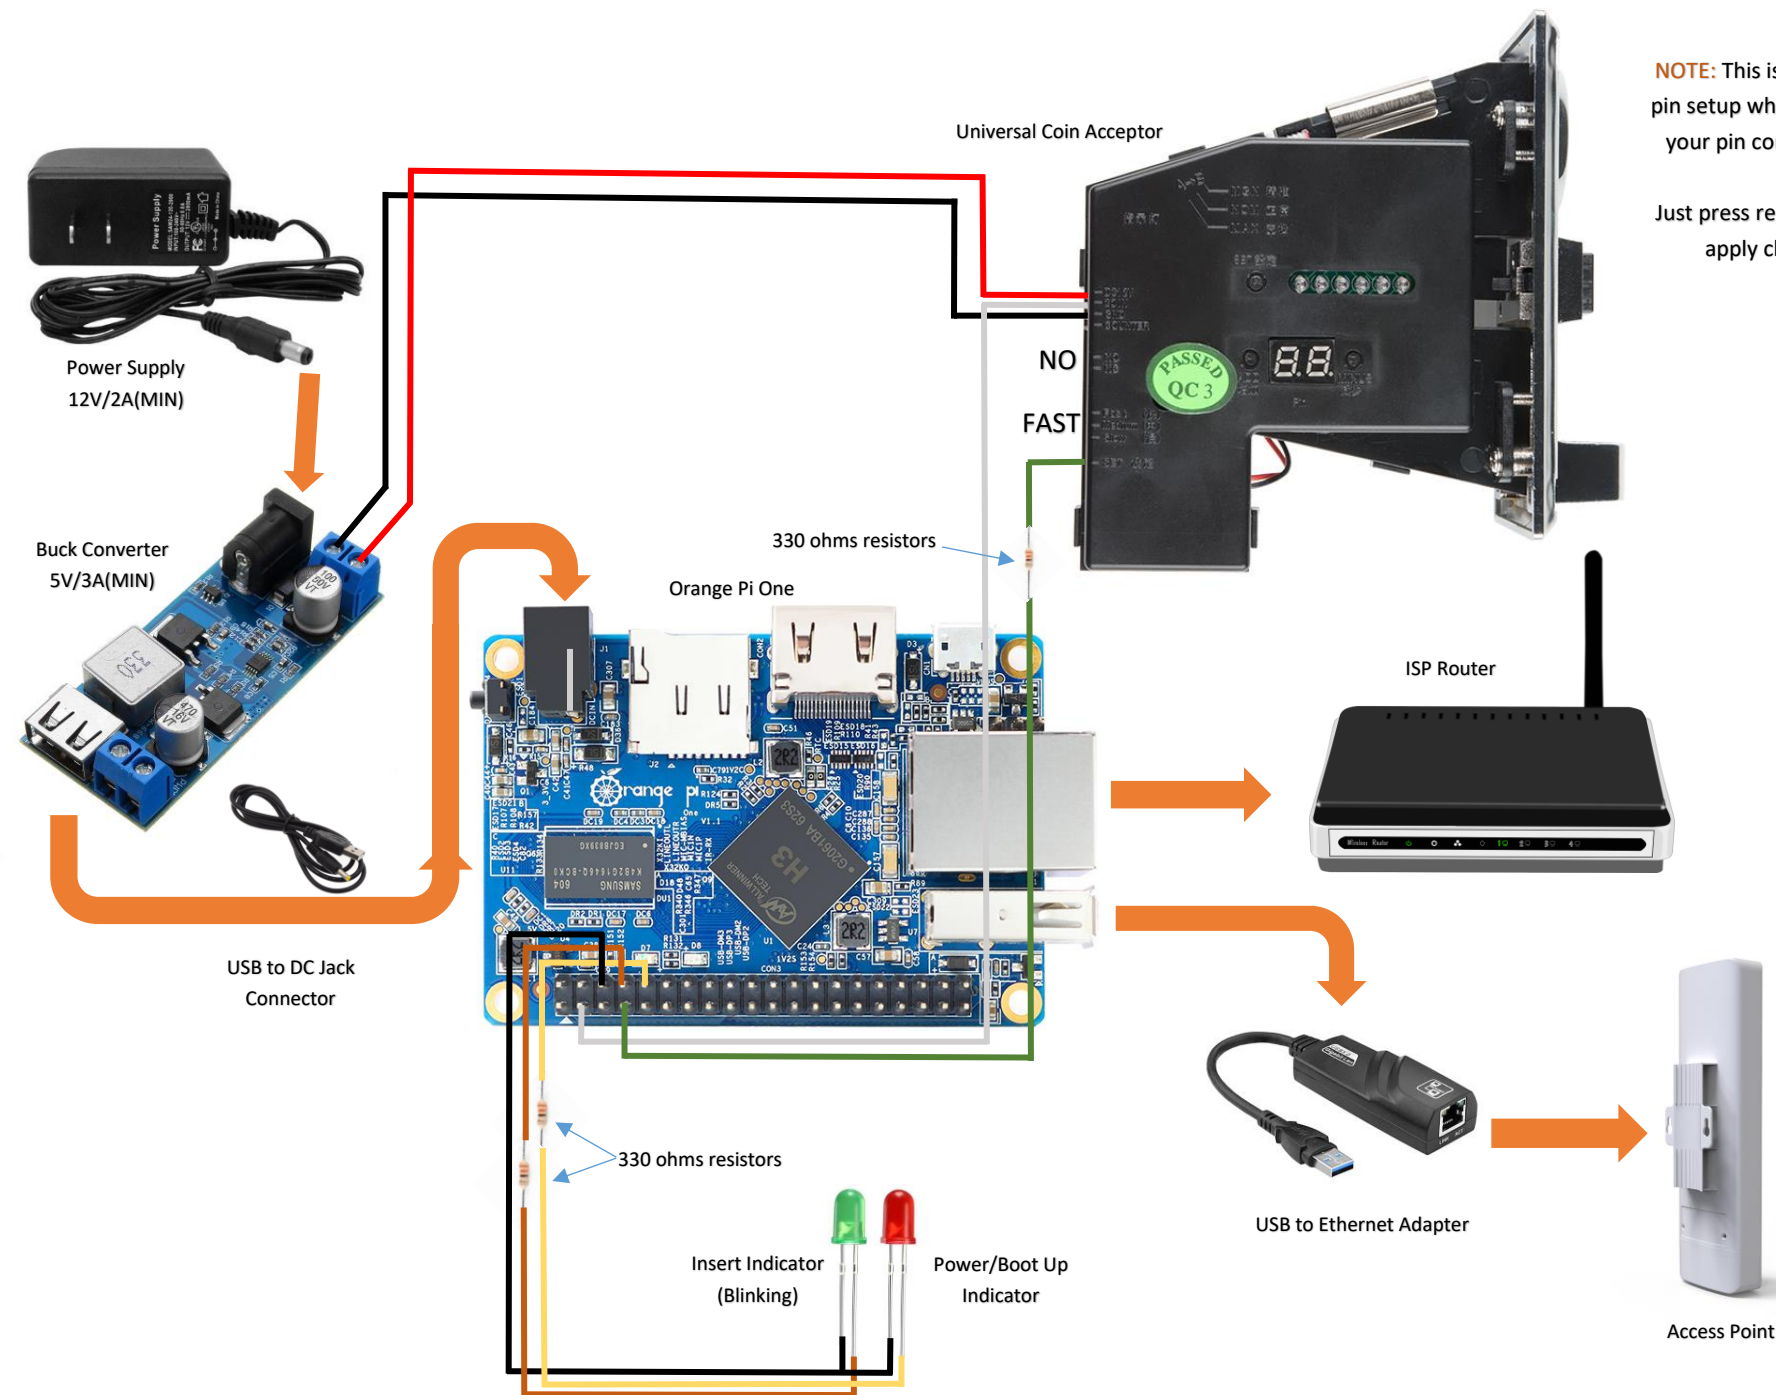

NOTE: This is the default pin setup when you reset your pin configuration

Just press reset pins and apply changes

Default Pin Configuration

NAME	GPIO PIN	
Power Indicator	15	✎
Power Switch ?	3	✎
Insert Coin Indicator	14	✎
Coinslot Enable	4	✎
Coinslot Signal	2	✎
Bill Acceptor	27	✎ Configure
Insert Coin Reset	11	✎
Peripheral Timer	22	✎

PIN DESCRIPTIONS

POWER INDICATOR – This pin not only indicates presence of power in the board but also indicates that the software has been successfully booted up.

POWER SWITCH(OPTIONAL) – This pin is an option to put a physical restart switch on your vendo. This pin will be triggered when connected to ground.

INSERT COIN INDICATOR – This pin indicates an on-going insert coin session on the portal. This pin has a pulsating output to blink an LED.

COINSLOT ENABLE – This pin is used to control (enable/disable) the coin acceptor. Output will depends on its trigger level (**active high/active low**).

COINSLOT SIGNAL – This pin reads coin acceptor pulses that is being converted into portal credits.

BILL ACCEPTOR(OPTIONAL) – This pin has the same function as the coinslot signal pin, but it has an additional configuration for custom pulse per amount.

INSERT COIN RESET(OPTIONAL) – This pin is an option for a physical switch in front of the vendo that will cancel all current / on-going insert coin session to give chance to customer who is physically at the vendo attempting to insert coin.

PERIPHERAL TIMER(OPTIONAL) – This pin is time-triggered pin whos control is in Job Schedule tab on the admin panel. This pin will be triggered / untriggered any peripheral such as lights at its schedule.