

## How to Pin an App on Samsung Tab Active3


Device: Samsung Galaxy Tab Active3

System: Android 13, One UI 5.1

App pinning keeps a single app on screen — great for preventing kids from accidentally exiting their AAC app.

### Step 0: Set up a screen lock (Required)


1. Open Settings
2. Scroll down and tap Security and privacy
3. Tap Lock screen
4. Tap Screen lock

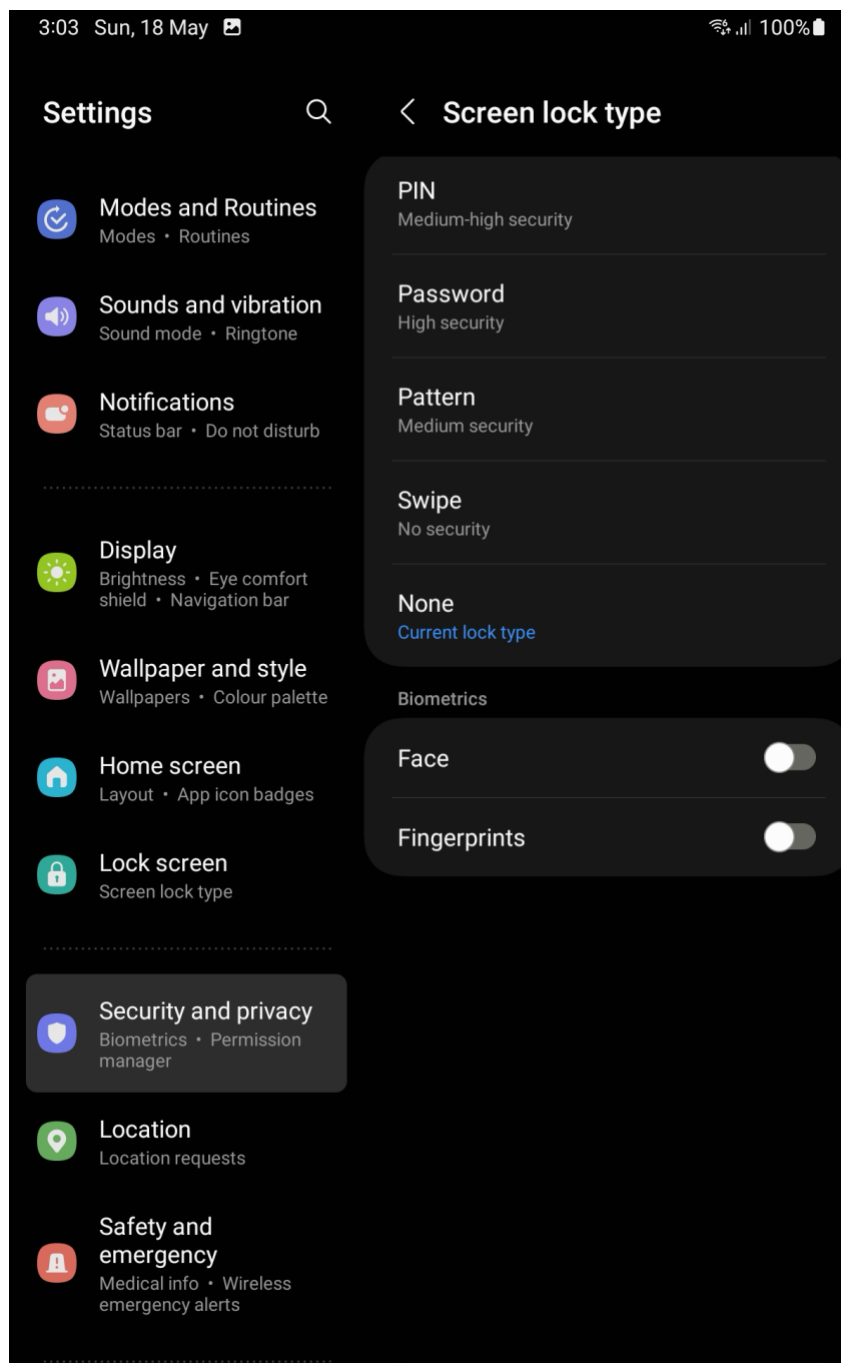

4. Choose a method: PIN, Password or Pattern.
5. Set your preferred lock code.
6. Done! Now you can enable app pinning with protection.

### Step 1: Turn On App Pinning

1. Go to Settings
2. Scroll down and tap Security and privacy
3. Scroll to the bottom and tap Other security settings
4. Scroll to the bottom and tap Pin app
5. Turn on "Pin app"
6. (Optional but recommended) Enable "Use screen lock type to unpin"

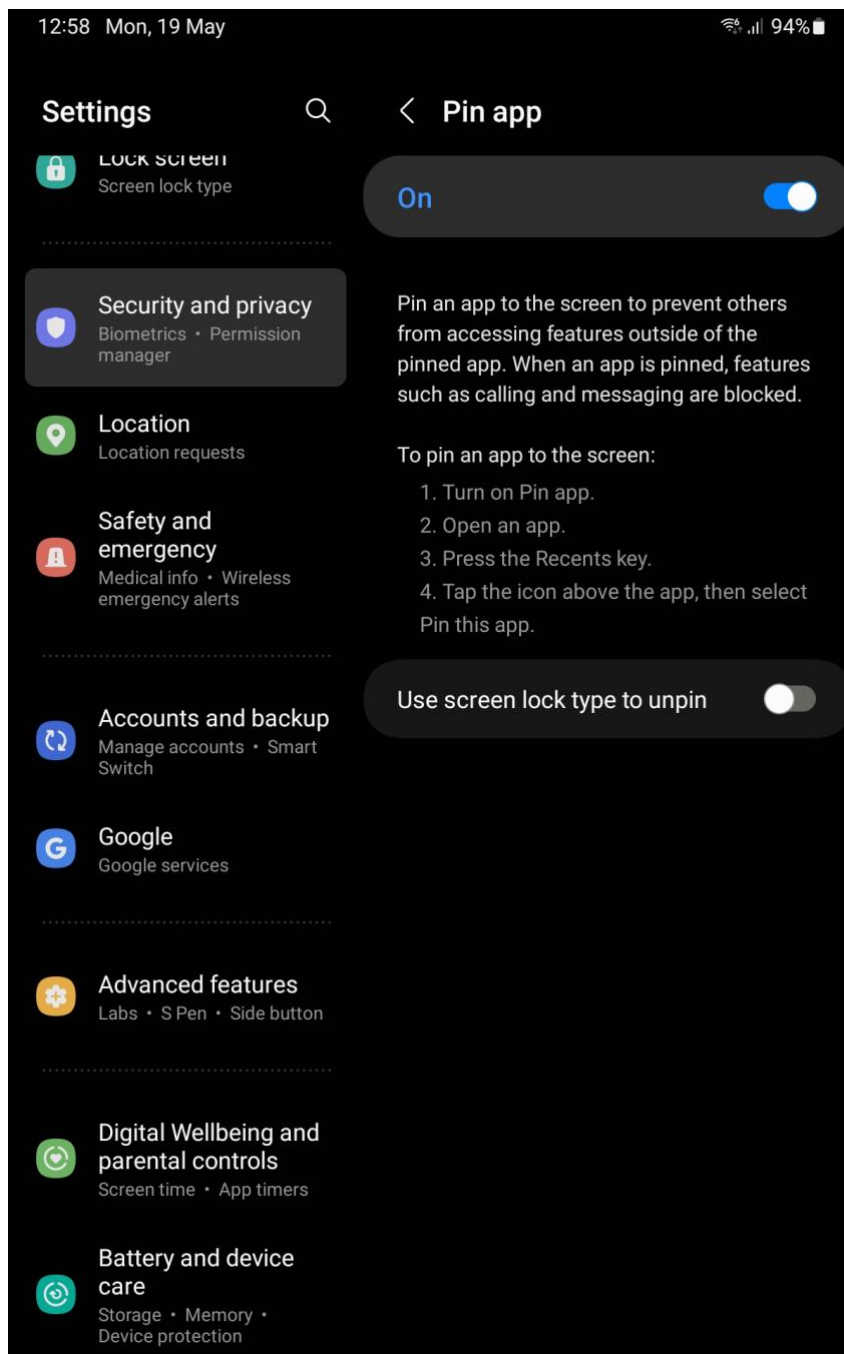


## Step 2: How to Pin an App

1. Open the AAC app you want to pin (e.g. Cboard, LetMeTalk, JABtalk)
2. Tap the Recent apps button (the three-line icon at the bottom)




3. On the app you want to pin, tap the app icon at the top of the preview

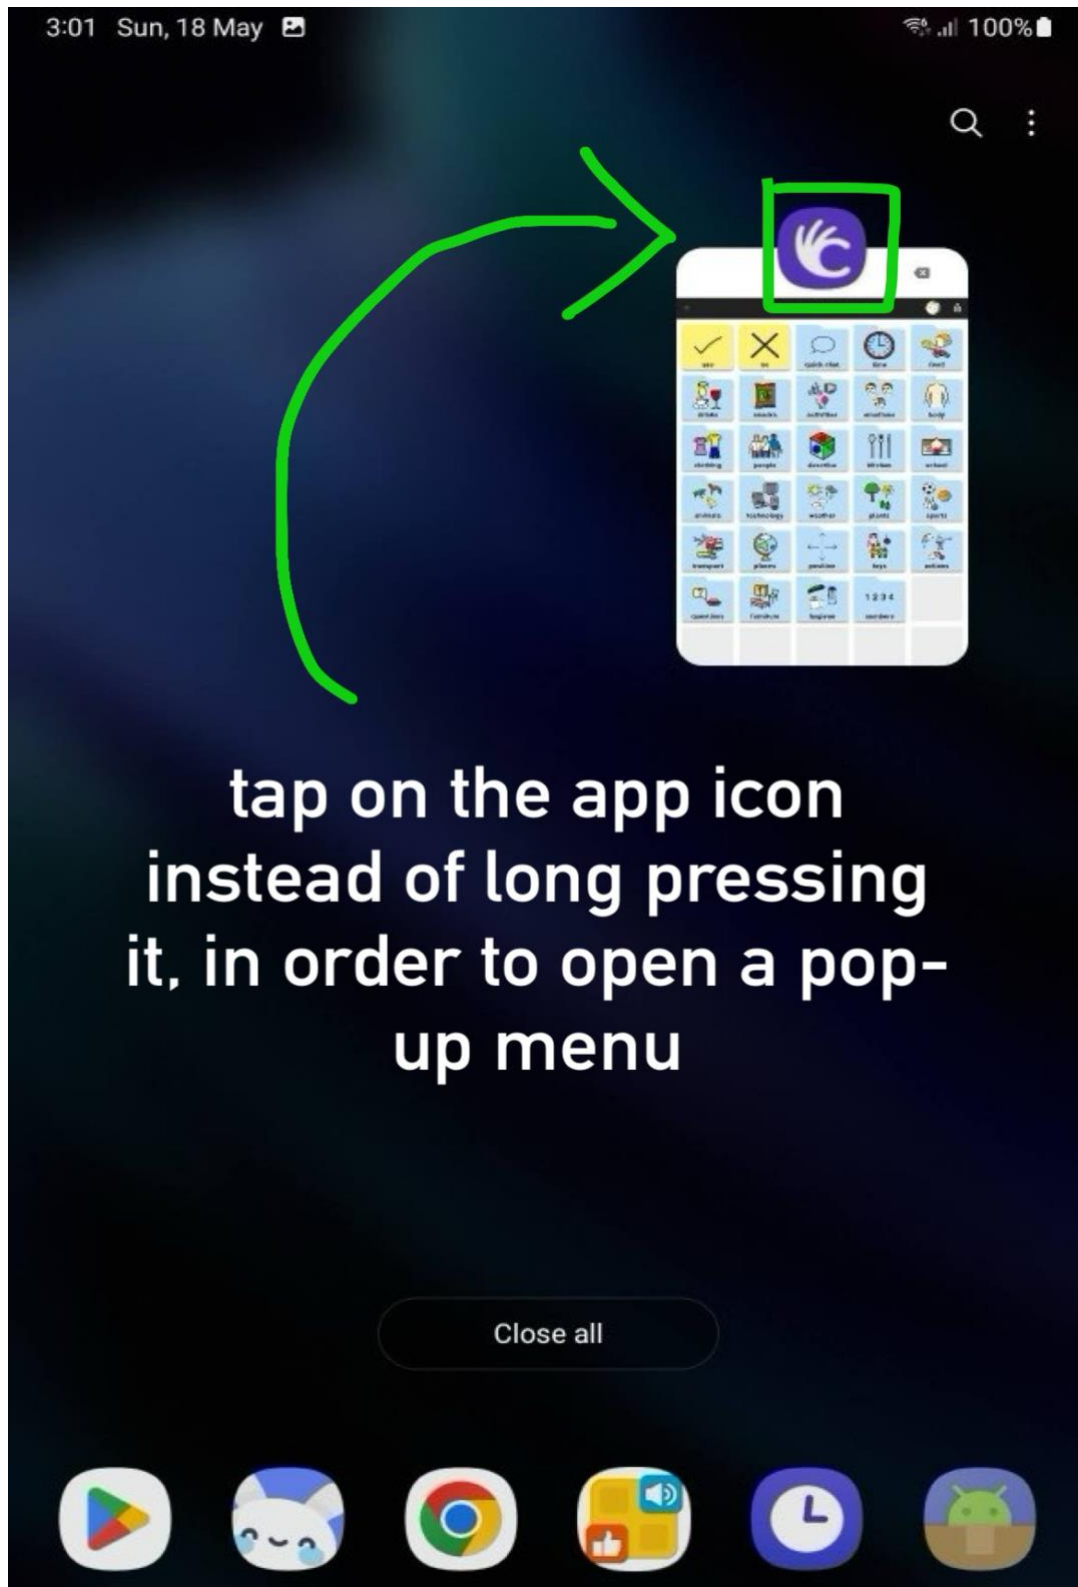

#### 4. Tap “Pin this app”

Your tablet is now locked to this app.

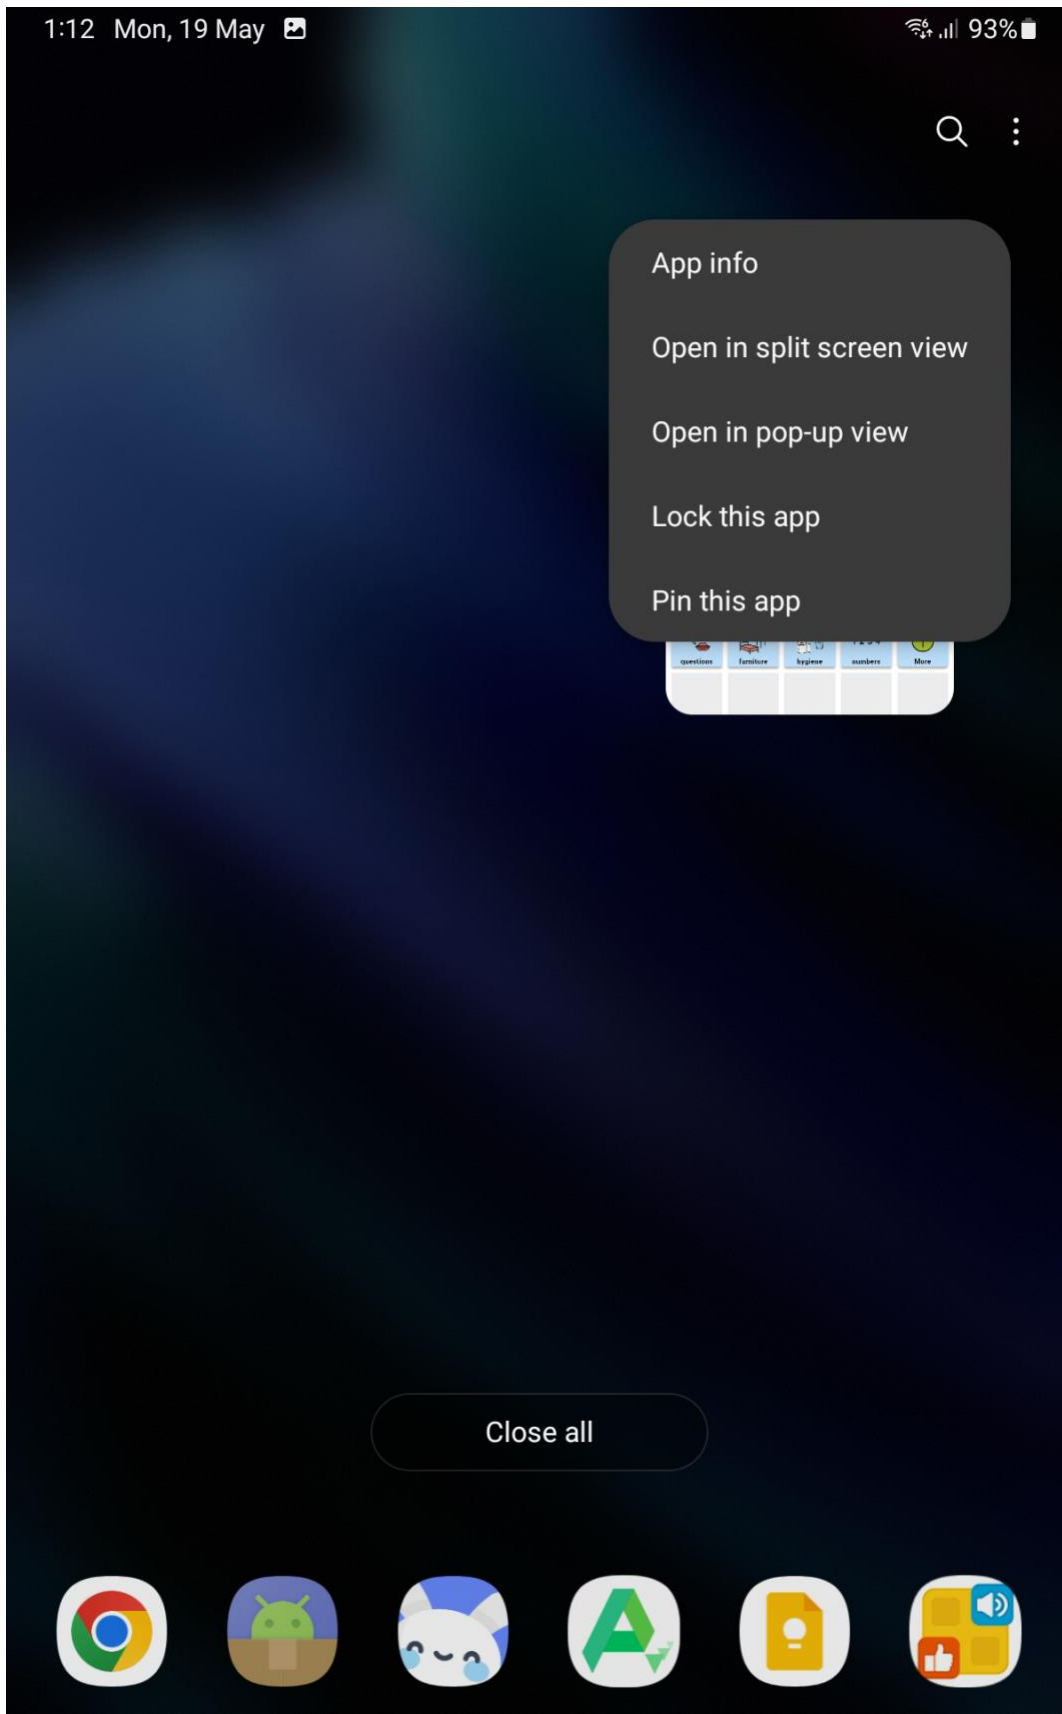

### Step 3: How to Unpin the App

1. Hold down the Back and Recent Apps buttons at the same time



2. If you enabled a PIN, you'll be asked to enter it to exit the pinned mode

### Tips

- App pinning is great for kids who are easily distracted or may accidentally exit apps.
- You can change the PIN under Settings > Security and privacy > Lock screen > Screen lock.