

HELLYER TECHNOLOGIES

Precision 16

Quick Setup Guide


Precision Control. Proven Reliability.

Model PREC-P4-16 • 16-zone irrigation controller
Applies to firmware 0.2.6 • July 2026

Before You Begin

This guide walks you through first-time, on-screen setup of your Precision 16 irrigation controller. It assumes the controller is already installed, zone valves are wired, and the unit is powered on. In about ten minutes you will connect to Wi-Fi, set the clock, create your first watering schedule, and run a quick test.

Everything is done on the controller's 7-inch touch screen. Tap to select; lists scroll with a swipe.

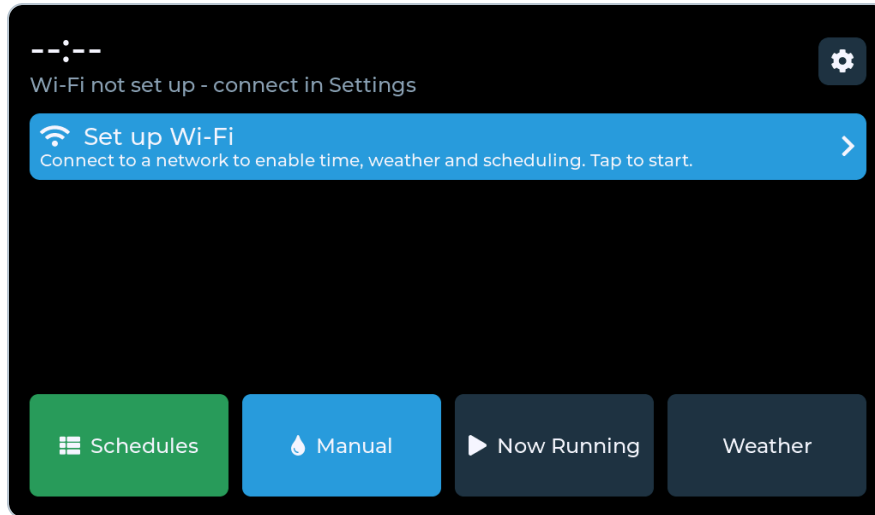


When the controller starts, it shows the **Home** screen: a large clock, today's conditions, and four buttons - **Schedules**, **Manual**, **Now Running**, and **Weather**. The gear icon opens **Settings**. Until Wi-Fi is configured, a "Set up Wi-Fi" banner appears at the top of Home - you can tap it to jump straight to step 1.

1 Connect to Wi-Fi

The controller uses your home network to set its clock and fetch local weather. Watering works without Wi-Fi, but the clock, forecast, and weather-based features need it.

1. Tap the "Set up Wi-Fi" banner on Home, or go to `Settings > Wi-Fi`.
2. Wait a moment for the network scan, then tap your network's name.
3. Enter the password with the on-screen keyboard and confirm.

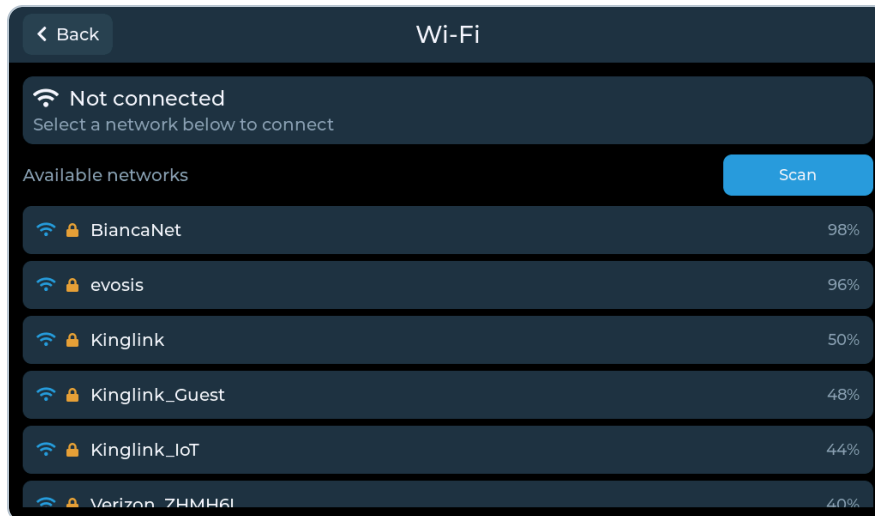


The status line at the top shows “**Connected to <your network>**” when successful. The controller remembers the network and reconnects automatically after a power loss.

2 Set Date & Time

Schedules start on the clock, so check it before creating one. Go to [Settings > Date & Time](#).

1. The clock sets itself automatically from the internet once Wi-Fi is connected - a “Synced” check mark confirms it.
2. Select your **time zone** from the list. Daylight saving time is handled automatically.

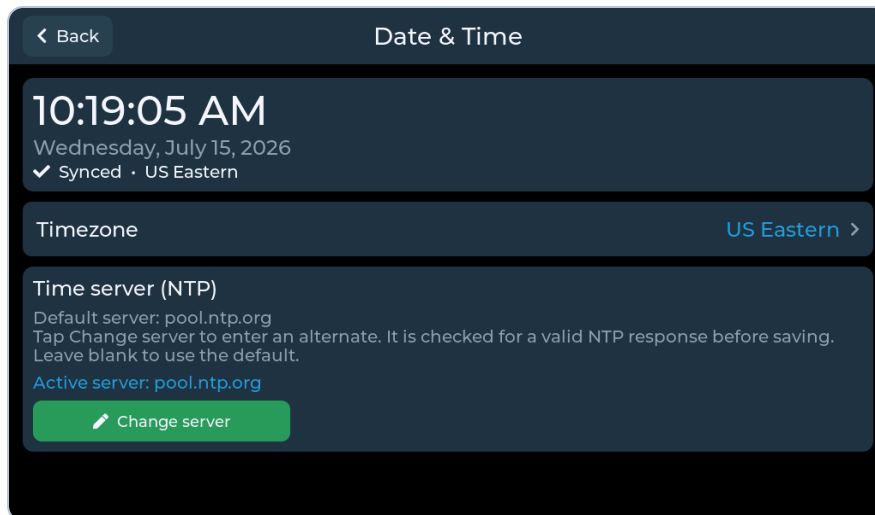

Note: The default internet time server works for almost everyone. “Change server” is only needed on networks that block standard time servers.

3 Create Your First Schedule

A schedule is a named program that waters a set of zones at a start time on the days you choose. The Precision 16 stores up to 8 schedules across its 16 zones.

1. From Home, tap **Schedules**, then **Add Schedule**.
2. **Name** - tap the name to rename it (for example, “Front Lawn”).
3. **Start time** - set the hour, minute, and AM/PM with the rollers. Early morning is best: less wind and evaporation.
4. **Days** - tap the day buttons (Sun through Sat) to choose watering days.
5. **Zones** - tap the zones row to open the zone list. Enable each zone this schedule should water and set its run time in minutes. “Apply to all” sets one run time across every enabled zone in one tap.
6. Tap **Save**. Cancel discards all edits, including zone changes.


The screenshot shows the 'New Schedule' interface. It includes a 'Schedule Name' field (Front lawn), a 'Schedule Start Time' section with rollers for hours (4, 5, 6), minutes (29, 30, 31), and AM/PM (AM), and a 'Run on days' section with buttons for Sun, Mon, Tue, Wed, Thu, Fri, and Sat. The 'Zones' section shows '5 zones on - 10-20 min' and a 'Select Zones >' button. At the bottom are 'Cancel' and 'Save' buttons.

Zones run one after another in zone order, never simultaneously - so a schedule’s total duration is the sum of its zone run times. Back on the Schedules list, the toggle on each row enables or disables that schedule; Home shows your next scheduled run under “**Next Up.**”

4 Test With Manual Watering

Verify each zone valve works before trusting the schedule to run overnight.

1. From Home, tap **Manual**.
2. Set a short run time on a zone (1-2 minutes) with the - / + steppers, then tap its **play** button.
3. The zone starts immediately. Add more zones and they queue up behind it.
4. Confirm water reaches the right part of your yard for each zone.

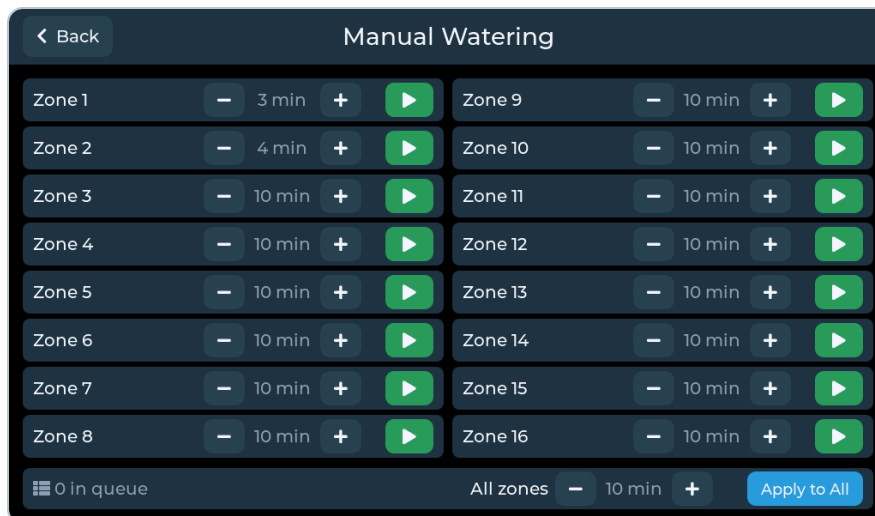


Tap **Now Running** on Home at any time to watch the active zone’s countdown, see what is queued, adjust remaining minutes, or stop zones.

5 Optional: Weather Adjustment

With Wi-Fi connected, the controller can automatically skip or shorten scheduled watering after rain, based on your local forecast and the ground’s water demand. Turn it on at

`Settings > Weather Adjustment`.

- The screen explains today’s decision (for example, “watering ran at 70% after recent rain”).
- Your location is detected from the internet connection; set a custom city or postal code if it looks wrong.
- Manual watering is never adjusted - only scheduled runs.

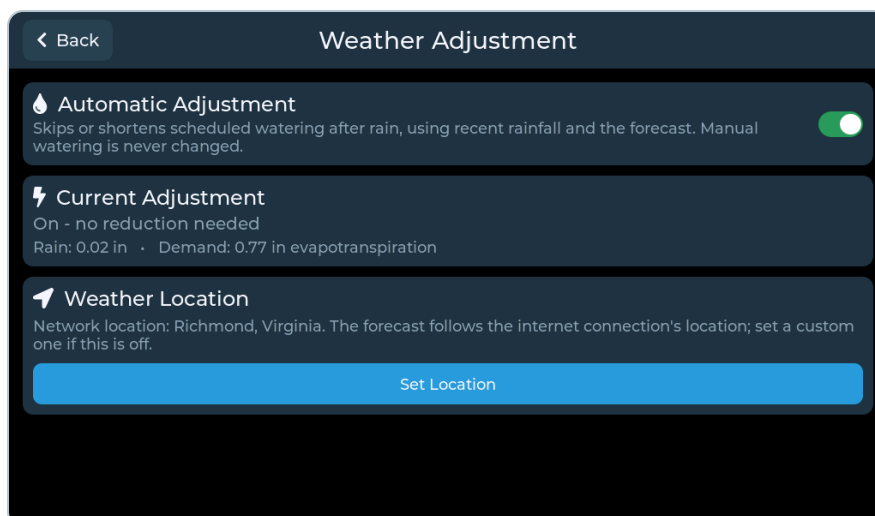

You're Done

Your Precision 16 is ready. A few extras worth knowing, all in **Settings** :

- **Display Brightness** and **Display Sleep** - the screen dims to save power when idle; touch it to wake. Watering continues while the display sleeps.
- **Standby Mode** - pauses all schedules and manual watering (for vacations or system maintenance), either indefinitely or for a set number of days and hours.
- **Zone Delay** - a pause between zones (5 seconds by default) that lets slow valves close fully and well pressure recover.
- **Firmware** - checks for and installs free feature and reliability updates over Wi-Fi.

Tip: For the full explanation of every screen and feature, see the companion *Precision 16 User Guide*.