22、Dcm Mode接口补充

卖家'漩涡遨游aa' 专属资料，非在漩涡遨游aa 购买资料，不提供答疑(一次购买仅提供有限次数10次答疑)

补充连接下面三个接口

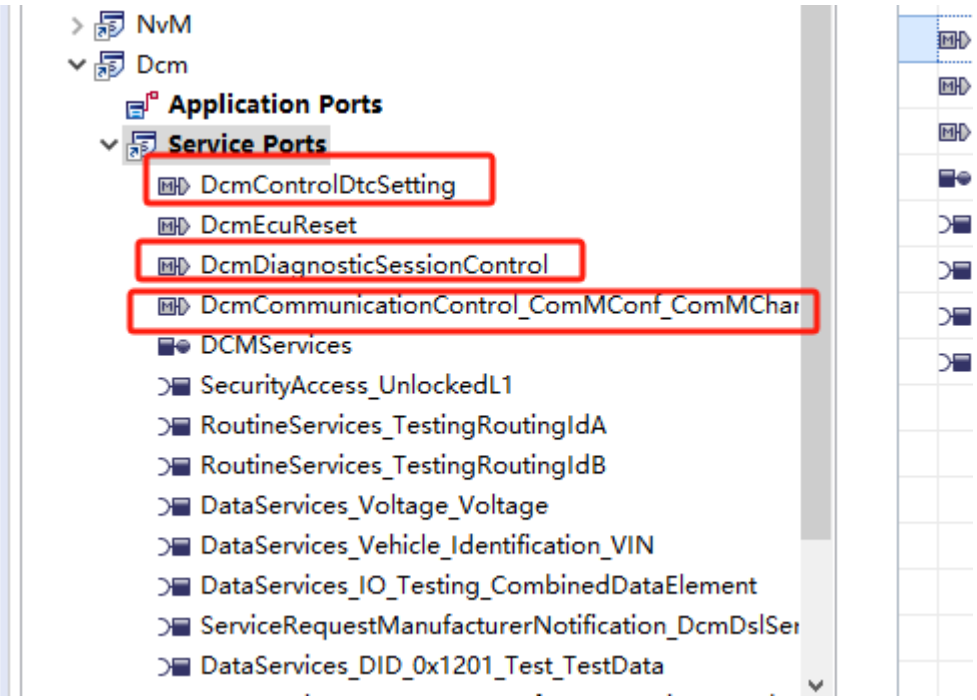

在port 右键，选择Connect to new port，然后选择CtApDiagSwc，其余两个port也是这样操作

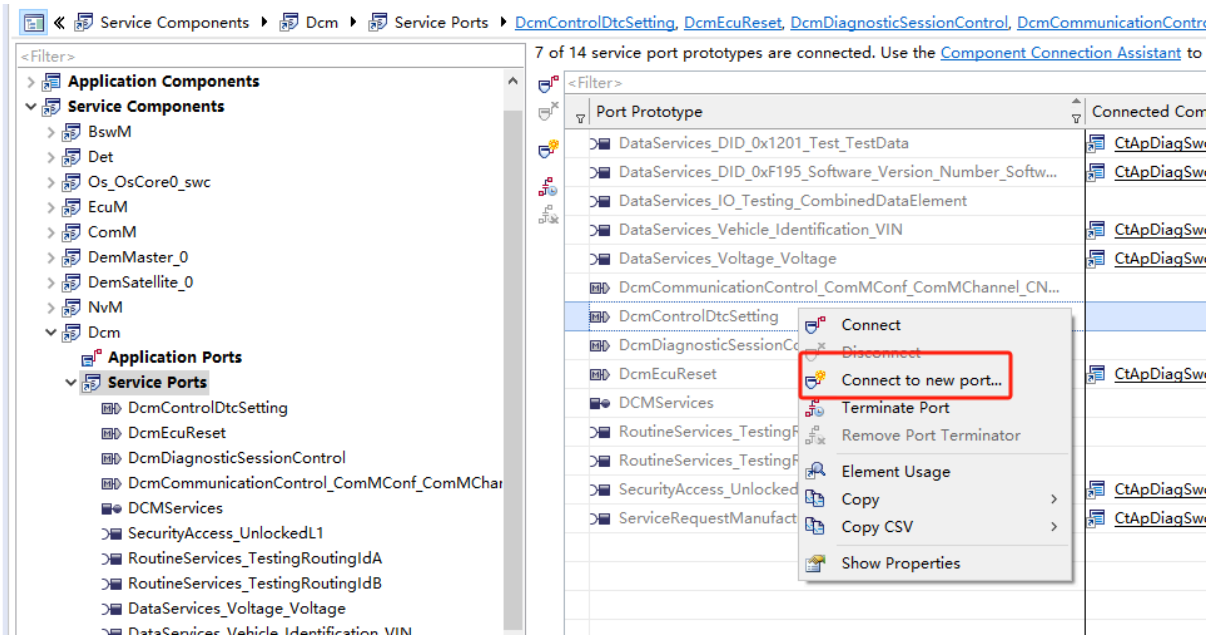

然后去developer 10ms invoke这些接口

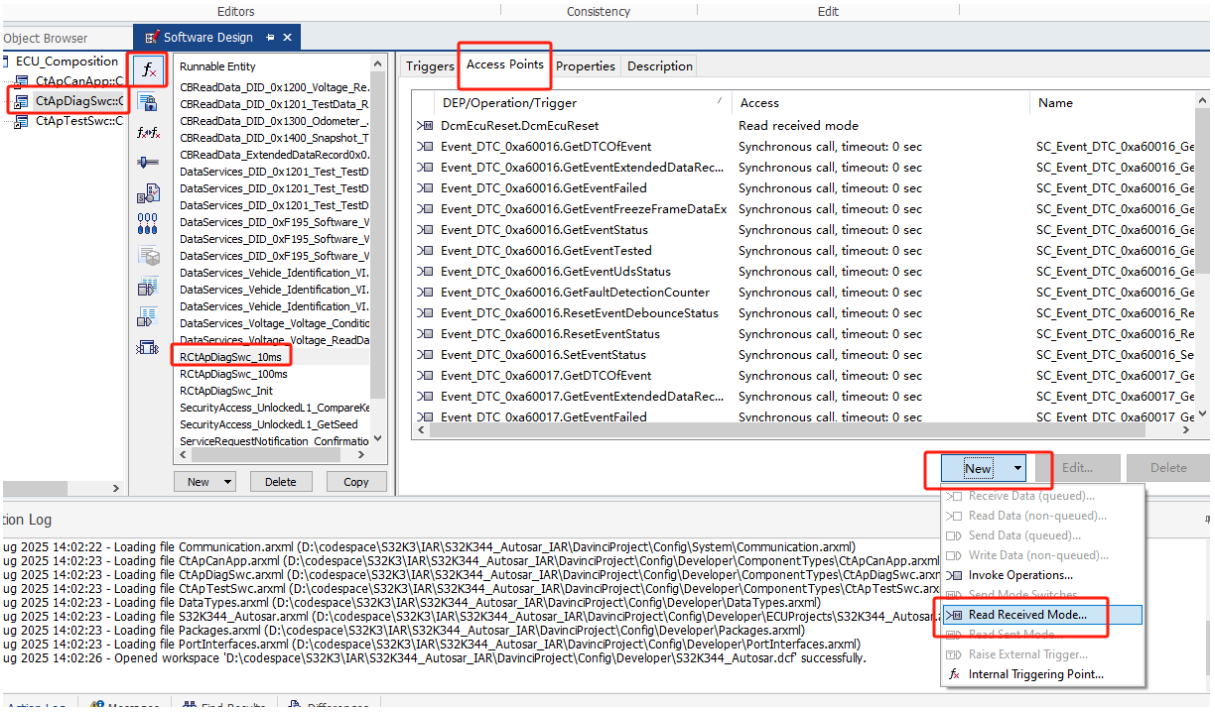

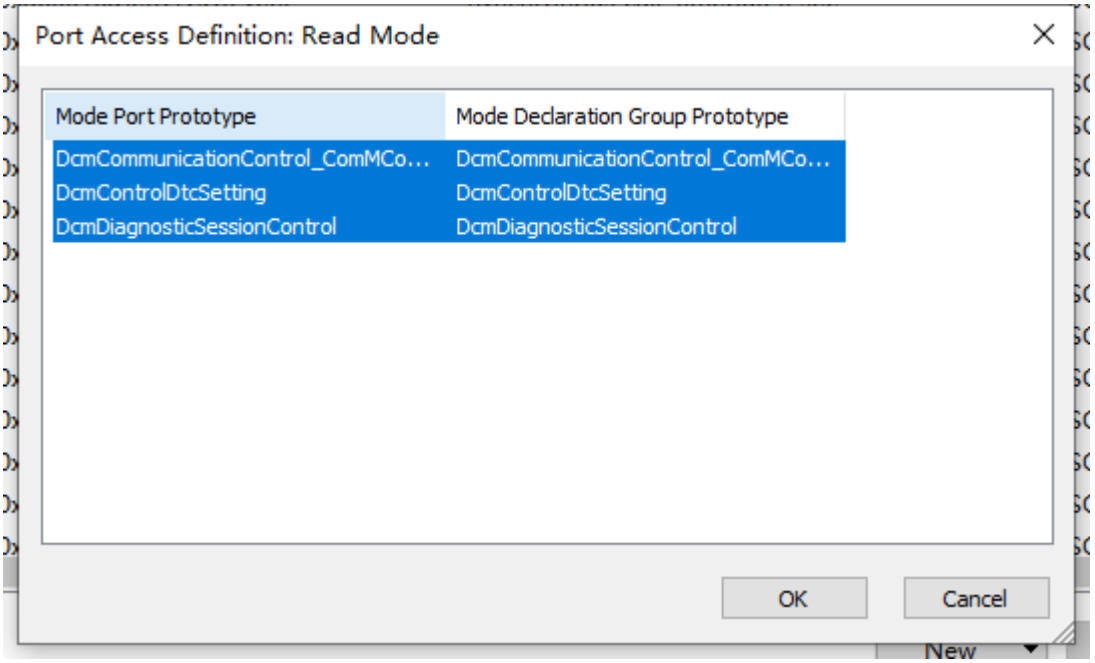

然后保存同步到cfg

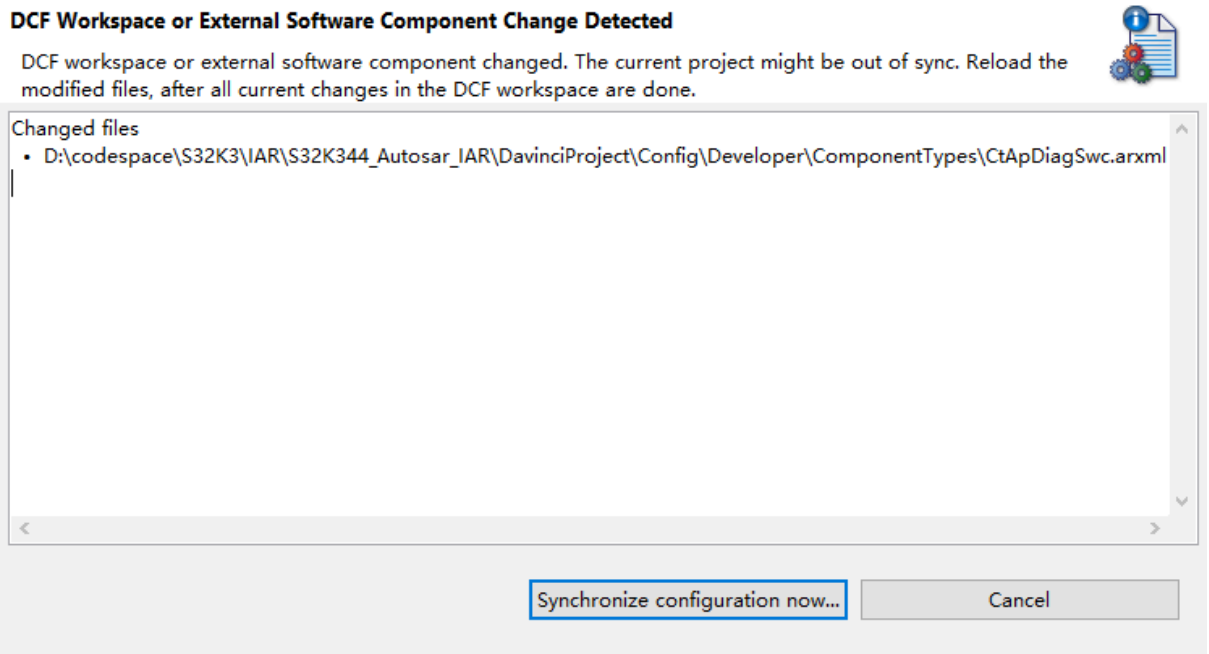

最后生成Rte/Os， 生成swc代码

新增的接口和他们对应的函数返回值

```
* Mode Interfaces:
* ----------------
*   uint8 Rte_Mode_DcmCommunicationControl_ComMConf_ComMChannel_CN_CAN00_cda9acf5_DcmCommunicationControl_ComMConf_ComMChan
*   Modes of Rte_ModeType_DcmCommunicationControl:
*   - RTE_MODE_DcmCommunicationControl_DCM_DISABLE_RX_ENABLE_TX_NM
*   - RTE_MODE_DcmCommunicationControl_DCM_DISABLE_RX_ENABLE_TX_NORM
*   - RTE_MODE_DcmCommunicationControl_DCM_DISABLE_RX_ENABLE_TX_NORM_NM
*   - RTE_MODE_DcmCommunicationControl_DCM_DISABLE_RX_TX_NM
*   - RTE_MODE_DcmCommunicationControl_DCM_DISABLE_RX_TX_NORMAL
*   - RTE_MODE_DcmCommunicationControl_DCM_DISABLE_RX_TX_NORM_NM
*   - RTE_MODE_DcmCommunicationControl_DCM_ENABLE_RX_DISABLE_TX_NM
*   - RTE_MODE_DcmCommunicationControl_DCM_ENABLE_RX_DISABLE_TX_NORM
*   - RTE_MODE_DcmCommunicationControl_DCM_ENABLE_RX_DISABLE_TX_NORM_NM
*   - RTE_MODE_DcmCommunicationControl_DCM_ENABLE_RX_TX_NM
*   - RTE_MODE_DcmCommunicationControl_DCM_ENABLE_RX_TX_NORM
*   - RTE_MODE_DcmCommunicationControl_DCM_ENABLE_RX_TX_NORM_NM
*   - RTE_TRANSITION_DcmCommunicationControl
*   uint8 Rte_Mode_DcmControlDtcSetting_DcmControlDtcSetting(void)
*   Modes of Rte_ModeType_DcmControlDtcSetting:
*   - RTE_MODE_DcmControlDtcSetting_DISABLEDTCSETTING
*   - RTE_MODE_DcmControlDtcSetting_ENABLEDTCSETTING
*   - RTE_TRANSITION_DcmControlDtcSetting
*   uint8 Rte_Mode_DcmDiagnosticSessionControl_DcmDiagnosticSessionControl(void)
*   Modes of Rte_ModeType_DcmDiagnosticSessionControl:
*   - RTE_MODE_DcmDiagnosticSessionControl_DEFAULT_SESSION
*   - RTE_MODE_DcmDiagnosticSessionControl_EXTENDED_SESSION
*   - RTE_MODE_DcmDiagnosticSessionControl_PROGRAMMING_SESSION
*   - RTE_TRANSITION_DcmDiagnosticSessionControl
*   uint8 Rte_Mode_DcmEcuReset_DcmEcuReset(void)
```

我们添加代码打印测试，切换到03会话，最后一个参数从1变成3
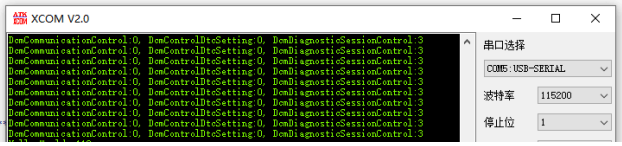
```
/**********************************************************************************************************
 * DO NOT CHANGE THIS COMMENT!          << End of documentation area >>                DO NOT CHANGE THIS COMMENT!
 **********************************************************************************************************/

FUNC(void, CtApDiagSwc_CODE) RCtApDiagSwc_100ms(void) /* PRQA S 0624, 3206 */ /* MD_Rte_0624, MD_Rte_3206 */
{
/**********************************************************************************************************
 * DO NOT CHANGE THIS COMMENT!          << Start of runnable implementation >>          DO NOT CHANGE THIS COMMENT!
 * Symbol: RCtApDiagSwc_100ms
 **********************************************************************************************************/
  printf("DcmCommunicationControl:%d, DcmControlDtcSetting:%d, DcmDiagnosticSessionControl:%d\r\n",Rte_Mode_DcmCommunicationControl_ComMConf_ComMChannel_CN_CAN00_cda9acf5_DcmCommunicationControl
          Rte_Mode_DcmControlDtcSetting_DcmControlDtcSetting(), Rte_Mode_DcmDiagnosticSessionControl_DcmDiagnosticSessionControl());
#if 0  //aging threthrod test
  static uint16 u16TempCnt = 0;
  if(u16TempCnt == 100){
    Rte_Call_OpCycle_PowerCycle_SetOperationCycleState(DEM_CYCLE_STATE_END);
  }
  else if(u16TempCnt == 150){
    Rte_Call_OpCycle_PowerCycle_SetOperationCycleState(DEM_CYCLE_STATE_START);
    u16TempCnt = 0;
  }
  u16TempCnt++;
#endif
/**********************************************************************************************************
 * DO NOT CHANGE THIS COMMENT!          << End of runnable implementation >>
```