photobooth4u OFFICIAL GUIDE

SELF-SERVICE & POP-UP PHOTOBOOTHS

Receipt Photobooth & *Unmanned Kiosk* Guide

Complete technical manual for setting up low-cost vintage thermal receipt printing, single-port Samsung Android tablets, DSLR cameras, and 100% automated PayMongo QR Ph customer payments.

SAMSUNG GALAXY TAB SETUP | PAYMONGO QR PH AUTOMATION | 58MM & 80MM THERMAL PRINTERS | CANON / NIKON / SONY DSLR USB

Why Operators Love the Receipt Photobooth Model

The receipt photobooth combines trendy Korean/Japanese vintage monochrome aesthetic with near-zero operating costs. Ideal for unmanned mall pop-ups, cafes, school fairs, and events.

₱0.40	2.5s	100%	₱50–₱100
COST PER PRINT	PRINT & CUT SPEED	ZERO OPERATOR / AUTO	AVG GUEST FEE (85%+ MARGIN)

CONTENTS OF THIS SETUP GUIDE

01 Single-Port Samsung Tablet Hardware Wiring Page 2

02 USB-C Powered Hub & Continuous Power Delivery Page 2

03 Connecting DSLR Cameras & Camera Settings Page 3

04 Thermal Receipt Printer Setup (Bluetooth & USB) Page 3

05 PayMongo QR Ph Setup & Automatic Push-Through Page 4

06 Step-by-Step Guest Automation Journey Page 4

07 Samsung Tablet Kiosk Lock & Tamper-Proofing Page 5

08 Emergency Offline Cash & Voucher Fallback Page 5


09 Event Day Checklist & Troubleshooting Guide Page 6

10 Operator Support & Recommended Gear Links Page 6

PART 01 · HARDWARE ARCHITECTURE

Single-Port Samsung Tablet Wiring

Samsung Galaxy Tablets (Tab A9, A9+, S6 Lite, S7/S8/S9) only have **one USB-C port**. Here is how you keep the tablet continuously charged while simultaneously connecting a DSLR camera and receipt printer.

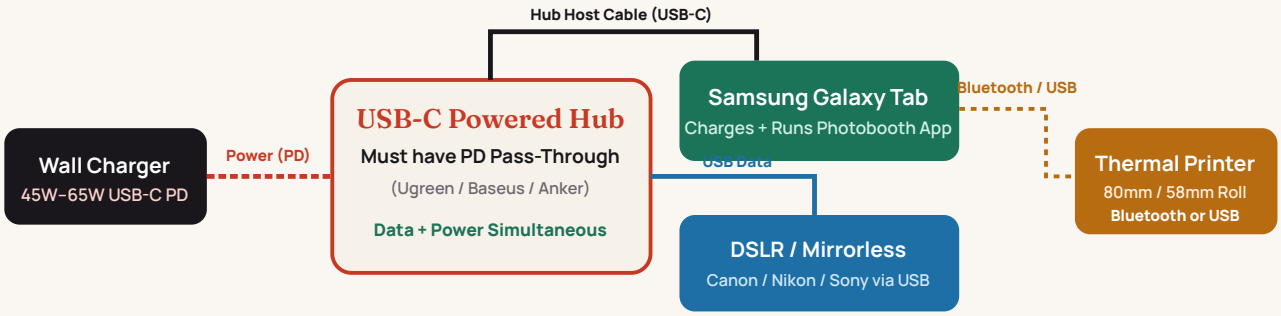

CRUCIAL COMPONENT

1. The USB-C Powered Hub with PD

Do NOT buy an ordinary passive OTG dongle (the small ₱150 adapter with 1 USB port). An ordinary OTG cable blocks charging—your tablet battery will drop to 0% after 2 to 3 hours of live booth operation.

Must-Have Specifications:

- **USB-C Power Delivery (PD) In:** Must support **60W or 100W PD input**. You plug the wall charger directly into this port.
- **USB 3.0 Type-A Ports (at least 2):** One connects to your DSLR camera cable; the second can connect a USB receipt printer or USB flash drive.
- **Proven Brands:** Ugreen 5-in-1 / 6-in-1, Baseus Metal Glam, Anker 332 USB-C Hub.

POWER & CABLES

2. Wall Charger & Power Requirements

A standard 10W or 15W phone charger is too weak. The hub itself consumes 5W–10W, leaving too little wattage for the Samsung tablet.

Recommended Power Setup:

- **Charger:** Use a **45W or 65W GaN USB-C PD Charger** (e.g. Samsung 45W Super Fast Charger, Ugreen 65W GaN, or Baseus 65W).
- **Cable:** 100W E-Marker USB-C to USB-C cable (minimum 2 meters) to reach the venue wall socket safely.
- **Result:** The tablet maintains **100% battery all day** even with the screen at max brightness and DSLR live view active!

💡 **PAALALA SA SAMSUNG TABLET USB CONNECTIONS (SAGOT SA TANONG NG KLIYENTE)**

Dahil iisa lang ang USB-C port ng Samsung tablet, **USB-C Hub na may "Power Delivery (PD)" port ang solusyon**. Isaksak ang 45W/65W charger sa PD port ng Hub, ang DSLR camera sa USB-A port ng Hub, at ang thermal receipt printer naman ay ikonekta via **Bluetooth (wireless)** para walang kalat na kable sa booth!

DYE-SUB PHOTO PRINTERS VS. THERMAL RECEIPT PRINTERS

Thermal Receipt Printers (XP-80C, TM-T82X, Rongta): Work 100% natively on Android tablets via Bluetooth or USB. Zero computer needed!

Dye-Sub Printers (DNP DS620, HiTi P525L, Citizen): Dye-sub photo printers require Windows/Mac raster drivers. If you want to use dye-sub prints alongside a tablet, run our **Laptop Print Station** over Wi-Fi (the tablet sends the photo wirelessly to the laptop print queue). For receipt booths, a thermal printer is direct and laptop-free.

Camera & Thermal Printer Setup

How to configure your camera for crisp shots and calibrate your thermal receipt printer for sharp, high-contrast black & white photo strips with zero ink.

CAMERA OPTIONS

Connecting Your DSLR / Mirrorless

The Android photobooth4u app features a built-in USB PTP camera driver that connects directly to Canon, Nikon, and Sony cameras.

1. **Connect USB Cable**
   Plug the camera USB cable into the USB-C Hub. Turn the camera ON. Android will show a prompt: *"Open photobooth4u to access camera?"* → Tap **Always Allow / OK**.

2. **Set Camera Settings**
   Canon EOS: Mode dial to **P, Av, Tv, or M**. Enable "Live View shoot". Set Auto Power Off to "Disable". Quality: **JPEG (Fine/Normal)**.
   Sony Alpha: Menu → USB Connection → **PC Remote**. USB LUN Setting: Multi.
   Nikon: USB mode to **PTP / MTP**. Mode dial to M or Auto.

3. **Select in App**
   In photobooth4u, open **Setup → Session → Camera** and select *"DSLR / Mirrorless over USB cable"*. The live preview will appear on the tablet screen instantly.

BUDGET OPTION: TABLET FRONT CAMERA

You don't even need a DSLR! The Samsung Tab front-facing camera with our built-in **Screen Flash** feature creates a clean, authentic retro selfie experience with zero extra cables.

RECEIPT HARDWARE

Thermal Printer Integration

Thermal printers use heat-sensitive paper roll—no ink, ribbons, or cartridges. They are immune to smudging and print in under 3 seconds.

SPEC	80MM ROLL (RECOMMENDED)	58MM ROLL
Paper Width	3.12 inches (wider photos)	2.28 inches (pocket size)
Cutter	Automatic motorized cut	Manual tear-off bar
Popular Models	Xprinter XP-80C / XP-N160II, Epson TM-T82X, Rongta RP326	Xprinter XP-58, GOOJPRT POS-5802, Milestone
Connection	Bluetooth or USB	Bluetooth or USB

PAIRING VIA BLUETOOTH ON ANDROID:

1. **Pair in Android Settings**
   Turn printer ON. Android **Settings → Connected devices → Bluetooth → Pair new device**. Tap your printer name (e.g. `XP-80C`, `POS-80`). PIN is usually `0000` or `1234`.

2. **Select in photobooth4u**
   Go to **Print Settings → Receipt 80mm (or 58mm)**. Toggle **Bluetooth thermal receipt printer → Connect**.


3. **Halftone & Dithering**
   photobooth4u automatically applies Floyd-Steinberg dithering so portraits and QR codes print sharp without blurry grey blocks.

📌 TIP SA THERMAL PAPER ROLL

Bumili ng **"BPA-Free High Density Thermal Paper"** sa Shopee/Lazada (karaniwang ₱25–₱35 per roll ng 80x80mm). Ang isang roll ay nakakapag-print ng mahigit **150 hanggang 200 photo strips**! Ibig sabihin, wala pang **₱0.40** ang puhunan mo bawat print ng bisita.

PayMongo QR Ph Automatic Flow

The core question operators ask: **"Automatic po ba? Once paid na si client ay mag push thru na si receipt photobooth?" → YES! It is 100% automated.** The kiosk detects payment in under 2 seconds and starts the session without touching anything.

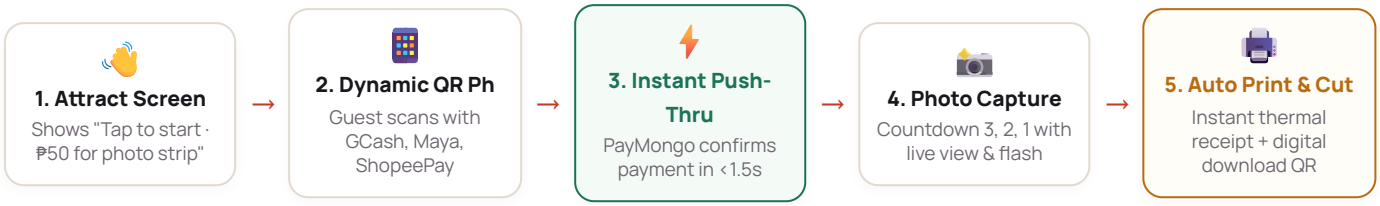

STEP-BY-STEP SETUP

Connecting Your PayMongo Account in photobooth4u

1 Get Your PayMongo API Keys

Log in to your **PayMongo Dashboard** (`paymongo.com`). In the left sidebar, navigate to **Developers → API Keys**. Copy your **Public Key** (starts with `pk_live_...`).

2 Paste Key into photobooth4u

In the booth, open **Setup → 7 Session → Guest Payment**. Toggle **"Enable Pay with QR Ph (PayMongo)"** to ON. Paste your Public Key into the API Key field.

3 Set Session Price & Included Prints

Enter your desired price (e.g., `50` for ₱50.00). Specify how many printed receipt strips are included per session (usually 1 or 2 strips). Tap **Save**.

4 Enable Auto-Start & Auto-Print

Under Session settings, turn ON **"Automatic start upon payment confirmation"** and in Printer settings turn ON **"Print automatically after each session"**.

PAYMONGO PERKS

Direct Bank Payouts

With PayMongo, all customer payments go straight into your registered Philippine bank account (BDO, BPI, UnionBank, Metrobank) or GCash/Maya business account on PayMongo's standard weekly payout schedule.

COMPATIBLE E-WALLETS:

- **GCash** (Scan QR)
- **Maya** (Scan QR)
- **ShopeePay**
- **GrabPay**
- **All BDO, BPI, UnionBank** QR Ph mobile apps

ZERO CARD READER NEEDED

No bulky POS terminals or expensive merchant card readers. The tablet screen displays the QR Ph code dynamically for every customer!

SAGOT SA KLIYENTE: AUTOMATIC PO BA ANG PUSH THROUGH?

Opo, 100% Automatic! Pagka-scan at pagka-bayad ng customer sa kanyang GCash o Maya app, magpapadala agad ang PayMongo ng webhook signal sa tablet sa loob ng 1 hanggang 2 segundo. Tutunog ang kiosk ng *"Payment Received!"*, kusang magsisimula ang countdown 3-2-1, kukuha ng litrato, at kusang magpi-print ang resibo nang hindi na kailangan pindutin ng operator. Pwedeng iwanan ang booth na unattended sa mga cafe o events!

Tablet Lockdown & Offline Vouchers

How to lock down the Samsung tablet so guests cannot tamper with settings, and how to accept cash payments seamlessly using offline voucher tickets if venue internet fails.

TAMPER-PROOF KIOSK

Locking the Samsung Tablet

In an unattended or self-service receipt booth, guests and curious kids might swipe to exit or change settings. Use this two-layer lock:

1. **photobooth4u PIN Lock**
   Go to **Setup → 7 Session → Lock Booth**. Set a secret 4-digit PIN (e.g. `2468`). The Setup button disappears, leaving only the guest interface. To re-enter Setup, tap the secret lock icon in the upper right corner and enter your PIN.

2. **Android App Pinning (Kiosk Mode)**
   On the Samsung tablet, open **Settings → Security and privacy → More security settings → App Pinning → ON**. Check *"Ask for PIN before unpinning"*.
   Open photobooth4u → tap Recent Apps → tap the photobooth4u circular icon → tap **Pin this app**.
   The Home, Back, and Notification bars are completely disabled!

3. **Keep Screen Awake While Charging**
   Settings → About tablet → tap "Build number" 7 times to unlock Developer options. Go to **Settings → Developer options → Stay awake** (Screen will never sleep while charging). Kiosk stays awake 24/7.

EMERGENCY FALLBACK

Offline Cash & Voucher Tickets

If venue Wi-Fi drops or mobile cellular signal in a basement mall is dead, PayMongo QR cannot generate. photobooth4u includes a **100% Offline Voucher Engine** as an emergency backup.

1. **Generate Vouchers in Advance**
   In **Setup → 7 Session → Guest payment**, tap **Generate Voucher Codes** (e.g. 50 or 100 codes). Each code is an 8-digit unique token (e.g. `4821 9302`).

2. **Print Voucher Tickets Sheet**
   Tap **Print tickets** (or open `/pay/tickets.html`). It prints an A4 sheet with 10 perforated ticket slips with event name, price, and code ready to cut.

3. **Cash Transaction at Counter**
   Guests pay cash (₱50 or ₱100) to the cafe barista or event coordinator → they hand the guest a physical voucher ticket.

4. **Guest Redeems on Tablet**
   Guest taps the kiosk screen → taps **"I have a voucher"** → enters their 8-digit code. The booth validates locally without internet and triggers the session immediately!

SINGLE-USE PROTECTION

Each voucher code expires immediately after one use. It cannot be shared or reused by other guests.

ZERO INTERNET REQUIRED

The voucher database is stored securely in the tablet's local storage. Works even in airplane mode.

MIXED PAYMENT ALLOWED

You can have BOTH PayMongo QR and Voucher mode active at the same time on the welcome screen.

> 💡 **PRO-TIP PARA SA UNMANNED BOOTHS**
> Kung ilalagay mo ang booth sa isang cafe o milk tea shop, pwede kang makipag-partner sa may-ari: ibigay ang voucher tickets sa kanilang kahera. Sila ang tatanggap ng cash sa POS nila, at maghahati kayo sa kita bawat buwan (revenue share)!

Event Checklist & Troubleshooting

Keep this quick reference guide handy during setup and live hours to instantly diagnose and resolve common hardware, payment, or printing issues.

ISSUE / SYMPTOM	PROBABLE CAUSE	IMMEDIATE FIX
Tablet battery draining while plugged into hub	Charger wattage is too low, or non-PD USB-C hub being used.	Upgrade wall charger to at least **45W or 65W GaN USB-C PD**. Verify hub has a dedicated PD-IN port. Do not use 10W phone bricks.
DSLR camera turns off after a few minutes	Camera power saving / Auto Power Off timeout engaged.	In DSLR settings, set **Auto Power Off → Disable / Off**. Use a dummy AC battery coupler for all-day continuous power.
Thermal printout is too faint or blurry	Low print head density or low-quality thin paper roll.	In photobooth4u Print Settings, increase **Thermal Contrast / Darkness**. Always use premium high-density BPA-free thermal rolls.
PayMongo QR Ph code does not generate	Internet disconnected or incorrect Public Key entered.	Check Wi-Fi / hotspot connection. Re-check API key starts with `pk_live_`. Fallback to **Voucher Mode** immediately.
Receipt printer prints blank paper	Thermal paper roll installed upside-down.	Thermal paper is single-sided heat-sensitive. Flip the roll over so the smooth coated side feeds toward the thermal print head.
Bluetooth printer disconnects intermittently	Tablet Bluetooth power optimization or interference.	Turn tablet Bluetooth off and on. In Android Battery settings, set photobooth4u to **"Unrestricted"** battery usage.
Guests accidentally exit the app	App Pinning or Kiosk PIN Lock not activated.	Activate **Lock Booth PIN** in Setup, and enable Android **App Pinning** from Recent Apps screen (see Page 5).

10-POINT PRE-EVENT OPERATOR CHECKLIST

- **USB-C Hub:** 45W+ charger plugged into PD port; tablet shows "Fast Charging".
- **DSLR Camera:** Mode dial set to P/M; Auto Power Off disabled; lens focus locked.
- **Thermal Printer:** Paper roll loaded correctly; test print executed and cut.
- **Spare Paper:** At least 3 extra rolls of 80mm thermal paper stored in booth enclosure.
- **PayMongo Active:** Test ₱1 live transaction performed; payout account confirmed.
- **Offline Backup:** 50 printed voucher ticket slips packed in event toolbox.
- **Screen Clean:** Tablet screen wiped with microfiber cloth; camera lens clean.
- **Kiosk Lockdown:** App pinned in Android; photobooth4u PIN lock active.
- **Audio & Countdown:** Tablet volume set to 100% for voice prompts and beeps.
- **Emergency Hotspot:** Pocket Wi-Fi or phone hotspot ready as backup data source.

Need Operator Assistance or Custom Branding?

Reach out to our engineering support team directly on Facebook Messenger.

m.me/roktetnachi