
photobooth 4u

Your booth, *ready* for any event.

The step-by-step setup guide for photobooth4u: unlocking your devices, setting up each event, running the Pro Booth with a guest screen, printing, and sending photos to your clients.

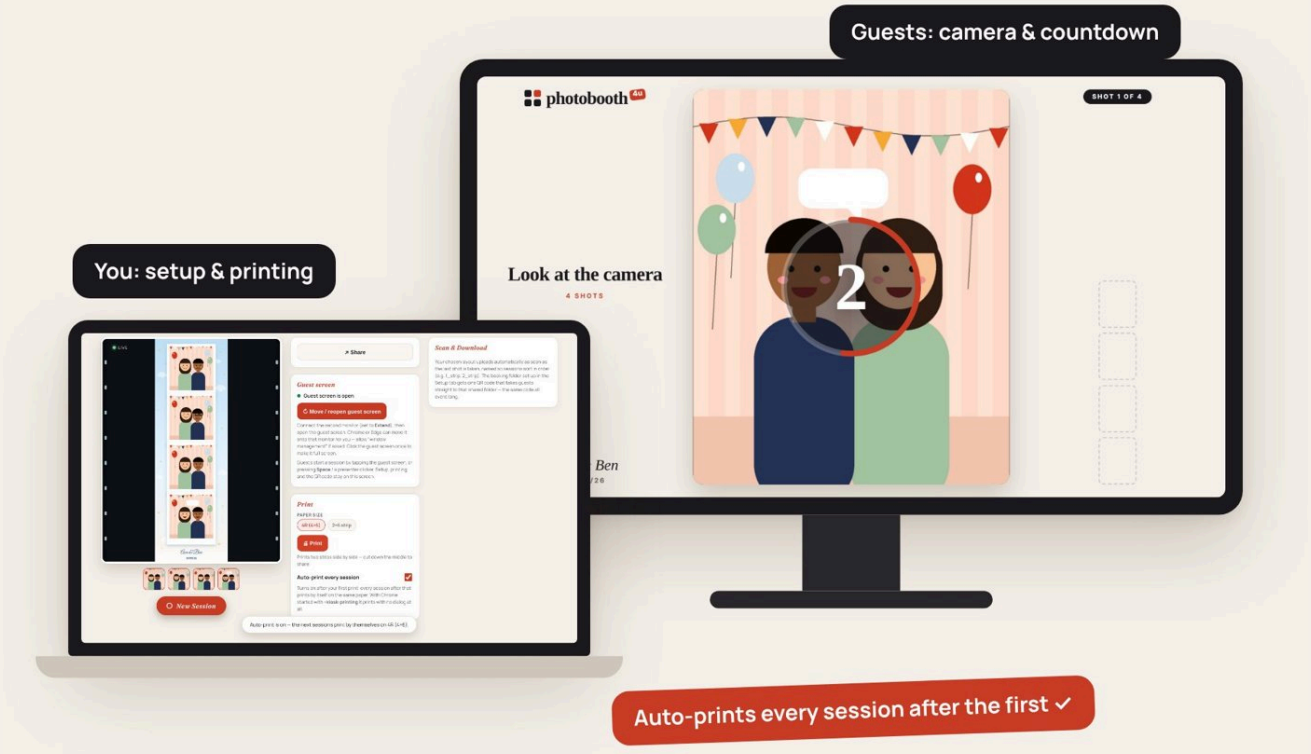

01 What you need
02 Unlock your devices
03 Set up each event
04 Pro Booth: laptop + guest screen
05 Printing
06 During the event
07 After the event: send the photos
08 Troubleshooting & help

01 · BEFORE YOU START

What you need

CLASSIC BOOTH

- **iPad or Android tablet** (a phone works too)
- **Tripod or stand** at the guests' eye level
- **Internet**: venue Wi-Fi or a phone hotspot
- *Optional:* photo printer, if your package includes printing

PRO BOOTH

- **Laptop** with **Chrome or Edge**, built-in camera or USB webcam
- **Second monitor or TV** + HDMI cable, facing the guests
- *Optional:* presenter clicker, so guests can start a shot
- *Optional:* photo printer (4R / 4×6 recommended)

Day-before checklist

- ☐ Device charged, charger packed
- ☐ Booth opens and the camera works
- ☐ Internet tested at (or near) the venue
- ☐ Event name decided (you type it in Setup)
- ☐ Printer + paper loaded, one test print done
- ☐ Pro Booth: HDMI cable and guest screen tested

02 · FIRST TIME ON EACH DEVICE

Unlock your devices

1. **Open the booth**

   Go to **photoboothforyourevent.netlify.app** in Chrome, Edge or Safari.

2. **Enter your code**

   Type your `PB-XXXX-XXXX-XXXX` code and tap **Unlock**. Lifetime codes open your **My Events** page first, so tap **Open photo booth** from there.

3. **That device is now yours**

   It stays unlocked, so next time just open the website. Each new device uses one of your **device slots**. To replace a device (new laptop, lost tablet), message us and we'll free its slot.

Keep your code private. Anyone with it can use your device slots and see your event links.

03 · EVERY EVENT

Set up each event

In the booth, open **Setup**, work through the sections, check the live preview, then tap **Continue to Photo Session**.

1 Theme

Pick a ready-made design (Wedding, Debut, Graduation, Christening, Christmas…). Tap ★ **Save my current design** to keep your own as a theme for next time.

2 Layout & timer

Choose 1 of 10 layouts and the countdown. Optional: **let guests choose the layout** each session.

3 Backdrop & event name

Fine-tune the theme or upload your own backdrop photo, and switch the pattern to gold, silver or rose gold. Type the event name and add the date.

4 Frame, logo & stickers

Upload your **frame** with the photo spots left white or see-through: the photos go inside it. Several frames can share one 4R print (**My frames sheet**). Add your **logo** and stickers too.

5 Effects

Filters (B&W, Sepia, Warm, Cool) and soft skin. Check them on the preview, or tap **Preview with my camera** to see them on your own face.

6 Google Drive

Lifetime codes: type the **event name** for a new folder and QR code. **Rental codes** connect automatically.



Ten layouts, all made for 4R prints.

SAVES BY ITSELF

Your setup saves automatically. It comes back after a refresh or restart, and **every device on your code gets the same design**. Lifetime codes keep a separate design for each event name. **Reset setup** starts fresh.

USING MORE THAN ONE DEVICE?

Type the **exact same event name** on every device at that event. They share one folder, one QR code and one design. Each device's photos end in its number (`…_cam1.png`, `…_cam2.png`).

04 · PRO BOOTH

Laptop + guest screen

Guests see the camera, countdown and their photos on the big screen. You run setup, printing and the QR code on the laptop.

1. **Connect the second screen**

   Plug in the monitor or TV. Set the display to **Extend**, not Duplicate. Windows: press `Win + P` → **Extend**. Mac: System Settings → Displays → turn off mirroring.

2. **Start Chrome with silent printing**

   Use the shortcut below so prints go straight to the printer without a pop-up. Close every Chrome window first.

3. **Open the guest screen**

   Finish Setup, go to **Photo Session** and tap **Open guest screen**. Allow pop-ups and "window management" if Chrome asks. It moves to the second screen. Click it once to go full screen.

4. **Let guests start**

   Guests tap the guest screen, or press `Space` / `Enter` or a presenter clicker.



You: setup and printing. Guests: camera and countdown.

Silent-printing shortcut

Windows: right-click the desktop → New → Shortcut, and paste this as the location:

```
"C:\Program Files\Google\Chrome\Application\chrome.exe" --kiosk-printing https://photoboothforyourevent.netlify.app/
```

Mac: open Terminal and run:

```
open -a "Google Chrome" --args --kiosk-printing https://photoboothforyourevent.netlify.app/
```

Don't add `--kiosk` for the Pro Booth. It forces a single full-screen window and blocks the guest screen. Edge works the same way with `msedge.exe`.

05 · IF YOUR PACKAGE INCLUDES PRINTING

Printing

1. **Prepare the printer**

   Make the photo printer your computer's **default printer**. In its preferences, choose the paper size you'll use (e.g. **4×6**) and **borderless** if offered.

2. **Do one test print**

   After a session, open the **Print** box, pick the paper size and tap **Print**. If the size or margins are off, fix them in the printer's own settings.

3. **Turn on auto-print**

   Pro Booth only: after your first print, tick **Auto-print every session**. Every session after that prints by itself on the same paper.

Good to know

- **Strips print two side by side** on 4R paper. Cut down the middle and you get two strips.
- No silent-printing shortcut? A print dialog opens. Choose the photo printer, set **Margins: None** and **Scale: 100%**.
- Only the paper sizes included in your package appear in the Print box.

06 · SHOWTIME

During the event

GUESTS

Tap the **welcome screen**, pick a layout if offered, follow the countdown and pose. The photo appears with the event's **QR code**, which opens the online gallery of every photo and GIF.

PHOTOS

Each session uploads to the event's Drive folder (with an **animated GIF** if your package includes it), and a backup saves to **Downloads**. Allow multiple downloads if asked.

YOU

Keep the QR on screen or printed near the booth. It's the **same QR all event long**, so guests can scan any time.

Pro tips

- Put the camera at eye level, with light facing the guests (not behind them).
- Keep the device plugged in, and turn off sleep/auto-lock for the event.
- Weak venue internet? Use a phone hotspot. Photos still save to Downloads if an upload fails.

07 · AFTER THE EVENT

Send the photos to your client

1. **Open My Events**

   Go to **photoboothforyourevent.netlify.app/lifetime/** on any phone or computer and sign in with your code. Every event is listed, newest first.

2. **Copy or show the link**

   Use **Copy link** to send the **online gallery** by Messenger, or **Show QR** to let your client scan it. **Drive folder** opens the same photos in Google Drive for downloading them all.

3. **Remind them to download**

   Photos are deleted **7 days after the event's last photo**. Each event shows its "Download by" date.

7-DAY RULE

Send the link the same day, and tell your client to save their favourites within the week. After deletion the link stops working.

08 · QUICK FIXES

Troubleshooting

PROBLEM	FIX
"We need access to your camera"	Allow camera access in the browser (the icon in the address bar), then tap **Try Again**. Close other apps using the camera.
"Already used on another device"	All your device slots are taken. Message us to free one.
The QR code doesn't appear	Check the internet, and make sure the event name is typed in Setup → Google Drive.
A print dialog pops up every time	Chrome wasn't started with the silent-printing shortcut. Close all Chrome windows and use the shortcut (page 4).
Guest screen is on the wrong monitor	Check the display is set to **Extend**, then tap **Move / reopen guest screen**.
Two events' photos in one folder	The same event name was used twice. Use a new, unique name for each event.

Need help? Message us.

We're on Facebook Messenger: **m.me/roktetnachi**

Message us