
photobooth 4u

Your booth, *ready* for any event.

The step-by-step setup guide for photobooth4u: unlocking your devices, setting up each event, running the Pro Booth with a guest screen and your own camera, printing, and sending photos to your clients.

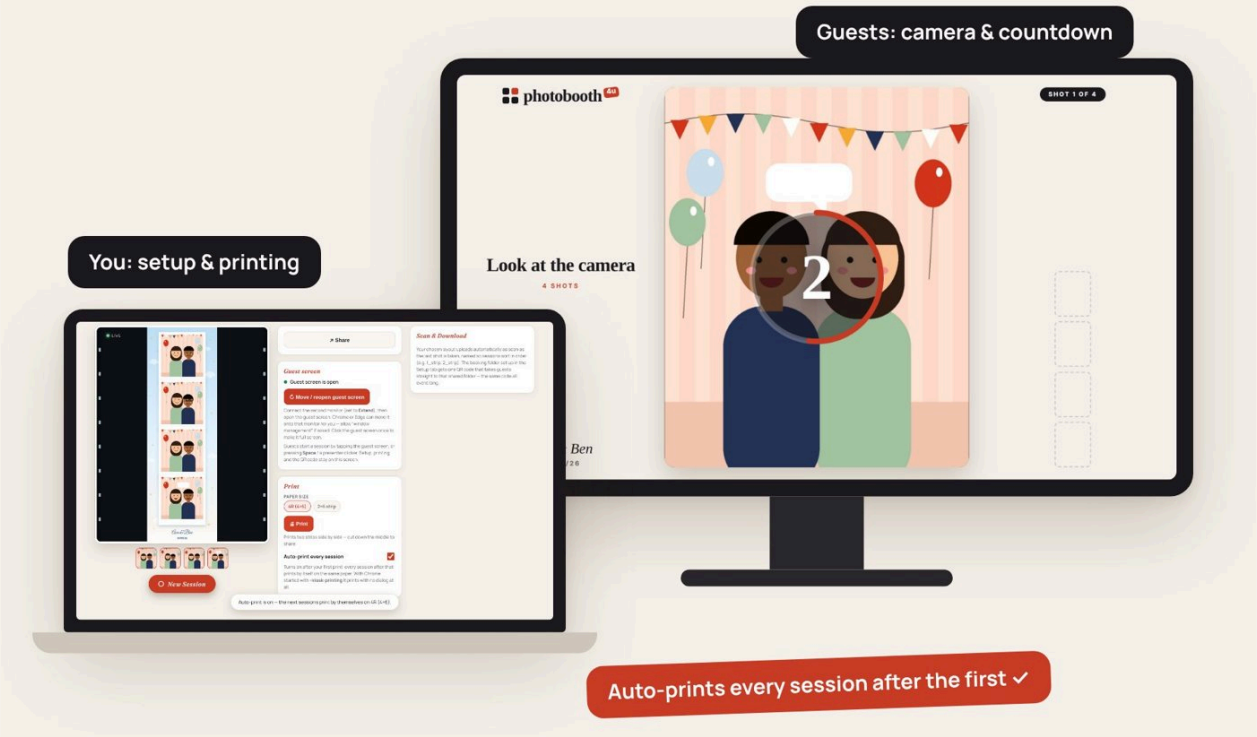

01 What you need

02 Unlock your devices

03 Set up each event

04 Pro Booth: laptop + guest screen

05 Use a Sony or Canon camera

06 Backup folder & weak internet

07 Printing

08 During the event

09 After the event: send the photos

10 Troubleshooting & help

01 · BEFORE YOU START

What you need

CLASSIC BOOTH

- **iPad or Android tablet** (a phone works too)
- **Tripod or stand** at the guests' eye level
- **Internet**: venue Wi-Fi or a phone hotspot
- *Optional:* photo printer, if your package includes printing

PRO BOOTH

- **Laptop** with **Chrome or Edge**, and a camera: built-in, USB webcam, or a **Sony / Canon** camera (page 5)
- **Second monitor or TV** + HDMI cable, facing the guests
- *Optional:* presenter clicker, so guests can start a shot
- *Optional:* photo printer (4R / 4×6 recommended)

Day-before checklist

- ☐ Device charged, charger packed
- ☐ Booth opens and the camera works
- ☐ Internet tested at (or near) the venue
- ☐ Event name decided (you type it in Setup)
- ☐ Printer + paper loaded, one test print done
- ☐ Pro Booth: HDMI cable and guest screen tested

02 · FIRST TIME ON EACH DEVICE

Unlock your devices

1. ### Open the booth

   Go to **photobooth4u.netlify.app** in Chrome, Edge or Safari.

2. ### Enter your code

   Type your `PB-XXXX-XXXX-XXXX` code and tap **Unlock**. Lifetime codes open your **My Events** page first, so tap **Open photo booth** from there.

3. ### That device is now yours

   It stays unlocked, so next time just open the website. Each new device uses one of your **device slots**. To replace a device (new laptop, lost tablet), message us and we'll free its slot.

Keep your code private. Anyone with it can use your device slots and see your event links.

03 · EVERY EVENT

Set up each event

In the booth, open **Setup** and go through the 5 steps with **Next**. The bar at the bottom shows what's still needed and has **Start photo session**.

1 Design

Under **Ready designs**, tap a template to see it big, then **Use this design**. **Colours & background** changes the background, gold details colour or adds your own photo. ★ **Save my design** keeps yours for next time.

2 Text

Type the **name on the photo** and tap the **calendar icon** to add the date. Pick a title style, then a font: the cards show your own name. **Pairs** set the name and small-line fonts together.

3 Layout

Pick one of **12 layouts** (each card shows your design) and the countdown. Optional: **guests choose the layout** each session.

4 Extras

All optional, in tabs. **Frame**: upload your Canva frame with the photo spots left white or see-through. It becomes **My frame**, and two or more make a **Frame collage** on one 4R print. **Logo**, **Stickers**, and **Filter** (B&W, Sepia, Warm, Cool, soft skin).

5 Share

Lifetime codes: type the **event name** for a new folder. **Rental codes** connect by themselves. The **All photos** QR is here to print or share ahead. On a laptop, choose a **backup folder** here too (page 5).



12 layouts, plus your own frames.

SAVES BY ITSELF

Your setup saves automatically. It comes back after a refresh or restart, and **every device on your code gets the same design**. Lifetime codes keep a separate design for each event name. ··· → **Reset setup** starts fresh.

USING MORE THAN ONE DEVICE?

Type the **exact same event name** on every device at that event. They share one folder, one QR code and one design. Each device's photos end in its number (`…_cam1.jpg`, `…_cam2.jpg`).

04 · PRO BOOTH

Laptop + guest screen

Guests see the camera, countdown and their photos on the big screen. You run setup, printing and the QR code on the laptop.

1. **Connect the second screen**

   Plug in the monitor or TV. Set the display to **Extend**, not Duplicate. Windows: press `Win + P` → **Extend**. Mac: System Settings → Displays → turn off mirroring.

2. **Start Chrome with silent printing**

   Use the shortcut below so prints go straight to the printer without a pop-up. Close every Chrome window first.

3. **Open the guest screen**

   Finish Setup, go to **Photo Session** and tap **Open guest screen**. Allow pop-ups and "window management" if Chrome asks. It moves to the second screen. Click it once to go full screen.

4. **Let guests start**

   Guests tap the guest screen, or press `Space` / `Enter` or a presenter clicker.



You: setup and printing. Guests: camera and countdown.

Silent-printing shortcut

Windows: right-click the desktop → New → Shortcut, and paste this as the location:

```
"C:\Program Files\Google\Chrome\Application\chrome.exe" --kiosk-printing
https://photobooth4u.netlify.app/
```

Mac: open Terminal and run:

```
open -a "Google Chrome" --args --kiosk-printing https://photobooth4u.netlify.app/
```

Don't add `--kiosk` for the Pro Booth. It forces a single full-screen window and blocks the guest screen. Edge works the same way with `msedge.exe`.

05 · PRO BOOTH CAMERA

Use a Sony or Canon camera

A real camera gives sharper photos and a softer background than a webcam. The booth works with any camera your laptop sees as a webcam.

1. ### Turn on webcam mode

   Sony: newer models (ZV-E10, ZV-1, A7 IV, A6700…) have **USB Streaming** in the menu; older ones need Sony's free **Imaging Edge Webcam**. **Canon:** install the free **EOS Webcam Utility** and check your model is listed. **Any brand:** clean HDMI out + an **HDMI-to-USB capture card**.

2. ### Power it for the whole event

   Use a **dummy battery** or USB power, and turn off the camera's **auto power off**. Set focus to continuous face / eye AF.

3. ### Pick it in the booth

   In **Photo Session → Camera**, choose the camera. The booth **remembers it** on this laptop and picks it again next time.

4. ### Mirror or not

   Mirror the live view (Camera section) shows guests a mirror image. Saved and printed photos are never mirrored.

Good to know

- **"Camera disconnected. Reconnecting…"** means the cable or power slipped. Fix it and the booth carries on by itself.
- The booth uses the camera's **1080p video**; it doesn't press the shutter, so a **flash won't fire**. Use a continuous light.
- Tablets (Classic Booth) use their own front camera.

06 · PRO BOOTH BACKUP

Backup folder & weak internet

1. ### Choose a backup folder

   In **Setup → 5 Share**, tap **Choose backup folder** and pick one, e.g. **Pictures › photobooth4u**. Every photo is saved there in a subfolder named after the event. Chrome or Edge on a computer.

2. ### Allow saving after a restart

   After Chrome restarts, tap **Allow saving** (in Setup or the Photo Session panel), then allow Chrome to edit files.

3. ### Check it's on

   The Photo Session panel shows **Backup folder: Saving to …** ✓. Without one, each photo goes to **Downloads**.

INTERNET DROPS?

The booth tries again, then **keeps the photo on the device**. The panel shows **Waiting to upload**, and the photos upload by themselves when the internet is back. Guests get the **All photos** QR meanwhile. Keep the booth open until the list is empty.

07 · IF YOUR PACKAGE INCLUDES PRINTING

Printing

1. **Prepare the printer**

   Make the photo printer your computer's **default printer**. In its preferences, choose the paper size you'll use (e.g. **4×6**) and **borderless** if offered.

2. **Do one test print**

   After a session, open the **Print** box, pick the paper size and tap **Print**. If the size or margins are off, fix them in the printer's own settings.

3. **Turn on auto-print**

   Pro Booth only: after your first print, tick **Auto-print every session**. Every session after that prints by itself on the same paper.

Good to know

- **Strips print two side by side** on 4R paper. Cut down the middle and you get two strips.
- No silent-printing shortcut? A print dialog opens. Choose the photo printer, set **Margins: None** and **Scale: 100%**.
- Only the paper sizes included in your package appear in the Print box.

08 · SHOWTIME

During the event

GUESTS

Tap the **welcome screen**, pick a layout if offered, follow the countdown and pose. The photo appears with a **Your photo** QR code that opens it in the online gallery.

PHOTOS

Each session uploads to the event's **online gallery**, and a copy saves on the device: **Downloads**, or your **backup folder**. Allow multiple downloads if asked.

YOU

Print the **All photos** QR from Setup → Share ahead and put it near the booth. Guests can scan it any time to see every photo.

Pro tips

- Put the camera at eye level, with light facing the guests (not behind them).
- Keep the device plugged in. The booth keeps the screen awake while it's open; on tablets, also turn off auto-lock.
- Weak venue internet? Use a phone hotspot. Photos that can't upload wait on the device and upload by themselves later.

09 · AFTER THE EVENT

Send the photos to your client

1 **Open My Events**

Go to **photobooth4u.netlify.app/lifetime/** on any phone or computer and sign in with your code. Every event is listed, newest first.

2 **Copy or show the link**

Use **Copy link** to send the **online gallery** by Messenger, or **Show QR** to let your client scan it. **Drive folder** opens the same photos in Google Drive for downloading them all.

3 **Remind them to download**

Photos are deleted **7 days after the event's last photo**. Each event shows its "Download by" date.

7-DAY RULE

Send the link the same day, and tell your client to save their favourites within the week. After deletion the link stops working.

10 · QUICK FIXES

Troubleshooting

PROBLEM	FIX
"We need access to your camera"	Allow camera access in the browser (the icon in the address bar), then tap **Try Again**. Close other apps using the camera.
"Camera disconnected. Reconnecting…"	Check the camera is on and its USB cable is in. The booth carries on by itself.
Sony / Canon not in the Camera menu	Turn on USB Streaming or the webcam app, re-plug the cable, then reload the booth.
"Photos waiting to upload"	The internet dropped. They upload by themselves, or tap **Retry now** / **Save to this computer**.
"Already used on another device"	All your device slots are taken. Message us to free one.
The QR code doesn't appear	Check the internet, and make sure the event name is typed in Setup → 5 Share.
A print dialog pops up every time	Chrome wasn't started with the silent-printing shortcut. Close all Chrome windows and use the shortcut (page 4).
Guest screen is on the wrong monitor	Check the display is set to **Extend**, then tap **Move / reopen guest screen**.
Two events' photos in one folder	The same event name was used twice. Use a new, unique name for each event.

Need help? Message us.

We're on Facebook Messenger: **m.me/roktetnachi**

Message us