
ROVING PHOTOGRAPHER SYSTEM ARCHITECTURE

Wired DSLR to Pocket Android Wireless Bridge

How to tether any Canon, Nikon, or Sony DSLR via USB OTG to a pocket Android phone and stream roving guest photos wirelessly in real time to the laptop base station for review and on-demand printing.

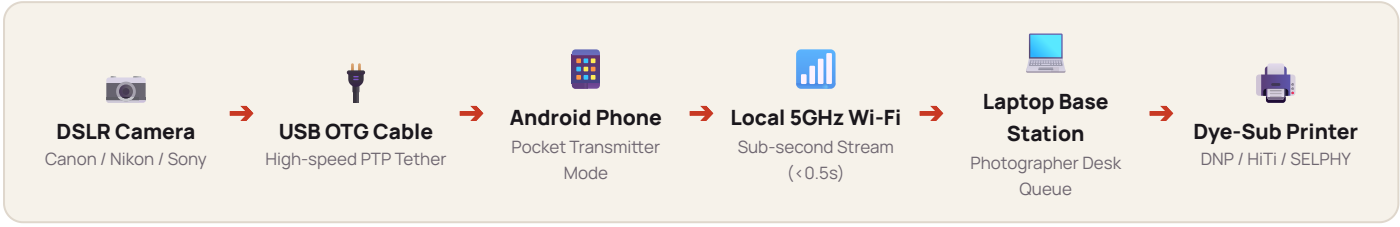

📦 Required Hardware Checklist

- **1. DSLR / Mirrorless Body:** Canon EOS (Rebel, 60D, 70D, 80D, 5D, R-series), Nikon (D3000, D5000, D7000, Z-series), or Sony Alpha (A6000, A7-series in PC Remote).
- **2. USB OTG Cable or Adapter:** USB-C to Camera Mini-USB/Micro-USB or USB-C. Ensure the *Host/OTG* side plugs into the Android phone.
- **3. Android Phone (Transmitter):** Any phone running Android 8.0 or newer with USB OTG. **Zero license required**: operates free from the app activation screen!
- **4. Laptop Base Station:** Windows 10/11 or macOS running photobooth4u (v1.0.110+).
- **5. Venue Wi-Fi or Pocket Router:** 5GHz Wi-Fi router or the laptop's built-in Mobile Hotspot. **100% offline**: no internet connection required.

Why This Pipeline Beats Wi-Fi SD & Cam Apps

- **Native Physical Shutter Polling:** The phone's background helper detects the exact millisecond you press the camera shutter button on the body. No touchscreen tapping needed.
- **Sub-Second Beaming (<500ms):** USB transfer into phone memory happens at 480 Mbps; local Wi-Fi transmission to laptop takes only ~300ms.
- **Pocket Mode & Haptic Buzz:** Screen dims to 5% brightness and ignores pocket touch friction; the phone vibrates in your pocket to confirm successful delivery.
- **Decoupled FIFO Buffer:** Shoot rapid 2-3 shot bursts without stalling. Shots queue safely in phone RAM and upload sequentially.

Camera Menu Configuration (Set Before Connecting)

Brand	Dial & Focus Mode	Image Quality / Format	Required Camera Menu Settings
Canon EOS Rebel, 60D-90D, 5D, R-series	**M**, **Av**, **Tv**, or **P** Single-point One-Shot AF	**JPEG (Large / Fine)** RAW + JPEG also supported (JPEG is automatically selected)	• Turn **Wi-Fi / Bluetooth OFF** in camera settings. • Ensure camera mode dial is NOT set to Movie/Video. • Insert an SD card with free space.
Nikon DSLR / Z D3200-D7500, D610-D850, Z5/6/7	**M**, **A**, **S**, or **P** AF-S (Single Servo)	**JPEG Fine or Normal** Bridge fetches camera memory buffer & SDRAM object	• Turn **Airplane mode ON** (or disable SnapBridge Wi-Fi). • In USB settings, select **MTP/PTP** if asked. • Close in-camera menus before tethering.
Sony Alpha A6000-A6700, A7 II / III / IV, A7R	**M**, **A**, or **S** AF-S or Manual Focus (MF)	**File Format: JPEG** Set JPEG Quality to Fine	• **USB Connection: PC Remote** (Setup › USB). • **Still Img. Save Dest.: PC + Camera** (Setup › USB). • **Release w/o Card: Enable**. • Turn off Smartphone Connection / Imaging Edge.

OPERATOR STEP-BY-STEP INSTRUCTIONS

Android Bridge App & Pocket Mode Setup

Step-by-step pairing to your laptop base station, physical shutter confirmation, and battery-saving pocket mode.

1 Launch the Free Roving Bridge

Install the photobooth4u Android app (v1.1.24+) on your phone. You **do not** need to enter a rental code:

- Open the app on the phone.
- On the initial activation screen, look below the license code box.
- Tap the green button: **" 📷 Roving DSLR Bridge"**.
- The dedicated bridge transmitter interface opens instantly.

> **Zero extra license fee:** Any spare Android phone acts as an unlimited transmitter.

2 Connect to Laptop Base Station

Connect your phone to the base station laptop via the local Wi-Fi network:

- Ensure the phone is on the same Wi-Fi as the laptop.
- **Option A (1-Tap Paste):** Copy the send URL from the laptop's Photographer Desk, open the bridge app, and tap **" 📋 Paste"**.
- **Option B (Type IP):** Enter the laptop IP and port (e.g. `http://192.168.1.105:47777`).
- Tap **"Save & Test Connection"**. A green toast confirms: ✅ `Connected! Laptop ready.`

3 Plug in DSLR via USB OTG

Connect the USB OTG cable from the phone's charging port to the camera's digital USB port:

- Turn on your camera body.
- If Android shows a popup asking *"Allow photobooth4u to access USB device?"*, check **"Always allow"** and tap **OK**.
- The Camera Status Card immediately updates from `● WAITING` to `● READY` with camera model and battery percentage.
- Tap **" 📸 Test Shutter"** to verify camera firing and transmission.

4 Engage Pocket Lock Mode

Before slipping the phone into your pocket or belt holster:

- Tap the dark button: **" 🔒 Pocket Mode"**.
- The screen displays a black lock screen and dims to minimum brightness (0.05) to conserve phone battery all night.
- All accidental touch inputs in your pocket are safely blocked.
- **Shutter remains 100% LIVE**: the background helper keeps polling your camera's shutter button continuously.
- **To Unlock:** Tap the unlock button **3 times** to return to UI.

Shooting the Crowd: Real-Time Feedback Loop



1. Frame & Click

Approach event guests and press your camera shutter button normally. Camera focuses and snaps the photo.



2. Pocket Haptic Buzz

Within ~0.5s, the phone vibrates in your pocket with a crisp haptic pulse. You know with 100% certainty the photo reached the laptop!



3. Queued at Desk

Photo lands instantly in the Photographer Desk queue at the base station, ready for review and printing.

Android Bridge UI Indicator Quick Reference

● READY
DSLR is connected, recognized, and shutter polling is live. Ready to shoot.

● DISCONNECTED
Camera is powered off, cable unplugged, or USB OTG permission needed.

LAST PHOTO SENT (480MS)
Live round-trip benchmark showing millisecond upload time to laptop.

LAPTOP BASE STATION OPERATOR WORKFLOW

Photographer Desk Queue & On-Demand Printing

How incoming roving photos land in the Photographer Desk queue, how to review and apply custom event frames, and how to print on demand without disrupting the main photobooth.

Accessing the Photographer Desk

The Photographer Desk is the command center at your base station laptop:

- In the desktop booth app, look for the floating camera button (`deskFab`) at the top or open the side menu and click **Photographer Desk**.
- **Unseen Photo Badge:** When the roving photographer snaps photos in the crowd, a red counter badge (e.g. `[ 3 ]`) appears on the icon and a toast banner pops up: *"📷 Roving photo queued in Photographer desk (3 waiting)"*.
- Click the button to open the Photographer Desk overlay.

Why Photos Are Queued (Not Auto-Printed)

Unlike fixed kiosk booths that auto-print immediately, roving crowd photography requires quality control:

- **Zero Paper Waste:** If a guest blinked, turned away, or if you took test shots while walking, unwanted photos will never be printed.
- **No Printer Bottlenecks:** Dye-sub printers print at ~12 seconds per 4x6 print. Queuing prevents long print spooler queues.
- **Guest Selection:** When guests come to the booth to claim their roving picture, the operator selects their favorite shot and prints it in 1 click.

Review, Frame, and Print in 3 Easy Steps

Step 1: Inspect Thumbnail

New photos appear in chronological order in the Photographer Desk grid. Click any thumbnail to expand high-resolution preview.

Step 2: Choose Solo or Strip

Toggle **"One photo per print (Solo layout)"**. Roving portraits fit beautifully as full 4x6 or 2x6 single shots even if the booth uses 3-photo strips.

Step 3: Print On Demand

Click **"Print"**. The app composites your custom event frame, overlay graphics, and branding, then sends it to the dye-sub spooler.

Dye-Sub & Inkjet Printer Support

photobooth4u prints silently to any Windows or macOS printer driver:

- **DNP Dye-Sub:** DS-RX1HS, DS620A, DS40, QW410 with native 2x6 dual cut or full 4x6 / 6x8.
- **HiTi Commercial:** P525L, P510S, P720L with ultra-high-speed roll printing.
- **Canon SELPHY:** CP1300, CP1500 compact dye-sub printers via USB or Wi-Fi.
- **Epson / HP Inkjet:** L8050, PictureMate PM-520, or standard borderless 4R photo paper.

Instant Local QR Sharing for Guests

Guests don't have to wait for prints to get their photos on their phones:

- Every roving photo uploaded to the desk is automatically served on the local gallery server (port `47777`).
- Display the **QR Sharing Screen** on an iPad or secondary tablet at your booth table.
- Guests scan the QR code to view and download their high-res roving photo instantly over the booth Wi-Fi with **zero data plan needed**.

Pro Operator Tip: Two Roving Photographers on One Laptop

You can connect **multiple roving photographers** simultaneously to the same base station! Each photographer simply points their phone bridge to the same laptop URL (`http://<laptop-ip>:47777`). Both streams merge seamlessly into the single Photographer Desk queue with individual timestamps.

FIELD OPERATIONS & RELIABILITY GUIDE

Pro Techniques, Wi-Fi Range & Troubleshooting

Field-tested solutions for venue interference, battery optimization, rapid shooting, and common operator mistakes.

🔋 Battery & Rig Ergonomics

- **Cable Management:** Use a 0.5-meter coiled USB cable. Wrap it once around your camera neck strap so accidental tugs pull against the strap, not your camera's USB port.
- **Phone Battery Life:** In **Pocket Lock Mode**, screen brightness drops to 5%, yielding **6–8 hours** of continuous shooting on a single charge.
- **Camera Battery:** Camera internal battery powers the sensor and shutter. Bring 2 spare camera batteries for a 4-hour event.
- **Phone Holster:** Carry the phone in a running armband or front pocket with the USB port facing upwards for free cable movement.

📶 5GHz Wi-Fi Range Optimization

- **Always Use 5GHz Band:** Crowded hotel ballrooms and convention centers are flooded with 2.4GHz interference. 5GHz provides clear channels with sub-second speeds.
- **Dedicated Pocket Router:** Place a pocket router (GL.iNet GL-MT3000 or TP-Link AC750) elevated on a light stand at your booth base station for 40+ meter range.
- **Laptop Mobile Hotspot:** If you don't have an external router, turn on Windows 10/11 or macOS *Mobile Hotspot* on 5GHz. Connect the roving phone directly to the laptop.
- **100% Offline:** The router requires NO internet or SIM card. All photo streaming is local LAN.

Field Troubleshooting Matrix

Symptom	Probable Cause	Exact Remediation Step
"No DSLR Connected" Phone stays on WAITING	• OTG cable plugged in backwards. • Camera menu open. • Sony USB not in PC Remote.	1. Unplug the USB cable. Ensure the **Host/OTG** end is in the phone. 2. Turn camera power switch off, wait 3 seconds, turn on. 3. On Sony, verify: *Menu › USB Connection › PC Remote*. 4. On Canon, close all menus; dial must be on P/Av/Tv/M.
"Could not reach laptop" Save & Test fails (Red ❌)	• Phone and laptop on different Wi-Fi. • Windows Defender Firewall blocking. • Wrong IP address entered.	1. Verify phone and laptop Wi-Fi network names (SSID) match exactly. 2. In laptop Photographer Desk, check displayed URL and re-paste. 3. On laptop, set your Wi-Fi network profile to **Private Network**. 4. Test URL in phone Chrome browser: `http://<laptop-ip>:47777/hello`.
"Camera saved a RAW photo" Shutter clicked but transfer failed	Camera image quality set to RAW only (CR2, CR3, NEF, ARW).	1. Open camera menu and change **Image Quality to JPEG** (or RAW+JPEG). 2. The bridge extracts the high-resolution JPEG for instant printing. 3. For maximum speed, set JPEG size to **Medium (approx. 4MB–6MB)**.
Haptic buzz didn't fire Photo took >3s to appear	Weak Wi-Fi signal at far edge of venue or heavy channel interference.	1. Move 5–10 steps closer to the booth or elevate your Wi-Fi router. 2. The app's FIFO executor buffers the photo in memory and will re-stream as soon as signal recovers. No photos are lost.

Event-Day Pre-Flight Checklist (Print & Keep in Camera Bag)

Roving Photographer Rig:

- [ ] DSLR camera battery charged + 1 spare in pocket.
- [ ] Camera set to M or Av mode, JPEG Fine (or RAW+JPEG).
- [ ] Speedlight flash fresh batteries installed.
- [ ] USB OTG cable tested and wrapped to camera strap.
- [ ] Phone bridge app connected: green `● READY` confirmed.
- [ ] Pocket Lock Mode engaged before walking the floor.

Base Station Laptop & Printer:

- [ ] Laptop on 5GHz Wi-Fi or pocket hotspot.
- [ ] photobooth4u app running with Photographer Desk open.
- [ ] Event overlay frame & branding verified.
- [ ] Dye-sub photo printer loaded with fresh roll/ribbon.
- [ ] Test shot taken on camera: confirmed haptic buzz & desk badge.
- [ ] Test print executed from Photographer Desk in <15 seconds.