



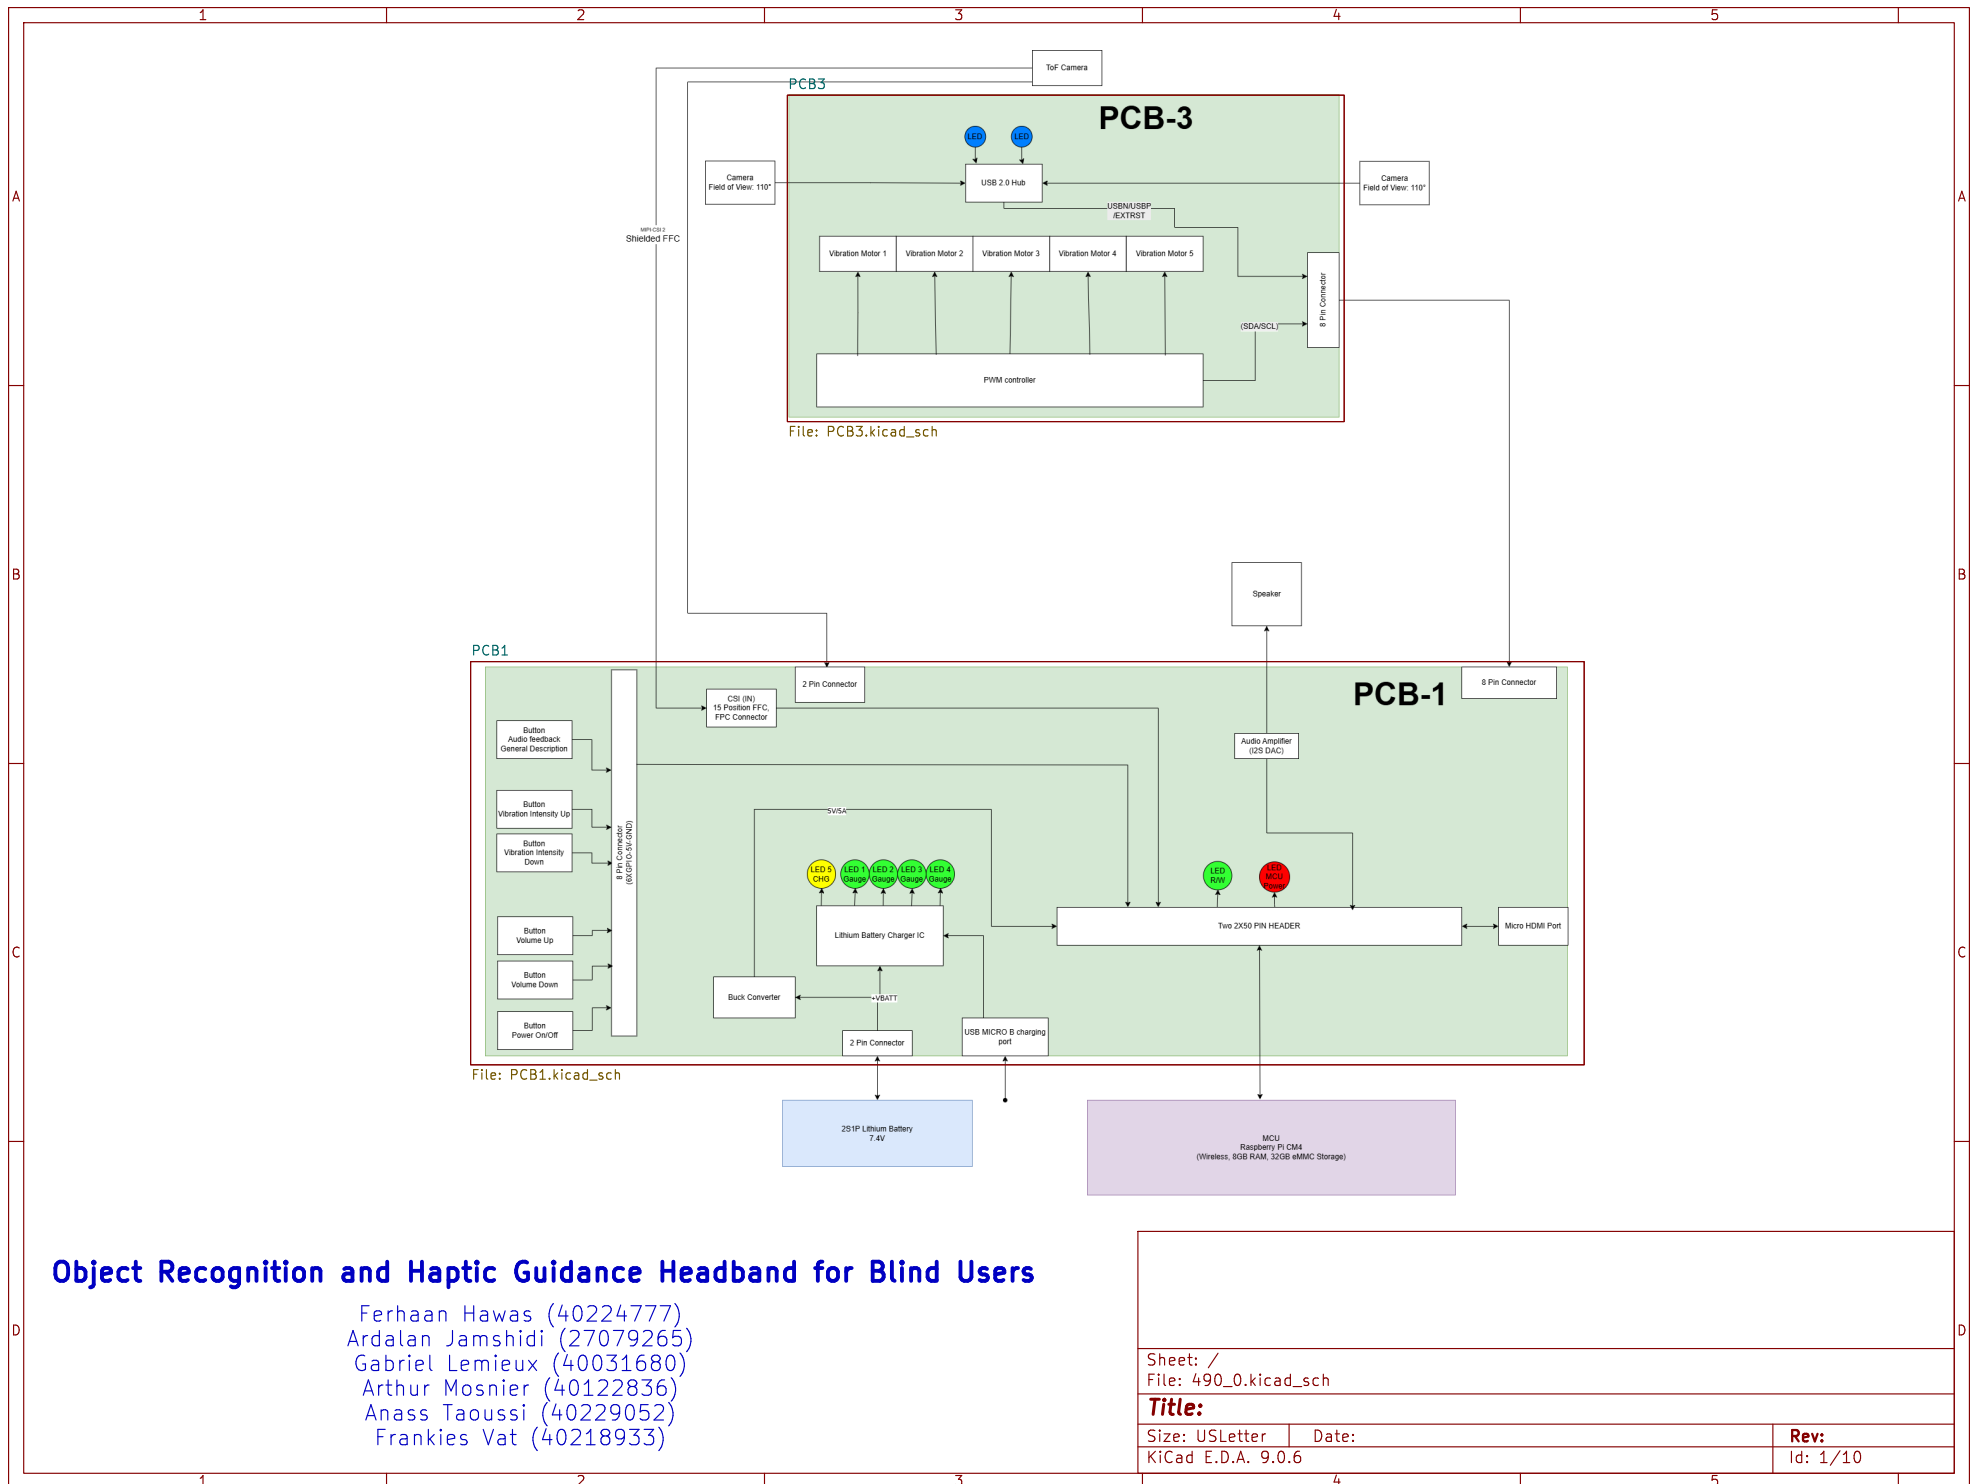

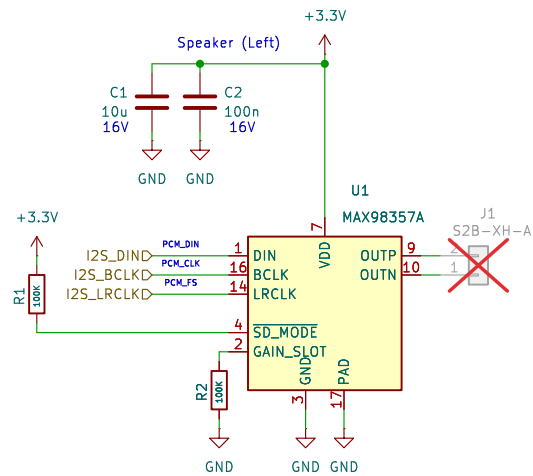

Sheet: /PCB1/PCB1-Speakers and Connectors/
File: speakers.kicad_sch

Title:


Size: USLetter

Date:

Rev:

KiCad E.D.A. 9.0.6

Id: 2/10

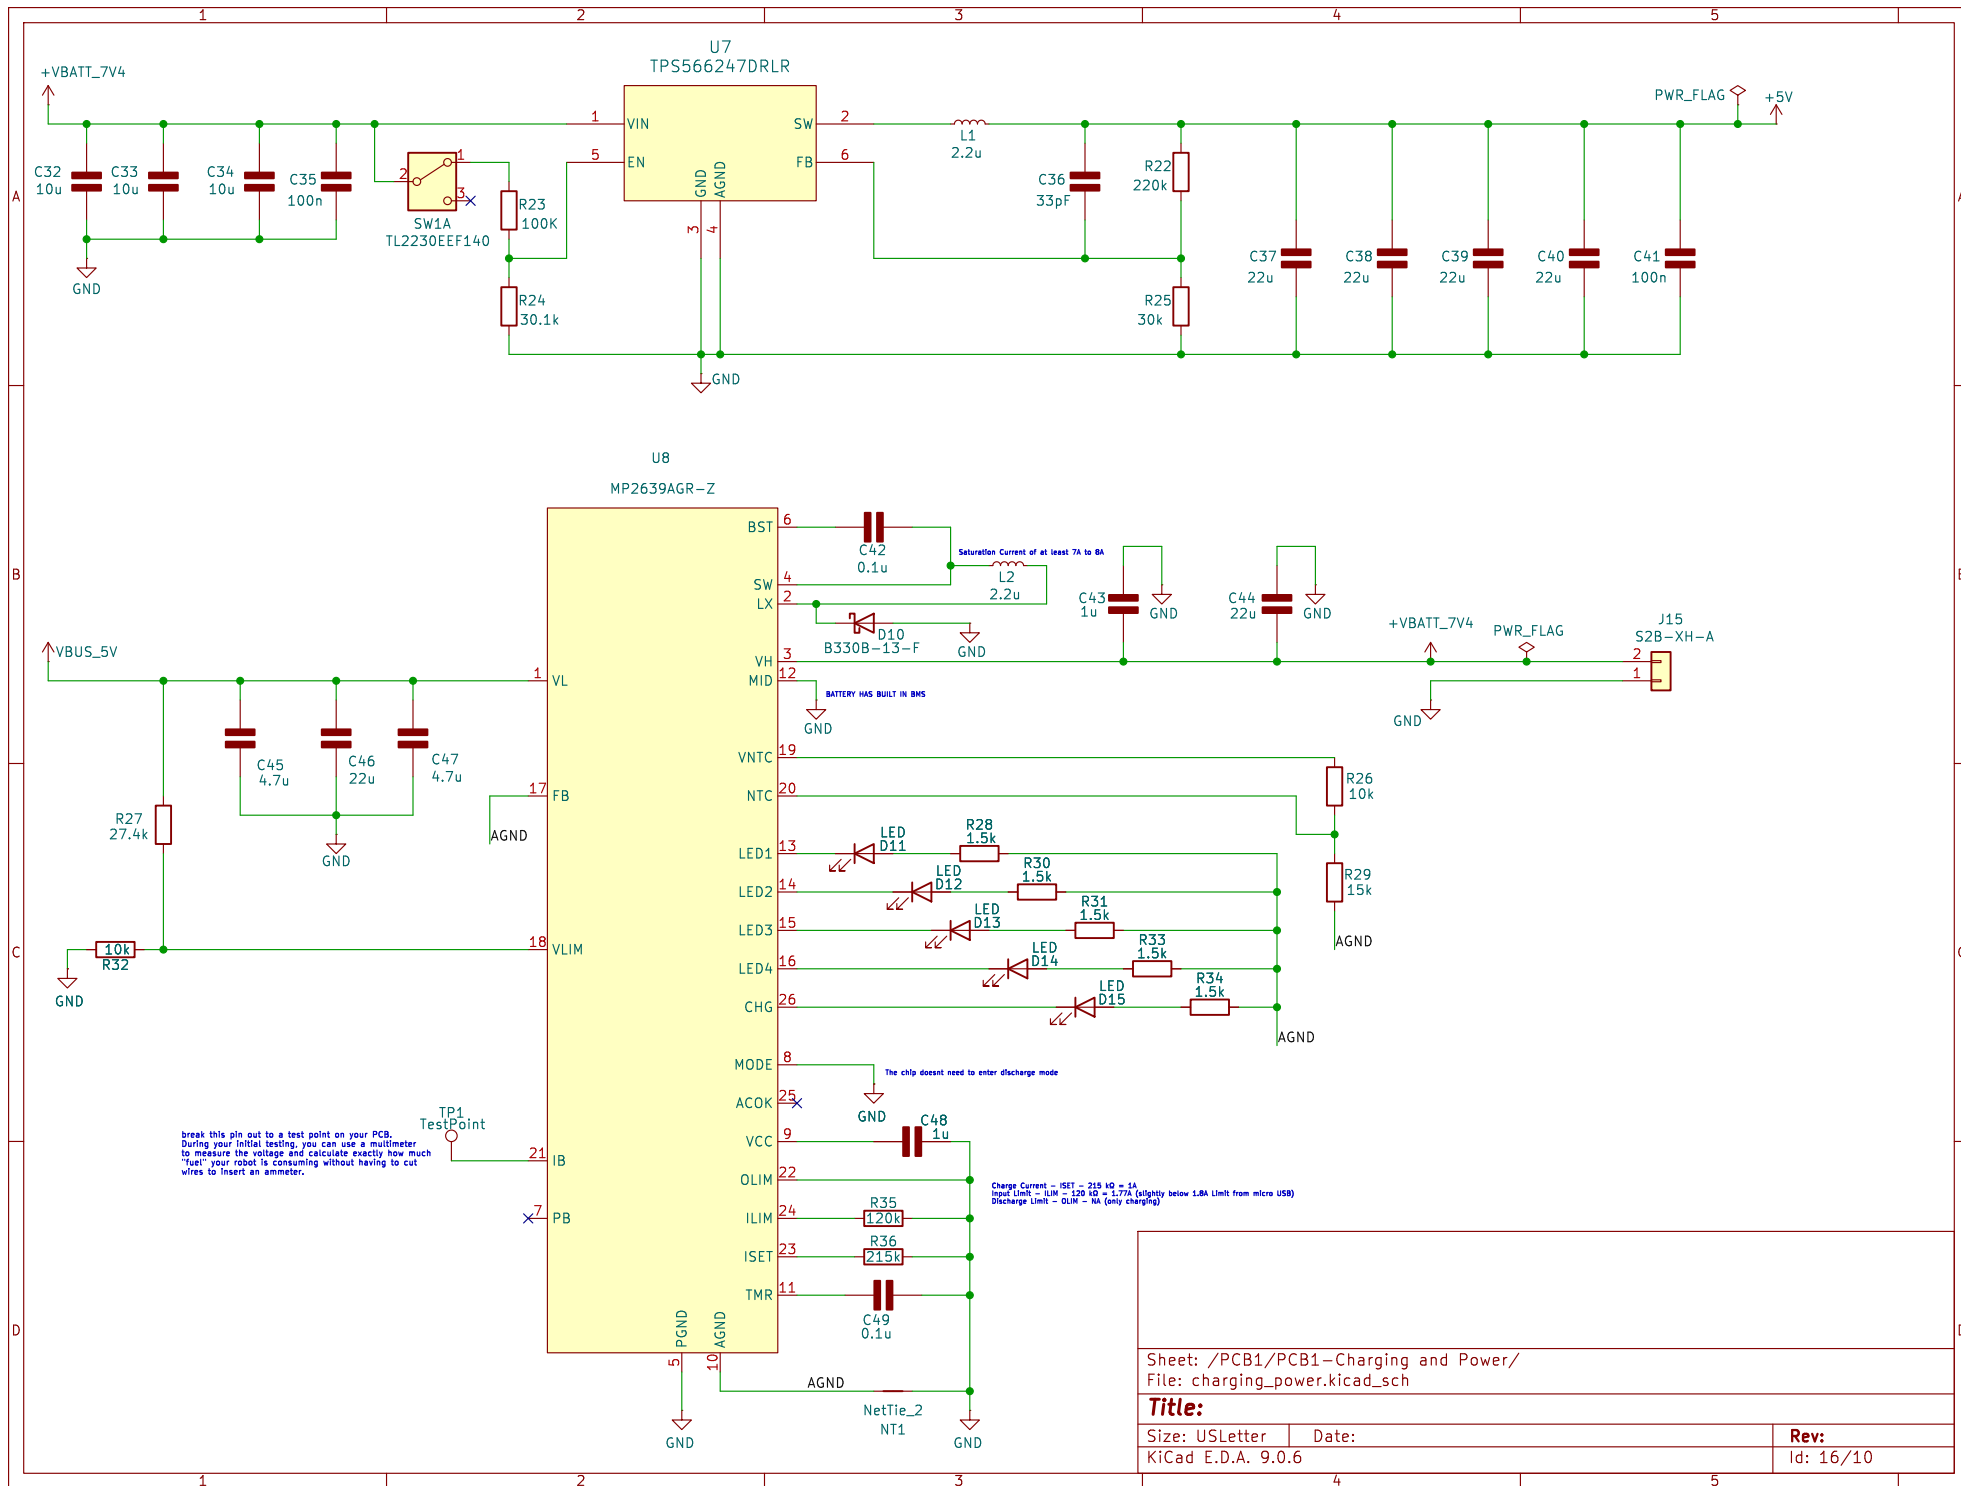

Sheet: /PCB1/PCB1-Charging and Power/
File: charging_power.kicad_sch

Title:

Size: USLetter Date:
KiCad E.D.A. 9.0.6

Rev:
Id: 16/10

disable the Ethernet controller in software. Even if the pins are disconnected, the internal hardware is still powered by default.

In /boot/config.txt (or /boot/firmware/config.txt), add:

```
Plaintext
dtparam=eth0=off
```

For Flashing (Device Mode): The CM4 ignores this pin when nRPIBOOT is active, but keeping it floating is the "safe default" for device mode.
For Cameras (Host Mode): force the CM4 to be a Host using software. Add this line to config.txt file after flashing the OS:
dtoverlay=dwc2,dr_mode=host

A

B

C


D

A

B

C

D

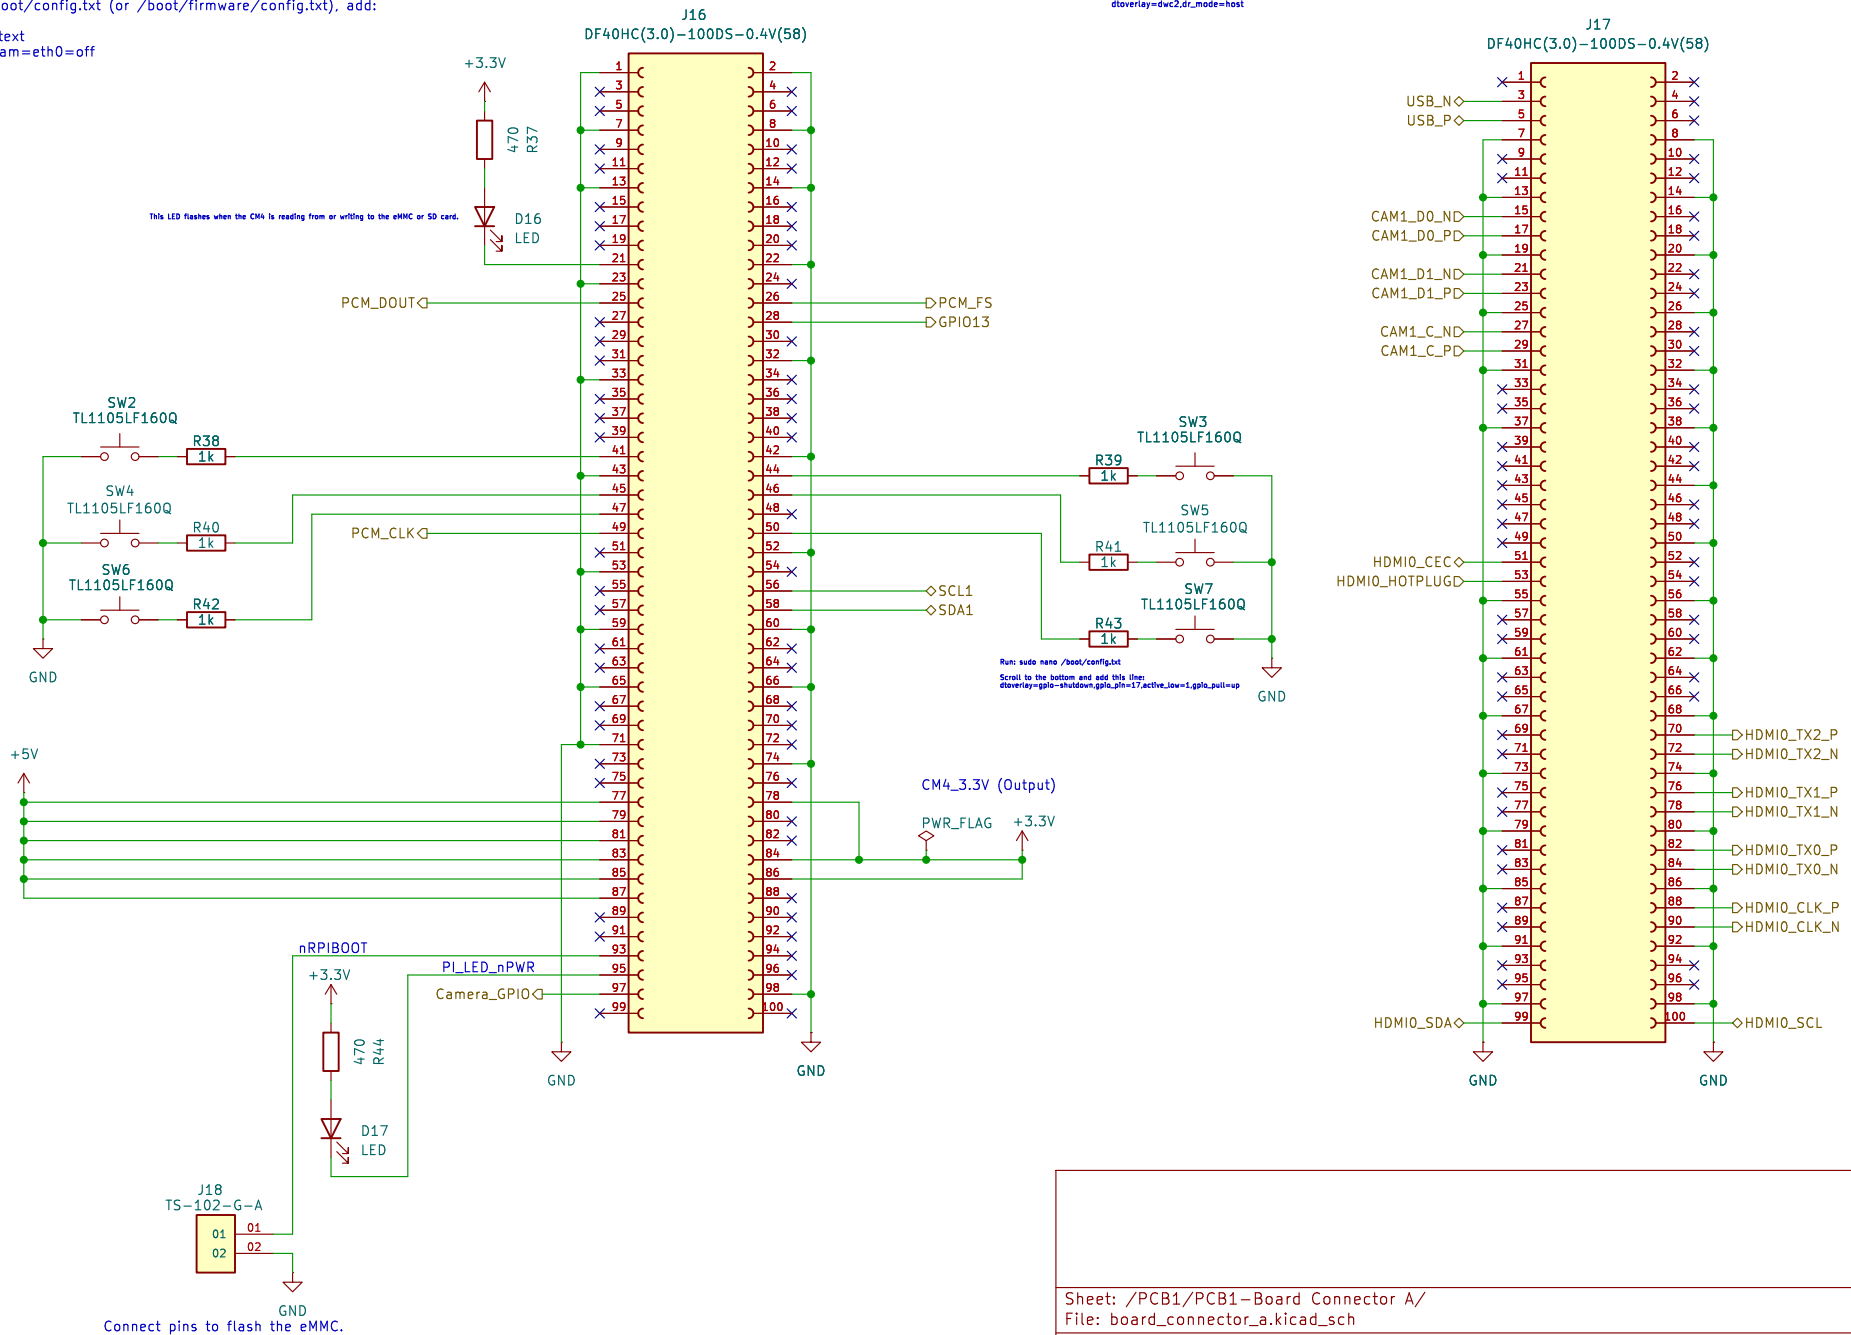


Sheet: /PCB1/PCB1-Board Connector A/
File: board_connector_a.kicad_sch


Title:


Size: USLetter Date:
KiCad E.D.A. 9.0.6


Rev:
Id: 18/10

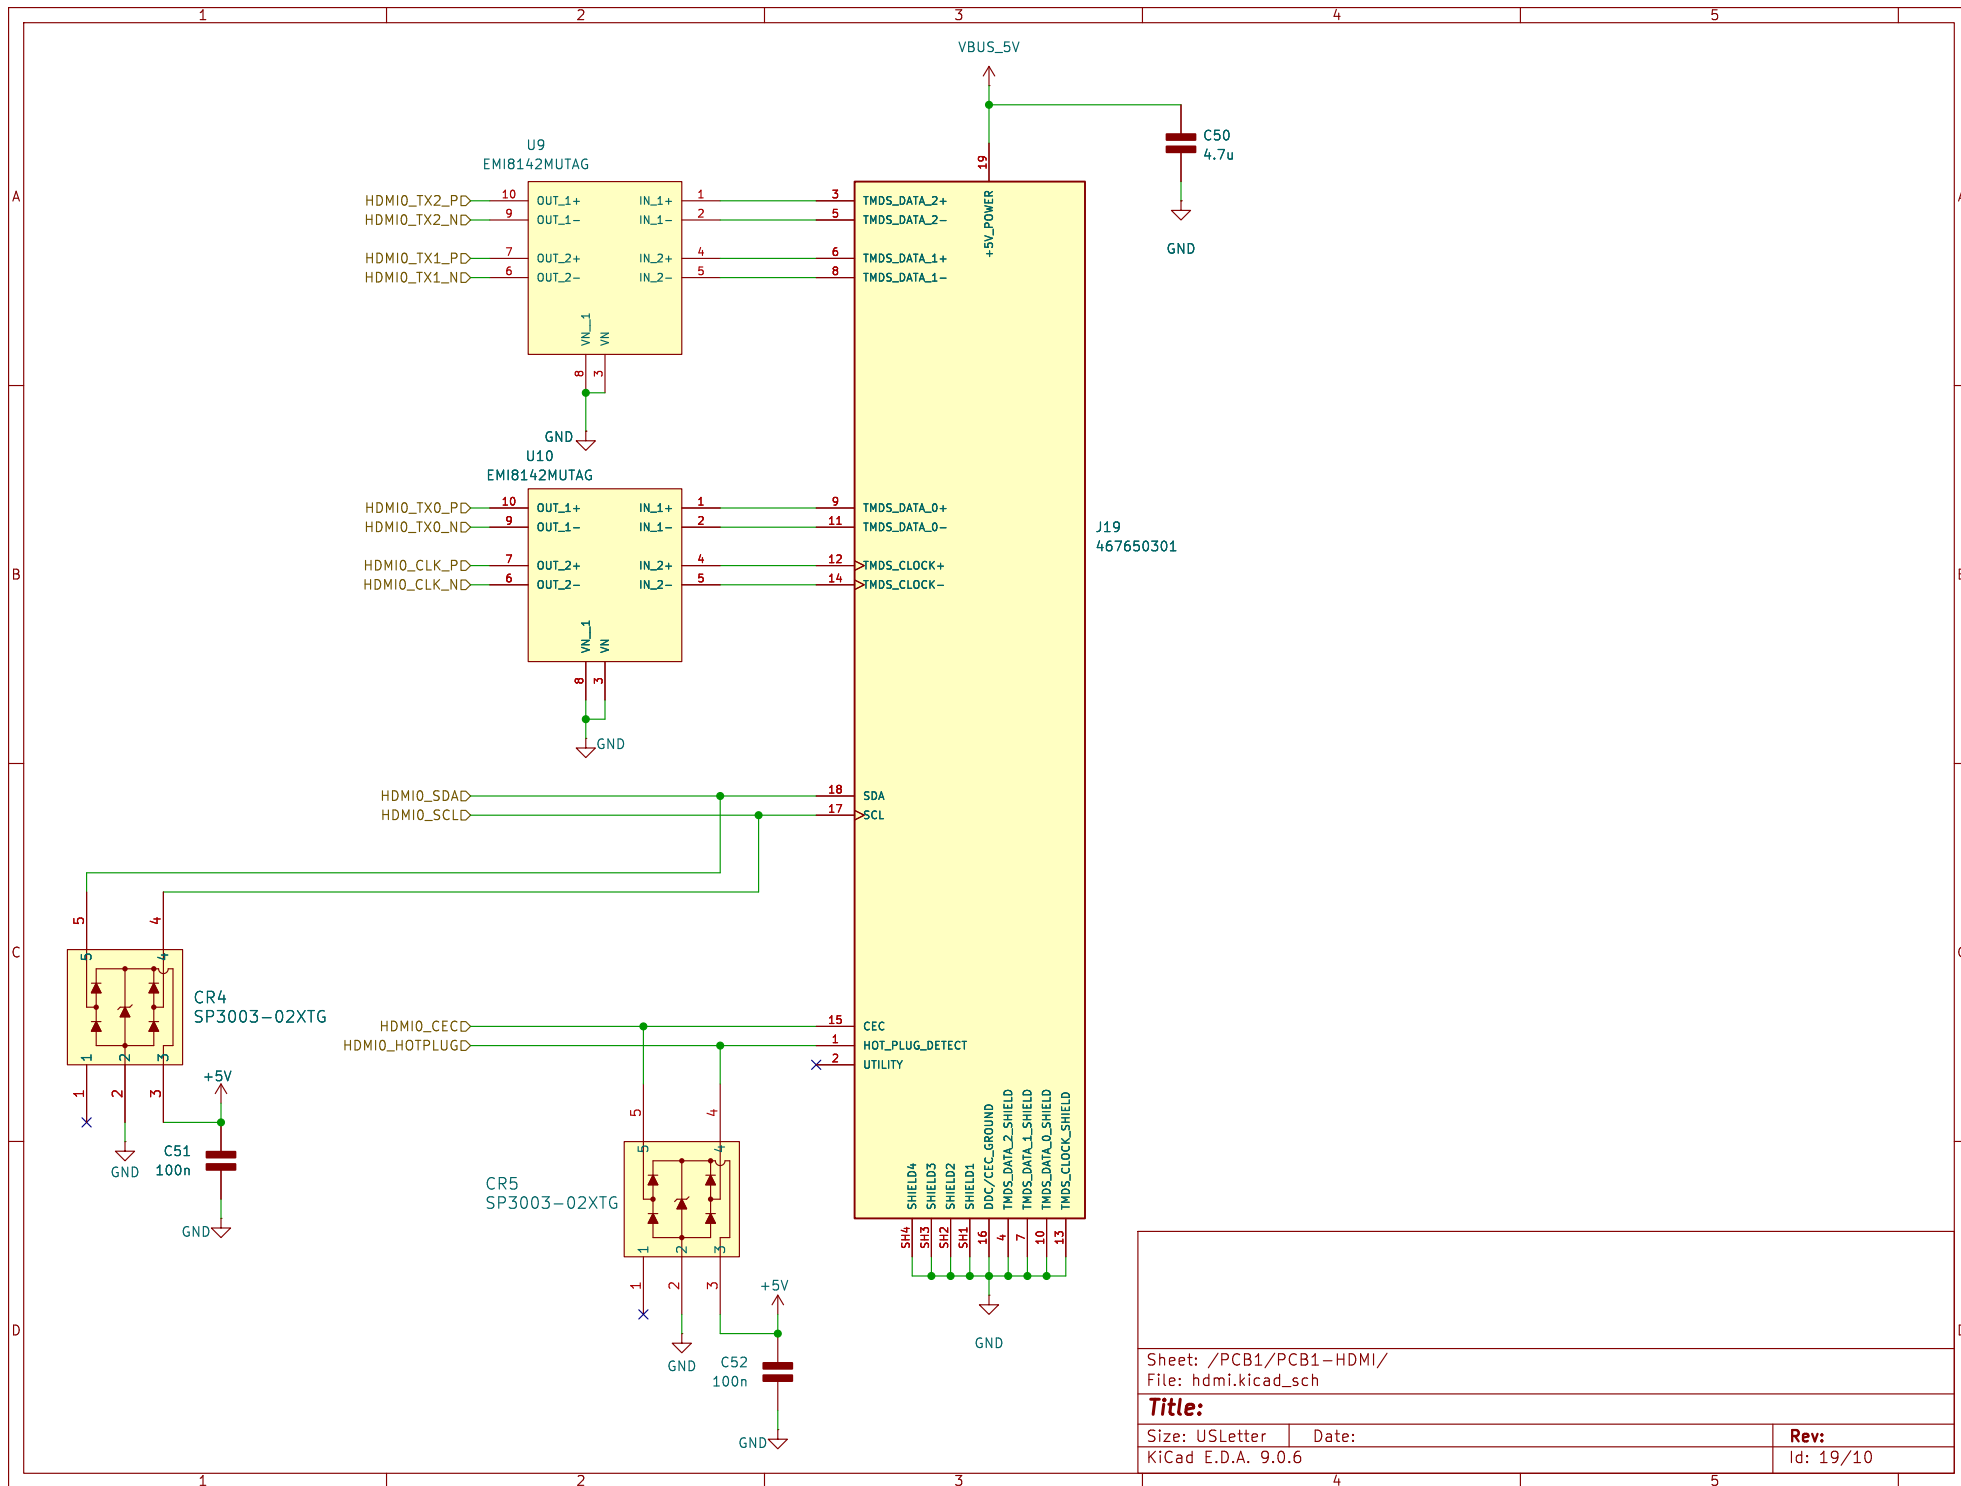

Sheet: /PCB1/PCB1-HDMI/		
File: hdmi.kicad_sch		
Title:		
Size: USLetter	Date:	Rev:
KiCad E.D.A. 9.0.6		Id: 19/10

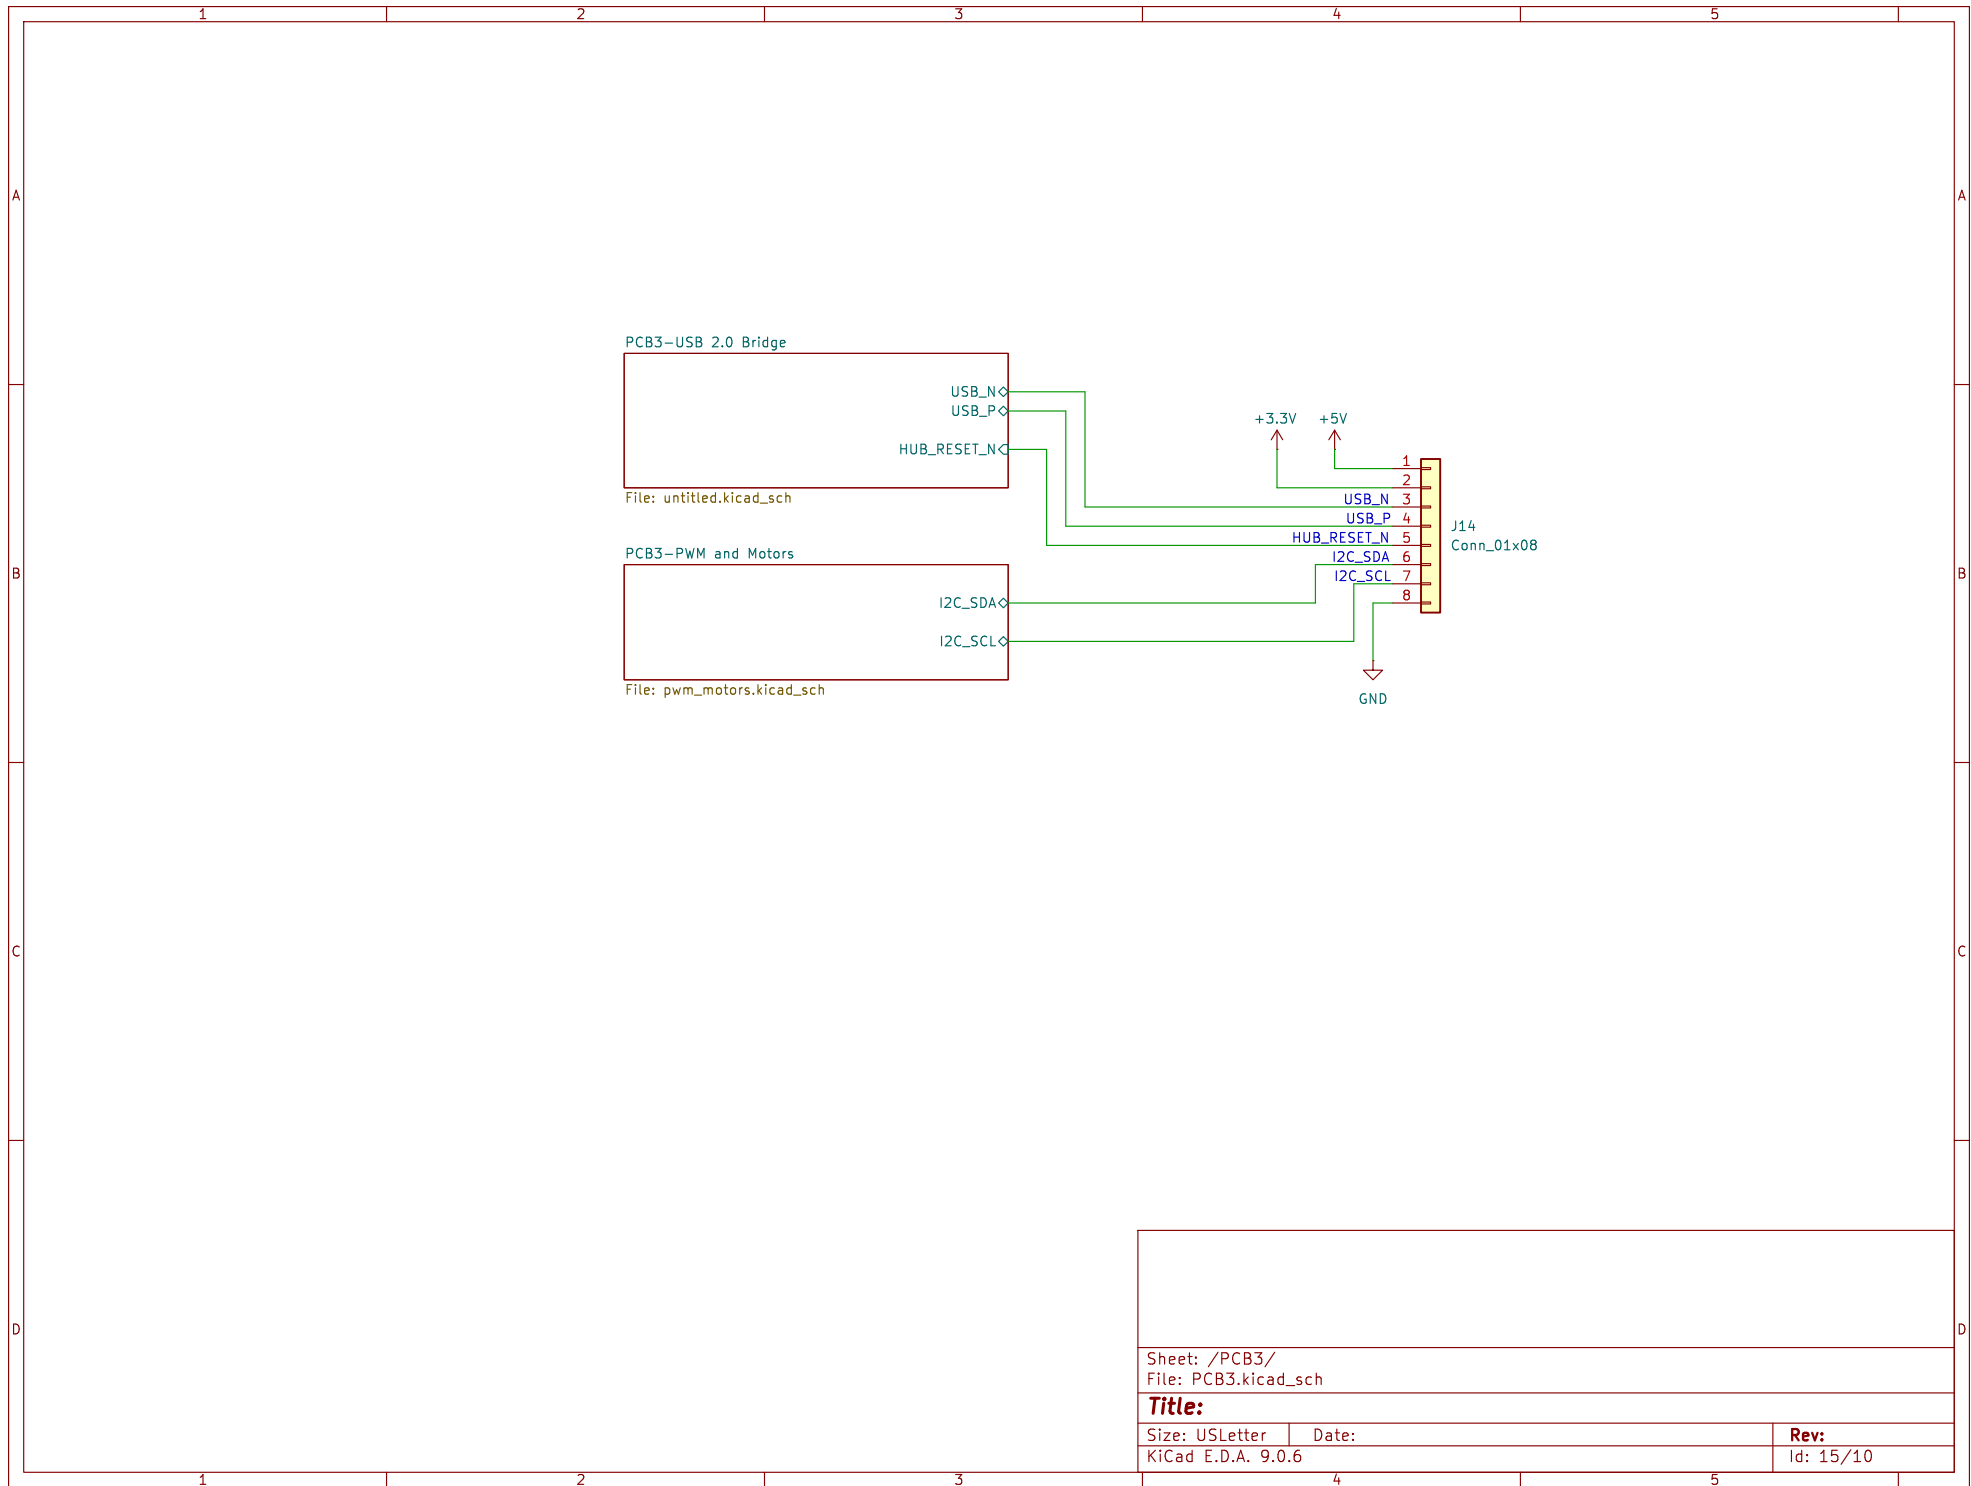

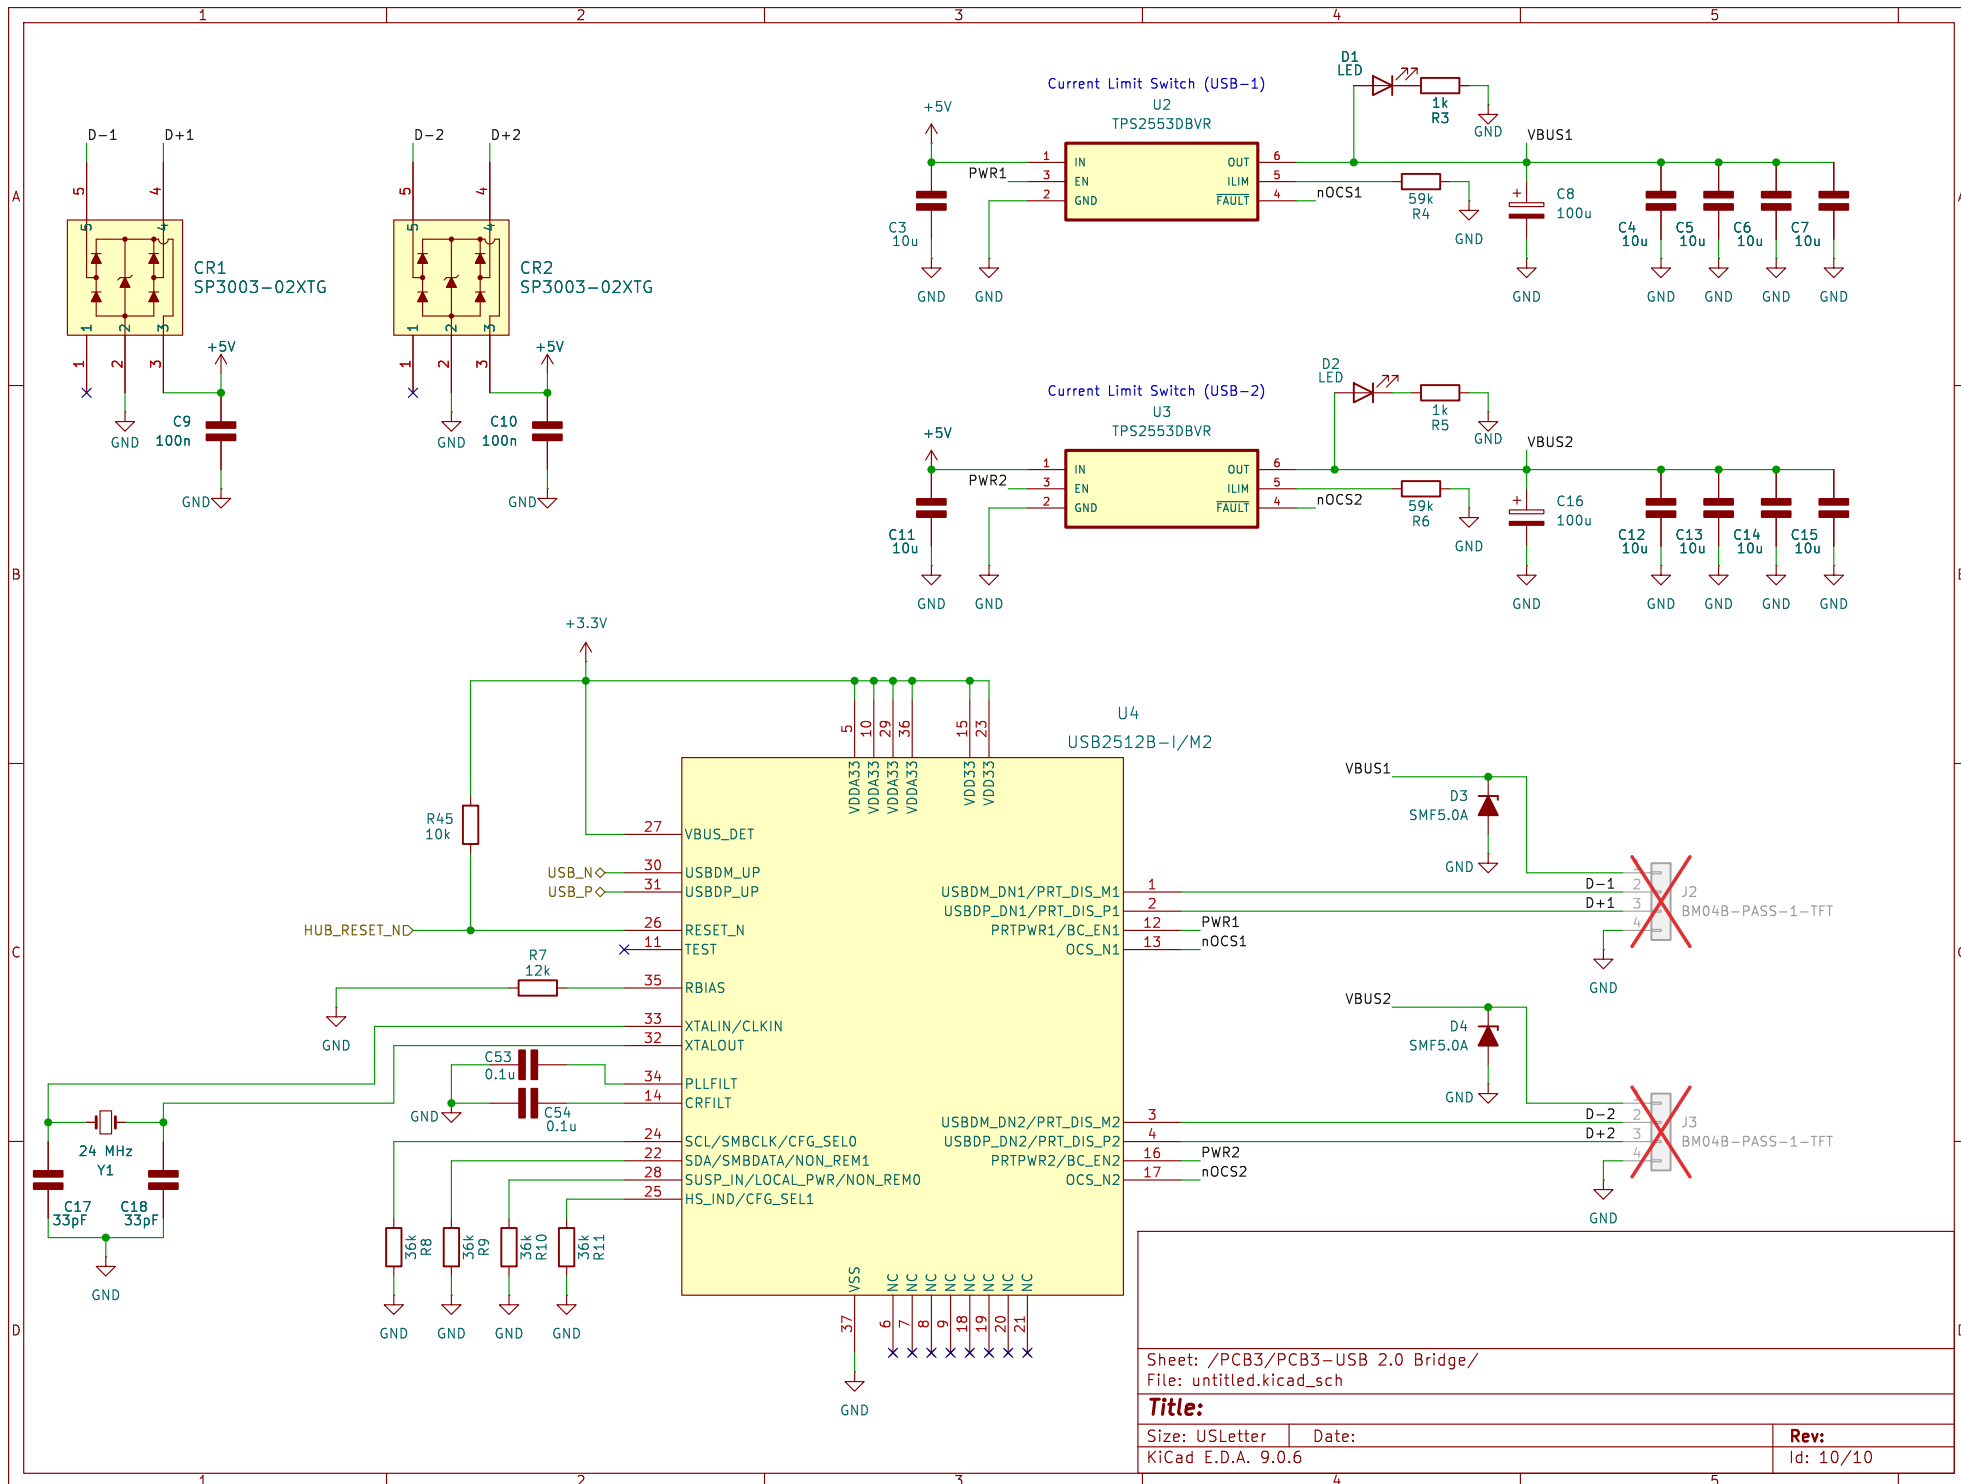

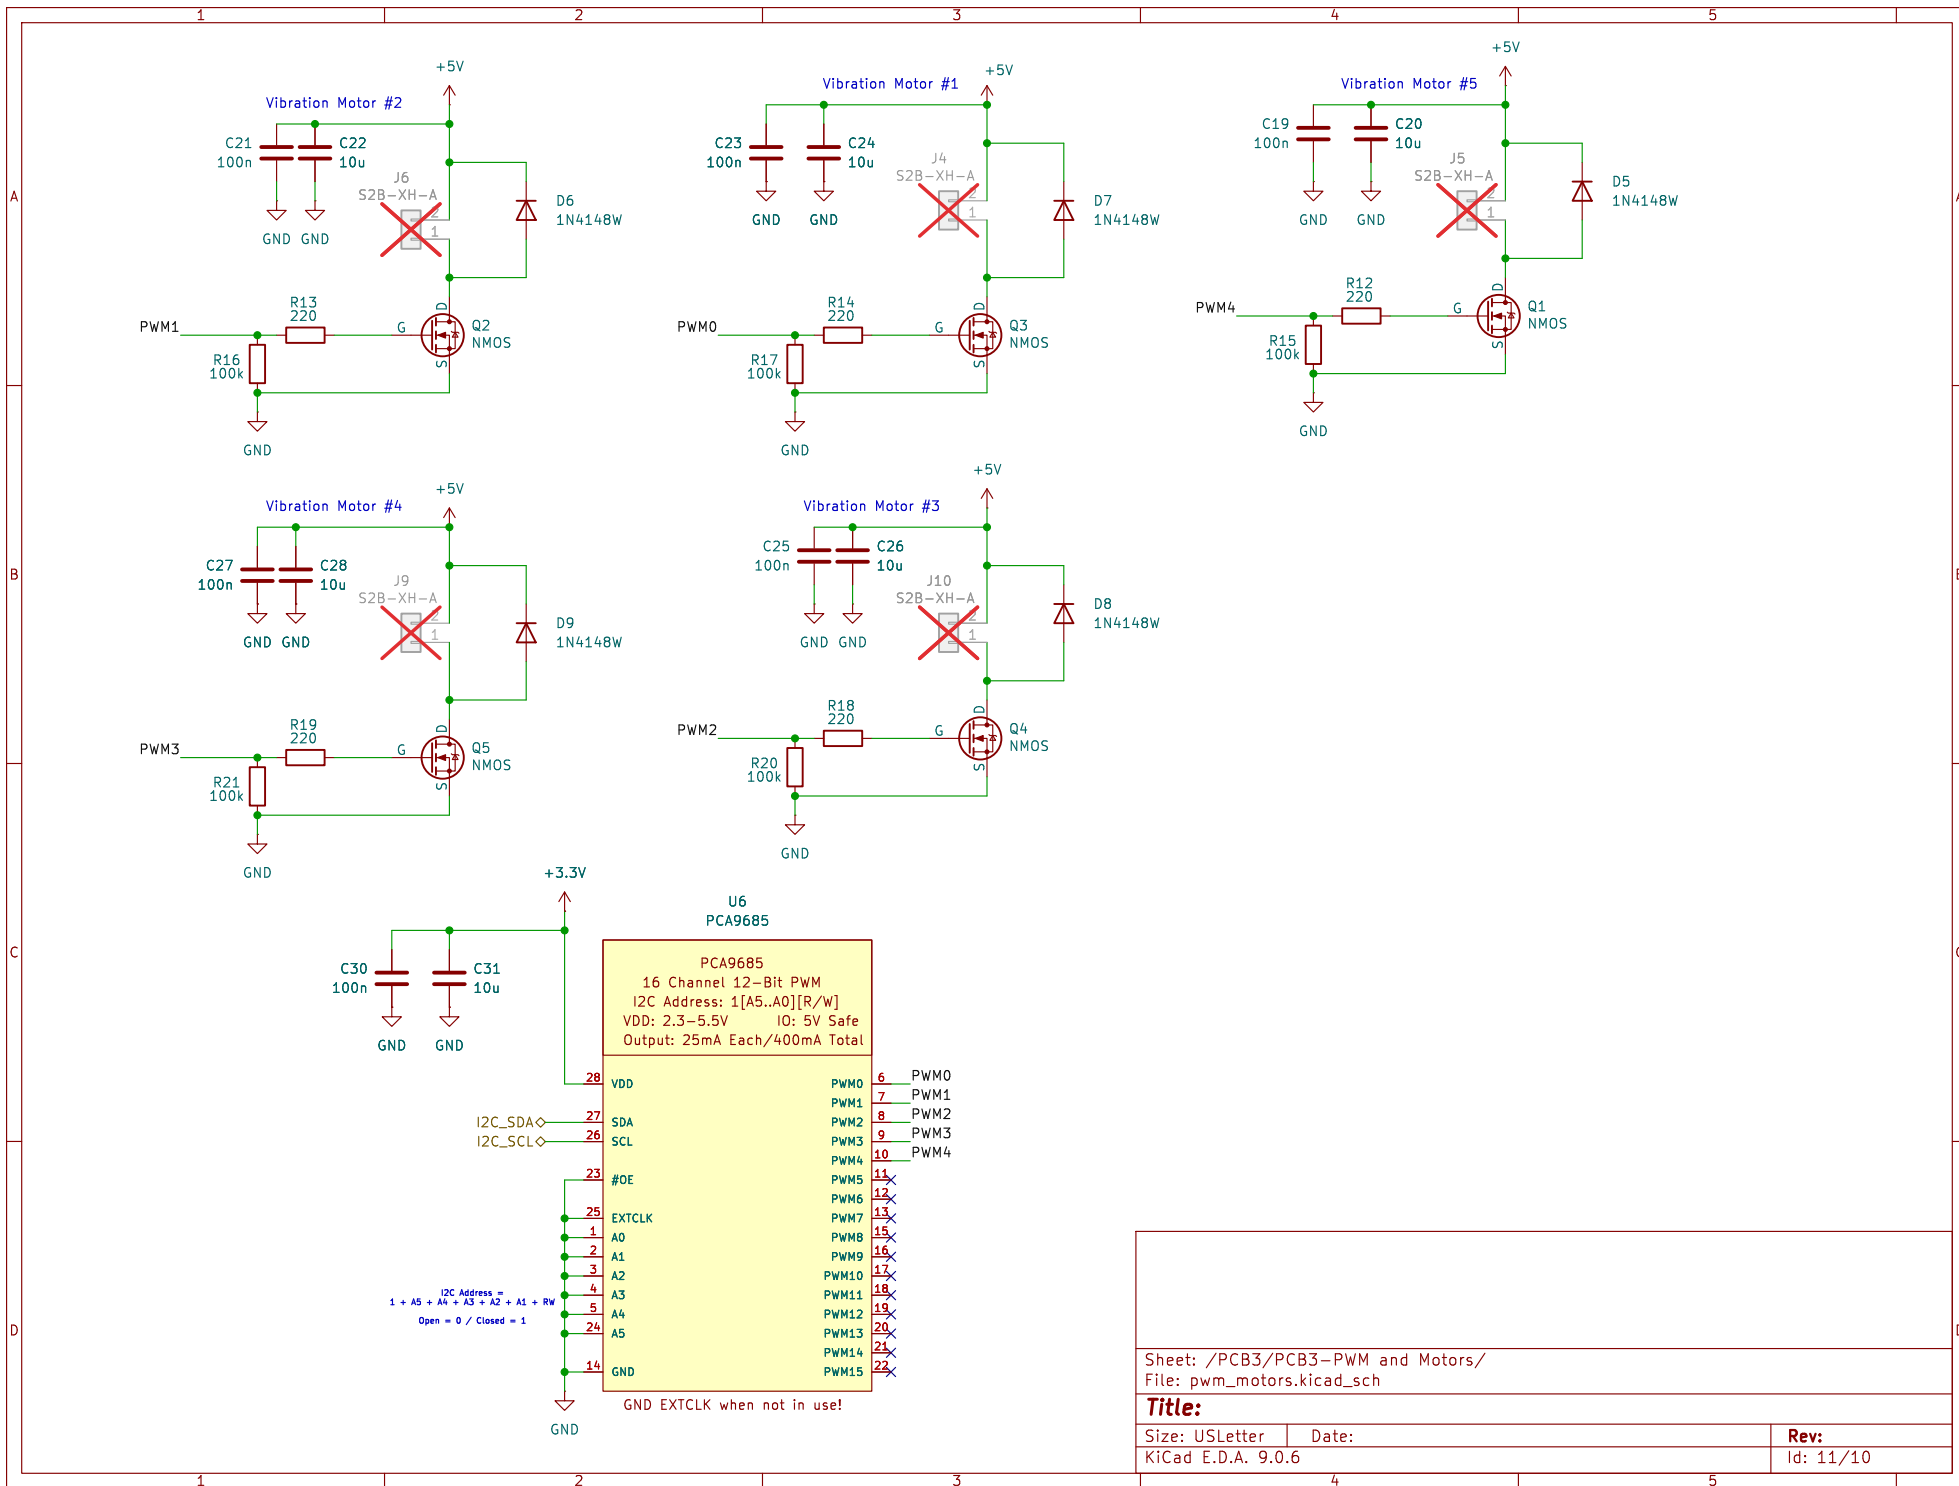

Sheet: /PCB3/PCB3-PWM and Motors/
 File: pwm_motors.kicad_sch

Title:

Size: USLetter Date:
 KiCad E.D.A. 9.0.6

Rev:
 Id: 11/10