



Switch Matrix

[Each key = a switch in series with a diode (COL -> switch -> diode -> ROW).
The rotary encoder's push-switch sits on col P15 x row P11 (see Encoder).

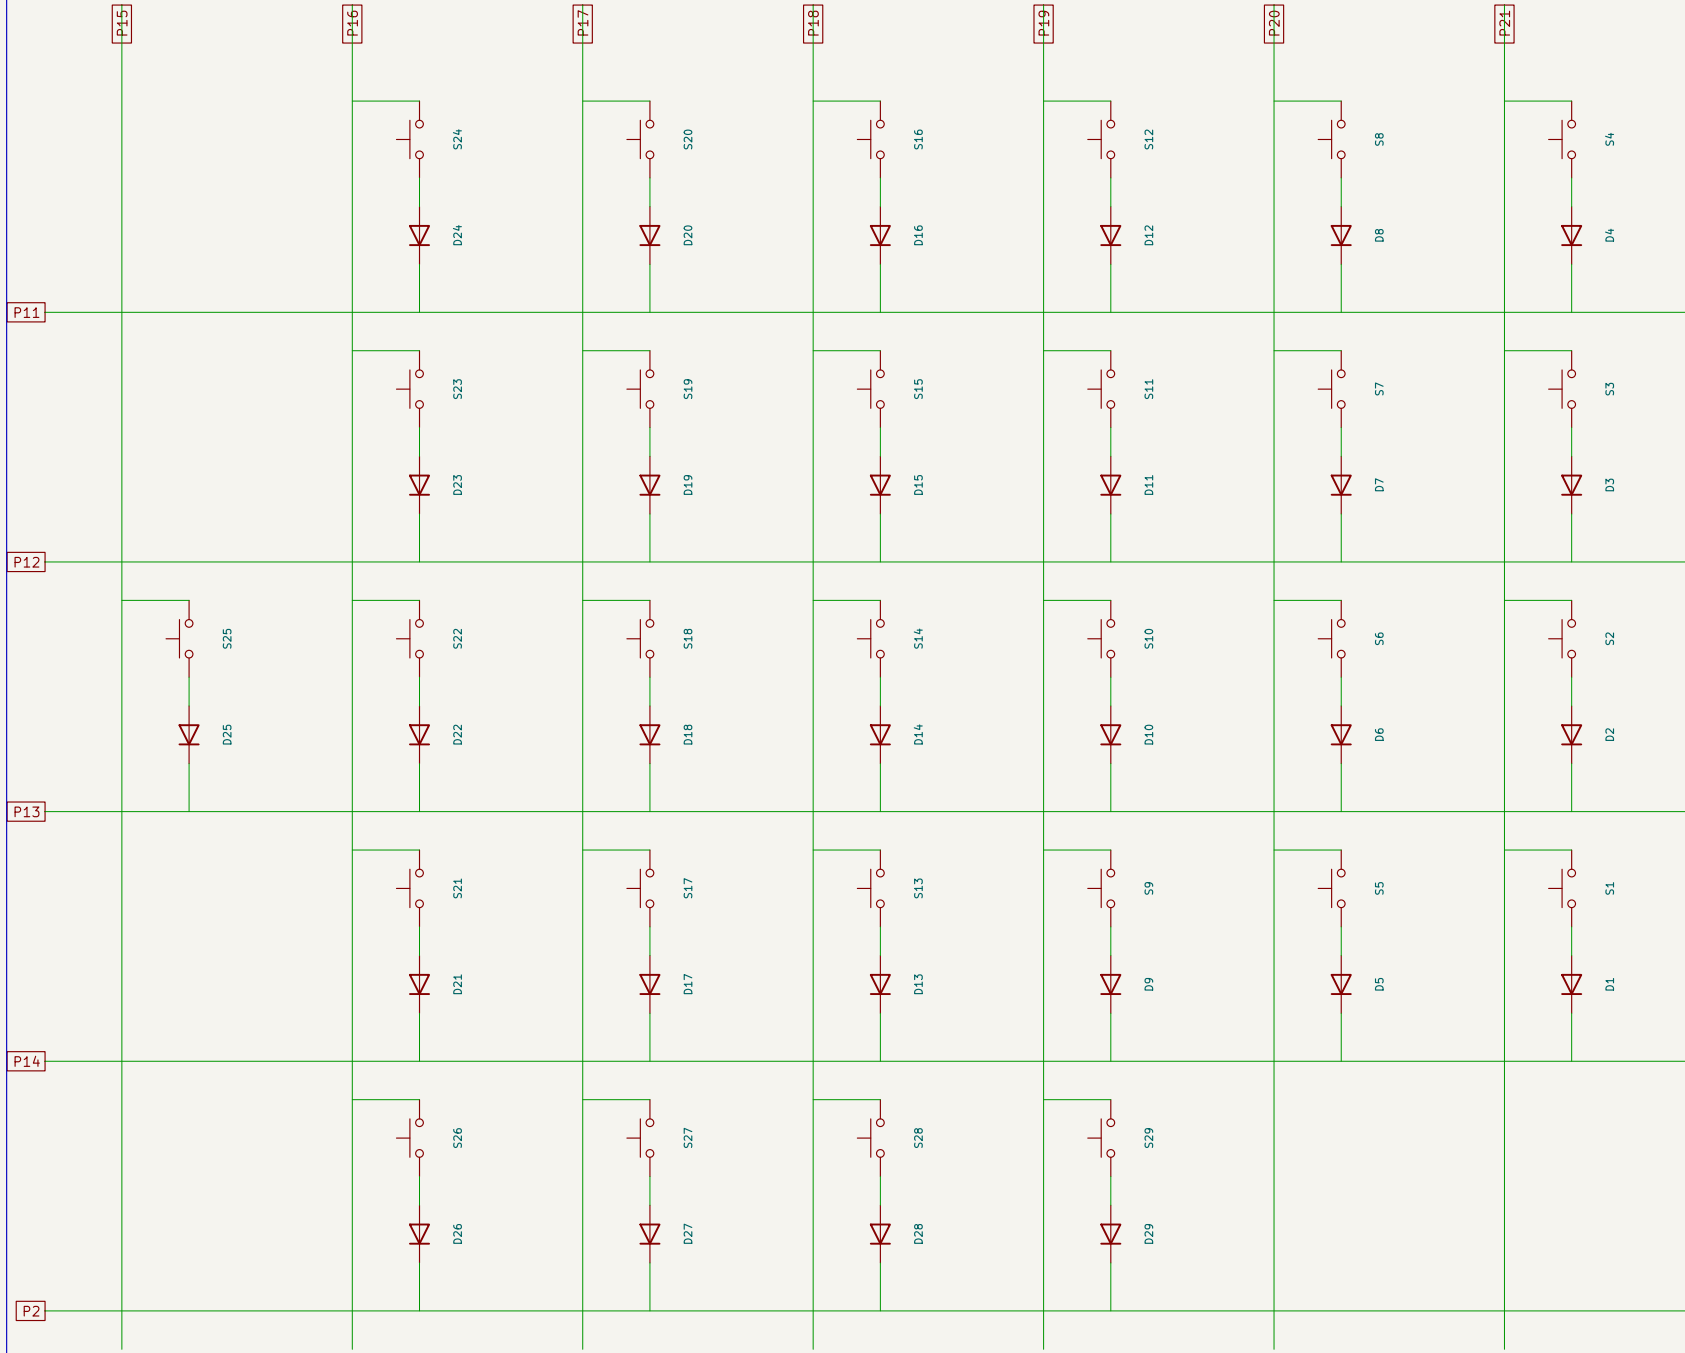


Microcontroller

nicefano (or Pro Micro compatible). Pin name = physical pin;
net label = logical signal assigned to it. Match your firmware to these pins.

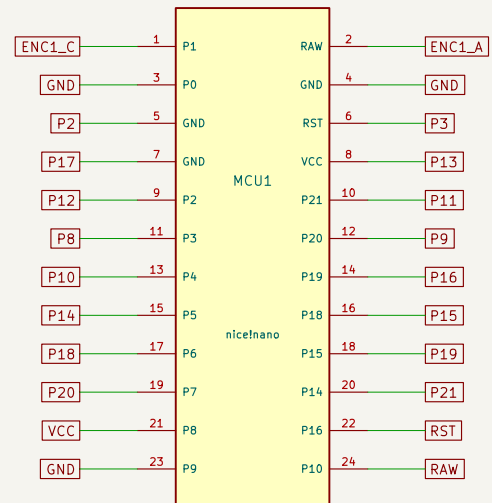

Encoder

Panasonic EVQW0001 scroll encoder, A/C to MCU, B/B to GND.
Push-switch (S1/S2) is in the key matrix (col P15 x row P11) via node ENC1_SW and diode D30.

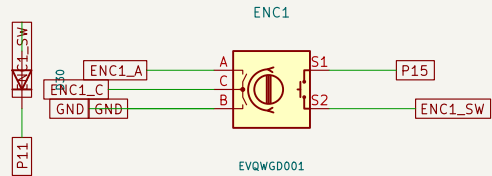

Power / Reset

Battery+ -> power switch -> nicefano RAW; Battery- -> GND.
Reset (Panasonic EQ-TuCOA) shorts RST to GND for reflashing.

