



Switch Matrix

Each key = a switch in series with a diode (COL -> switch -> diode -> ROW).
The rotary encoder's push-switch sits on col P13 & row P11 (see Encoder).

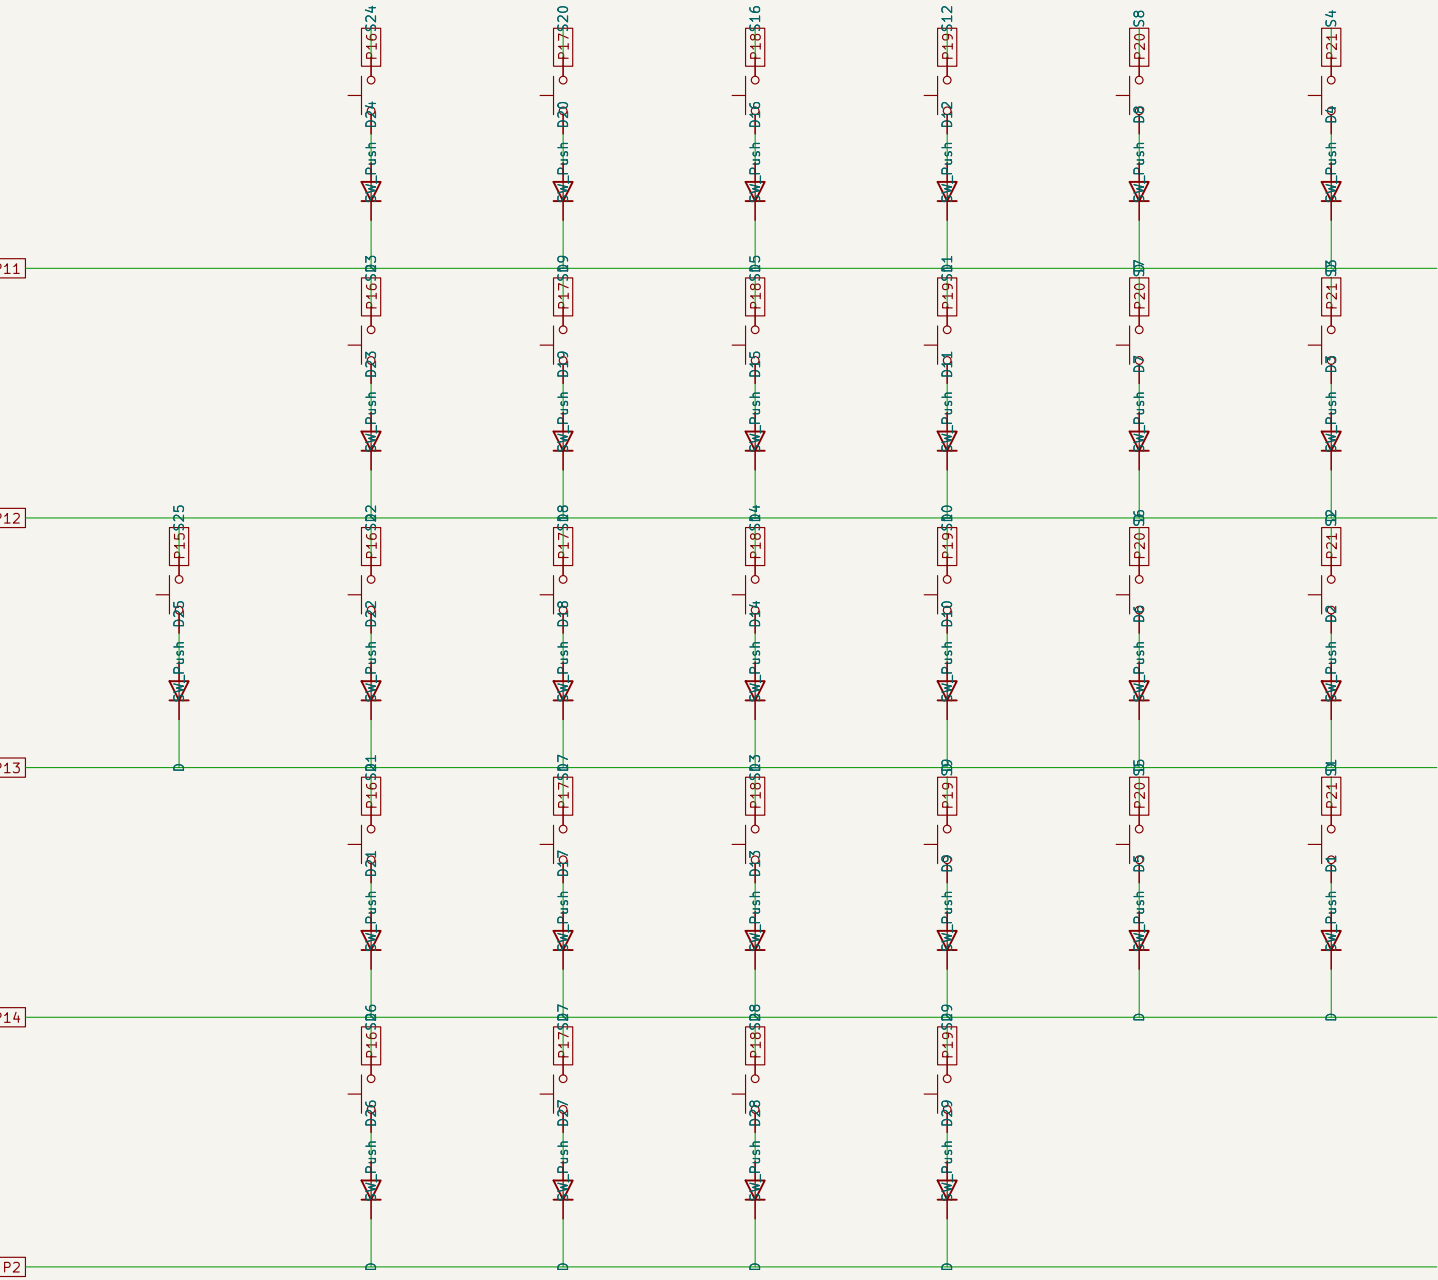


Microcontroller

nice!nano (or Pro Micro compatible). Pin name = physical pin;
ref label = logical signal assigned to it. Match your firmware to these pins.

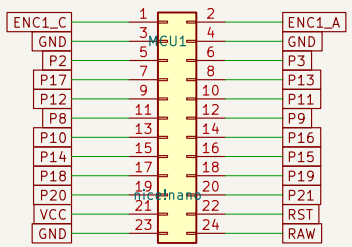

Encoder

Panasonic EVQW0001 scroll encoder. A/C to MCU; B/D to GND.
Push-switch (S1/S2) is in the key matrix (col P15 & row P11)
via node ENCL_SW and diode D30.

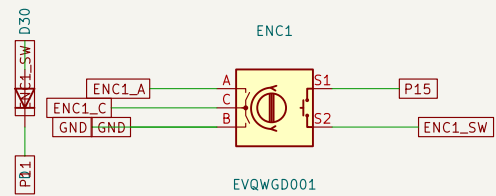

Power / Reset

Battery -> power switch -> nice!nano RAW; Battery--> GND.
Reset (Panasonic EVQ-PUC02K) shorts RST to GND for reflashing.

