

Thermal Camera

See heat in real time. Aim, read the temperature, save a picture, and watch it on a wireless second screen.

16 frames / s

32 × 24 sensor

°C / °F

Wireless screen



Point, read, save.

1 • Turn it on

Short-press **PWR**. The live picture appears after a moment.


2 • Aim

Point the sensor at what you want to measure and put it under the **crosshair**.

3 • Save

Short-press **PWR** again to save a picture to the microSD card.

READING THE SCREEN

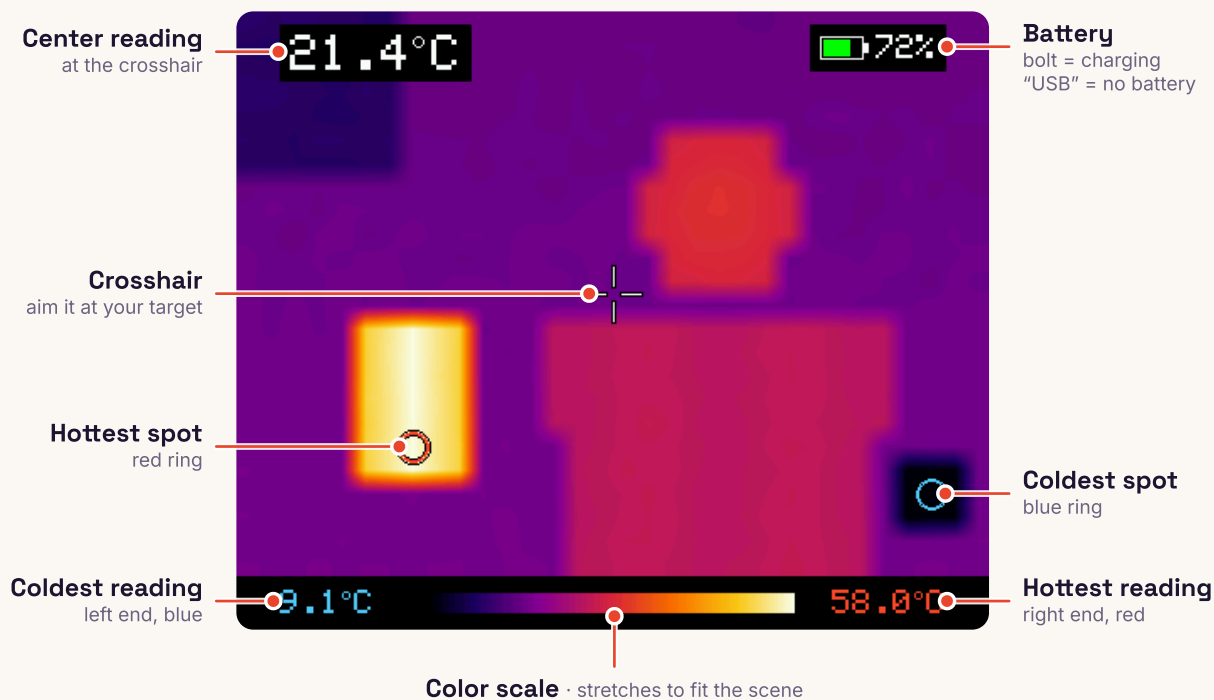

Rings follow the extremes. The red and blue rings sit on the hottest and coldest patch in view. They only move when another spot is clearly hotter or colder, so they don't jitter.

Smoothed, not slow. The picture refreshes 16 times a second and is gently smoothed, so readings stay steady while you aim. It still follows a moving object within about 0.1 s.

Two buttons and a touchscreen.

BOOT changes how the picture looks, **PWR** turns the camera on and saves pictures, and a sideways swipe switches between live view and saved pictures.

Live camera

BOOT short press

Next color palette: Ironbow → Rainbow → Hot → White hot → Black hot

BOOT hold ~1 s

Switch between °C and °F

PWR short press

Save a picture to the microSD card. When the camera is off, this turns it on.

SWIPE → left to right

Open the picture viewer (newest picture first)

Picture viewer

TAP left half

Previous (older) picture

TAP right half

Next (newer) picture

BOOT short press

Previous (older) picture

← SWIPE or **PWR**

Back to the live camera

Anywhere

- **Long-press PWR** to switch the board off. The power chip does this itself.
- **Tap the screen** to keep the camera on during the auto-off countdown, or to wake a dark screen.
- A wake-up touch or press **does nothing else**: no palette change, no picture.

Remembered settings

Your palette and °C/°F choice are kept after power-off.

Swipe tips

Swipe across at least a sixth of the screen, mostly sideways. Short, straight taps count as taps.

Choose how heat looks.

Every palette maps the coldest thing in view to the left end of the bar and the hottest to the right. Press **BOOT** to step through them.

Ironbow

default · all-round



Rainbow

most contrast



Hot

warm tones



White hot

classic grayscale



Black hot

inverted grayscale



Hold **BOOT** for about a second to switch between °C and °F. The color scale always spans at least 3 °C, so sensor noise on a plain wall doesn't look like a rainbow.

One press, two files.

Put a **FAT32 microSD card** in the slot (cards of 32 GB or less come that way). Each short press of **PWR** saves into a **thermal** folder:

- **IMG_0001.bmp**: the screen exactly as shown, with readings and color scale (448 × 368).
- **IMG_0001.csv**: all 32 × 24 temperatures in °C, laid out like the picture. Opens in Excel or Numbers.


What you'll see

Top right briefly shows **Saved IMG_0001**. With no card it says **No SD card**.

Numbering carries on from the last picture, even after power-off.

Look back at what you saved.

Swipe left to right on the live picture. The viewer opens on your newest picture and shows exactly what was on screen when you saved it.

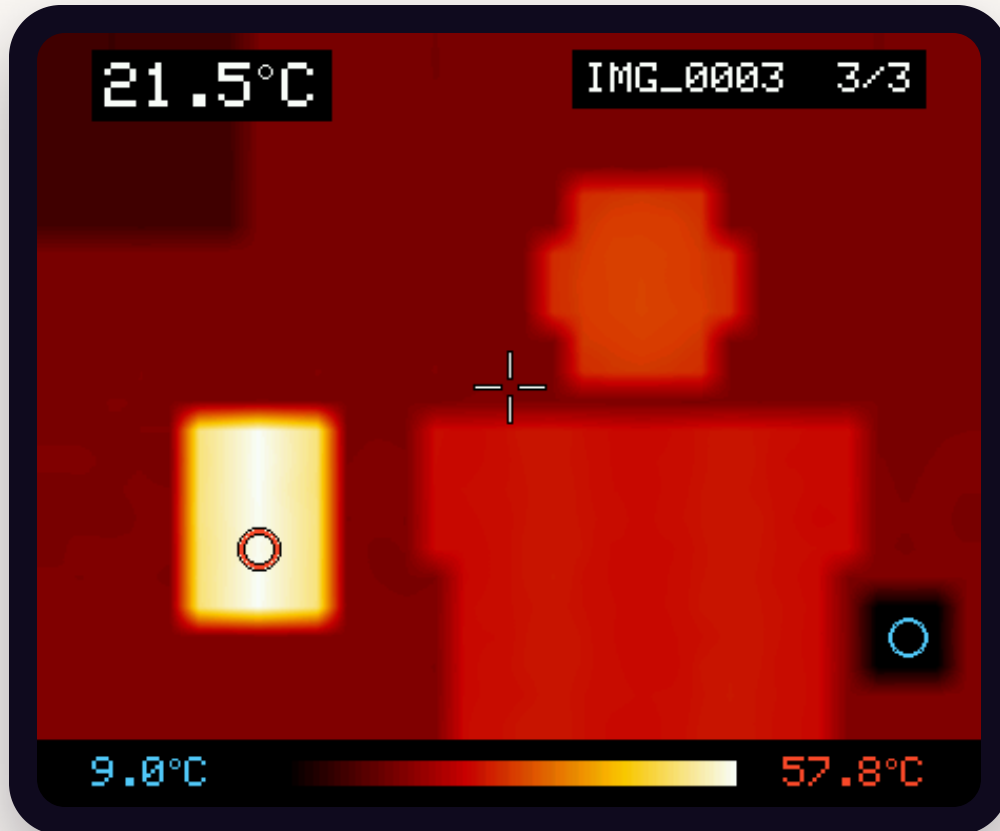

The label at the top right shows the file name and its position: picture 3 of 3. Simulated screenshot.

Older

Tap the **left half** of the screen,
or press **BOOT**.

Newer

Tap the **right half** of the screen.

Back to live


Swipe **right to left**, or press

PWR.

Pictures live on the card in each board. On a wireless screen, the viewer browses the screen's own microSD card, not the camera's.

A second screen, no router needed.

A second ESP32-S3-Touch-AMOLED-1.8 with **no thermal sensor** becomes a live wireless screen for the camera. The boards talk directly over ESP-NOW radio; expect about a room of range.

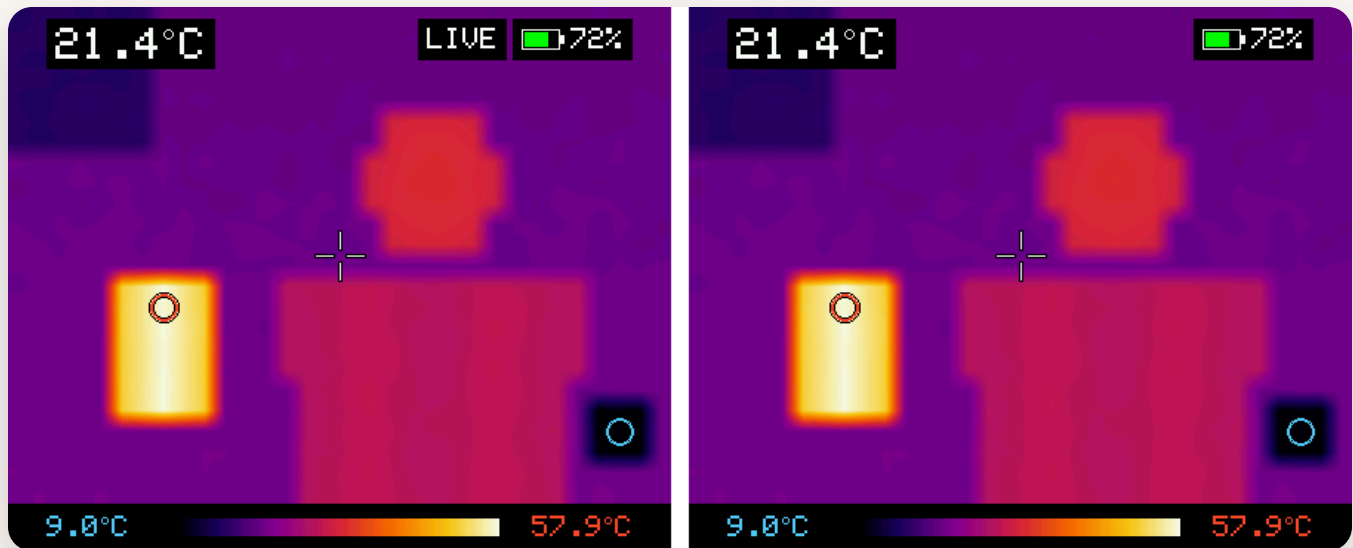

Left: the camera, with the **LIVE** badge showing a screen is watching. Right: the wireless screen, showing the same picture, palette, markers and readings. Simulated.

Set it up


- 1 **Flash the same firmware**
Use the same file on both boards. Nothing else to configure.
- 2 **Leave the sensor off the second board**
At startup it finds no sensor and becomes a screen.
- 3 **Turn both on**
The screen shows *Waiting for the thermal camera* until the camera's picture arrives.

Good to know

- Palette and °C/°F follow the camera. Change them on the camera.
- **PWR** on the screen saves what it shows to the **screen's own** card.
- The camera only transmits while a screen is listening, and won't auto-off while one is.
- With several cameras nearby, the screen stays with the first one it hears.
- Both boards must use the same radio channel (channel 1 by default).

Turns on when the camera does.

When the camera switches off or goes out of range, the wireless screen waits a little, then goes dark. On battery it keeps listening in a low-power standby and comes back on by itself when the camera returns.

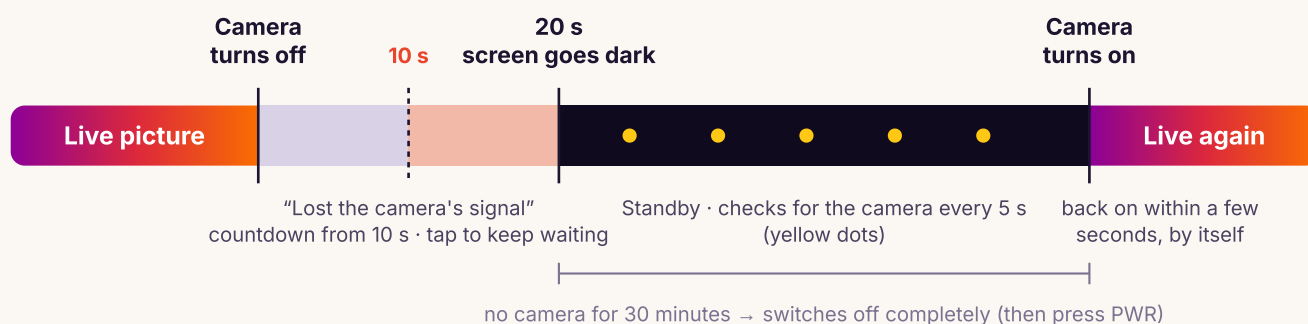

On battery

- Goes into **standby** with the screen dark, waking briefly every 5 s to ask "is the camera on?".
- **Tap the screen** or press **BOOT** to turn it on straight away.
- **PWR** works too, but is noticed at the next 5-second check.
- After **30 minutes** without the camera it powers off completely. Press **PWR** to turn it on.

On USB power

- Only the display goes dark; the board keeps listening.
- It lights up again **the moment** the camera's picture returns.
- Tap the screen to wake it any time.


While browsing pictures

On the screen's picture viewer, the normal 60-second auto-off applies instead.

The camera's battery isn't affected. A sleeping screen's quick check gets one frame back, but doesn't count as someone watching, so the camera's own auto-off still works.

Sleeps when the screen leaves.

While a wireless screen shows its picture, the camera **never turns itself off**. When that screen is switched off or goes out of range, the camera waits about 20 seconds, then goes dark, and turns back on by itself when you switch the screen on again.

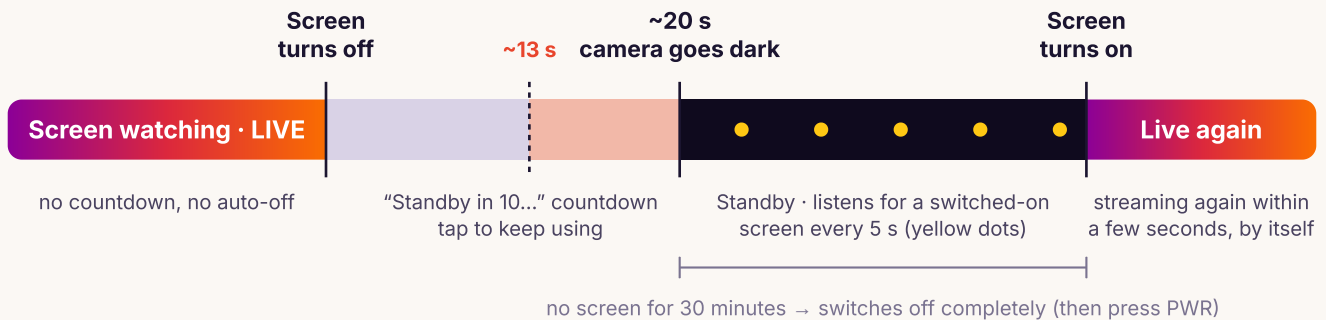

On battery

- Goes into **standby**, waking briefly every 5 s to listen for the screen.
- **Tap** or **BOOT**: on straight away. **PWR**: at the next check.
- After **30 minutes** it switches off completely.

On USB power

- Only the camera's display goes dark; it keeps running.
- The display lights up again **the moment** a screen connects.

Using it on its own

- Touch it or press a button after the screen leaves, and the normal **60-second** auto-off applies.
- When that runs out, it still waits in standby for the screen.

Two boards asleep? Wake either one. A sleeping camera only wakes for a screen that is switched on, so two boards in standby never keep waking each other. Tap or press a button on either board, and the other follows within a few seconds.

Standby uses some battery. The thermal sensor stays powered while the camera waits, so standby drains the battery faster than switching off. That's why it ends after 30 minutes.

Saves battery when you forget.

The camera counts as idle when nobody presses a button, touches the screen, or plugs in or unplugs USB. After a minute of that, it turns off.

0 s · last touch or press

50 s

60 s



"Tap screen to keep using"

On battery

The camera **powers off completely**. Press **PWR** to turn it back on. If a wireless screen was connected, it goes into **standby** instead and turns on with the screen.

On USB power

Only the **screen** turns off. Tap it, or press any button, to wake it. The waking press doesn't change the palette or save a picture.

BATTERY INDICATOR

72%

Battery level, at the top right of the picture.

Lightning bolt

The battery is charging over USB-C.

"USB"

Running from USB with no battery connected.

Someone watching remotely keeps it on. While a wireless screen is showing the camera's picture, the camera doesn't auto-off.

What the numbers mean.

A thermal camera reads the heat a surface gives off. Most surfaces behave the same way, but some don't, and it helps to know which.

Accuracy

About $\pm 1-2\text{ }^{\circ}\text{C}$ absolute. Readings settle after a few minutes of warm-up.

Readings assume an **emissivity of 0.95**, which is right for skin, wood, paint, plastic and food.

Shiny metal reads low

Polished metal reflects heat instead of giving it off, so it can read close to room temperature even when hot. This is normal for every thermal camera.

Fix: put a piece of matte tape on the metal and measure the tape.

Spot size

The sensor has 32×24 pixels. Small or distant objects cover only part of a pixel, so they read closer to the background temperature than they really are. Get closer for small targets.

Smoothing

Readings ease toward new values so they stay steady. Give the number a moment to settle after you move to a new target.

- This is a **hobby thermal imager**, not a medical instrument, fire alarm or electrical-safety tester. Never use its readings as the only basis for a health or safety decision.
- The wireless link is **unencrypted and unauthenticated**. Anyone nearby with the right equipment can receive the picture, or pretend to be a camera or a screen. Don't use it for sensitive scenes.
- Saved pictures on the microSD card are **not encrypted**. Wipe the card before you lend or give the device away.
- Wire the sensor at **3.3 V** with power disconnected, and keep its wires short.

If something's not right.

Black screen after flashing

Unplug the board and plug it back in *without* holding BOOT. It won't run new firmware while it's still in flashing mode.

"No SD card" when saving

Use a microSD card formatted FAT32 (32 GB or less). Push it in until it clicks.

"Sensor not found"

The screen lists the I2C addresses it can see. Other devices but no 0x33: check the sensor's VCC/GND and that SDA/SCL aren't swapped. none: the wires aren't where the firmware expects them.

The camera says "Wireless screen"

It didn't find its sensor at startup, so it became a screen. Check the sensor wires as above.

Wireless screen keeps waiting

Turn the camera on. Keep both boards in the same room at first, and make sure both run the same firmware and radio channel.

A board in standby won't wake

After 30 minutes in standby a board switches off completely: press PWR. If both boards are asleep, wake either one and the other follows.

"Sensor stopped" after working

A loose wire, or a long or noisy cable. Keep the sensor wires short.

Checkerboard pattern on moving objects

The shared I2C bus isn't keeping up. Lower `SENSOR_REFRESH_HZ` to 8 in `config.h` and rebuild.

Picture lags when you pan, or is jumpy

Lower `SMOOTHING` for a faster picture; raise it for a steadier one.

Swipes don't register

Swipe across at least a sixth of the screen, mostly sideways.

Text clipped in the corners

Raise `SCREEN_CORNER_RADIUS` in `config.h`.

Picture moves the wrong way

Mount the sensor pointing away from you. If it still pans backwards, change `MIRROR_IMAGE`; if upside down, set `SCREEN_ROTATION` to 3.

Flash from your browser.

No software to install. Use the ready-made firmware file from the project's firmware folder, and flash the **same file** to the camera and to any wireless screen.

- 1 **Open esptool-js**
Go to espressif.github.io/esptool-js in Chrome or Edge.
- 2 **Connect**
Plug in the board and click **Connect**. If no port appears, unplug, then hold **BOOT** while plugging it back in.
- 3 **Program at 0x0**
Set the flash address to **0x0**, choose the **.bin** file, and click **Program**.
- 4 **Restart**
Unplug and replug the board, or press its power button.

Flashing the full image resets stored settings.

Your palette and °C/°F choice go back to the defaults. Pictures on the microSD card are not touched.

SPECIFICATIONS

ITEM	VALUE
Sensor	MLX90640, 32 × 24 pixels, 55° or 110° view
Display	1.8" AMOLED, 448 × 336 picture, landscape
Refresh	16 frames per second
Accuracy	about ±1–2 °C
Storage	microSD (FAT32): BMP + CSV
Wireless	ESP-NOW, about a room of range
Boards	Waveshare ESP32-S3-Touch-AMOLED-1.8, original and V2

DEFAULTS YOU CAN CHANGE

SETTING IN CONFIG.H	DEFAULT
IDLE_OFF_SECONDS	60
SCREEN_LINK_TIMEOUT_SECONDS	20
CAMERA_LINK_TIMEOUT_SECONDS	20
STANDBY_CHECK_SECONDS	5
STANDBY_MINUTES	30
WIRELESS_SCREEN	true
START_IN_FAHRENHEIT	false
SCREEN_BRIGHTNESS	200

Changing these needs an Arduino build; see the project README.