

FISKER OCEAN · PULSE HUD

Car Controls Manual

What you can control from the center screen, where each control lives, and how to read whether a control changes the car or only shows its state. Includes the two parked trials that unlock the greyed controls.

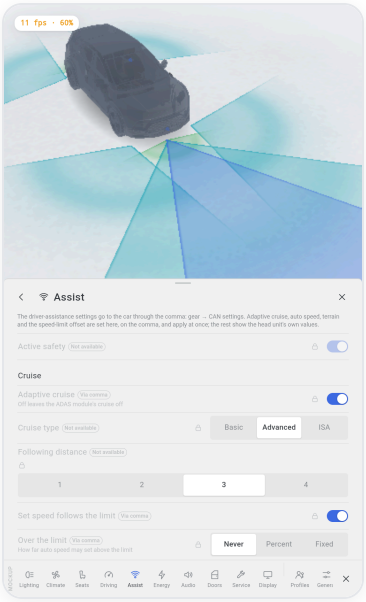

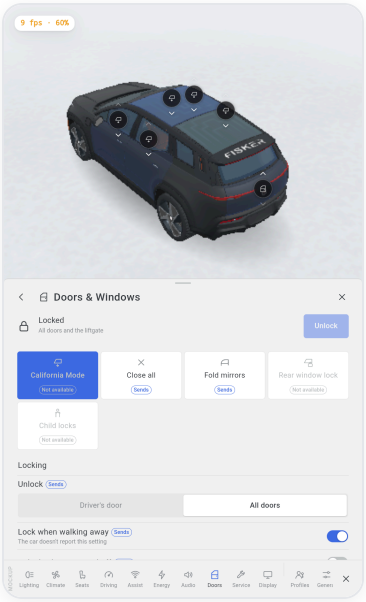



App Mrichchhakatikam (OceanScape fork) **Date** 2 Nov 2026 **Branch** pulse-coexist

Screens demo state (no live car), captured at Pulse size 1080×1784

1 · Opening the controls



Tap the car → the dock rises; badges mark each zone.

Tap the car in the 3D view. The camera lifts to a top-down view, the roof fades so the cabin shows, and a **dock of categories** rises along the bottom. A glowing badge sits on the car over the part each category is about (the headlight, a vent, a seat, the charge port, a window).

Tap a category to open its **sheet** over the lower screen; the car stays framed above it and shows the state the sheet can't. Drag the sheet's grab-handle to change its height. The dock stays docked, so you move between categories without closing. Tap ✕ (or tap away from the car) to close.

The dock scrolls: **Lighting, Climate, Seats, Driving, Assist, Energy, Audio, Doors, Service, Display**, then the system panels **Connectivity, Profiles & Keys, Navigation, General, Software**.

The "MOCKUP" tag on the left edge means no live car is connected — these captures are the demo state. On the car the values are live.


2 · Reading a control

Every control carries a small tag that says what it does on the car. This is the single most important thing to read before you touch anything.

TAG	WHAT IT MEANS
Sends	You can set it. The app sends the head unit's own message for that control and shows the car's reply when it comes back. Example: headlights, seat heat, lock, fold mirrors.
Reads only	Shows the car's current value; you can't change it from here. Example: follow-me-home time, regen level, tyre pressures.
Via comma	A driver-assistance setting. It goes through the comma to the ADAS module and applies at once — so it works only when the comma is connected. Example: adaptive cruise, set-speed follows the limit.
Not available	Greyed, with a lock. Either the car has no message for it, or the head unit overwrites ours every cycle. Some of these can be unlocked by the **parked trial** (section 11).

Controls on the car itself. Some controls aren't in the sheet — they're on the 3D car: drag the **chevrons** on each window, the sunroof and the liftgate; tap the **heat chips** on the rear seats; use the **jog pad** for seat position; read **tyre pressures** on the wheels.


3 · The categories

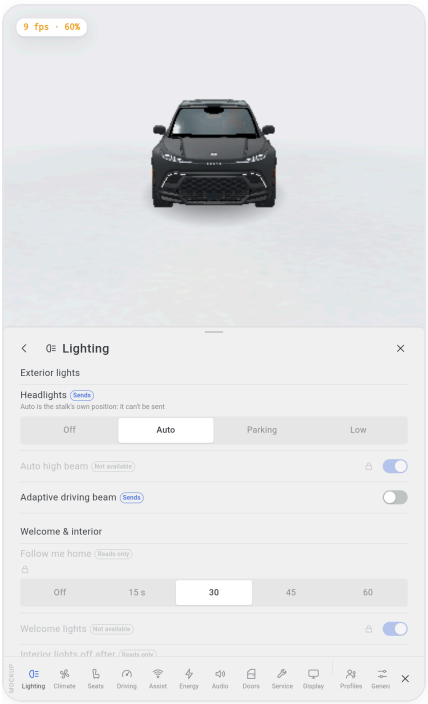

Lighting

Lighting

- **Headlights** Sends — Off / Auto / Parking / Low. Auto is the stalk's own position and can't be sent.
- **Adaptive driving beam** Sends.
- **Auto high beam** Not available — a driver-assistance setting (unlock in the trial).
- **Follow me home**, **Interior lights off after** Reads only.
- **Ambient lighting** + **brightness** Not available — head-unit-owned (unlock in the trial).

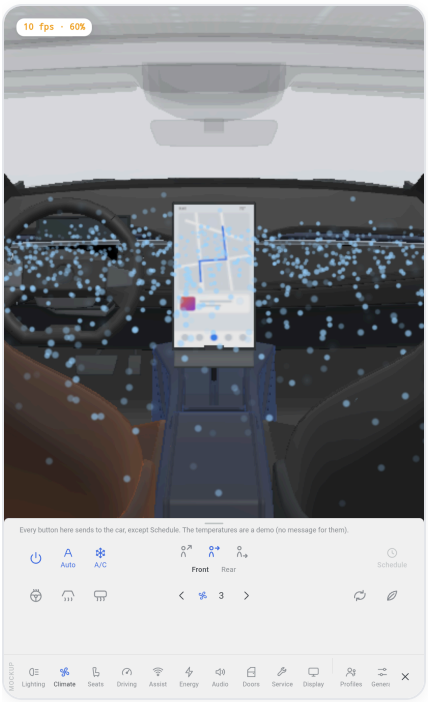


Climate

Climate

Every button here sends to the car, except Schedule. The temperatures shown are a demo (no message for them).


- **Power**, **Auto**, **A/C** Sends.
- **Airflow** — Front / Rear direction, windshield and rear defrost.
- **Fan speed** — step with the chevrons.
- **Recirculate** and **eco**.

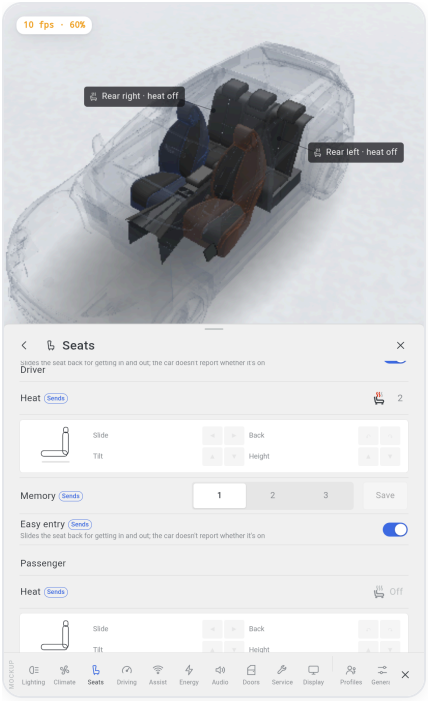

Seats — jog pad & heat chips

Seats


- **Heat** (each seat) Sends — levels 0–3; rear seats as chips on the car.
- **Position** jog pad Sends — slide, tilt, seatback, height, recline. Hold a button to move; see the trial in section 11 for how the seat-move message is sent.
- **Memory** 1 / 2 / 3 Sends — recall a position. Saving is a head-unit key: hold its memory button in the car.
- **Easy entry** Sends — slides the seat back for getting in and out.

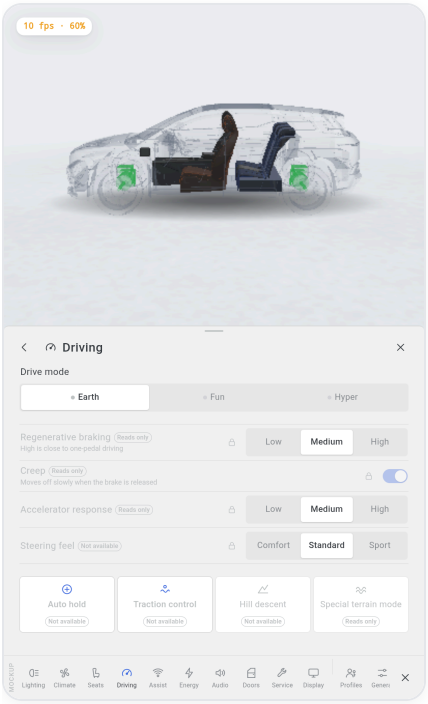

Driving

Driving

- **Drive mode** — Earth / Fun / Hyper. Sending the mode is head-unit-owned (unlock in the trial).
- **Regenerative braking**, **Creep**, **Accelerator response** Reads only — unlock in the trial.
- **Steering feel**, **Auto hold**, **Traction control**, **Hill descent** Not available.

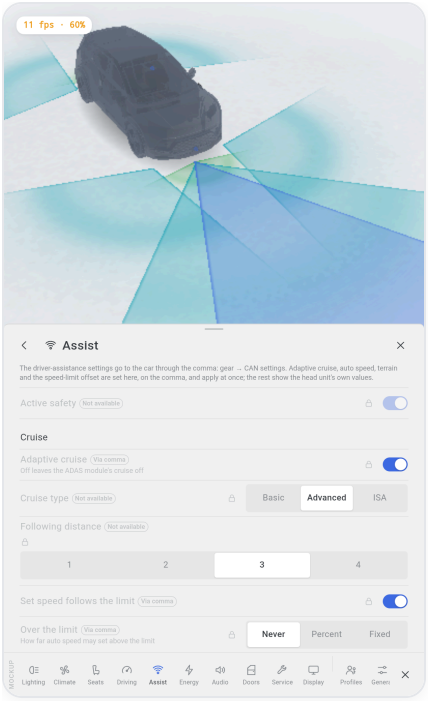


Assist — routes through the comma

Assist Via comma

These go to the car through the comma (gear → CAN settings) and apply at once; the rest show the head unit's own values. Needs the comma connected.


- **Adaptive cruise**, **Set speed follows the limit**, **Over the limit** (Never / Percent / Fixed) Via comma.
- **Active safety**, **Cruise type**, **Following distance** Not available without the comma.
- Sections: Cruise, Lane keeping, Collisions, Blind spot, Speed & signs, Parking.

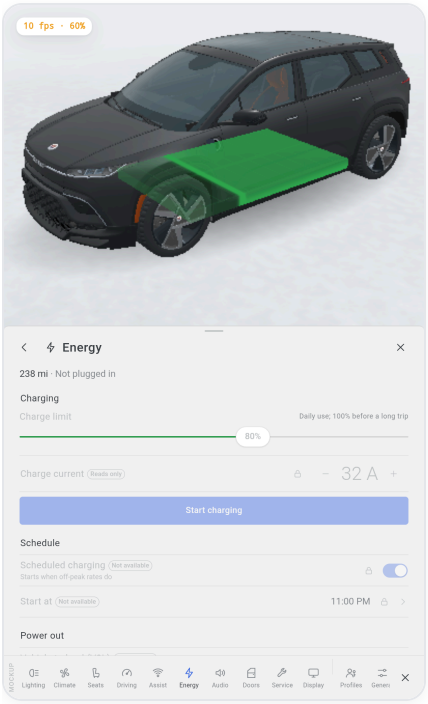

Energy

Energy

- **Charge limit** — slider (daily use vs. 100% before a long trip). Head-unit-owned; unlock in the trial.
- **Charge current** Reads only.
- **Start charging** — unlock in the trial (charging is on the trial list).
- **Scheduled charging** / **Start at** Not available.
- **Power out (V2L)** — unlock in the trial.

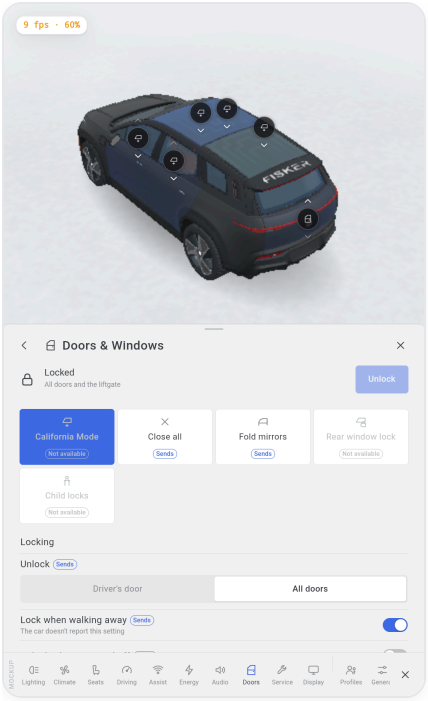

Doors & Windows — on-car chevrons


Doors & Windows

- **Lock / Unlock** Sends — all doors or the driver's door; **Lock when walking away**.
- **Close all**, **Fold mirrors** Sends.
- **California Mode** Not available — head-unit-owned (unlock in the trial).
- **Rear window lock**, **Child locks** Not available.
- **Windows, sunroof, liftgate** — drag the chevrons on the car.

The rest

CATEGORY	WHAT'S THERE
Audio	Equalizer, Sound, Radio, Announcements. Mostly greyed — one CAN frame carries every volume with nothing to copy, so the app never sends audio. It stays greyed even in the trial.
Service	Vehicle info, Tyre pressures Reads only (on the wheels), Help.
Display	HUD layout (Classic / Glance strip / Tile dash), theme, units. These change the *HUD*, not the car, so they're always available.
Connectivity · Profiles · Navigation · General · Software	System panels. Shown with *Settings → Debug → Demo car controls*; informational on the HUD.

4 · Unlocking the greyed controls — the parked trials

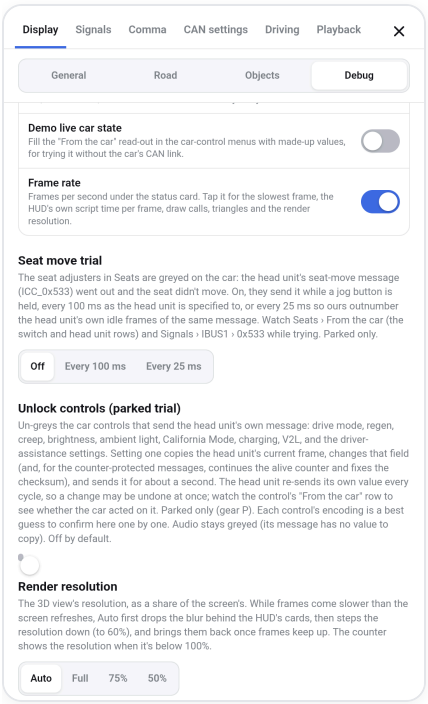

Settings → Display → Debug

The greyed controls are off because the head unit owns their message and re-sends its own value every cycle, or because they're driver-assistance settings. Two switches in **Settings → Display → Debug** turn on a parked trial that sends them anyway. Both are **off by default** and work **only in Park (gear P)**.

Seat move trial

Off / Every 100 ms / Every 25 ms. Makes the seat adjusters send the head unit's seat-move message (`ICC_0x533`) while a jog button is held — at 100 ms as the head unit is specified, or 25 ms so ours outnumber the head unit's idle frames. Watch *Seats → From the car* and *Signals → IBUS1 → 0x533*.

Unlock controls (parked trial)

Un-greys the controls that send the head unit's own message: **drive mode, regen, creep, brightness, ambient light, California Mode, charging, V2L**, and the **driver-assistance settings**. Setting one copies the head unit's current frame, changes that one field (and, for the counter-protected messages, continues the alive counter and fixes the checksum), and sends it for about a second.

What to expect. The head unit re-sends its own value every cycle, so a change may be undone almost at once — watch the control's *From the car* row to see whether the car acted on it. Each control's encoding is a best guess to confirm one by one. Audio stays greyed. The trial refuses to send while the car is out of Park.

About these screenshots. They were captured with no live car, so the values (speed, charge, pressures, temperatures) are demo placeholders and every control's live/greyed state is the default. On the car, values are live, controls follow what the car reports, and the trial controls are available only in Park.