


7 SETTING-UP


7.1 First time turn on

Note ! *Always turn on all NMEA “listeners” and “talkers” connected to the system before the first time you turn on the IS15 system. This includes turn on after a COMMUNICATION RESET or a MASTER RESET. The system will then automatically configure the IS15 NMEA ports as talkers (NMEA out) or listeners (NMEA in).*

Before leaving the factory a Master Reset has been performed on all instruments. The first time power is applied to an instrument, the display will prompt you to press the illumination key.

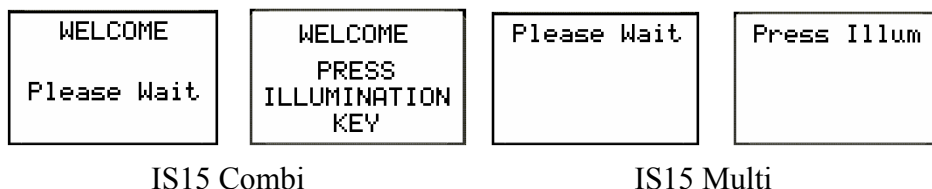


To assign an instrument to a system, press the button. In a multiple instrument system the instruments are assigned and given an Id number in the same sequence as the buttons are pressed. The instrument that is assigned as #1 will be the master unit and broadcast common set-up information on the Roblink to the other instruments.

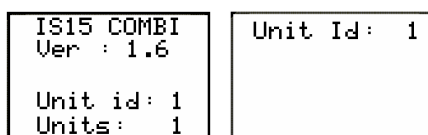

Notes !

1. *When assigning more than one instrument to a system, allow an interval between each assignment, while the instruments read “Please Wait”.*
2. *With an Expander in the system this will always have Id no. 1, i.e the first instrument to be assigned will then be Id no. 2.*

After having assigned all instruments in the system, turn the power Off and then On (the instruments will display POWER OFF [P.OFF] if you forget). The system will now display the start-up screens.

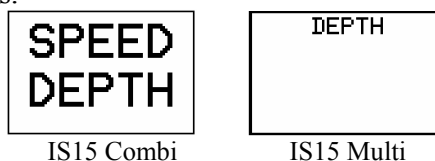


Note ! *When an instrument is replaced it is important that a Master Reset has been made on the new one before it is connected to the system. Refer to section 9.5 Local Master Reset on page 118.*

7.2 Installation and Calibration Menu

After installation, certain functions in the system should be calibrated to take into account the physical position and type of transducers installed. Furthermore the preferred display units should be selected.

The installation screens of the IS15 digital instruments are arranged in a 'table' as below. It consists of a number of menu groups, each group being a logical collection of screens. Access to the menu and the individual screens are described below.

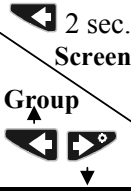 2 sec. Screen Group	Screen 1	Screen 2	Screen 3	Screen 4	Screen 5	Screen 6	Screen 7	Screen 8
								
Group 1 General	Illumination bank	LCD Contrast	Shop mode (on/off)	NMEA communication In/out	Roblink com. & id (on/off)	Roblink test *	Com. (munication) Reset	Master reset
Group 2 Depth	Depth unit	Depth offset	Depth source *					
Group 3 Boat speed	Speed unit	Log calibration factor	Log calibration SOG	Log calibration Distance	Log source *			
Group 4 Temperature	Temperature unit							
Group 5 Wind	Wind Speed unit	Wind angle offset (Automatic)	Wind angle offset (Manual)	Wind source *				
Group 6 Navigation	Distance unit	Pos. source* Nav. Source *						
Group 7 Compass	Compass calibration	Heading offset	Bearing unit	Heading source *				
Group 8 Rudder *	Rudder angle offset	Rudder angle source						
Group 9 Expander **	Local Master Reset	Software Version						

* IS15 Combi only

** IS15 Combi only. Applies with an IS15 Expander in the system.

1. Press the  button and hold for 10 seconds to access the Installation Menu.
2. Apply a short press on the  or  button to select a group of screens in the Installation Menu.
3. Again press and hold the  button for 2 seconds to access the screens in the selected group.
4. Apply a short press on the  or  button to select a particular screen in the group.
5. Press the  button and hold for 2 seconds to change a setting shown on a screen. The item to be set starts flashing.
6. Apply short presses on the  or  button to change or decrease/increase the setting. A quick double press will start an automatic count down or count up respectively (autorepeat).
7. Press the  button and hold for 2 seconds to save a setting.
8. Apply a short press on the  button to show the next screen or again press and hold the  button for 2 seconds to return to the group screen.
9. Press and hold the  button for 2 seconds to return to the main screen.

The flow chart below shows the principle of how to access the installation set-up menu, select a particular installation screen and change a setting.

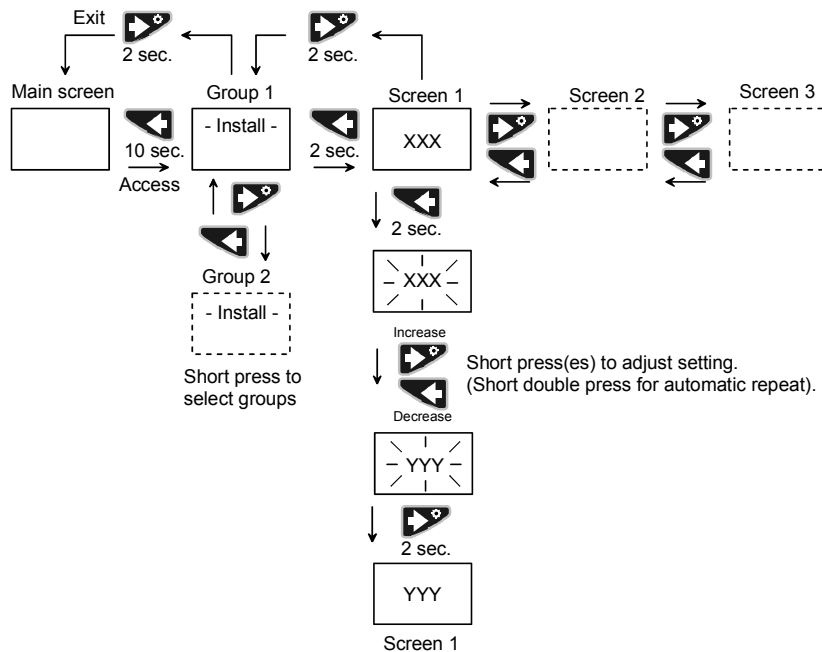



Figure 7-1 Access to installation screen(s)

Use the above procedure and flowchart as reference when accessing installation screens and adjusting the settings.

7.3 General Screen Group




The sequence for IS15 Combi and IS15 Multi is identical but the screens are slightly different. In the following both screens are presented.



1. Press the  button and hold for 10 seconds to access the Installation Menu, General Screen Group.
2. Press the  button and hold for 2 seconds to access the screens in the General Screen Group.

Screen 1



ILLUMINATION BANK

The IS15 instrument system can have two separate illumination banks of instruments. Setting the lighting level on one display will set all the other displays in that bank to the same level, but will not effect any displays in the other bank. For instance, the lighting level can be independently controlled for:


- The cockpit and chart table instruments of a yacht.
- The cockpit and mast instruments on a yacht.
- The cabin and flybridge instruments of a motor yacht.

Note !

You can also have individual lighting on all instruments. Then the illumination bank setting must be 0.



Screen 2



CONTRAST

The LCD on IS15 Series instruments can be set to one of eight contrast levels to best suit the viewing angle of the particular installation.



The default level (level 4) is suitable for a wide range of viewing angles and will probably not require alteration. However, view the display from different angles and adjust if required. In twilight or in the dark use appropriate illumination when adjusting the contrast.

Screen 3

SHOP MODE



The instrument has a demonstration mode that can be activated by selecting 'Shop Mode' On. This function is very useful for dealers when they want to demonstrate the IS15 system or when it is put on display on a show. The Shop Mode is turned off when power is turned off.

Note !

When in Shop Mode the instruments will display external data if data is available as input from sensors.

Screen 4

NMEA IN/OUT



This screen allows you to manually change the NMEA 'listener' port = NMEA IN to a 'talker' port = NMEA OUT, or vice versa. Hence you need not make a Master reset or a Communication reset. Refer to chapter 7.1 First time turn on. See also note below.

The setting is local to each instrument.

Note !

If there is an active 'talker' connected to the NMEA port, you will not be able to change this port from 'IN' to an 'OUT' port unless the 'talker' is disconnected.

Screen 5

ROBLINK ON/OFF



This screen allows you to turn the Roblink Off (or On). The setting is local on each instrument.

Notes !

1. *The Roblink must be turned Off when the instrument is used as a single NMEA repeater. However, if more heads are connected as NMEA repeaters in a daisy chain the Roblink must be On.*
2. *When the Roblink has been turned Off it will not default to ON even after a Master Reset. If required it must therefore be turned On again using the procedure above.*

Screen 6

GENERAL
ROBLINK TEST
Execute

ROBLINK TEST

Test screen on IS15 Combi only.

This screen is used for trouble shooting. Refer to Chapter 8.

Screen 7

GENERAL
COMM. RESET
Execute

COMMUNICATION RESET

Allows you to reset the system communication (Roblink) in the event anomalies are observed on one or more instruments. This reset will not default the calibration or unit settings.

Press the  button and hold for 2 seconds. The display shows 'POWER OFF'.

Turn the system off and refer to section 7.1. to assign the instrument(s) to the system.

COMM. RESET

Screen 8

GENERAL
MASTER RESET
Execute

MASTER RESET

When a MASTER RESET is performed on one of the instruments in a system it becomes system wide and all instruments are reset to default values.

Note ! *Do not perform a Master Reset unintentionally, because you will default settings and calibration values.*

Press the  button and hold for 2 seconds. The display shows 'POWER OFF'.

Turn the system off and refer to section 7.1. to assign the instrument(s) to the system.

MASTER RESET

Note !

After the Master Reset a new set-up has to be performed.

7.4 Depth Screen Group

Screen 1

DEPTH
UNIT
MTRS

DEPTH UNIT

One of the following depth units may be selected:

- IS15 Combi: Feet (FEET), Metres (MTRS), Fathoms (FATH).
- IS15 Multi: Feet (FT), Metres (M), Fathoms (FA).

DEPTH UNIT M

Screen 2

DEPTH
OFFSET
0.0MTRS

DEPTH OFFS M
0.4

DEPTH OFFSET

When the depth offset is set to zero, the indicated depth is from the transducer to the bottom. If you want to indicate the depth from the water surface to the bottom you have to set the depth offset according to the vertical distance between the surface and the transducer (Positive (+) value).

If you want to indicate the depth from the keel to the bottom you have to set the depth offset according to the vertical distance between the transducer and the keel (Negative (–) value).

Screen 3

DEPTH
Source: RLink
Ver: 1.3
14/9/2001
HW 0

DEPTH SOURCE

Test screen on IS15 Combi only.

Displays the source of the depth information, the software and hardware version of the IS15 Transceiver/Expander* and the release date.

NMEA = External source

Rlink = IS15 Transducer

* Depth sounder part.

7.5 Boat Speed Screen Group

Screen 1

BOAT SPEED
UNIT
KTS

SPD UNIT KTS

SPEED UNIT

One of the following speed units may be selected:

- IS15 Combi: Knots (KTS), Kilometres per hour (KMH), Miles per hour (MPH)
- IS15 Multi: Same as IS15 Combi

Screen 2

BOAT SPEED
LOG CALIBRATE
FACTOR 1.00
LOG 12.3 KTS

CALIB. FACTOR
1.00

LOG CALIBRATION FACTOR

- A calibration factor of 1.00 equals the factory default calibration. An onboard calibration using SOG or a known distance will normally give a different factor.
- If you know the calibration factor of the type of boat you are on, simply adjust to the known value and the log is calibrated.