



- **Zeus², sw release 6.0**
- **Zeus² Glass Helm, sw release 6.0**
- **Zeus³, sw release 4.0**


Feature	Page
The Wind Plot panel	3
Calibration in Network Settings dialog	5
Device registration*	5
Autorouting features now available in US	5

* This feature is not available for Zeus2.


The Wind Plot panel

A Wind Plot is a special type of Time Plot specifically designed to help understand recent changes in wind speed and direction.

The Wind Plot can be displayed as a dual or combined view.

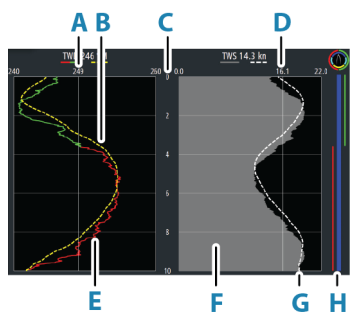


Dual view

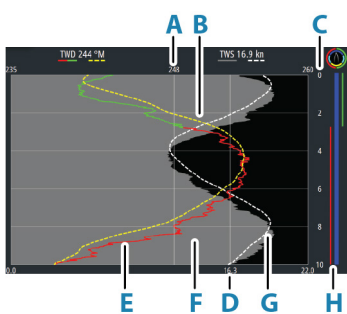

Combined view

- A** True Wind Direction (TWD) average*
- B** TWD trend
- C** Time range
- D** True Wind Speed (TWS) average*
- E** TWD plot
- F** TWS plot
- G** TWS trend
- H** Tack bar*


* Optional items. Optional items can be turned on/off individually from the Wind Plot panel menu.

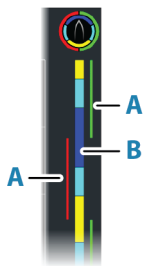

Tack bar

The tack bar shows wind angle indications (A) and a point of sail/pre-start status bar (B) corresponding to the data recorded at the time. Tack bar data uses the same time scale as the main Wind Plot window.

Select the tack bar to view the tack bar legend.

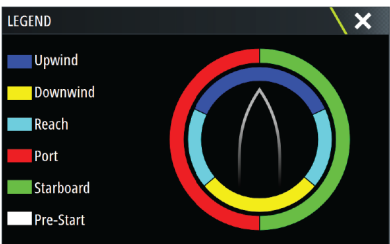

Setting up the page

Use the Wind Plot panel menu to set up the page.

Time range

Sets the time range interval.

Trend averaging

Sets the trend average. A low setting shows the highest detail (closest to the raw data, lowest amount of damping), and a high setting shows a smoother trend (highest amount of damping).



TWD options

Display options
Sets the plot to show TWD only, TWD trend only or both the TWD and trend.

Average line
Shows or hides the TWD average line on the plot image.

Tack colors
Select to show the TWD in starboard (green) and port (red) color indicators or unselect to show the TWD as a constant (blue) color.

TWS options

Display options
Sets the plot to show TWS only, TWS trend only or both the TWS and trend.

Average line
Shows or hides the TWS average line on the plot image.

Tack bar option

Show
Shows or hides the tack bar.


Start line
Shows or hides the race start time on the tack bar. When enabled, the tack bar shows the start line, drawn as a horizontal line across the tack bar. The start line is displayed at the time the race timer reached zero.

Tack averages
Displays a table listing the tack averages over the current time period. This display can be useful for checking calibration or average performance on each tack.

TACK AVERAGES				
	Port	Starboard		
TWA (°)	-40	42		
TWD (°M)	249	243		
TWS (kn)	15.0	16.2		
Boat Speed (kn)	9.1	5.9		
Heading (°M)	288	201		


Mode option

Sets the Wind Plot as a dual or combined view.
The combined view is designed to allow full use of the Wind Plot in a smaller panel, for example alongside a chart window.

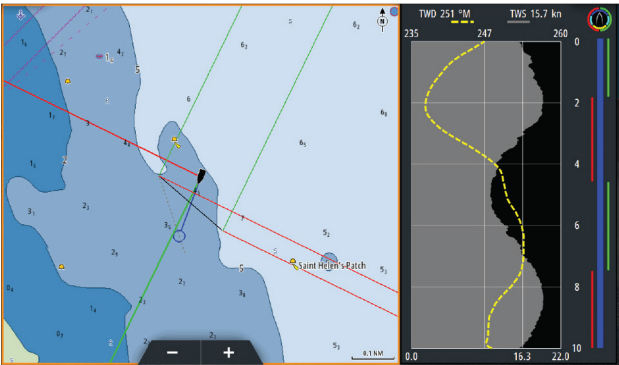

Calibration in Network Settings dialog

Calibration can now be done from the calibration option in the Network Settings dialog.

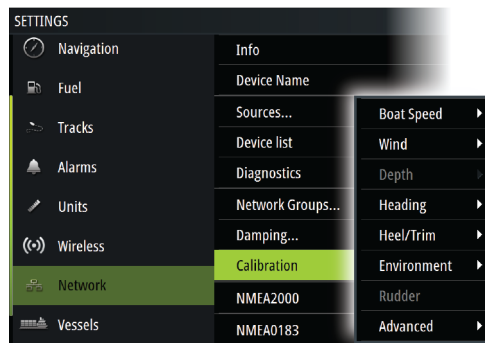

Device registration

You are prompted to register your device during startup. You can also register by selecting the register option in the System settings dialog. Registration can be done:

- From the device if it is connected to the internet
- From a smart device with internet access
- Over the phone

Autorouting features now available in US

Navionic's Dock-to-dock Autorouting and C-MAP's Easy Routing features are now available for use in US territorial waters.

