

Introducing

# World's Leading Domestic Robots

Now, maintaining homes is a pleasure!

Self sufficient and packed with advanced features, these Robots gently scrub, clean and disinfect your space, all on their own! Just pre-programme them as per your needs. Thereafter, go wherever; do whatever, your floors and windows will be squeaky clean automatically. With Milagrow cleaning robots, now cleaning will be a delight!



Floor Cleaning Robots



RedHawk  
MRP: ₹17,990

BlackCat  
MRP: ₹15,990

SuperBot  
MRP: ₹10,990

RoboCop  
MRP: ₹9,990



Royal Silver  
MRP: ₹39,990



Sporty Red  
MRP: ₹39,990



Canary Yellow  
MRP: ₹39,990



Massaging Robots

MRP: ₹9,990

Order online at [www.milagrowthumantech.com](http://www.milagrowthumantech.com) | 0% Finance available. Conditions apply.

User Manual

MILAGROW ↑

# World's only TabTop™ PC



MGPT08

Laptops and Tablets are now history!

- 6 reasons why you need a Domestic Robot:
- Time Constraints ● Security ● Hygiene and Disinfection
- Unskilled Domestic Help ● 24x7 Availability ● Maintenance of Expensive Furniture & Carpets

Milagrow Business and Knowledge Solutions (P) Limited  
796, Phase V, Udyog Vihar, Gurgaon - 122 016, Phone : +91-124-4309570-79  
Fax : +91-124-4309580, E-mail : [customercare@milagrow.in](mailto:customercare@milagrow.in)

Customers - SMS <Window + E-mail ID + City> to 09953476189 or E-mail at [customercare@milagrow.in](mailto:customercare@milagrow.in)

Specifications are subject to change without prior notice with the purpose of product enhancement and quality improvement. Brand Names and Brand Logos are trademarks or registered trademarks of those companies. Milagrow Business & Knowledge Solutions has rights only on the Milagrow brand name mentioned in the catalogue.

5-point Capacitive Multi-Touch 16:9 Screen

Android 4.0.4


1.2 GHz Processor  
DDR 3 RAM 512 MB

Camera  
6x Zoom

4G/3G Dongle, Wi-Fi,  
Supports LAN, HDD

3000 mAh  
Battery/3.7V

Please read carefully before use

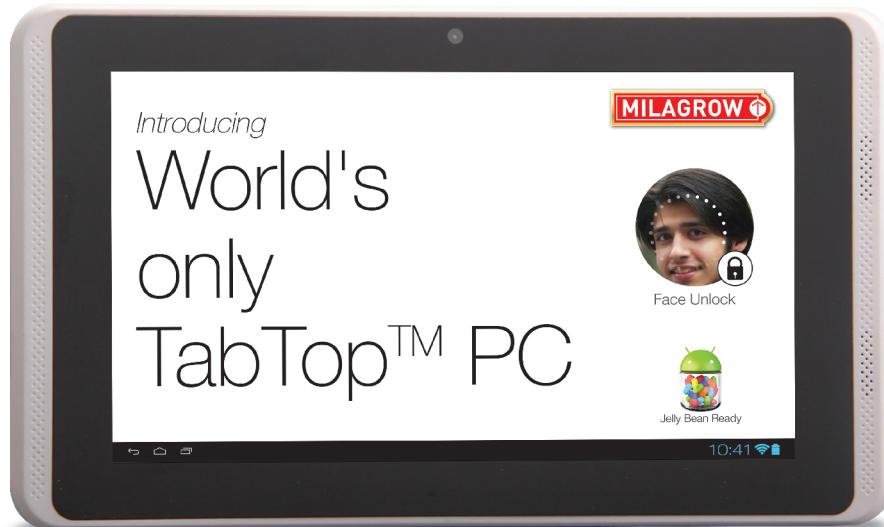

## Table of Contents

|  |       |
|--|-------|
| <b>THANK YOU</b>                             | 3     |
| Package Contents                             | 3     |
| Features                                     | 3-4   |
| <b>GETTING TO KNOW MILAGROW TABTOP™ 7.16</b> | 5     |
| About the Touchscreen                        | 6     |
| Protective Film                              | 6     |
| Touchscreen Actions                          | 6     |
| About the Orientation Sensor                 | 7     |
| Charging the TabTop™ 7.16                    | 7     |
| Inserting a Memory Card                      | 7-8   |
| Resetting the TabTop™ 7.16                   | 8     |
| <b>GETTING STARTED</b>                       | 9     |
| Turning the TabTop™ 7.16 On and Off          | 9     |
| Turning the Screen On and Off (Standby)      | 9     |
| Unlocking the Screen                         | 9-10  |
| Home Screen at a Glance                      | 10-11 |
| About Applications                           | 11    |
| Pre-installed Applications                   | 12    |
| Installing Applications                      | 13    |
| About Menus                                  | 13    |
| About Notifications                          | 13-14 |
| <b>CONNECTING TO THE INTERNET</b>            | 15    |
| Requirements                                 | 15    |
| Connect to a Wi-Fi network                   | 15-16 |
| <b>BROWSING THE WEB</b>                      | 17    |
| <b>MANAGING APPLICATIONS</b>                 | 21    |
| <b>OPTIONAL CONNECTIONS</b>                  | 23    |
| Connecting to a Computer                     | 23    |
| Connecting to a TV                           | 24    |
| Connecting Headphones                        | 24    |

## Table of Contents

|                                   |    |
|-----------------------------------|----|
| Using the USB Full-Size Adapter   | 24 |
| Connecting a Keyboard             | 24 |
| Connecting a Storage Device       | 25 |
| <b>SETTING THE SYSTEM OPTIONS</b> | 26 |
| <b>SPECIFICATIONS</b>             | 27 |
| <b>SUPPORT</b>                    | 28 |
| SAFETY NOTICES                    |    |



## Thank You

Congratulations on your purchase of Milagrow TabTop™ 7.16. This guide is provided to help you get started quickly with your player; please read it carefully and save it for future reference.

### Package Contents

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

- TabTop™ 7.16
- USB cable
- USB converter
- Earphones
- DC charger
- User manual
- Warranty card

This package may contain plastic bags or other materials that pose a hazard to children. Be sure to safely dispose off all packing materials after opening.

### Features

- Browse the web  
Visit your favorite websites
- Check your e-mail  
Keep in touch with friends and family
- Read your favorite books  
Download thousands of books by installing e-book reader \*
- Discover thousands of apps for Android™  
Games, applications and more with the installed marketplace
- HDMI™ output to your TV \*\*  
Enjoy videos, photos and more in the comfort of your living room
- Connect to the Internet wirelessly  
High-speed Wi-Fi 802.11 b/g/n networking
- Enjoy your media library anywhere  
Portable powerhouse plays popular music, video, and photo formats
- Micro SD memory card reader  
Increase your storage capacity (up to 32 GB supported)

Thank you

MILAGROW 

■ Built-in camera

Convenient front-facing camera

■ Automatic orientation detection

Read any way you want; the display adjusts automatically!

\* Reading books in the ePub format requires the included e-book reader application.

\*\* Requires optional HDMI cable (Type A to Type C). 2160p HD video playback requires a video file encoded at 2160p. Streaming video quality will be affected by the source, and the quality and condition of your network connection.

## Getting to know Milagrow

### TabTop™ 7.16

#### Unit at a Glance



| S. No. | Name                    | Description   |
|--------|-------------------------|---|
| 1      | Volume                  | Increase or decrease volume easily  |
| 2      | Home                    | Short press the key to return to main menu interface  |
| 3      | Back                    | Press the key to return to previous screen  |
| 4      | Camera                  | 0.3 MP Camera with 6x zoom  |
| 5      | Power                   | Long press for around 5 seconds to turn the unit ON/OFF. Double click to turn the screen ON. If screen is ON, press once to go to options |
| 6      | Micro SD Card Slot      | Load external micro SD memory card here   |
| 7      | HDMI Jack (mini Type C) | Connect to a TV or other display  |
| 8      | Headphone Jack          | Audio output connection for headphones  |
| 9      | USB 2.0 Hi-speed Port   | Connect to a computer to transfer data (e.g., music, videos, photos, files)   |
| 10     | DC IN                   | Connect to an external device   |
| 11     | Boot                    | Press to reset  |
| 12     | Mic                     | Microphone  |

HDMI is not available in TabTop™ 7.16 DX (MGPT08) and TabTop™ 7.16 PRO (MGPT07)

# Getting to know Milagrow TabTop™ 7.16



## About the Touch Screen

Your Milagrow TabTop™ 7.16 comes equipped with an easy-to-use 5 point capacitive Touch Screen. Our capacitive multi-touch screen requires gentle fingertip touch on the glass screen to activate TabTop™ 7.16's functions. Multiple fingers may be used to perform gestures (e.g. 5-finger picture zoom).

Please note: Your finger tips must not be covered. A stylus may be used. Make sure it is for capacitive touch screens.

*To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger. For best response, make sure your hands are clean before using the Touch Screen controls.*

## Protective Film

A thin film has been applied to the Touch Screen to protect it during shipping. The protective film should be removed before use. To remove it, simply take a corner of the film and peel it away from the screen.

## Touch Screen Actions

You can control the functions of the TabTop™ 7.16 by using the Touch Screen in combination with the three touch keys located on the bezel. To control the TabTop™ 7.16 with the Touch Screen, use your fingertip to manipulate icons, buttons, menu items, the on-screen keyboard, and other items displayed on the screen.

You can perform the following actions on the Touch Screen using your fingertip or appropriate stylus.

|                       |  |
|-----------------------|--|
| <b>Touch</b>          | To activate an on-screen item (e.g., application icons, buttons, menu items, and the letter/symbols of the on-screen keyboard), simply touch them with your fingertip.   |
| <b>Touch and Hold</b> | Some on-screen items have an alternate action if you touch and hold them (e.g., opening an alternate menu, or to activate the drag function). To touch and hold an item, touch the item and do not lift your fingertip until the action occurs.  |
| <b>Drag</b>           | Drag an on-screen item to change its position (e.g., an application icon on the home screen). To drag an item, touch and hold it for a moment, then without lifting your fingertip, move your fingertip on the screen until the item reaches its target destination.   |
| <b>Swipe</b>          | Swipe up/down on the screen to scroll through a list. On some screens, you may be able to swipe left/right to change the view.<br><br>To swipe, touch the screen and then quickly move your fingertip across the screen without lifting your fingertip. Do not pause on the screen with your fingertip at the initial point of contact or you may accidentally drag an item instead. |
| <b>Double-tap</b>     | Quickly tap the screen twice on a webpage or other application screen to zoom (the application must support the double-tap/zoom function). Within the browser, double-tapping a webpage section will cause the browser to zoom and fit that section to the width of the screen.  |

## About the Orientation Sensor

Milagrow TabTop™ 7.16 contains a sensor that will automatically change the orientation of most screens as you rotate the TabTop™ 7.16. The sensor works best when the TabTop™ 7.16 is rotated perpendicular to the ground (i.e., when the TabTop™ 7.16 is held upright and not flat on its back).



The orientation sensor can be turned on and off in the Display settings menu.

## Charging the TabTop™ 7.16

The TabTop™ 7.16 comes with a built-in rechargeable lithium-polymer battery.

Before using the TabTop™ 7.16, the battery should be charged fully. The Status Indicator will turn blue when the battery is charged fully.

### To charge the battery:

Plug one end of the included power adapter into an AC 100-240V outlet.

Plug the other end of the included power adapter into the Power jack on the TabTop™ 7.16.

Disconnect the power adapter when the TabTop™ 7.16 is fully charged.

*The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the device. Do not leave the device in a place subject to direct sunlight, or in a car with its windows closed. Do not connect the device to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.*

## Inserting a Memory Card

The TabTop™ 7.16 accepts micro SD memory cards. Insert a memory card into the micro SD card slot to:

Increase the memory capacity of your TabTop™ 7.16

Play media files stored on the memory card (e.g., music, video, or photo files)

### To insert a memory card:

Align the memory card with the card slot. The metal contacts of the memory card should face down away from the LCD screen.

## Getting to know Milagrow TabTop™ 7.16

Slide the card into the spring-loaded slot. Push the card in until it clicks into place.

*Do not attempt to insert objects other than a micro SD memory card into the card slot. A compatible memory card should fit easily into the card slot; if you encounter resistance, check the alignment of the card. Do not attempt to force the card in.*

*Avoid touching the gold contacts of the memory card.*

### To release and remove a memory card:

#### Unmount the memory card.

- From the home screen, tap the **Launcher Tab**, and then touch **Settings** to show the settings menu.
- Touch **Storage** to show the storage settings.
- Touch **Unmount SD card** to prepare the memory card for safe removal.

Push the card further into the slot until you hear a click. The card will spring out of the slot.


Grasp the card by its edge to remove it.

*To avoid damage and data corruption, do not remove a memory card while data is being written to or read from the card. For example, do not remove a card while playing a music file stored on the card.*

### Resetting the TabTop™ 7.16

Reset the TabTop™ 7.16 if it should freeze and not respond or otherwise malfunction.

- Disconnect your TabTop™ 7.16 if it is connected to a computer.
- Press and hold the **Power** key for about 8 seconds to turn off the TabTop™ 7.16, and then press and hold the **Power** key about 3 seconds to turn on the TabTop™ 7.16.

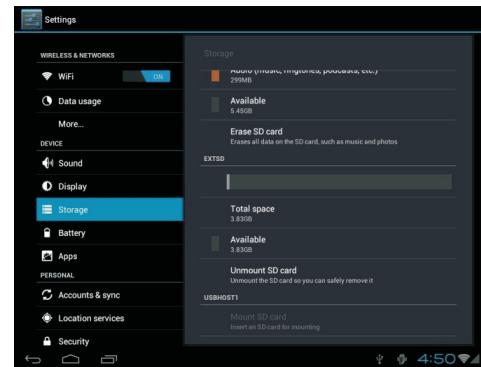

## Getting Started


### Turning the TabTop™ 7.16 On and Off

To turn the TabTop™ 7.16 On:

- Press and hold the **Power** key until the LCD screen turns on. Wait until the Home screen appears; the TabTop™ 7.16 is now ready for use.

To turn the TabTop™ 7.16 Off:

- Press and hold the **Power** key until the confirmation message appears.

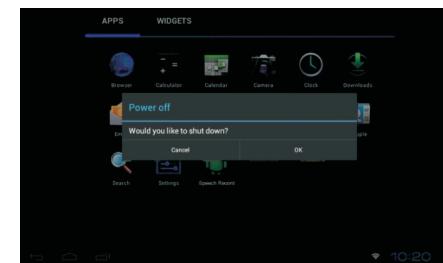

- Touch **OK** to turn off the TabTop™ 7.16.

### Turning the Screen On and Off (Standby)

When the TabTop™ 7.16 is on, you can turn off the screen to conserve battery **power**. Simply press the **Power** key once to turn the screen off. Press the **Power** key again to turn the screen back on.

### Unlocking the Screen


When the screen turns off, you will have to **Unlock** the screen when you turn it back on.

Long press around 4 seconds to **Unlock** the Screen.

*To conserve battery power, the screen can be set to turn off automatically when the TabTop™ 7.16 is not in use (between 15 seconds and 30 minutes). This **Sleep** option can be found in the **Display** menu.*




If a password has been set, enter the password to finish unlocking the screen. The Screen Unlock password can be set in the **Security** settings menu.

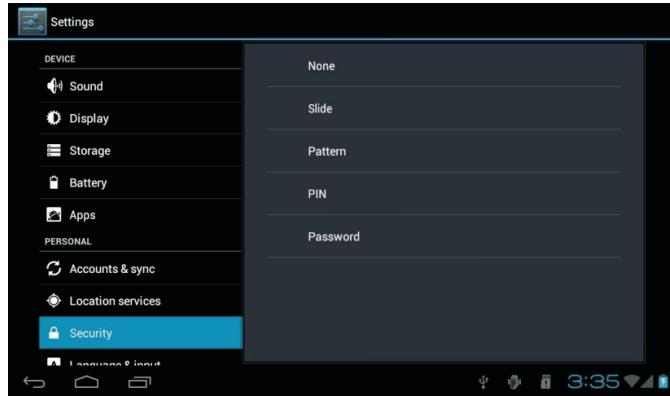

**WARNING:** Please write down your password lock pattern/PIN/Password. Misplacing or forgetting this method will lock the user out. Recovering the unit will reset the device back to factory defaults. **ALL YOUR DATA & PROGRAMS WILL BE LOST.**

### Home Screen at a Glance

The home screen is the starting point for all of the features of your TabTop™ 7.16.

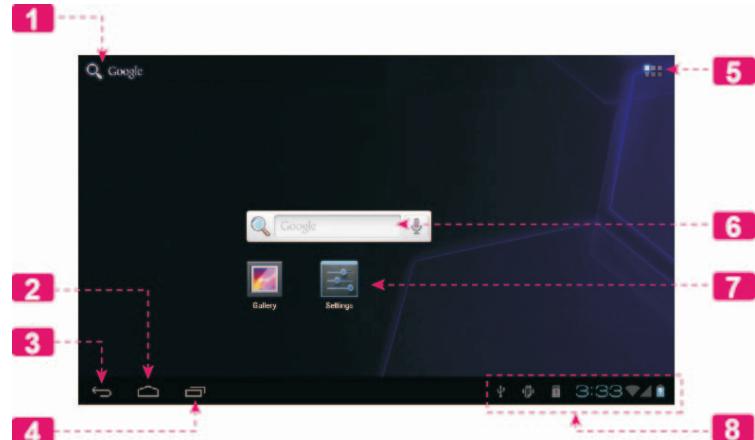

| S No. | Name             | Description   |
|-------|------------------|---|
| 1     | Google Search    | Touch to search with Google browser   |
| 2     | Home Icon        | Touch to return to the central Home Screen  |
| 3     | Back Icon        | Touch to return to the previous screen  |
| 4     | Recent Apps      | Touch to display the list of thumbnail images of apps you have worked on recently. Touch an App to open it  |
| 5     | Launcher Tab     | Open the Launcher to view the list of all Applications and Widgets installed on the TabTop™ 7.16. Touch the Launcher tab to open the Launcher   |
| 6     | Widgets          | Widgets are small applications that you can use directly from the home screen. For more information, refer to the 'Widgets' section on page 13  |
| 7     | Icons            | Touch an icon to open an application or folder  |
| 8     | Notification Bar | Shows notification icons such as time, battery level, and the network signal strength; touch the bar to open the full Notifications panel. Touch a Notification icon to display more detail |

### About Applications

To open an application, touch the application icon on the home screen or in the Launcher.

Launcher screen:



The screen shown above is for illustrative purposes only. We reserve the right to modify and improve the final list of applications available on the TabTop™ 7.16.

## Preinstalled Applications

Some applications have been installed on your TabTop™ 7.16 for your convenience. These applications include:

|  |  |
|--|--|
|  | Browse the web   |
|  | Display the calendar or record events and appointments to manage your schedule |
|  | Perform simple mathematical operations   |
|  | Take pictures or videos with the front-facing camera                           |
|  | View the current time, or set an alarm   |
|  | Debugging tool   |
|  | Check your e-mail  |
|  | View and manage files stored on the TabTop™ 7.16                               |
|  | View photos and videos, plus edit photos                                       |
|  | View the files (Pictures etc.) downloaded from website                         |
|  | Play music   |
|  | Access the Settings menu to adjust the TabTop™ 7.16's options                  |
|  | View map with network  |
|  | See where your friends right now and connect with them                         |
|  | Installed applications   |
|  | Record the sound & voice   |

## Installing Applications

You can also download and install additional applications from the device's applications marketplace, the web browser, or other sources.

The TabTop™ 7.16 must be set to allow installation of applications from non-Market sources. The unknown sources option can be set in the **Application settings** menu.

*Your Mobile Internet Device may include access to, or information on, content, products, applications and services from third parties. Your use of such third party content, products, applications and services is at the discretion of such third party and expressly governed by such third party's terms of use, including any such third party's privacy policies, for such content, products, applications and services. We are not responsible for and expressly disclaim all warranties of any kind with respect to all such third party content, products, applications and services. We will not be responsible for any loss, costs, or damages incurred due to your access to, or use of third party content, products, applications or services.*

## About Widgets

Widgets are self-contained applications that you can place on the Home screen to access your favorite features.

### Adding Widgets to a Home Screen


Navigate to the Home screen which you want to place the Widget on.

Touch the **Launcher Tab**.

Touch **WIDGETS** to show all widgets, and then hold on a widget icon to add it to the Home screen.

### Removing Widgets

Touch and hold the Widget until Remove icon appears at the top side of the screen, then drag the Widget to the Remove icon to remove it.

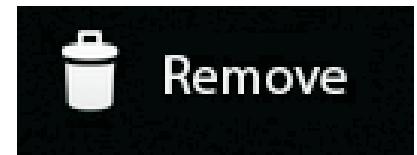

### About Notifications


The icons that appear in the Notification bar at the bottom right corner of the screen alerts you when new messages arrive or alarms or other application events occur.

View and respond to the notifications by opening the full Notifications panel.

Touch the **notification** bar to open the Notifications panel.

### To respond to a notification:

- Touch a notification in the list; the Notifications panel will close and the application associated with the notification will launch

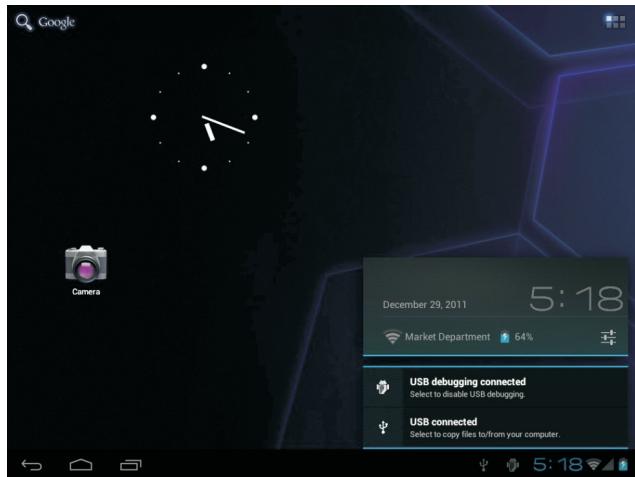

#### To close the Notifications panel:

- Touch any other area of screen except the Notifications panel or
- Touch the Back icon

## Connecting to the Internet

Milagrow TabTop™ 7.16 can utilize Wi-Fi data networks to connect to the Internet.

- Wireless Wi-Fi technology can provide Internet access at distances of over 300 feet; however, this distance can be affected by your surrounding environment and the Wi-Fi router.

#### Requirements

In order to connect to the Internet, you will need either of the following:

##### A wireless router or access point with a broadband Internet connection

The wireless router must support Wi-Fi 802.11b/g connections. If the router supports 802.11n, make sure that it has been configured to accept 802.11b/g connections as well.

*A minimum connection speed of 64 Kbps is recommended. Faster speeds will enable a better Internet experience.*

You will need to know the name of your network (SSID), as well as the password or other credentials if your network is secured. These settings can usually be found on the administration webpage of your wireless router.

Please refer to your wireless router's documentation for help, or ask your network administrator for details.

*You may encounter open Wi-Fi networks, or 'hot spots'. These networks are usually configured so that you can simply connect to them without needing to know its settings; the TabTop™ 7.16 will obtain all the information it needs from the router automatically.*

#### Connect to a Wi-Fi network

The Notification bar displays icons that indicate your TabTop™ 7.16's Wi-Fi status.

|           |   |
|-----------|---|
|           | Connected to a Wi-Fi network (waves indicate connection strength) |
| [no icon] | There are no Wi-Fi networks in range, or the Wi-Fi radio is off   |

#### 1. Turn on the Wi-Fi radio if it is not already on. To turn on Wi-Fi:

- a. Go to the Home screen:  
Touch the **Home** icon.
- b. Open the Launcher screen:  
Touch the **Launcher Tab**, then touch **Settings**.
- c. Open the Wireless & networks menu:  
Touch **WIRELESS & NETWORKS**.


## Connecting to the Internet



d. Open the Wi-Fi settings menu:

Touch **Wi-Fi**.

e. Make sure that the Wi-Fi option box is set to ON. Touch and slide the block right to enable the Wi-Fi connection.

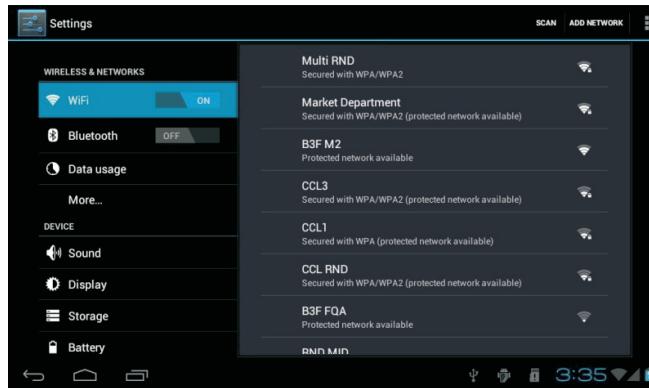

When Wi-Fi is on, the TabTop™ 7.16 will look for and display a list of available Wi-Fi networks.

If a network that you have connected to previously is found, the TabTop™ 7.16 will connect to it.

If you don't see your network in the list, you can force the TabTop™ 7.16 to re-scan. To scan for networks, tap the **SCAN** icon located on the top right corner of the screen.

### 2. Select an available Wi-Fi network to connect to:

In the same Wi-Fi settings menu above, touch a network in the list.

If the network is open, the TabTop™ 7.16 will prompt you to confirm connection to the network. Touch **Connect** to confirm.

If the network is secured (as indicated by a Lock icon), the TabTop™ 7.16 will prompt you to enter a password or other credentials. Touch the Wireless password box to show the on-screen keyboard and



then use it to enter the password. Touch **Connect** to confirm.

When you have successfully connected to a Wi-Fi network, the Notifications bar at the bottom of the screen will show a Wi-Fi signal indicator.

To learn about how to add a Wi-Fi network when it is not in range or when the router is set to obscure the network name (SSID); or to configure advanced Wi-Fi options,

## Browsing the Web

The Browser application lets you visit webpages and find information on the web. Keep up with the news, your friends, or enjoy video from YouTube™, the world's most popular video-sharing community.

To use Browser, the TabTop™ 7.16 must be connected to the Internet. Read the section "Connecting to the Internet" to learn how to connect to the Internet.



To open browser, touch the Browser icon on the Home screen or in the Launcher.

| S. No. | Name                 | Description   |
|--------|----------------------|---|
| 1      | Address bar          | Displays the address (URL) of the current page. Touch the bar to enter a new address or to search the web |
| 2      | Go to Bookmarks Icon | Touch to view bookmarks, to view your most visited sites, or to view your browser history                 |
| 3      | Search Icon          | Touch to search with Google browser   |
| 4      | Add Bookmark Icon    | Touch to add bookmarks  |
| 5      | New Window (+)       | Creates new browser window  |

## Browsing the Web



Some common browser actions are described below:

To go to a webpage.


1. Touch the **Address bar** at the top of the Browser screen. The keyboard will open automatically (If the Address bar is not visible, drag the page down to return to the top of the Browser screen).
2. Use the keyboard to enter the address (URL) of the webpage
3. Touch **Enter** key to open the webpage



■ To bookmark a webpage.

Bookmark your favorite webpages in order to visit them quickly without entering a URL.


1. Go to the webpage that you want to bookmark

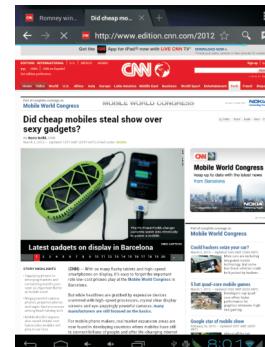

2. Touch the **Add Bookmark** icon



3. If desired, you can modify the name of the bookmark or its location (URL address). Otherwise, touch **OK** to finish adding the bookmark

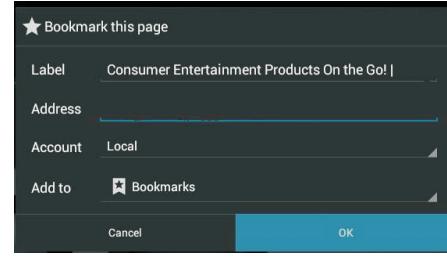


■ To go to a bookmarked webpage.

1. Touch the **Go to Bookmark** icon



2. Touch a bookmark tile to open it

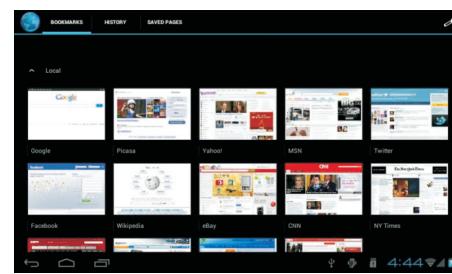


■ To delete a bookmarked webpage.

1. Touch the **Go to Bookmark** icon



2. Touch and hold a bookmark tile to open the option menu

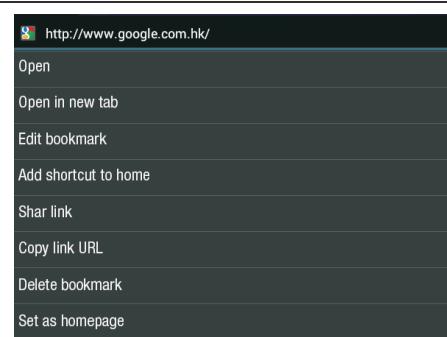

|                            |  |
|----------------------------|--|
| 3. Touch 'Delete bookmark' |  |
| 4. Touch 'OK' to confirm   |  |

### Browser Menu

While viewing a webpage, touch the icon shown right to open the Browser Menu, the icon is located on the top right corner of the screen, the options are:



- Refresh: Refresh the current webpage
- Forward: Go to the next webpage
- New tab: Open the webpage in a new window, under a new tab
- New incognito tab: Open the webpage in a new window, under a new tab, and the pages you view in the new window will not appear in your browser history or search history. See the on-screen explanation of going incognito
- Share page: Use e-mail to send the webpage URL
- Find on page: Search for content on the current page
- Request desktop site
- Save for offline reading: Save this page on to the internal memory, then you can read it when the internet connection is disabled
- Page info: View information about the current page, including the URL
- Settings: Customize the browser

## Managing Applications

Downloading and installing new applications to your TabTop™ 7.16 can extend its functionality in many ways.

You can download and install applications from the included Applications store. To open the Applications store:

1. Touch the **Launcher** icon.
2. Touch the **Apps Marketplace** icon.




When installing an application, it will tell you what functions it needs to control and if it needs access to your data. Make sure you review these access requirements carefully before completing the installation.


*Be especially cautious with applications that request access to many functions or to a significant amount of your data. You are responsible for the results of applications installed on your TabTop™ 7.16.*

### To uninstall an application:


1. From the Home screen, touch the **Launcher Tab**.
2. Touch Settings to open the **Settings** menu.
3. Touch **Apps**, a list of all applications installed on the TabTop™ 7.16 will display on screen.

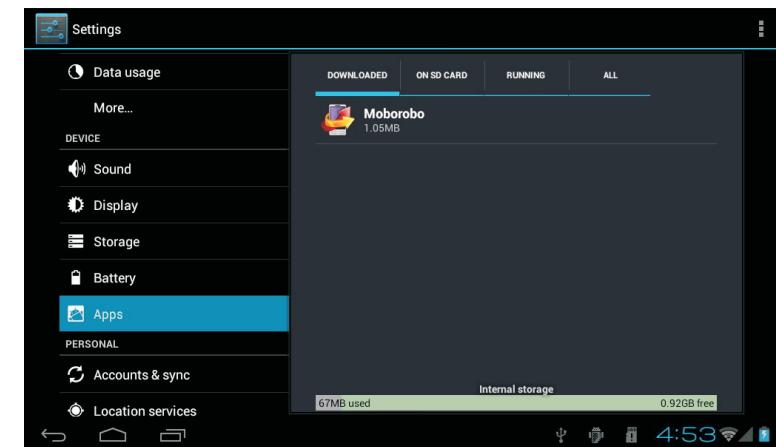

4. Touch the name of the application you want to uninstall; the Application Info screen will open.

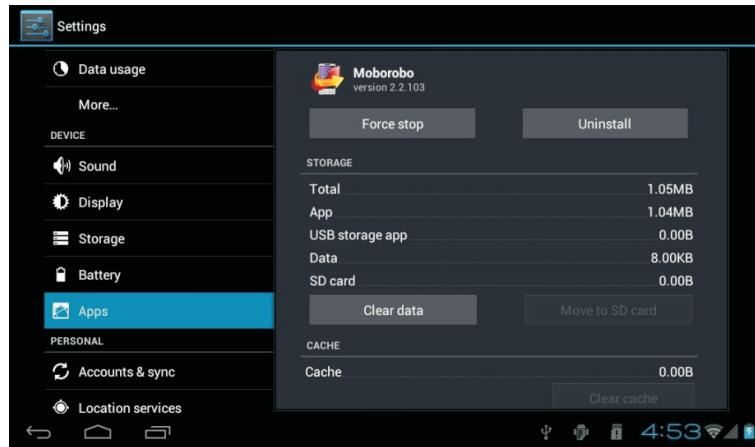

5. Touch **Uninstall**. The TabTop™ 7.16 will prompt you to confirm.

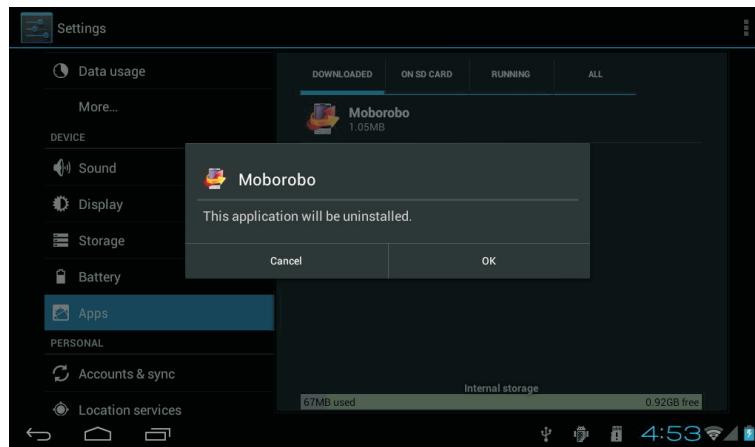

6. Touch OK to uninstall the application.

*Or you can uninstall an application from the Launcher screen directly. Touch and hold an application icon until the Uninstall icon appears, drag the application icon to the Uninstall icon to uninstall the application.*

## Optional Connections

### Connecting to a Computer

Connect the TabTop™ 7.16 to a computer to transfer files.

1. Connect your TabTop™ 7.16 to the computer.


With the included USB cable: Plug the small end of the cable into the USB 2.0 Hi-speed connector of the TabTop™ 7.16.

Plug the large end of the cable into an available USB 2.0 Hi-speed port on the computer.

When your TabTop™ 7.16 is connected, a USB icon will appear in the Notification bar.



Touch the Notification bar to open the Notifications panel.

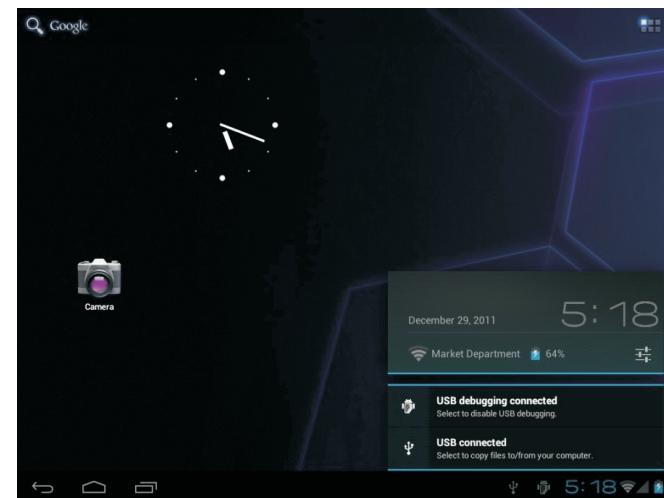

*The TabTop™ 7.16's 'mass storage mode' is compatible with many operating systems including Microsoft® Windows® XP, Vista, 7 or higher and Mac OS or Linux.*

### 2. Mount the storage drive.

- Touch **USB connected** to mount the TabTop™ 7.16's built-in storage, then touch 'Turn on USB Storage' and 'OK' when prompted to confirm. When mounted, you can copy files to/from your computer to it.

## Optional Connections



Milagrow TabTop™ 7.16 will be recognized by the computer as a Removable Storage drive. Drag and drop files between your TabTop™ 7.16 and the computer. To learn more about copying files, please refer to the documentation included with your computer or operating system.

### Connecting to a TV

Connect to a TV to enjoy your TabTop™ 7.16 from the comfort of your living room. An HDMI cable (Type A to Type C) is required to connect the TabTop™ 7.16 to a TV.

The TabTop™ 7.16 will recognize and match the capabilities of the TV automatically.

#### To connect the TabTop™ 7.16 to the TV:

1. Plug the small end of the HDMI cable into the mini HDMI connector of the TabTop™ 7.16.
2. Plug the large end of the HDMI cable into the HDMI port on the TV.
3. Turn on the TV, and set its display mode to the HDMI port that the TabTop™ 7.16 is connected to.

The TabTop™ 7.16's display will be output to the TV screen.

*If you need help setting the display mode of the TV, please refer to the documentation provided by the TV manufacturer.*

### Connecting Headphones

Connect a pair of headphones (or earphones) to the TabTop™ 7.16 to enjoy media in private.

Lower the volume level of the TabTop™ 7.16 before connecting headphones, and then slowly raise the volume to a comfortable listening level.

- The headphones must have a 3.5 mm (1/8 in) plug.
- When headphones are connected, speaker output will be disabled automatically.

*Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.*


### Using the USB Full-Size Adapter

The USB full-size adapter can be used to connect and use USB devices with the TabTop™ 7.16. The adapter converts the mini USB port on the TabTop™ 7.16 into a USB On-the-Go (OTG) connector.

### Connecting a Keyboard

For times when you want to type for an extended period of time, you may want to connect a full-size keyboard to the TabTop™ 7.16.

Use the included USB full-size (Type A) adapter to connect a keyboard to the TabTop™ 7.16.

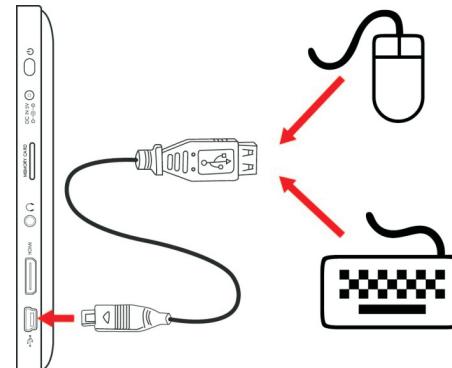

You may also use this connection to add a mouse to the TabTop™ 7.16.

The adapter supports one connection at a time. To use a keyboard and mouse simultaneously, you will need to add an external USB hub. You will also need to make sure that the TabTop™ 7.16 is connected to its charger, if it is not fully charged.

### Connecting a Storage Device

Use the included USB full-size (Type A) adapter to connect a storage device to the TabTop™ 7.16 (e.g., a USB flash memory drive).

*This connection supports a maximum storage size of 16 GB. For additional storage capacity, a micro SD card can be added to the TabTop™ 7.16.*

### Setting the System Options

Open the system settings menu to adjust how the TabTop™ 7.16 looks and functions.


*Many applications will have their own settings; refer to the documentation provided by the application developer to learn more.*

To open the Settings menu:

1. From the Home screen, touch the **Launcher Tab**.
2. Touch **Settings** to open the Settings menu.

The settings are grouped by category. Touch a category to open and adjust its settings on the right side.

*Please refer to the manual for a description of the items in the Settings menu.*

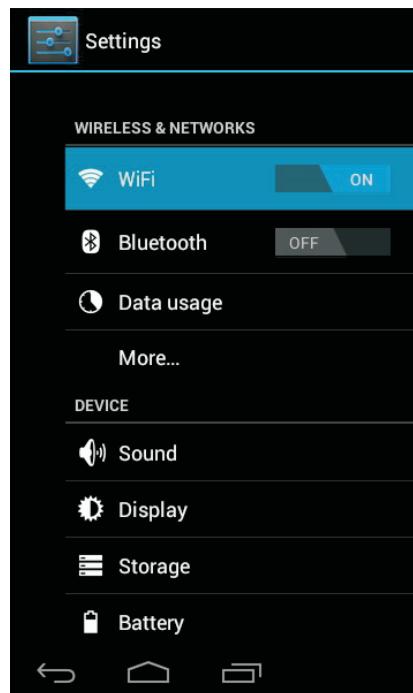

### Specifications

|                               |  |
|-------------------------------|--|
| <b>Processor</b>              | Cortex A8 (1.2 GHz), GPU Mali-400 MP   |
| <b>RAM</b>                    | 512 MB   |
| <b>Storage</b>                | 4 GB flash built-in<br>Micro SD Card Slot (Max. 32 GB supported)                     |
| <b>Display</b>                | 7.0" (17.8 cm) TFT LCD (800 x 480)   |
| <b>Networking</b>             | Wi-Fi IEEE 802.11 b/g/n  |
| <b>Video Output</b>           | Mini HDMI, Type C (1080p and 2160p supported)  |
| <b>Audio Output</b>           | 3.5 mm Headphone Jack  |
| <b>PC Interface</b>           | USB 2.0 Hi-speed   |
| <b>Additional Features</b>    | Front Camera: Panoramic Camera with 6x Zoom<br>Built-in Microphone<br>Stereo Speaker |
| <b>Operating System</b>       | Android 4.0  |
| <b>Power</b>                  | 3000 mAh Battery by 3.7V   |
| <b>Playback Time (hours)*</b> | Up to 10+ hours  |

\* Music was tested with a 128 kbps MP3 file; video was tested with a 1920 x 1080 MPEG-4/AVC file; browsing was tested with the screen brightness set to default. Actual playback results may vary.

## Support

If you have a problem with this device, please check our website at [www.milagrowhumantech.com](http://www.milagrowhumantech.com) for Frequently Asked Questions (FAQs) and product updates. If these resources do not resolve the problem, please write to [customercare@milagrow.in](mailto:customercare@milagrow.in) or call +91 9953476189.

Notes \_\_\_\_\_