

User Manual



World's only TabTop™ PC



MGPT04



Milagrow Business and Knowledge Solutions (P) Limited

796, Phase V, Udyog Vihar, Gurgaon - 122 016, Phone : +91-124-4309570-79
Fax : +91-124-4309580, e-mail : customercare@milagrow.in

Specifications are subject to change without prior notice with the purpose of product enhancement and quality improvement. Brand Names and Brand Logos are trademarks or registered trademarks of those companies. Milagrow Business & Knowledge Solutions has rights only on the Milagrow brand name mentioned in the catalogue.

Laptops and Tablets are now history!

5-point Capacitive
Multitouch 4:3 Screen

Dual HDMI and
Direct USB

1.2 GHz Processor
DDR 3 RAM 512 MB

1.3 MP Camera
with 3x Zoom

Android 4.0,
3G, Wi-Fi

4000 mAh Battery



Please read carefully before use



Table of Contents

THANK YOU	3
Package Contents	3
Features	3-4
GETTING TO KNOW THE TABTOP™ 7.4	5
About the Touchscreen	6
Protective Film	6
Touchscreen Actions	6
About the Orientation Sensor	7
Charging the TabTop™ 7.4	7
Inserting a Memory Card	7-8
Resetting the TabTop™ 7.4	8
GETTING STARTED	9
Turning the TabTop™ 7.4 On and Off	9
Turning the Screen On and Off (Standby)	9
Unlocking the Screen	9-10
Home Screen at a Glance	10-11
About Applications	11
Pre-installed Applications	12
Installing Applications	13
About Menus	13
About Notifications	13-14
CONNECTING TO THE INTERNET	15
Requirements	15
Connect to a Wi-Fi network	15-16
BROWSING THE WEB	17
MANAGING APPLICATIONS	21
OPTIONAL CONNECTIONS	23
Connecting to a Computer	23
Connecting to a TV	24
Connecting Headphones	24

Table of Contents



MILAGROW 

Using the USB Full-Size Adapter	24
Connecting a Keyboard	24
Connecting a Storage Device	25
SETTING THE SYSTEM OPTIONS	26
SPECIFICATIONS	27
SUPPORT	28
SAFETY NOTICES	

Thank You

Congratulations on your purchase of the TabTop™ 7.4. This guide is provided to help you get started quickly with your player; please read it carefully and save it for future reference.

Package Contents

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

- TabTop™ 7.4
- USB cable
- USB converter
- Earphones
- DC charger
- User manual
- Warranty card

This package may contain plastic bags or other materials that pose a hazard to children. Be sure to safely dispose off all packing materials after opening.

Features

- Browse the Web
Visit your favorite websites
- Check your e-mail
Keep in touch with friends and family
- Read your favorite books
Download thousands of books by installing E-book reader *
- Discover thousands of apps for Android™
Games, applications and more with the installed marketplace
- HDMI™ output to your TV **
Enjoy videos, photos and more in the comfort of your living room
- Connect to the Internet wirelessly
High-speed Wi-Fi 802.11 b/g/n networking
- Enjoy your media library anywhere
Portable powerhouse plays popular music, video, and photo formats
- Micro SD memory card reader
Increase your storage capacity (up to 32 GB supported)

Thank you



MILAGROW

- Built-in camera

Convenient front-facing camera

- Automatic orientation detection

Read any way you want; the display adjusts automatically!

* Reading books in the ePub format requires the included E-book reader application.

** Requires optional HDMI cable (Type A-to-Type C). 2160p HD video playback requires a video file encoded at 2160p. Streaming video quality will be affected by the source, and the quality and condition of your network connection.

Getting to Know the TabTop™ 7.4

Unit at a Glance



S No.	Name	Description
1	Camera	Front-facing camera
2	Back Key	Press to return to the previous screen. Long press around 4 seconds to turn the screen off
3	Power	Long Press around 5 seconds to turn the unit on/off. Double Click to turn the screen on. If screen on , press to go to options
4	Home	Short press the key to return to main menu interface
5	Power Jack (DC input)	Charge and power the TabTop™ 7.4 with the included power adapter
6	USB 2.0 Hi-speed Port	Connect to a computer to transfer data (e.g., music, videos, photos, files)
7	Micro SD Card Slot	Load external micro SD memory card here
8	Headphone Jack	Audio output connection for head-phones <div style="border: 1px solid black; padding: 2px;">Note: Speaker output is automatically disabled when headphones are connected to the player</div>
9	HDMI Jack (mini Type C)	Connect to a TV or other display
10	Touch Screen	Display and control screen. Touch controls are displayed on the screen. Touch (or touch and hold) icons with your finger to control the player

Getting to Know the TabTop 7.4

About the Touch Screen

Your TabTop™ 7.4 comes equipped with an easy-to-use 5 point capacitive Touch Screen. Our capacitive multi-touch screen requires gentle fingertip touch on the glass screen to activate TabTop™ 7.4's functions. Multiple fingers may be used to perform gestures (e.g. 5-finger picture zoom). Please note: Your finger tips must not be covered. A stylus may be used. Make sure it is for capacitive touch screens.

To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger. For best response, make sure your hands are clean before using the Touch Screen controls.

Protective Film

A thin film has been applied to the Touch Screen to protect it during shipping. The protective film should be removed before use. To remove it, simply take a corner of the film and peel it away from the screen.

Touch Screen Actions

You can control the functions of the TabTop™ 7.4 by using the Touch Screen in combination with the three touch keys located on the bezel. To control the TabTop™ 7.4 with the Touch Screen, use your fingertip to manipulate icons, buttons, menu items, the on-screen keyboard, and other items displayed on the screen.

You can perform the following actions on the Touch Screen using your fingertip or appropriate stylus.

Touch	To activate an on-screen item (e.g., application icons, buttons, menu items, and the letter/symbols of the on-screen keyboard), simply touch them with your fingertip.
Touch and Hold	Some on-screen items have an alternate action if you touch and hold it (e.g., opening an alternate menu, or to activate the drag function). To touch and hold an item, touch the item and do not lift your fingertip until the action occurs.
Drag	Drag an on-screen item to change its position (e.g., an application icon on the home screen). To drag an item, touch and hold it for a moment, then without lifting your fingertip, move your fingertip on the screen until the item reaches its target destination.
Swipe	Swipe up/down on the screen to scroll through a list. On some screens, you may be able to swipe left/right to change the view. To swipe, touch the screen and then quickly move your fingertip across the screen without lifting your fingertip. Do not pause on the screen with your fingertip at the initial point of contact or you may accidentally drag an item instead.
Double-tap	Quickly tap the screen twice on a webpage or other application screen to zoom (the application must support the double-tap/zoom function). Within the browser, double-tapping a webpage section will cause the browser to zoom and fit that section to the width of the screen.



About the Orientation Sensor

The TabTop™ 7.4 contains a sensor that will automatically change the orientation of most screens as you rotate the TabTop™ 7.4. The sensor works best when the TabTop™ 7.4 is rotated perpendicular to the ground (i.e., when the TabTop™ 7.4 is held upright and not flat on its back).



The orientation sensor can be turned on and off in the Display settings menu.

Charging the TabTop™ 7.4

The TabTop™ 7.4 comes with a built-in rechargeable lithium-polymer battery.

Before using the TabTop™ 7.4, the battery should be charged fully. The Status Indicator will light blue when the battery is charged fully.

To charge the battery:

Plug one end of the included power adapter into an AC 100-240V outlet.

Plug the other end of the included power adapter into the Power jack on the TabTop™ 7.4.

Disconnect the power adapter when the TabTop™ 7.4 is fully charged.

The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the device. Do not leave the device in a place subject to direct sunlight, or in a car with its windows closed. Do not connect the device to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Inserting a Memory Card

The TabTop™ 7.4 accepts micro SD memory cards. Insert a memory card into the micro SD card slot to:

Increase the memory capacity of your TabTop™ 7.4

Play media files stored on the memory card (e.g., music, video, or photo files)

To insert a memory card:

Align the memory card with the card slot. The metal contacts of the memory card should face down away from the LCD screen.

Getting to Know the TabTop 7.4



MILAGROW

Slide the card into the spring-loaded slot. Push the card in until it clicks into place.


Do not attempt to insert objects other than a micro SD memory card into the card slot. A compatible memory card should fit easily into the card slot; if you encounter resistance, check the alignment of the card. Do not attempt to force the card in.

Avoid touching the gold contacts of the memory card.

To release and remove a memory card:

Unmount the memory card.

- From the home screen, tap the **Launcher Tab**, and then touch **Settings** to show the settings menu.
- Touch **Storage** to show the storage settings.
- Touch **Unmount SD card** to prepare the memory card for safe removal.

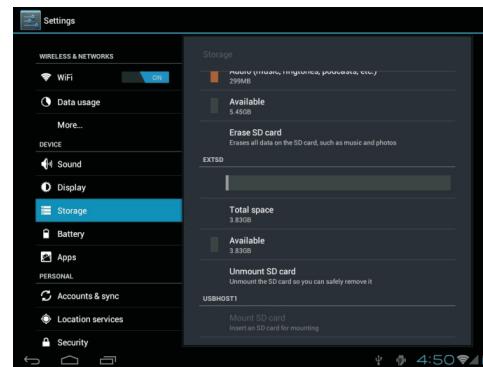

Push the card further into the slot until you hear a click. The card will spring out of the slot.

Grasp the card by its edge to remove it.

To avoid damage and data corruption, do not remove a memory card while data is being written to or read from the card. For example, do not remove a card while playing a music file stored on the card.

Resetting the TabTop™ 7.4

Reset the TabTop™ 7.4 if it should freeze and not respond or otherwise malfunction.

- Disconnect your TabTop™ 7.4 if it is connected to a computer.
- Press and hold the **Power** key for about 8 seconds to turn off the TabTop™ 7.4, and then press and hold the **Power** key about 3 seconds to turn on the TabTop™ 7.4.

Getting Started


Turning the TabTop™ 7.4 On and Off

To turn the TabTop™ 7.4 On:

- Press and hold the **Power** key until the LCD screen turns on. Wait until the Home screen appears; the TabTop™ 7.4 is now ready for use.

To turn the TabTop™ 7.4 Off:

- Press and hold the **Power** key until the confirmation message appears.

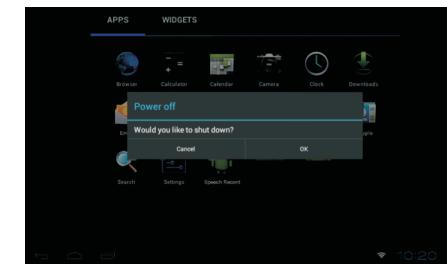

- Touch **OK** to turn off the TabTop™ 7.4.

Turning the Screen On and Off (Standby)


When the TabTop™ 7.4 is on, you can turn off the screen to conserve battery **power**. Simply press the **Power** key once to turn the screen off. Press the **Power** key again to turn the screen back on.

Unlocking the Screen

When the screen turns off, you will have to **Unlock** the screen when you turn it back on.

Long press around 4 seconds to **Unlock the Screen**

*To conserve battery power, the screen can be set to turn off automatically when the TabTop™ 7.4 is not in use (between 15 seconds and 30 minutes). This **Sleep** option can be found in the **Display** menu.*

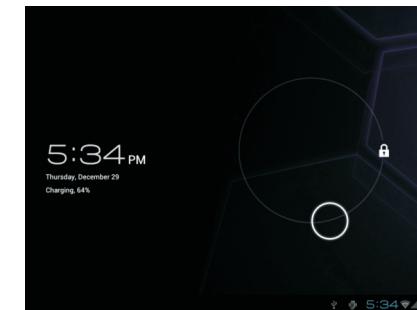


Getting Started



MILAGROW


If a password has been set, enter the password to finish unlocking the screen. The Screen Unlock password can be set in the **Security** settings menu.

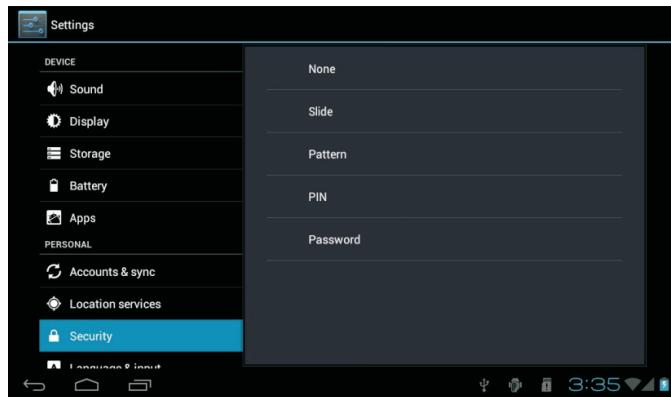

WARNING: Please write down your password lock pattern/PIN/Password. Misplacing or forgetting this method will lock the user out. Recovering the unit will reset the device back to factory defaults. **ALL YOUR DATA & PROGRAMS WILL BE LOST.**

Home Screen at a Glance

The home screen is the starting point for all of the features of your TabTop™ 7.4.

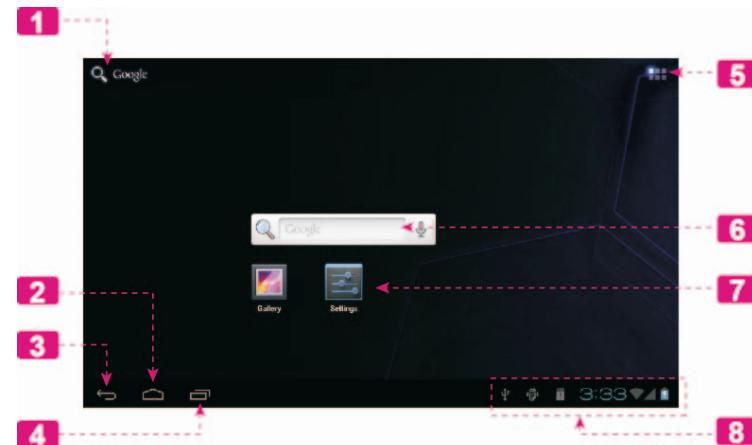

S No.	Name	Description
1	Google Search	Touch to search with Google browser
2	Home Icon	Touch to back to the central Home Screen
3	Back Icon	Touch to back to the previous screen
4	Recent Apps	Touch to display the list of thumbnail images of apps you have worked on recently. Touch an App to open it
5	Launcher Tab	Open the Launcher to view the list of all Applications and Widgets installed on the TabTop™ 7.4. Touch the Launcher tab to open the Launcher
6	Widgets	Widgets are small applications that you can use directly from the home screen. For more information, refer to the "Widgets" section on page 13
7	Icons	Touch an icon to open an application or folder
8	Notification Bar	Shows notification icons such as time, battery level, and the network signal strength; touch the bar to open the full Notifications panel. Touch a Notification icon to display more detail

About Applications

To open an application, touch the application icon on the home screen or in the Launcher.

Launcher screen:



The screen shown above is for illustrative purposes only. We reserve the right to modify and improve the final list of applications available on the TabTop™ 7.4.

Getting Started



MILAGROW

Preinstalled Applications

Some applications have been installed on your TabTop™ 7.4 for your convenience. These applications include:

	Browse the web
	Display the calendar or record events and appointments to manage your schedule
	Perform simple mathematical operations
	Take pictures or videos with the front-facing camera
	View the current time, or set an alarm
	Debugging tool
	Check your e-mail
	View and manage files stored on the TabTop™ 7.4
	View photos and videos, plus edit photos
	View the files (Pictures etc.) which download from website
	Play music
	Access the Settings menu to adjust the TabTop™ 7.4's options
	View map with network
	With network, can make your location
	Installed applications
	Record the sound & voice

Installing Applications

You can also download and install additional applications from the device's applications marketplace, the web browser, or other sources.

The TabTop™ 7.4 must be set to allow installation of applications from non-Market sources. The unknown sources option can be set in the **Application settings** menu.

Your Mobile Internet Device may include access to, or information on, content, products, applications and services from third parties. Your use of such third party content, products, applications and services is at the discretion of such third party and expressly governed by such third party's terms of use, including any such third party's privacy policies, for such content, products, applications and services. We are not responsible for and expressly disclaim all warranties of any kind with respect to all such third party content, products, applications and services. We will not be responsible for any loss, costs, or damages incurred due to your access to, or use of third party content, products, applications or services.

About Widgets

Widgets are self-contained applications that you can place on the Home screen to access your favorite features.

Adding Widgets to a Home Screen

Navigate to the Home screen which you want to place the Widget on.

Touch the **Launcher Tab**.

Touch **WIDGETS** to show all widgets, and then hold on a widget icon to add it to the Home screen.

Removing Widgets

Touch and hold the Widget until Remove icon appears at the top side of the screen, then drag the Widget to the Remove icon to remove it.



About Notifications

The icons that appear in the Notification bar at the bottom right corner of the screen alerts you when new messages arrive or alarms or other application events occur.

View and respond to the notifications by opening the full Notifications panel.

Touch the **Notification** bar to open the Notifications panel.

To respond to a notification:

- Touch a notification in the list; the Notifications panel will close and the application associated with the notification will launch.



To close the Notifications panel:

- Touch any other area of screen except the Notifications panel, or;
- Touch the Back icon.

Connecting to the Internet

This TabTop™ 7.4 can utilize Wi-Fi data networks to connect to the Internet.

- Wireless Wi-Fi technology can provide Internet access at distances of over 300 feet; however, this distance can be affected by your surrounding environment and Wi-Fi router.

Requirements

In order to connect to the Internet, you will need either of the following:

A wireless router or access point with a broadband Internet connection

The wireless router must support Wi-Fi 802.11b/g connections. If the router supports 802.11n, make sure that it has been configured to accept 802.11b/g connections as well.

A minimum connection speed of 64 Kbps is recommended. Faster speeds will enable a better Internet experience.

You will need to know the name of your network (SSID), as well as the password or other credentials if your network is secured. These settings can usually be found on the administration webpage of your wireless router.

Please refer to your wireless router's documentation for help, or ask your network administrator for details.

You may encounter open Wi-Fi networks, or "hot spots." These networks are usually configured so that you can simply connect to them without needing to know its settings; the TabTop™ 7.4 will obtain all the information it needs from the router automatically.

Connect to a Wi-Fi network

The Notification bar displays icons that indicate your TabTop™ 7.4's Wi-Fi status.

	Connected to a Wi-Fi network (waves indicate connection strength)
[no icon]	There are no Wi-Fi networks in range, or the Wi-Fi radio is off

1. Turn on the Wi-Fi radio if it is not already on. To turn on Wi-Fi:

- a. Go to the Home screen:
Touch the **Home** icon.
- b. Open the Launcher screen:
Touch the **Launcher Tab**, then touch **Settings**.
- c. Open the Wireless & networks menu:
Touch **WIRELESS & NETWORKS**.

Connecting to the Internet

d. Open the Wi-Fi settings menu:

Touch **Wi-Fi**.

e. Make sure that the Wi-Fi option box is set to ON: Touch and slide the block right to enable the Wi-Fi connection.



When Wi-Fi is on, the TabTop™ 7.4 will look for and display a list of available Wi-Fi networks.

If a network that you have connected to previously is found, the TabTop™ 7.4 will connect to it.

*If you don't see your network in the list, you can force the TabTop™ 7.4 to re-scan. To scan for networks, tap the **SCAN** icon located on the top right corner of the screen.*

2. Select an available Wi-Fi network to connect to:

In the same Wi-Fi settings menu above, touch a network in the list.

If the network is open, the TabTop™ 7.4 will prompt you to confirm connection to the network. Touch **Connect** to confirm.

If the network is secured (as indicated by a Lock icon), the TabTop™ 7.4 will prompt you to enter a password or other credentials. Touch the Wireless password box to show the on-screen keyboard and then use it to enter the password. Touch **Connect** to confirm.



When you have successfully connected to a Wi-Fi network, the Notifications bar at the bottom of the screen will show a Wi-Fi signal indicator.

To learn about how to add a Wi-Fi network when it is not in range or when the router is set to obscure the network name (SSID); or to configure advanced Wi-Fi options, please refer to the manual.



MILAGROW

Browsing the Web

The Browser application lets you visit webpages and find information on the web. Keep up with the news, your friends, or enjoy video from YouTube™, the world's most popular video-sharing community.

To use Browser, the TabTop™ 7.4 must be connected to the Internet. Read the section "Connecting to the Internet" to learn how to connect to the Internet.



To open Browser, touch the Browser icon on the Home screen or in the Launcher.

S No.	Name	Description
1	Address bar	Displays the address (URL) of the current page. Touch the bar to enter a new address or to search the web
2	Go to Bookmarks Icon	Touch to view bookmarks, to view your most visited sites, or to view your browser history
3	Search Icon	Touch to search with Google browser
4	Add Bookmark Icon	Touch to add bookmarks
5	New Window (+)	Creates new browser window

Browsing the Web



MILAGROW

Some common Browser actions are described below:

To go to a webpage.

1. Touch the **Address bar** at the top of the Browser screen. The keyboard will open automatically. (If the Address bar is not visible, drag the page down to return to the top of the Browser screen.)
2. Use the keyboard to enter the address (URL) of the webpage
3. Touch **Enter** key to open the webpage




■ To bookmark a webpage.

Bookmark your favorite webpages in order to visit them quickly without entering a URL.

1. Go to the webpage that you want to bookmark	
2. Touch the Add Bookmark icon	


3. If desired, you can modify the name of the bookmark or its location (URL address). Otherwise, touch **OK** to finish adding the bookmark

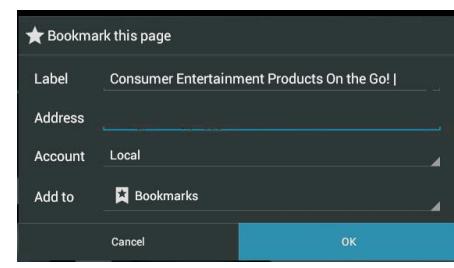

■ To go to a bookmarked webpage.

1. Touch the **Go to Bookmark** icon.


2. Touch a bookmark tile to open it

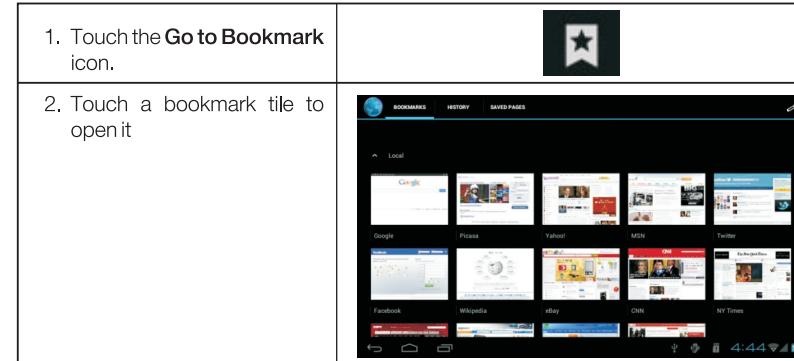

■ To delete a bookmarked webpage.


1. Touch the **Go to Bookmark** icon

2. Touch and hold a bookmark tile to open the option menu

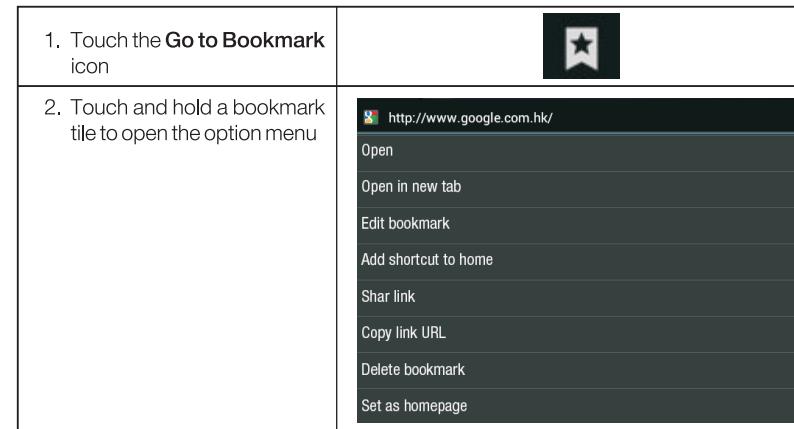

Browsing the Web

3. Touch "Delete bookmark"

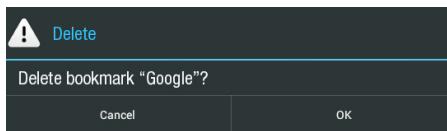

4. Touch "OK" to confirm

Browser menu

While viewing a webpage, touch the icon shown as right to open the Browser Menu, the icon is located on the top right corner of the screen, the options are:

- Refresh: Refresh the current webpage
- Forward: Go to the next webpage
- New tab: Open the webpage in a new window, under a new tab
- New incognito tab: Open the webpage in a new window, under a new tab, and the pages you view in the new window will not appear in your browser history or search history. See the on-screen explanation of going incognito
- Share page: Use Email to send the webpage URL
- Find on page: Search for content on the current page
- Request desktop site:
- Save for offline reading: Save this page onto the internal memory, then you can read it when the internet connection is disabled
- Page info: View information about the current page, including the URL
- Settings: Customize the Browser



Managing Applications

Downloading and installing new applications to your TabTop™ 7.4 can extend its functionality in many ways.

You can download and install applications from the included Applications store. To open the Applications store:

1. Touch the **Launcher** icon.
2. Touch the **Apps Marketplace** icon.




When installing an application, it will tell you what functions it needs to control and if it needs access to your data. Make sure you review these access requirements carefully before completing the installation.

Be especially cautious with applications that request access to many functions or to a significant amount of your data. You are responsible for the results of applications installed on your TabTop™ 7.4.

To uninstall an application:

1. From the Home screen, touch the **Launcher Tab**.
2. Touch Settings to open the **Settings** menu.
3. Touch **Apps**, a list of all applications installed on the TabTop™ 7.4 will display on screen.

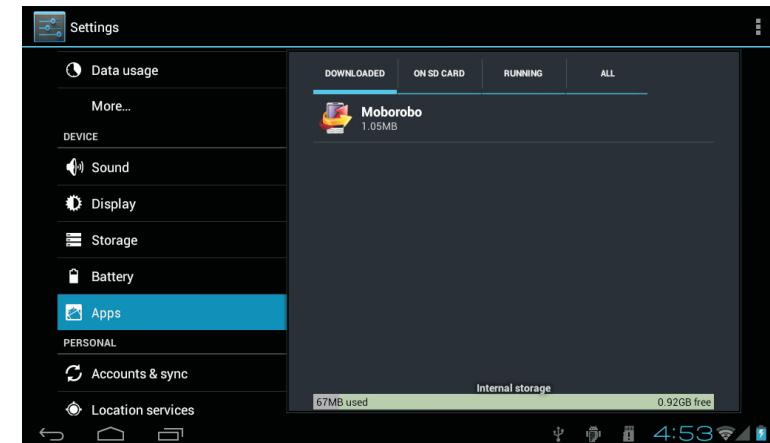


Managing Applications




MILAGROW

4. Touch the name of the application you want to uninstall; the Application Info screen will open.

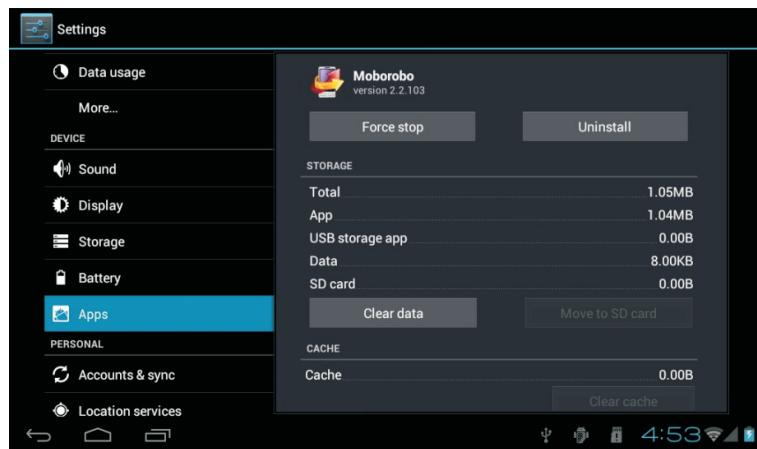

5. Touch **Uninstall**. The TabTop™ 7.4 will prompt you to confirm.

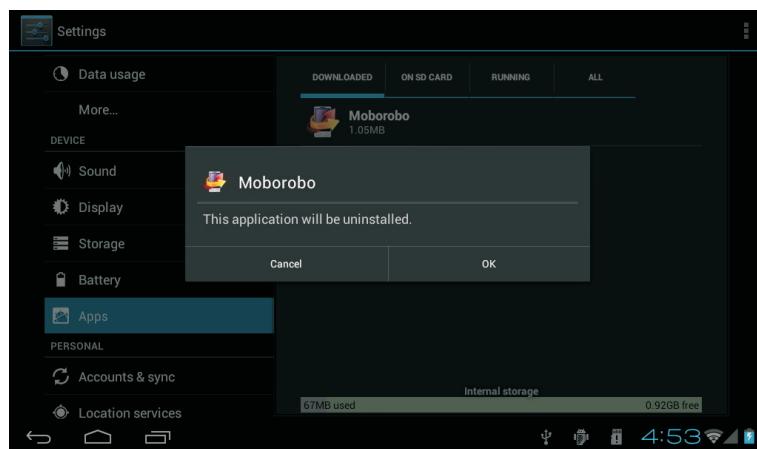

6. Touch OK to uninstall the application.

Or you can uninstall an application from the Launcher screen directly. Touch and hold an application icon until the Uninstall icon appears, drag the application icon to the Uninstall icon to uninstall the application.

Optional Connections

Connecting to a Computer

Connect the TabTop™ 7.4 to a computer to transfer files.

1. Connect your TabTop™ 7.4 to the computer.


With the included USB cable: Plug the small end of the cable into the USB 2.0 Hi-speed connector of the TabTop™ 7.4.

Plug the large end of the cable into an available USB 2.0 Hi-speed port on the computer.

When your TabTop™ 7.4 is connected, a USB icon will appear in the Notification bar.



Touch the Notification bar to open the notifications panel.

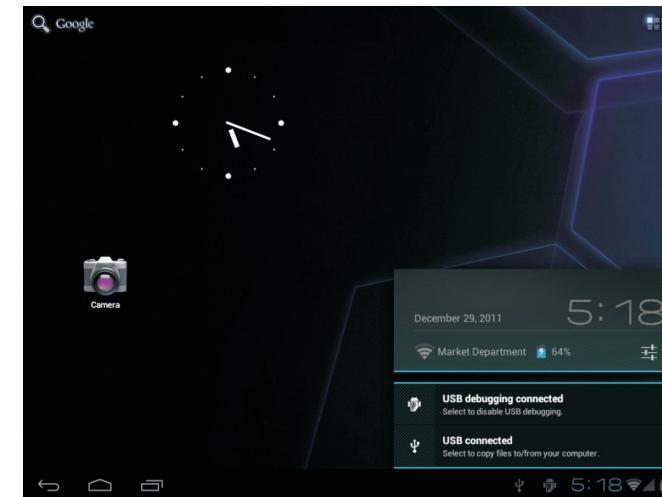

The TabTop™ 7.4's "mass storage mode" is compatible with many operating systems including: Microsoft® Windows® XP, Vista, 7 or higher and Mac OS or Linux.

2. Mount the storage drive.

- Touch **USB connected** to mount the TabTop™ 7.4's built-in storage, then touch "Turn on USB Storage" and "OK" when prompted to confirm. When mounted, you can copy files to/from your computer to it.

Optional Connections



MILAGROW

Your TabTop™ 7.4 will be recognized by the computer as a Removable Storage drive. Drag and drop files between your TabTop™ 7.4 and the computer. To learn more about copying files, please refer to the documentation included with your computer or operating system.

Connecting to a TV

Connect to a TV to enjoy your TabTop™ 7.4 from the comfort of your living room. An HDMI cable (Type A-to-Type C) is required to connect the TabTop™ 7.4 to a TV.

The TabTop™ 7.4 will recognize and match the capabilities of the TV automatically.

To connect the TabTop™ 7.4 to the TV:

1. Plug the small end of the HDMI cable into the mini HDMI connector of the TabTop™ 7.4.
2. Plug the large end of the HDMI cable into the HDMI port on the TV.
3. Turn on the TV, and set its display mode to the HDMI port that the TabTop™ 7.4 is connected to.

The TabTop™ 7.4's display will be output to the TV screen.

If you need help setting the display mode of the TV, please refer to the documentation provided by the TV manufacturer.

Connecting Headphones

Connect a pair of headphones (or earphones) to the TabTop™ 7.4 to enjoy media in private.

Lower the volume level of the TabTop™ 7.4 before connecting headphones, and then slowly raise the volume to a comfortable listening level.

- The headphones must have a 3.5 mm (1/8 in) plug.
- When headphones are connected, speaker output will be disabled automatically.

Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.


Using the USB Full-Size Adapter

The USB full-size adapter can be used to connect and use USB devices with the TabTop™ 7.4. The adapter converts the mini USB port on the TabTop™ 7.4 into a USB On-the-Go (OTG) connector.

Connecting a Keyboard

For times when you want to type for an extended period of time, you may want to connect a full-size keyboard to the TabTop™ 7.4.

Use the included USB full-size (Type A) adapter to connect a keyboard to the TabTop™ 7.4.

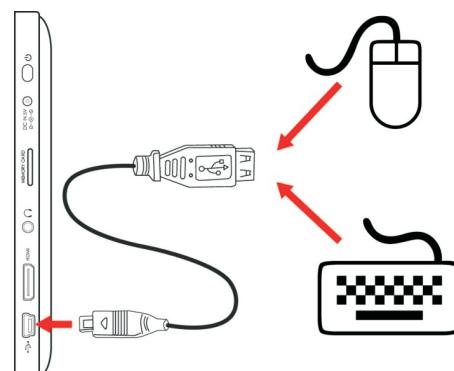

You may also use this connection to add a mouse to the TabTop™ 7.4.

The adapter supports one connection at a time. To use a keyboard and mouse simultaneously, you will need to add an external USB hub. You will also need to make sure that the TabTop™ 7.4 is connected to its charger, if it is not fully charged."

Connecting a Storage Device

Use the included USB full-size (Type A) adapter to connect a storage device to the TabTop™ 7.4 (e.g., a USB flash memory drive).

This connection supports a maximum storage size of 16 GB. For additional storage capacity, a micro SD card can be added to the TabTop™ 7.4.

Setting the System Options



MILAGROW 

Setting the System Options

Open the system settings menu to adjust how the TabTop™ 7.4 looks and functions.


Many applications will have their own settings; refer to the documentation provided by the application developer to learn more.

To open the Settings menu:

1. From the Home screen, touch the **Launcher Tab**.
2. Touch **Settings** to open the Settings menu.

The settings are grouped by category. Touch a category to open and adjust its settings on the right side.

Please refer to the manual for a description of the items in the Settings menu.

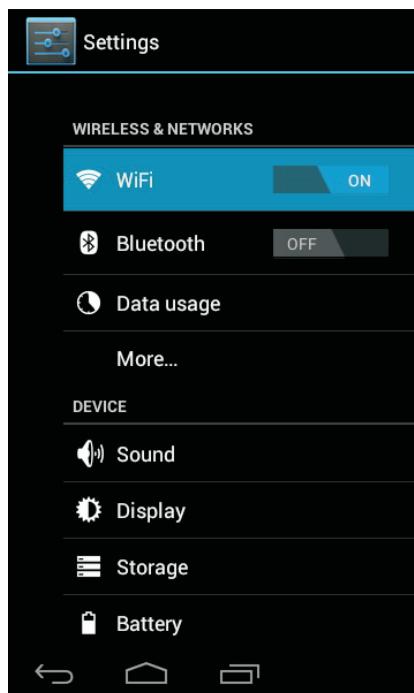

Specifications

Processor	Cortex A8 (1.2 GHz)
RAM	512MB
Storage	4GB/16GB flash built-in Micro SD card slot (max. 32GB supported)
Display	7.0" TFT LCD (800 x 600), capacitive Touch Screen
Networking	Wi-Fi IEEE 802.11 b/g/n
Video Output	Mini HDMI, Type C (1080p and 2160p supported)
Audio Output	3.5 mm headphone
PC Interface	USB 2.0 Hi-speed
Additional Features	Front camera Built-in microphone Stereo speaker
Operating System	Android 4.0
Power	Rechargeable Li-poly battery Power Adapter (DC 5V)
Playback Time (hours)*	Up to 10 hours music, 5.5 hours video, 4 hours web browsing

* Music was tested with a 128 kbps MP3 file; video was tested with a 1920 x 1080 MPEG-4/AVC file; browsing was tested with the screen brightness set to default. Actual playback results may vary.

Support



MILAGROW

Support

If you have a problem with this device, please check our website at www.milagrowthumantech.com for Frequently Asked Questions (FAQs) and product updates. If these resources do not resolve the problem, please write to customercare@milagrow.in or call +91 9953476189.

Notes _____
