



RAD60LE RADAR SPEED SIGN USER GUIDE



Table des matières

1	RAD60LE: Overview and Setup.....	4
1.1	Equipment description	4
1.2	RAD60L Radar speed sign.....	4
1.3	Sign power supply	6
1.4	Installation and start-up	7
1.4.1	Roadside placement.....	7
1.5	Radar sign installation	8
1.6	Mains power installation	9
1.7	Solar power installation	10
1.8	Start-up	11
2	Software	12
3	RAD60L Transporter.....	12
3.1	Connection	12
3.2	Starting the app.....	13
3.3	Configuring display settings.....	14
3.3.1	Speed Interval	15
3.3.2	Detection distance:	15
3.3.3	Display modes:.....	15
3.3.4	Display language:	16
3.3.5	Spy Mode:	16
3.3.6	Energy saving.....	17
3.3.7	Alternative schedule	17
3.3.8	Import/export a configuration file.....	18
3.4	Télécharger les données	19
3.5	Restart Rad60	19
4	Connecting to the radar display	20
4.1	Starting the app.....	20
4.2	Radar	22
4.2.1	Edit radar display settings.....	22
4.2.2	Import a data file.....	23
4.2.3	Open Speed Sign Data Transporter from RadStat.....	23
4.3	options	23
4.4	Help.....	24

4.5	Devices	24
4.6	Report	25
4.6.1	Number of Vehicles as a Function of Time	25
4.6.2	Number of Over speeding Vehicles as a Function of Time	26
4.6.3	Number of Vehicles as a Function of Day	27
4.6.4	Number of Over speeding Vehicles as a Function of Day	27
4.6.5	Speed as a Function of Time	28
4.6.6	Speed as a Function of Day	28
4.6.7	Vitesse percentiles	29
4.7	Health.....	29
4.8	Data	31
5	RAD60L technical data	32
6	Doppler radar.....	33
7	Troubleshooting.....	34

1 RAD60LE: OVERVIEW AND SETUP

1.1 EQUIPMENT DESCRIPTION

The RAD60 educational radar system is an effective measure for calming traffic. The radar encourages drivers to reduce their speed by providing immediate and highly visible information.

Traffic statistics are recorded to verify the lasting effect of the installation and guide future actions.


1.2 RAD60L RADAR SPEED SIGN

The radar integrates a tri-color speed display, an amber message display, and a state-of-the-art Doppler radar all within a molded, lightweight, and waterproof enclosure.

The color transition is based on the speed limit set for the radar's location. Predefined messages are set to « Thanks » and « SLOW DOWN »




The sign connections are made at the back of the display. The power connection uses a keyed circular connector. The SIM card inserts into a sealed screw-cap chamber. An AGC 1/4x1-1/4 fuse is replaceable without opening the enclosure.

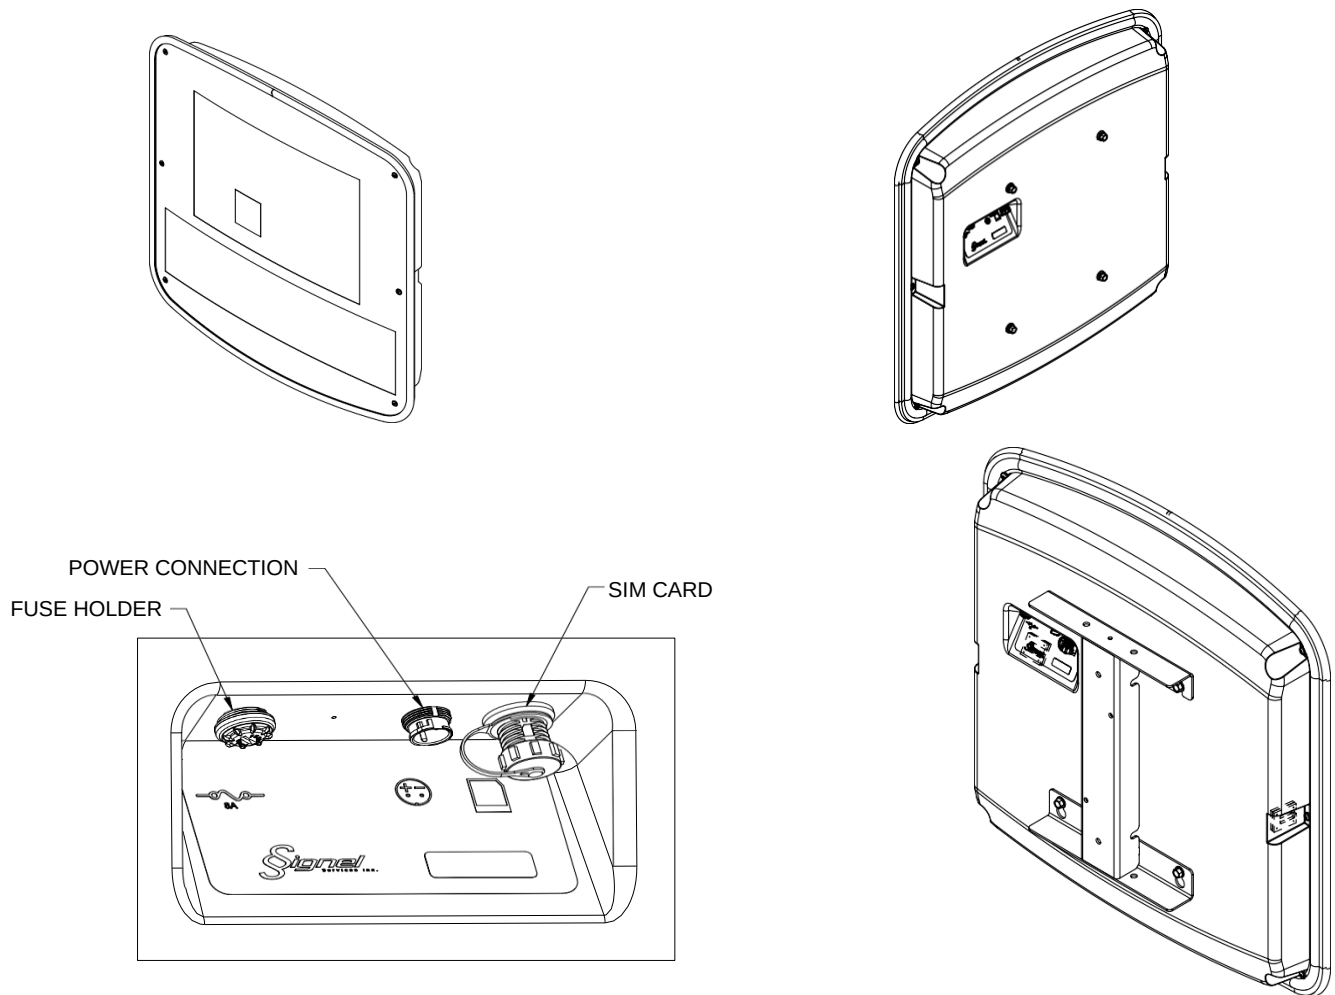

The display sign is equipped with an aluminum mounting support and stainless-steel flange bolts, allowing for quick and simple post installation.

Straps belts with quick release clips can also be supplied depending on the type of installation. Please ask your representative for the best solution for your installation.

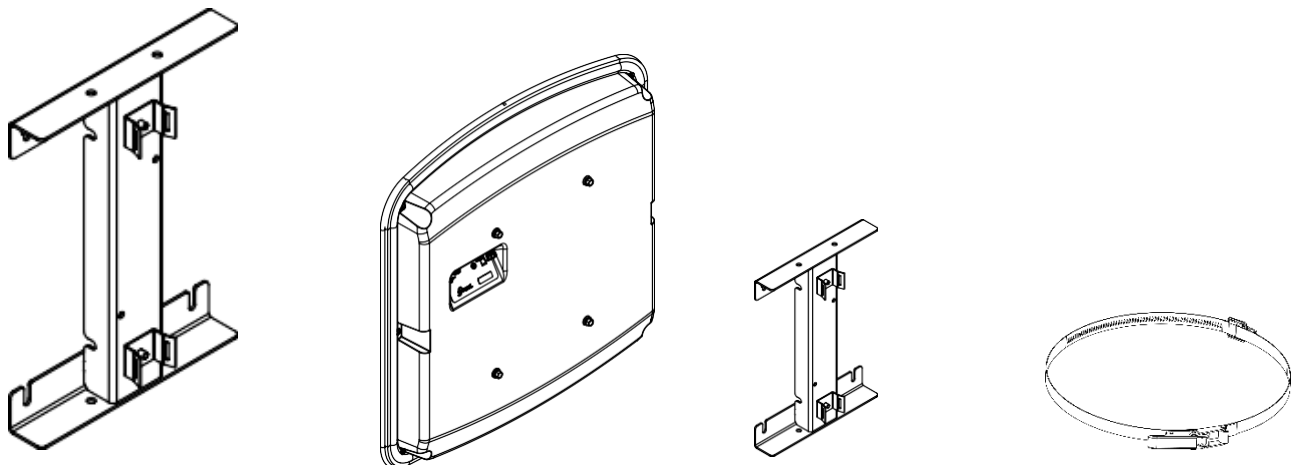

1.3 SIGN POWER SUPPLY

The radar is a device that operates on direct current at a voltage of 12V.

The radar adjusts its operation according to the power supply voltage to avoid deep battery discharge. Three progressive levels of load shedding are provided:

- Speed display without a message
- Speed display only in case of an excess
- Display shutdown, recording maintained

Load shedding levels can be adjusted remotely by a user using a browser-based interface.

The sign is protected using an 8A, AGC fast fuse, 1/4 x 1-1/4 (cylindrical).

Based on the available power supply at the site, the following products are available:

- Mains power, RAD60EA. Where available, an economical option is an outdoor rated AC-DC converter conveniently lodged within the aluminium mounting bracket.
- Solar power, RAD60ES. An independent power supply unit that includes a 100W solar panel and batteries for year-round operation.

Should your requirement differ, appropriate solutions can be provided for:

- Lighting equipment only active during night
- Electrical ballast for 347VAC supply
- Power outage battery backup

Please ask your representative about the best solution for your needs.

1.4 INSTALLATION AND START-UP

1.4.1 Roadside placement

The sign should be installed at a height of 2m to 2.5m, measured from the bottom of the sign.

A side clearance of 0.5m to 3m is allowed.

The sign must be perpendicular to the road axis to provide the best speed accuracy.

The vertical angle of the Doppler radar is in most cases enough to allow a square installation. In cases where the gradient is more than 5 degrees either up or down, shimming may be required for best operation. Please ask your representative for the best solution for your installation.

Conditions to avoid:

- Installing the sign near large objects that could obstruct the radar beam. Large objects include existing street signs, advertising boards, parked large vehicles and trees.
- Installation within 150m of an overpass or other important gradient as it may impair readings.
- Installation at an intersection where incoming vehicles from secondary roads may interfere with your primary data analysis target.
- Also, vehicles slowing down or speeding up at a stop sign will not give you pertinent data.
- Installation in a curve.

For an installation with a solar panel, the location must have a clear view of the sky year-round. Buildings, structures and trees can cast shadows on the panel and significantly reduce the device's autonomy.

1.5 RADAR SIGN INSTALLATION

Required tools

- 1/2in wrench
- Belt tensioner
- Multimeter

First, install the mounting bracket onto the post, with the pear-shaped holes at the top and the slots at the bottom. The bracket is attached to round posts with two straps and buckles. Alternatively, bolts may be used for square posts, removing the strap fasteners if not required.


Install the 5/16-18 flanged bolts loosely on the back of the radar sign, attach the radar sign to the bracket, and then tighten the bolts completely.

Make sure to properly orient the radar perpendicular to the direction of traffic.

For your safety, it is strongly recommended to use a lift boom during the radar installation. Please observe all mandated road work zone practices for your area.

NOTE

- For installing the solar power option, it is preferable to assemble the solar block first, working in an unobstructed manner from top to bottom.

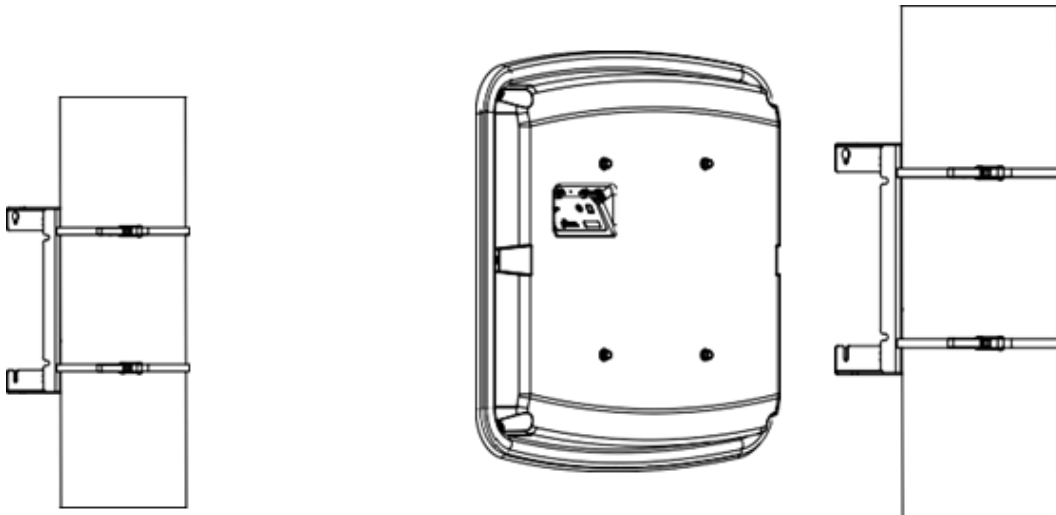

1.6 MAINS POWER INSTALLATION

Required tools

- 1/2in wrench
- Phillips screwdriver
- Belt tensioner
- Multimeter

The necessary AC-DC power converter lodges in the sign's mounting bracket. Assemble it if not already done so.

Complete the electrical connection from the mains to the converter, then from the converter to the radar sign. Secure cables to structure and route to leave loops for water-draining.

NOTE

- It is strongly recommended to install a 15 A fuse or breaker upstream from the power unit. Signal Services cannot be held accountable for damage caused by an improper installation.

1.7 SOLAR POWER INSTALLATION

Required tools

- 1/2 wrench
- Phillips screwdriver
- Belt tensioner
- Multimeter


Before leaving the workshop, check the voltage at the power connector terminals and make sure that it is above 12V. A battery discharges even if it is not used: long-term storage may make it necessary to recharge the batteries.

First, install the support arm onto the post to orient the solar panel towards the south. Attachment is done with three straps and buckles, or alternatively by using bolts.

Next, install the battery box onto the support arm, electrical connectors towards the bottom. Secure it with four 1/4-20 bolts and nuts.

Finally, install the solar panel onto the support arm. Secure it with four 1/4-20 bolts.

Complete the electrical connection from the solar panel junction box to the battery box, then from the battery box to the radar sign. Secure cables to structure and route to leave loops for water-draining.

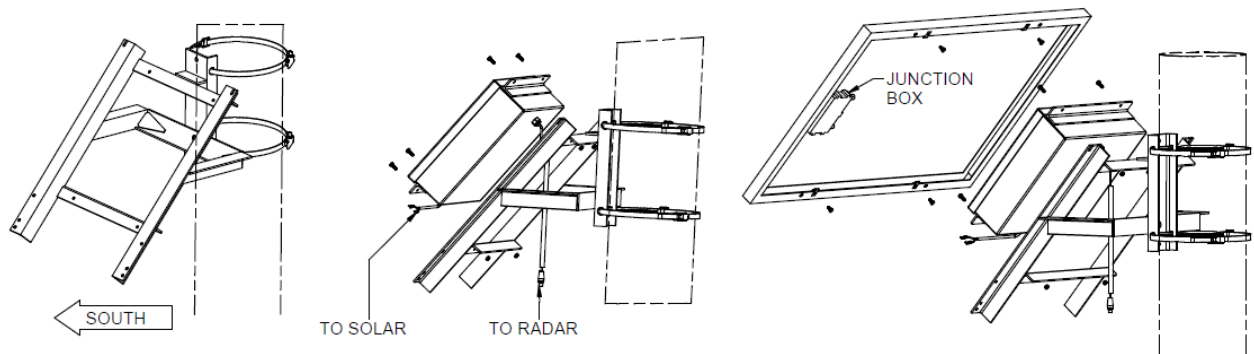

1.8 START-UP

The radar speed sign will power up as soon as connected to a 12VDC power source.

As the sign starts, a progress bar will appear in the top left corner of the display. A SIM card for an active account must be installed for the start-up to complete.



Factory defaults settings are as follow:

- Speed limit is set to 50 km/h.
- Message for speed below or equal to the speed limit is "THANK YOU".
- Message for speeds between 51 to 80 km/h is "SLOW DOWN".
- No message is shown above 80km/h.

The speed limit can be adjusted remotely along with several other parameters, as detailed in the following chapter.

2 SOFTWARE

Two executables are provided:

- Signal RAD60L
- RAD60LTransporter

The **Signal RAD60L** software allows the processing of the statistics of the data collected, offering the possibility of analyzing the information from several interventions. It also allows you to manage various radar configuration files.

RAD60LTransporter is used for data retrieval, radar parameter configuration, and factory reset settings.


3 RAD60L TRANSPORTER

Power the radar display according to your device option. Once the self-diagnostic test is complete, connect your computer to the radar with the **RAD60LTransporter**.

3.1 CONNECTION


View the status of available networks.

Choose the radar display ID provided to the delivery pouch. Initiate the connection, choose WPA2 security, and enter your device's security code. Once connected, "no internet connection" means that the device is not connected to the internet, only your computer.

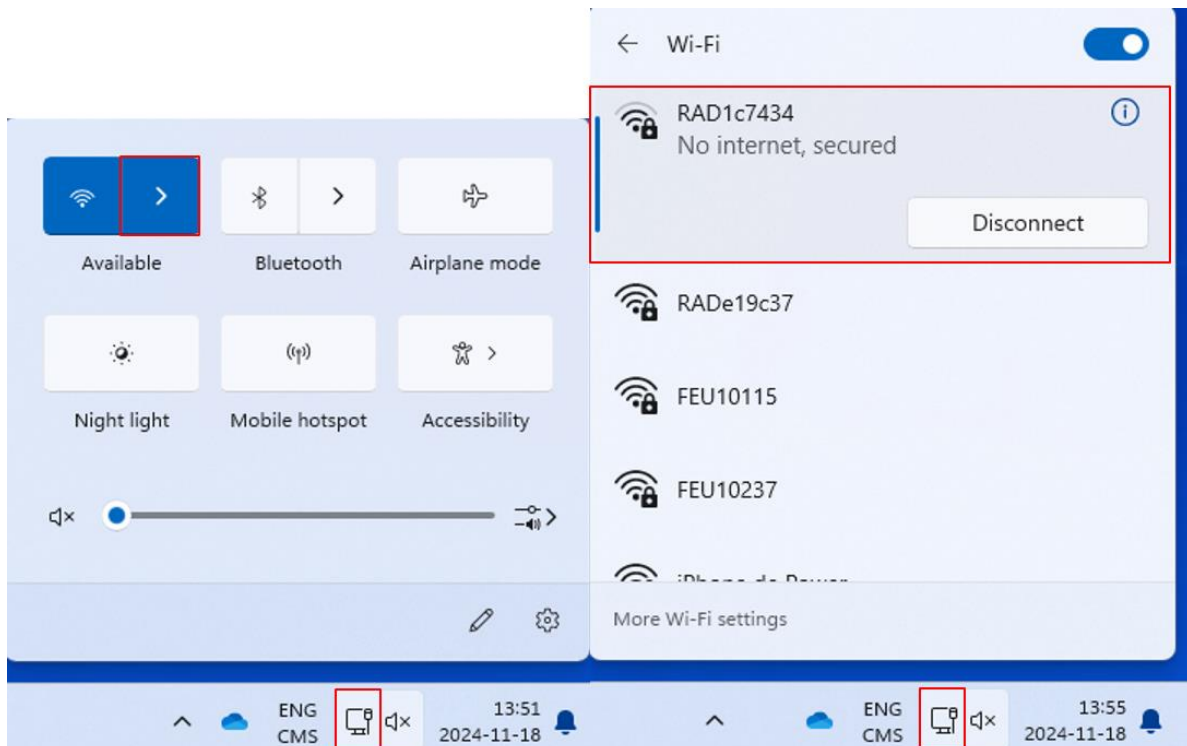

3.2 STARTING THE APP

Start the application at the menu at the bottom left, classified under Signal Services, or the desktop shortcut.

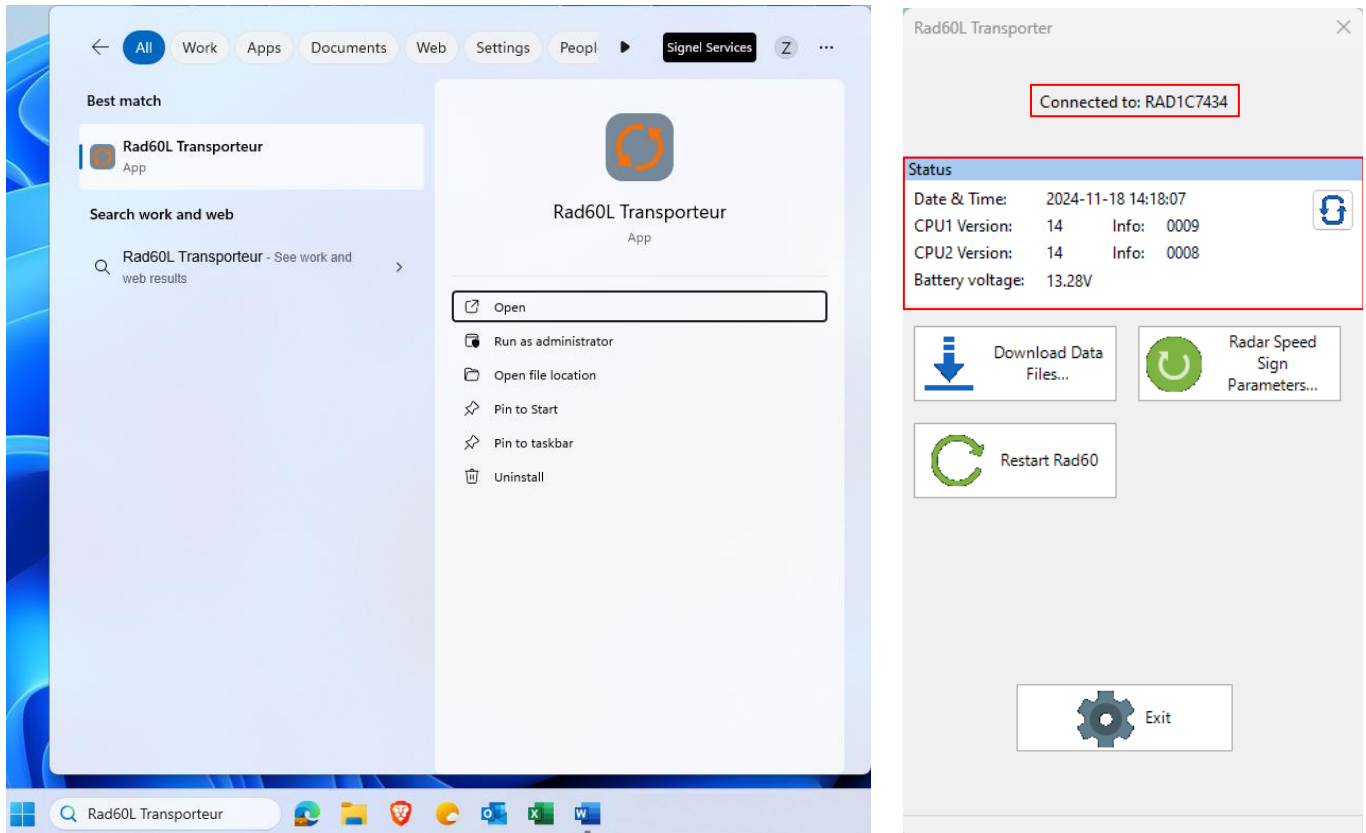

The transport software has five functions:

Download data: this is to collect data during the visit to the installation site.

Speed Display Settings: This is to configure the radar when visiting the installation site.


Restart Rad60: Reinstall Default Settings.

Identification: Indicates which radar you are connected to.


Status: Displays real-time GPS-detected date and time, as well battery voltage in real time.

3.3 CONFIGURING DISPLAY SETTINGS

Customize device behavior using a wide range of settings.

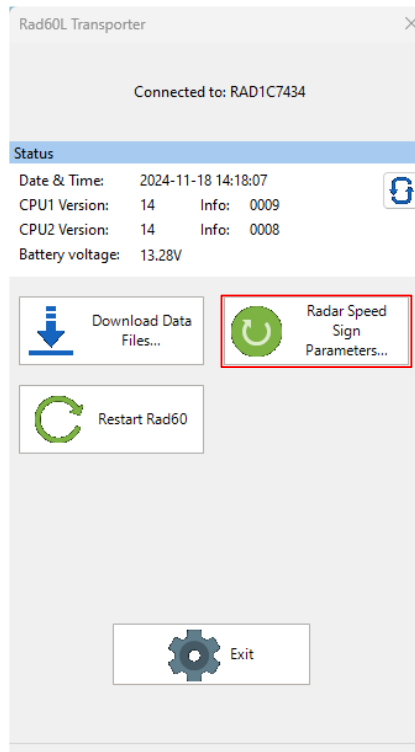


Click in Rad60LTransporter on **Rad60 Speed Sign Parameters**

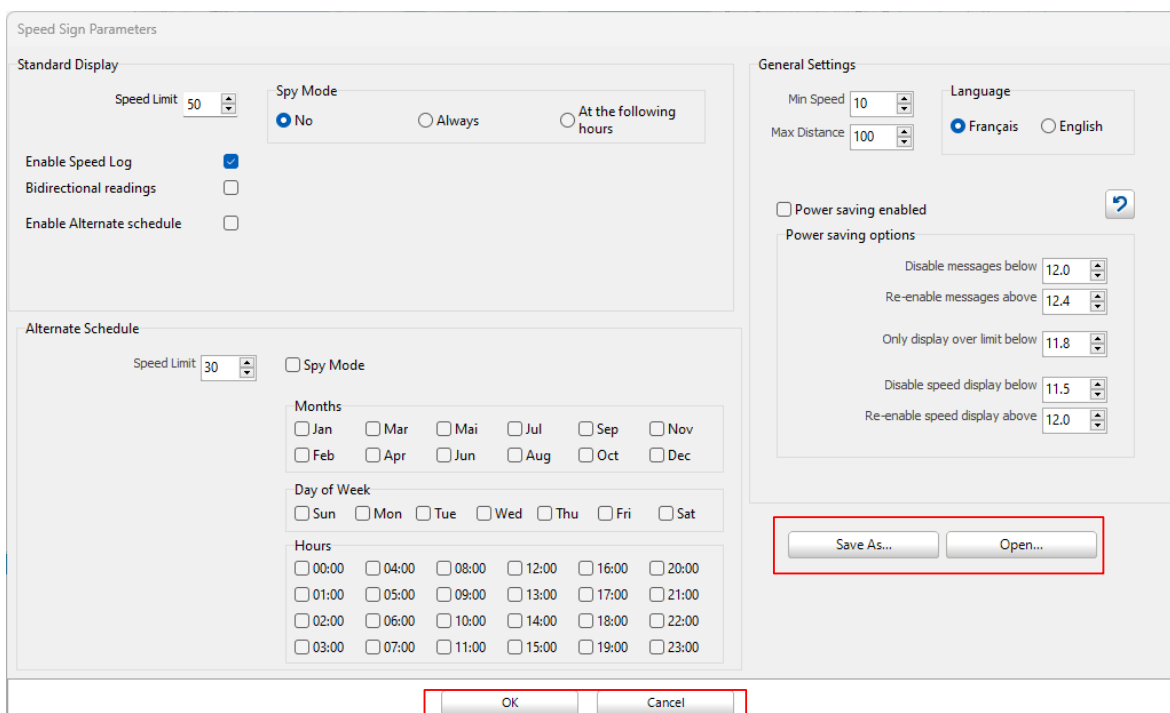

3.3.1 Speed Interval

Set the radar to operate within a specific speed range.

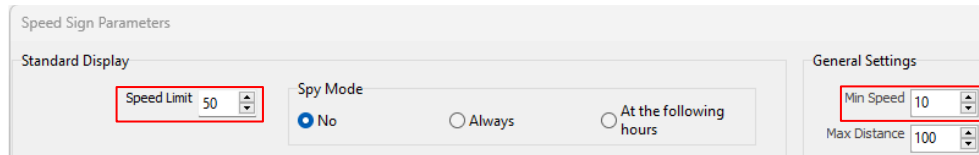

The screenshot shows two panels. The 'Speed Sign Parameters' panel has a 'Standard Display' section with a 'Speed Limit' dropdown set to 50, and a 'Spy Mode' section with three radio buttons: 'No' (selected), 'Always', and 'At the following hours'. The 'General Settings' panel has a 'Min Speed' dropdown set to 10 and a 'Max Distance' dropdown set to 100. Red boxes highlight the 'Speed Limit', 'Min Speed', and 'Max Distance' settings.

The speed limit must correspond to the limit of the designated area, and the minimum speed is the lowest speed at which the radar is set to capture.


The radar will only display speeds below the display limit, which sets the maximum speed displayed on the radar. This setting is bound to the speed limit, which means that each speed limit has its own display limit. Speeds exceeding this limit will be recorded, but not displayed, which will prevent the sign from being used as a "show off" tool.

The radar will only display the following messages, which cannot be changed:

- **THANKS:** if the driver's speed is below the speed limit
- **SLOW DOWN:** If the driver's speed is above the speed limit

3.3.2 Detection distance:

Adjust the maximum distance at which the radar will detect vehicles.

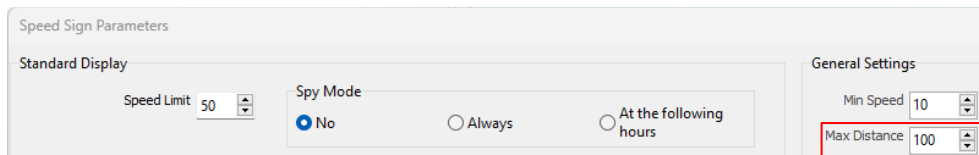


This screenshot is identical to the one above, showing the 'Speed Sign Parameters' and 'General Settings' panels. The 'Max Distance' dropdown in the 'General Settings' panel is highlighted with a red box.

3.3.3 Display modes:

The radar offers several modes:


- **Enable Speed Log:** This means that data is continuously recorded.
- **Bidirectional Reading:** means it can detect the speed of vehicles traveling in both directions.

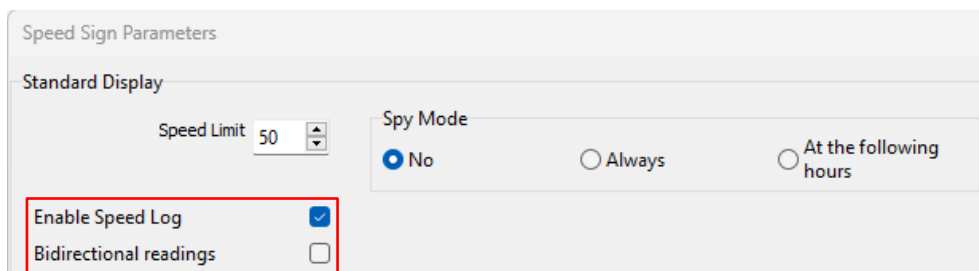

The screenshot shows the 'Speed Sign Parameters' panel. It includes the 'Standard Display' section with 'Speed Limit' set to 50, and the 'Spy Mode' section with 'No' selected. Below these, there are two checkboxes: 'Enable Speed Log' (checked) and 'Bidirectional readings' (unchecked). A red box highlights these two checkboxes.

3.3.4 Display language:

The display language is the one that is selected

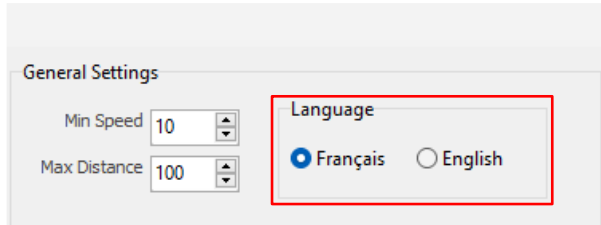

General Settings

Min Speed 10

Max Distance 100


Language

☒ Français ☐ English

3.3.5 Spy Mode:

Set the radar to work in spy mode:

- **No:** Standard operation with display and recording.
- **Always:** Runs silently without a display but continues to record data.
- **At the following hours:** Set specific times for the spy mode to be activated.

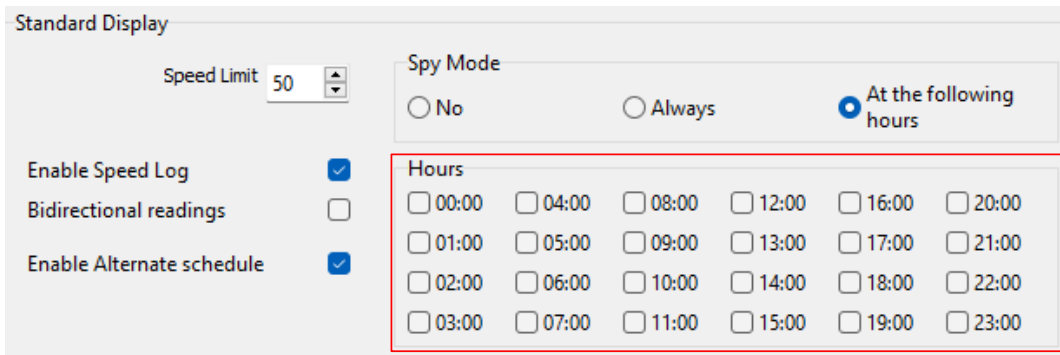

Standard Display

Speed Limit 50

Enable Speed Log ☒

Bidirectional readings ☐

Enable Alternate schedule ☒

Spy Mode


☐ No ☐ Always ☒ At the following hours

Hours

☐ 00:00	☐ 04:00	☐ 08:00	☐ 12:00	☐ 16:00	☐ 20:00
☐ 01:00	☐ 05:00	☐ 09:00	☐ 13:00	☐ 17:00	☐ 21:00
☐ 02:00	☐ 06:00	☐ 10:00	☐ 14:00	☐ 18:00	☐ 22:00
☐ 03:00	☐ 07:00	☐ 11:00	☐ 15:00	☐ 19:00	☐ 23:00

3.3.6 Energy saving

To maximize battery life, we recommend that you keep the power saving mode on.

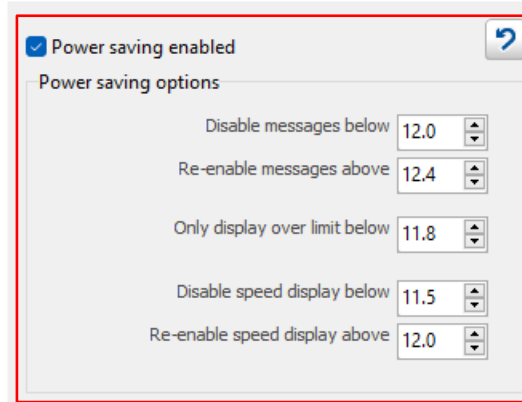

This mode includes load shedding, which reduces power consumption by temporarily shutting down non-essential components when energy levels are low. By doing so, the radar can continue to operate for long periods of time, even under less-than-optimal power conditions.

You can also adjust the following voltage settings to better manage power consumption:

- | | |
|----------------------------------|------|
| • Disable message below | 12 |
| • Re-able message above | 12.4 |
| • Only display over limit bellow | 12 |
| • Disable speed display bellow | 11.5 |
| • Re-able speed display above | 11.8 |

3.3.7 Alternative schedule

If the device is placed in a location where there are two speed limits, select the months, days, and times during which the device should operate under other settings.

Speed Sign Parameters

Standard Display

Speed Limit

Spy Mode
☒ No ☐ Always ☐ At the following hours

Enable Speed Log ☒

Bidirectional readings ☐

Enable Alternate schedule ☒

Alternate Schedule

Speed Limit

☐ Spy Mode

Months
☐ Jan ☐ Mar ☐ Mai ☐ Jul ☐ Sep ☐ Nov
☐ Feb ☐ Apr ☐ Jun ☐ Aug ☐ Oct ☐ Dec

Day of Week
☐ Sun ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat

Hours
☐ 00:00 ☐ 04:00 ☐ 08:00 ☐ 12:00 ☐ 16:00 ☐ 20:00
☐ 01:00 ☐ 05:00 ☐ 09:00 ☐ 13:00 ☐ 17:00 ☐ 21:00
☐ 02:00 ☐ 06:00 ☐ 10:00 ☐ 14:00 ☐ 18:00 ☐ 22:00
☐ 03:00 ☐ 07:00 ☐ 11:00 ☐ 15:00 ☐ 19:00 ☐ 23:00

3.3.8 Import/export a configuration file

To import a configuration, select **Open**. To export a configuration, select **Save As**. After you've made your changes, click **OK** to confirm them.

Speed Sign Parameters

Standard Display

Speed Limit

Spy Mode
☒ No ☐ Always ☐ At the following hours

Enable Speed Log ☒

Bidirectional readings ☐

Enable Alternate schedule ☐

Alternate Schedule

Speed Limit

☐ Spy Mode

Months
☐ Jan ☐ Mar ☐ Mai ☐ Jul ☐ Sep ☐ Nov
☐ Feb ☐ Apr ☐ Jun ☐ Aug ☐ Oct ☐ Dec

Day of Week
☐ Sun ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat

Hours
☐ 00:00 ☐ 04:00 ☐ 08:00 ☐ 12:00 ☐ 16:00 ☐ 20:00
☐ 01:00 ☐ 05:00 ☐ 09:00 ☐ 13:00 ☐ 17:00 ☐ 21:00
☐ 02:00 ☐ 06:00 ☐ 10:00 ☐ 14:00 ☐ 18:00 ☐ 22:00
☐ 03:00 ☐ 07:00 ☐ 11:00 ☐ 15:00 ☐ 19:00 ☐ 23:00

General Settings

Min Speed

Max Distance

Language
☒ Français ☐ English

☐ Power saving enabled

Power saving options

Disable messages below

Re-enable messages above

Only display over limit below

Disable speed display below


Re-enable speed display above

Save As... Open...

OK Cancel


3.4 TÉLÉCHARGER LES DONNÉES

Cliquez sur **Télécharger les données** pour importer les data collectés

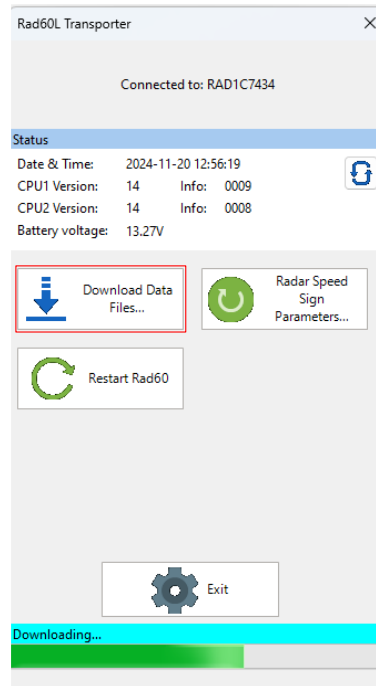

3.5 RESTART RAD60


Click **Restart Rad60** to reset the Radar to its default configuration.

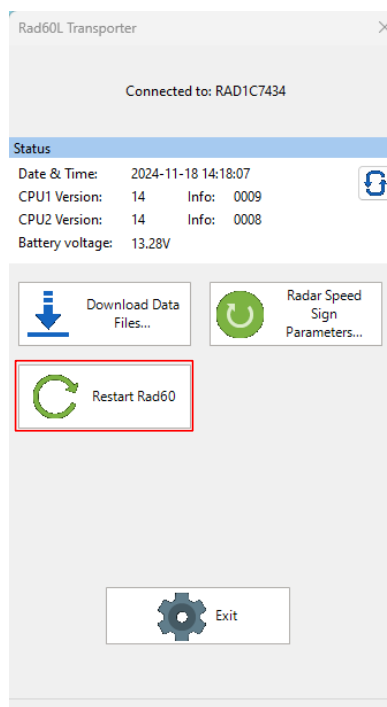

4 CONNECTING TO THE RADAR DISPLAY

4.1 STARTING THE APP


Start the application at the menu at the bottom left, classified under Signal Services, or the desktop shortcut.

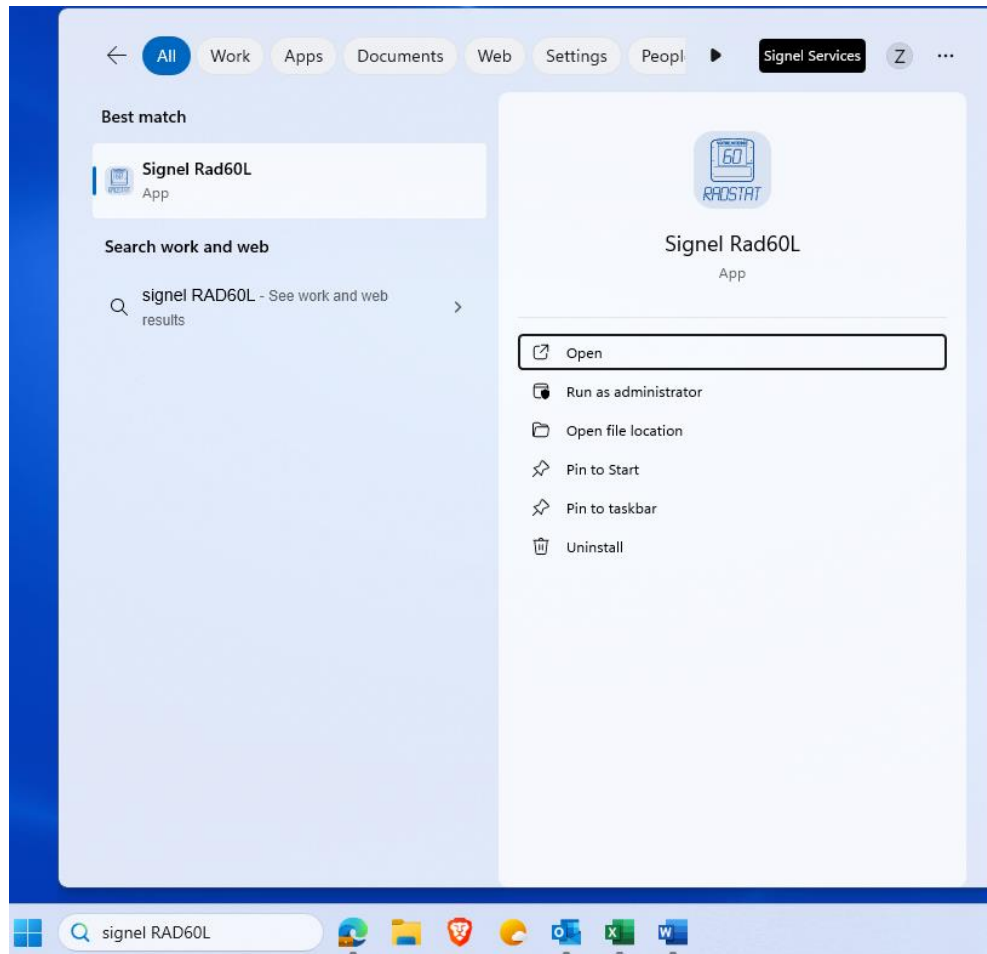

In the Server Setup dialog box, if you are unable to provide the necessary information, leave the choice to a local installation. These parameters can then be adjusted within the Signal RAD60L application.

The app starts on a dashboard that displays:

- File
- Radar
- Options
- Help
- Devices
- Report
- Health
- Data

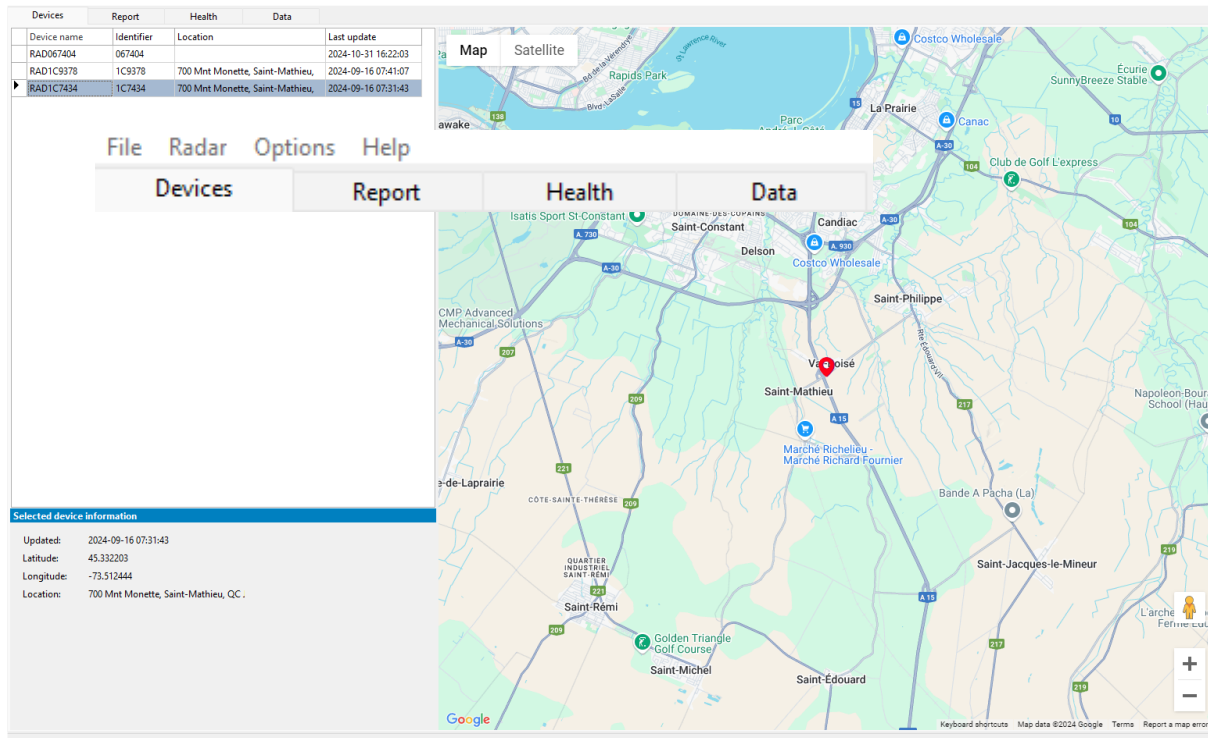

To help you navigate the user interface, refer to the image above which shows the different tabs and their functions:

- **Menu bar:**

File: Click this tab to exit the RadStat 60L.

Radar: This tab allows you to edit the radar settings, import a data file and open Speed Sign Data Transporter.

Option: Use this tab to switch between English and French.

Help: The "About" in the options menu informs you of the installed software version.

- **Tool Ribbon:**

Devices: This section displays all your devices in a list format for easy access and management.


Report: This tab provides access to all the data collected for analysis.

Health: This tab provides access to the data collected on battery voltage, temperature inside the housing and light intensity measurements of the LDR.

Data: This tab allows you to export the collected data in Excel format.



4.2 RADAR

Start by clicking on Radar

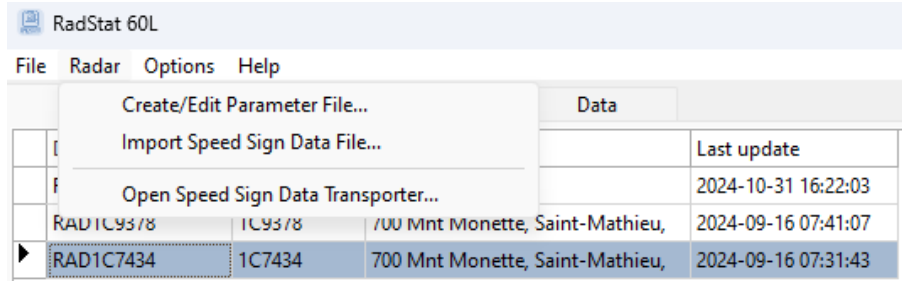

4.2.1 Edit radar display settings


Click Radar **Create/edit Parameter file** to create a configuration file that you can save and implement later on any Rad60L on-site.

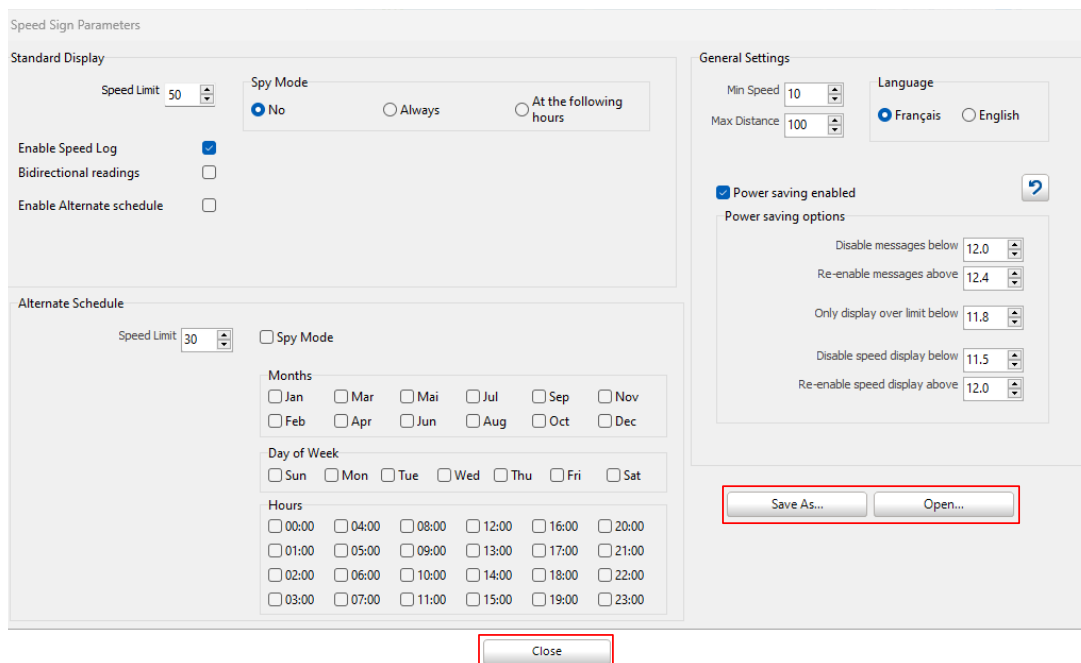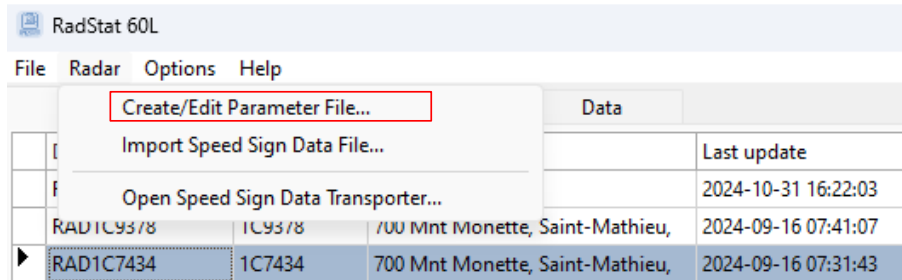

With the **Rad60LTransporter** you can directly configure the Radar or save the configuration to implement it later on any Rad60L, but by using the **RadStat 60L** you can only save the configuration to implement it later on site.


4.2.2 Import a data file

After **uploading the data** with **Rad60L Transporter** on site, the next step is to add this data by clicking on **Import Data File**.

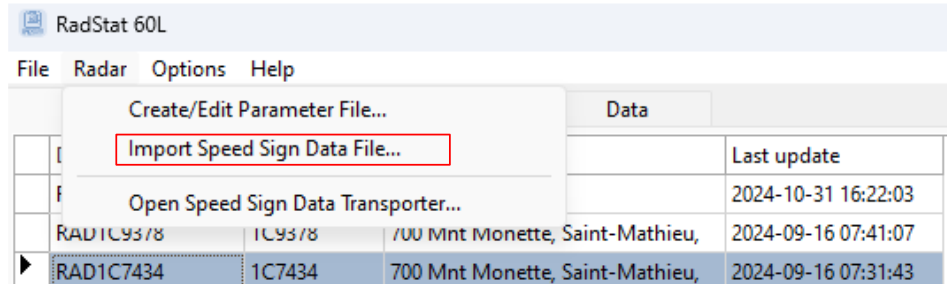


4.2.3 Open Speed Sign Data Transporter from RadStat

Click Open **Speed Sign Data Transporter** to access Transpoter software from the RadStat

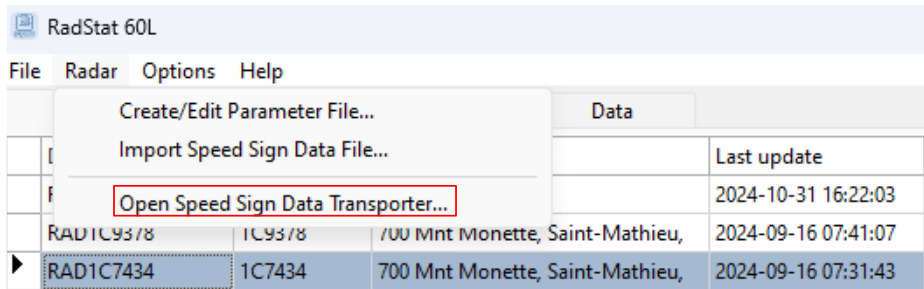

4.3 OPTIONS

In the menu bar, the option tab will switch the language of the software from French to English

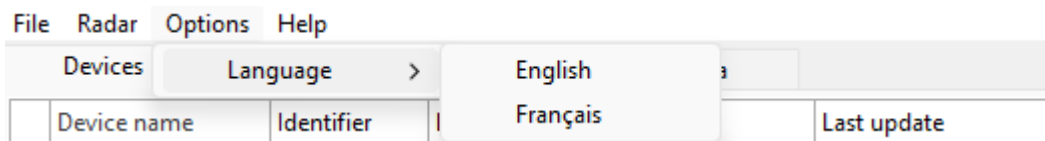

4.4 HELP

Click "**About**" in the help tab to view the installed software version

File Radar Options Help

Devices About... Data

Device name	Identifier	Location	Last update
RAD067404	067404		2024-10-31 16:22:03
RAD1C9378	1C9378	700 Mnt Monette, Saint-Mathieu,	2024-09-16 07:41:07
▶ RAD1C7434	1C7434	700 Mnt Monette, Saint-Mathieu,	2024-09-16 07:31:43

About



RadStat Application 60L 1.0.0.4

All rights reserved, Signal Services inc. 2024

Close

4.5 DEVICES

The devices are added to the database by importing a data file from the radar. This process retrieves and displays the following information in the **Devices** tab: **Device name**, **Identifier**, **location**, **last update**.

Devices	Report	Health	Data	
Device name	Identifier	Location	Last update	
RAD067404	067404		2024-10-31 16:22:03	
RAD1C9378	1C9378	700 Mnt Monette, Saint-Mathieu,	2024-09-16 07:41:07	
▶ RAD1C7434	1C7434	700 Mnt Monette, Saint-Mathieu,	2024-09-16 07:31:43	

4.6 REPORT

Click the **Name of the device** you want to analyse in the **Devices** tab. Next, go to the **Report** tab and select the desired settings. The corresponding graph will appear after clicking on **"Show"**.

Devices

Report

Health

Data

Number of Vehicles as a Function of Time
Number of Vehicles as a Function of Time
Number of Over speeding Vehicles as a Function of Time
Number of Vehicles as a Function of Day
Number of Over speeding Vehicles as a Function of Day
Speeds as a Function of Time
Speeds as a Function of Day
Speed percentiles

Period
☒ Custom
☐ Days (60)
☐ Weeks
☐ Months
☐ Years

From
2024-09-09


To
2024-09-16

Direction
☒ Approaching
☐ Receding
☐ Both

Show
Print

4.6.1 Number of Vehicles as a Function of Time

Select **"Number of Vehicles as a Function of Time"** to generate a graph showing the total number of vehicles; in this case, approaching vehicles; detected by the radar over the selected period. You can also choose different period settings, such as month, week, day, or a custom period.

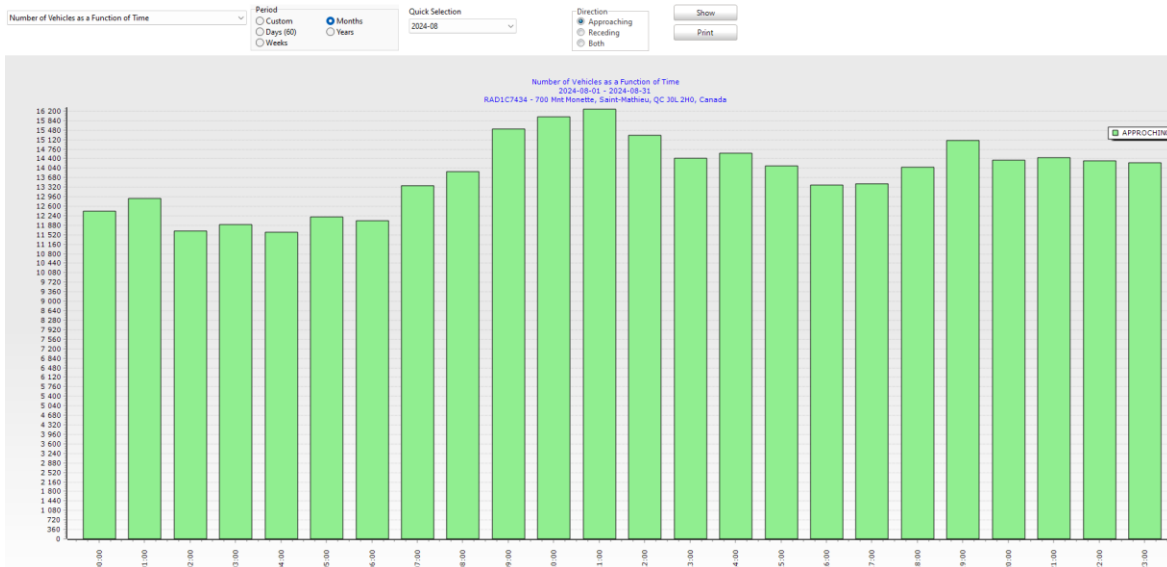

Choose from different settings depending on the data you need:

- Approaching
- Receding
- Both

Then you download or print it by clicking on **"Print"**

Number of Vehicles as a Function of Time


Period
☐ Custom
☐ Days (60)
☐ Weeks
☒ Months
☐ Years

Quick Selection
2024-08

Direction
☒ Approaching
☐ Receding
☐ Both


Show
Print

Then save **"Prepared Report"** in .fp3 format or print the graph.

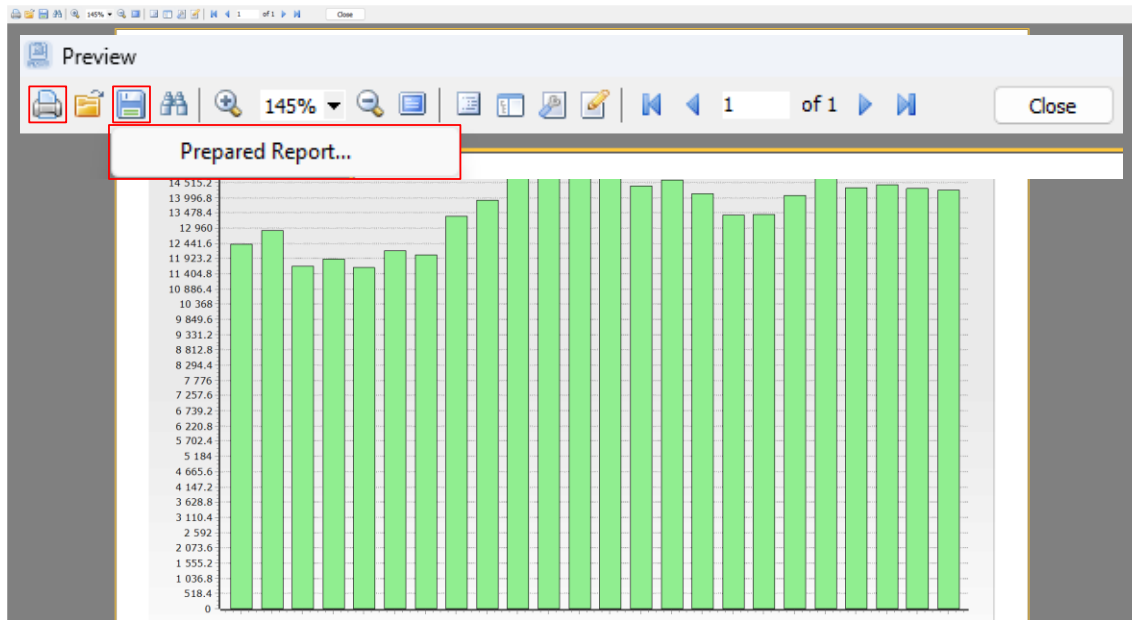


4.6.2 Number of Over speeding Vehicles as a Function of Time

Select "**Number of Over speeding Vehicles as a Function of Time**" to generate a graph displaying the total number over speeding Vehicles; in this case, approaching vehicles; detected by the radar over the selected period. You can also choose different period settings, such as month, week, day, or a custom period.

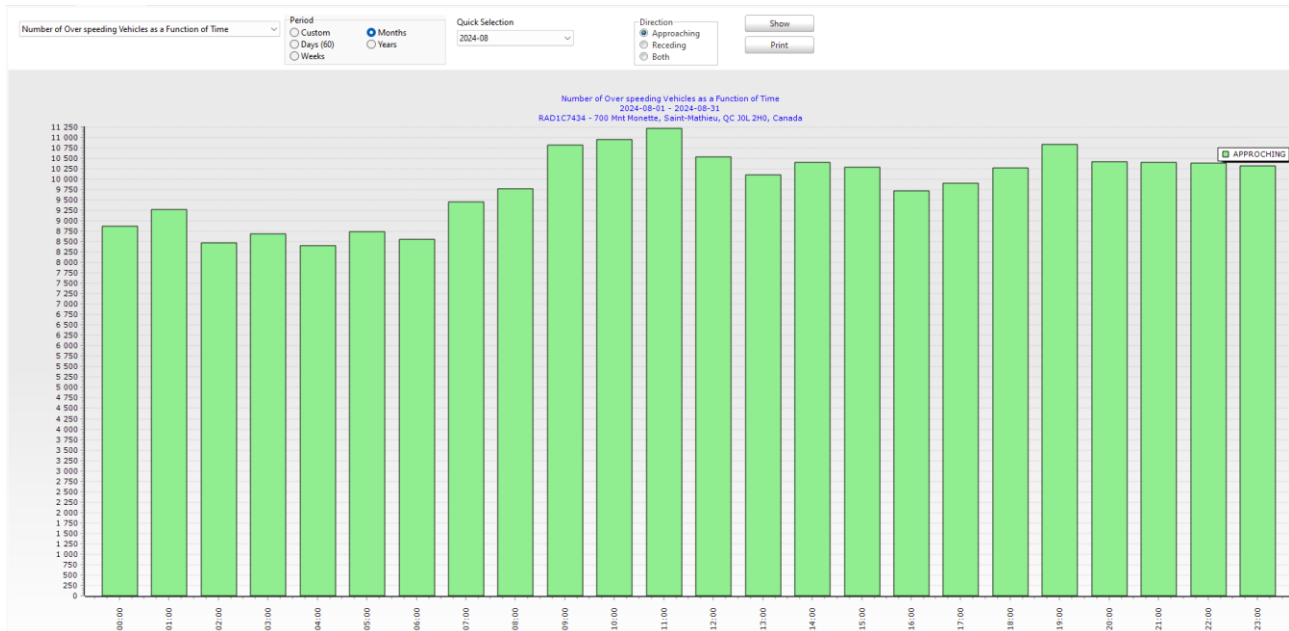


4.6.3 Number of Vehicles as a Function of Day

Select "**Number of Vehicles as a Function of Day**" to generate a graph showing the total number of vehicles; in this case, approaching vehicles; detected by the radar over the selected period. You can also choose different period settings, such as month, week, day, or a custom period.

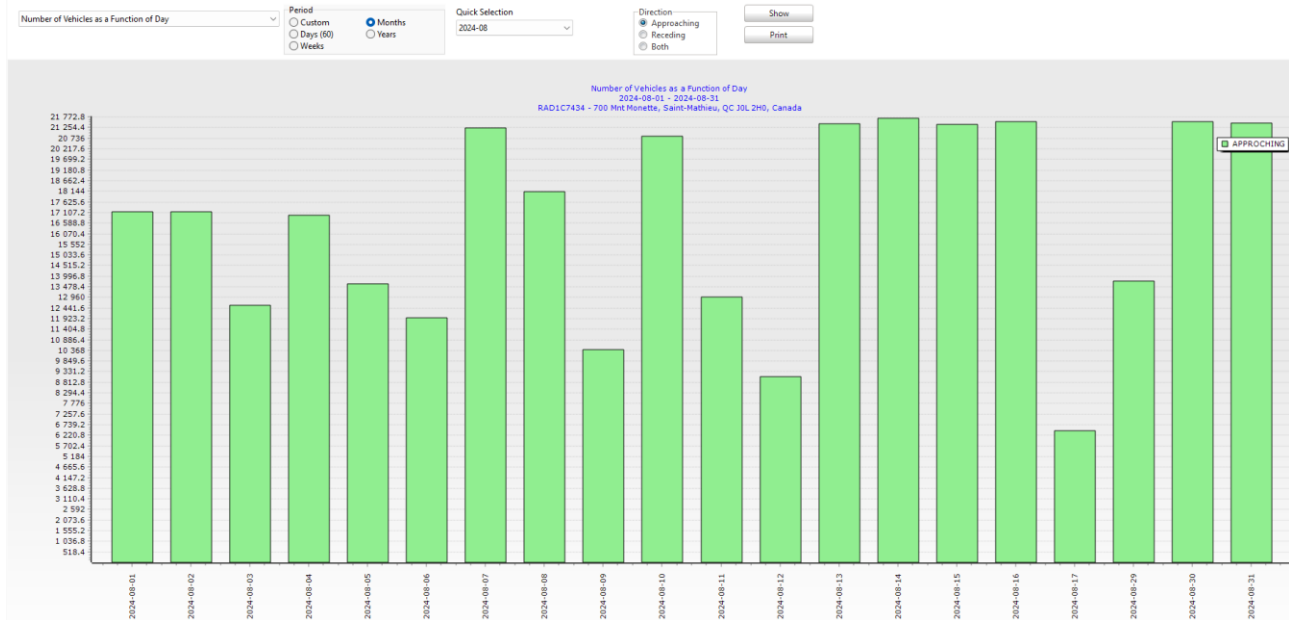


4.6.4 Number of Over speeding Vehicles as a Function of Day

Select "**Number of Over speeding Vehicles as a Function of Day**" to generate a graph displaying the total number over speeding Vehicles; in this case, approaching vehicles; detected by the radar over the selected period. You can also choose different period settings, such as month, week, day, or a custom period.

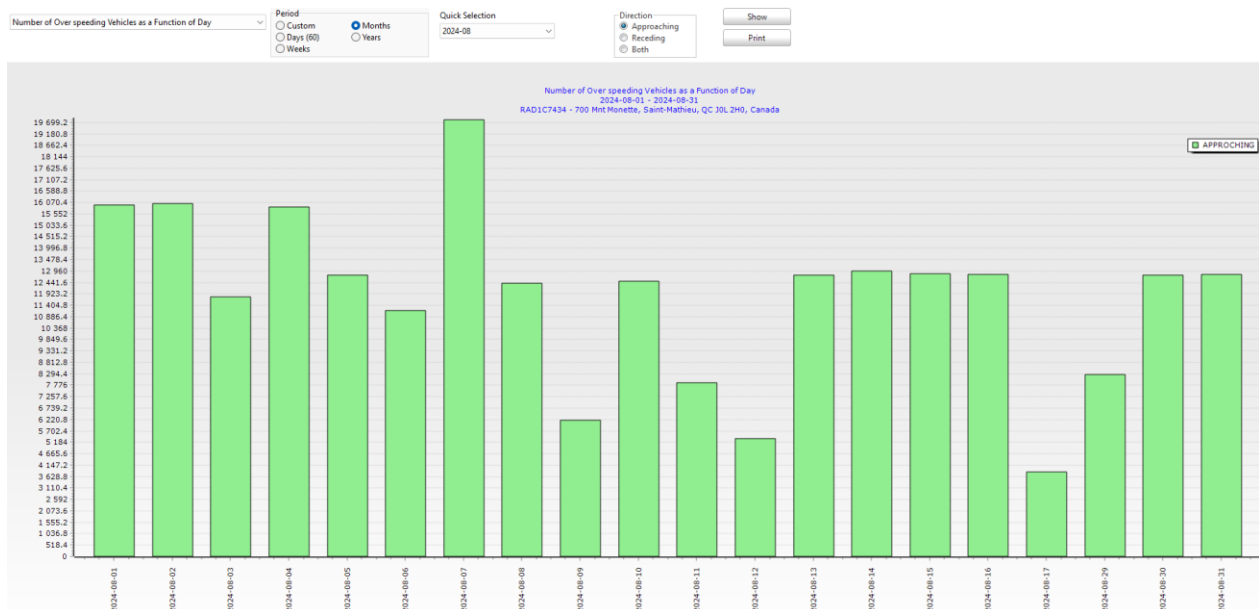


4.6.5 Speed as a Function of Time

Select "**Speed as a Function of Time**" to generate a graph displaying the minimum (MIN), maximum (MAX), and average (AVG) speeds of the vehicles; in this case, an approaching vehicle; detected by the radar over the selected period. You can also choose different period settings, such as month, week, day, or a custom period.

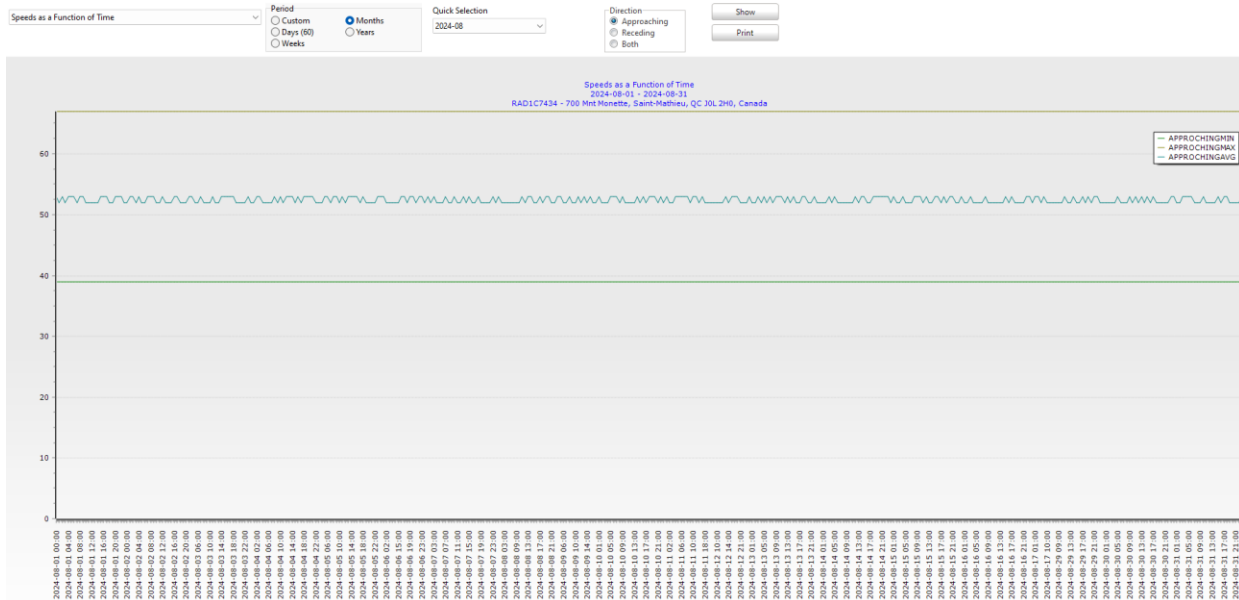


4.6.6 Speed as a Function of Day

Select "**Speed as a Function of Day**" to generate a graph displaying the minimum (MIN), maximum (MAX), and average (AVG) speeds of the vehicles; in this case, an approaching vehicle; detected by the radar over the selected period. You can also choose different period settings, such as month, week, day, or a custom period.

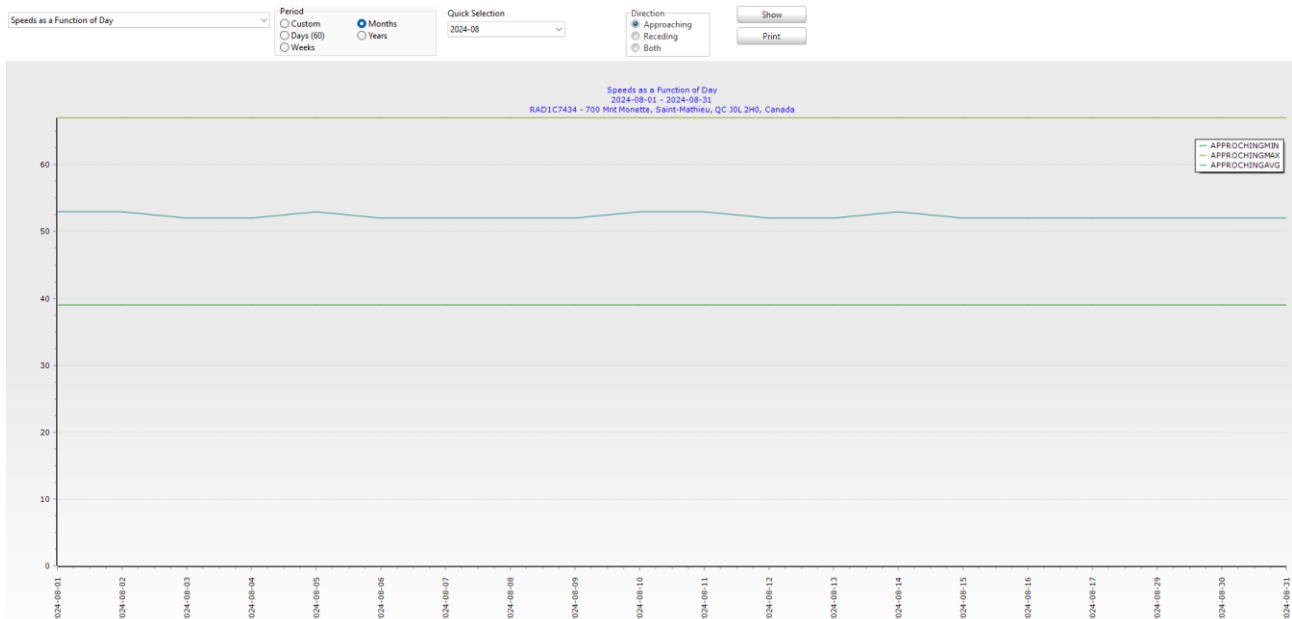


4.6.7 Vitesse percentiles

Select "**Speed Percentiles**" to generate a graph displaying the distribution of vehicle speeds; in this case, an approaching vehicle; detected by the radar over the selected period. You can also choose different period settings, such as month, week, day, or a custom period.

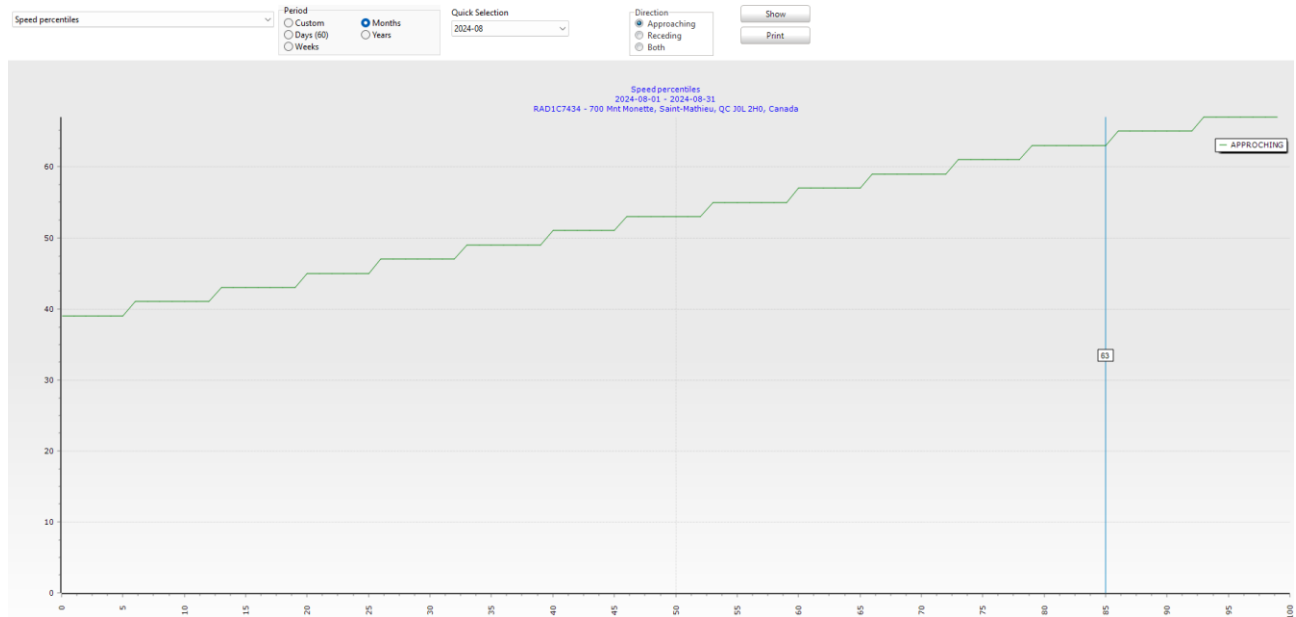


4.7 HEALTH


Select "**Health**" during the chosen month to view the data collected on battery voltage, temperature inside the housing, and LDR light intensity measurements for the selected month.

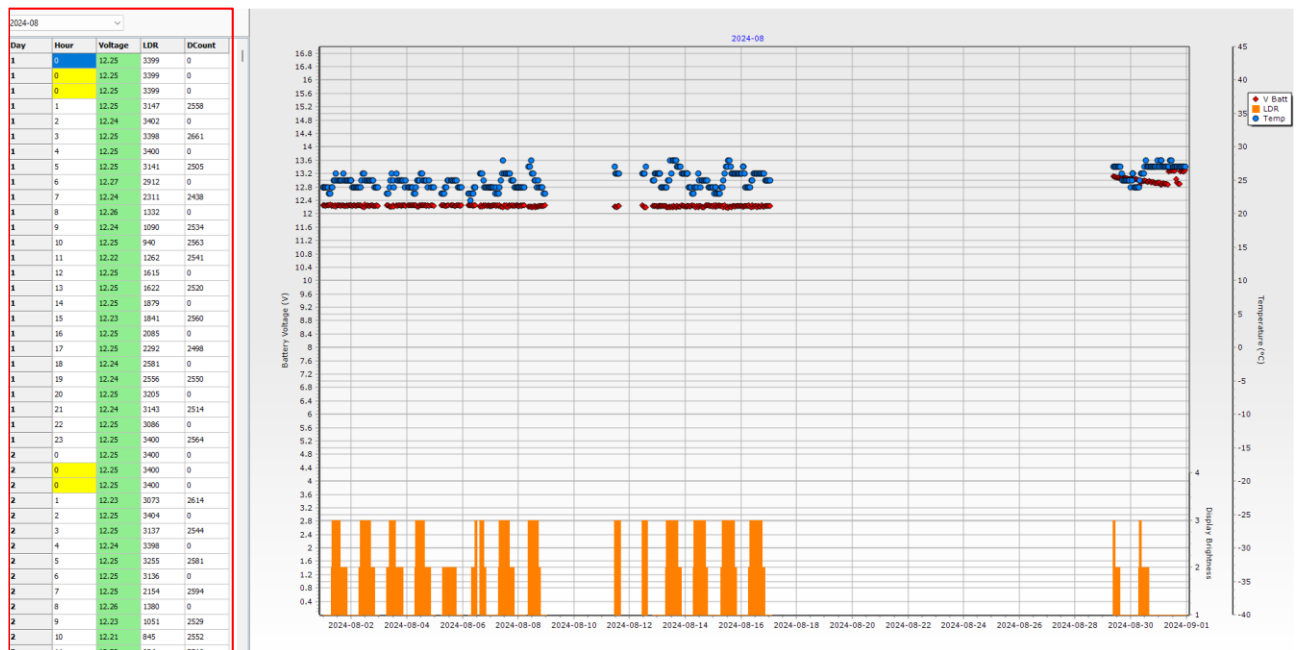

The data are tabulated and drawn on a logarithmic graph so you can read them directly from the table or place the cursor on a specific day and pull it to the right to have time values for the desired day

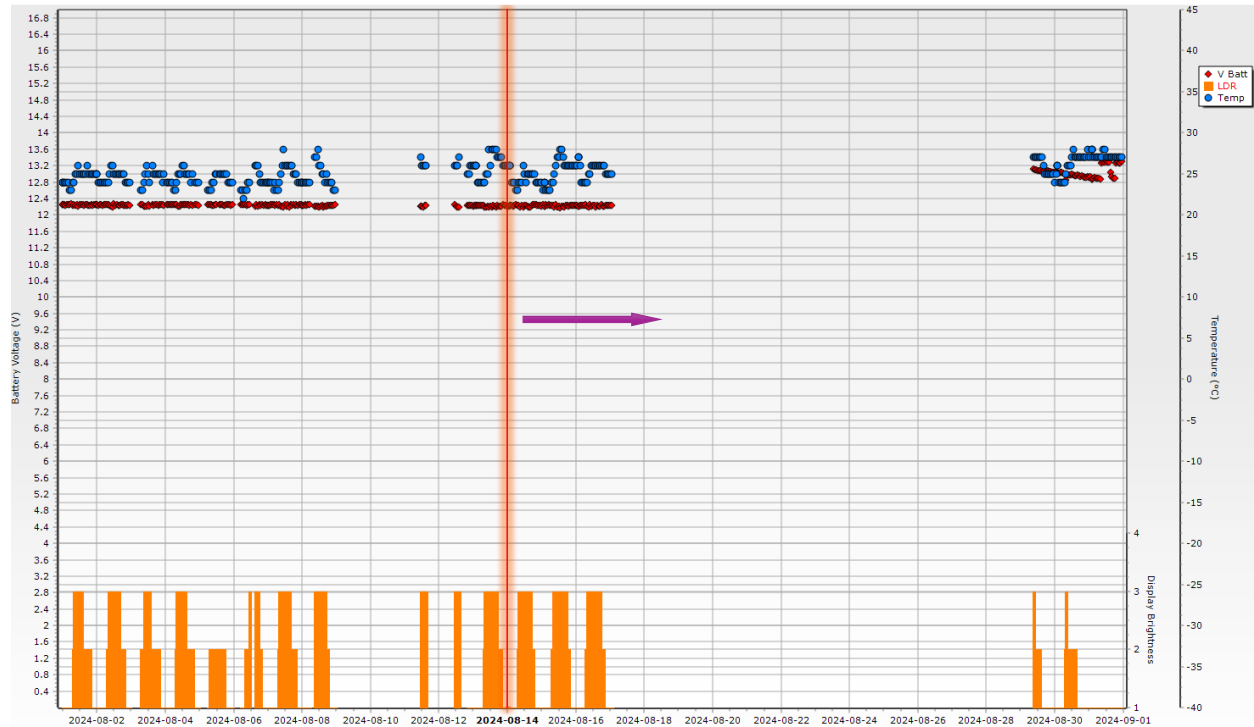

Then the values according to the time of day will appear.

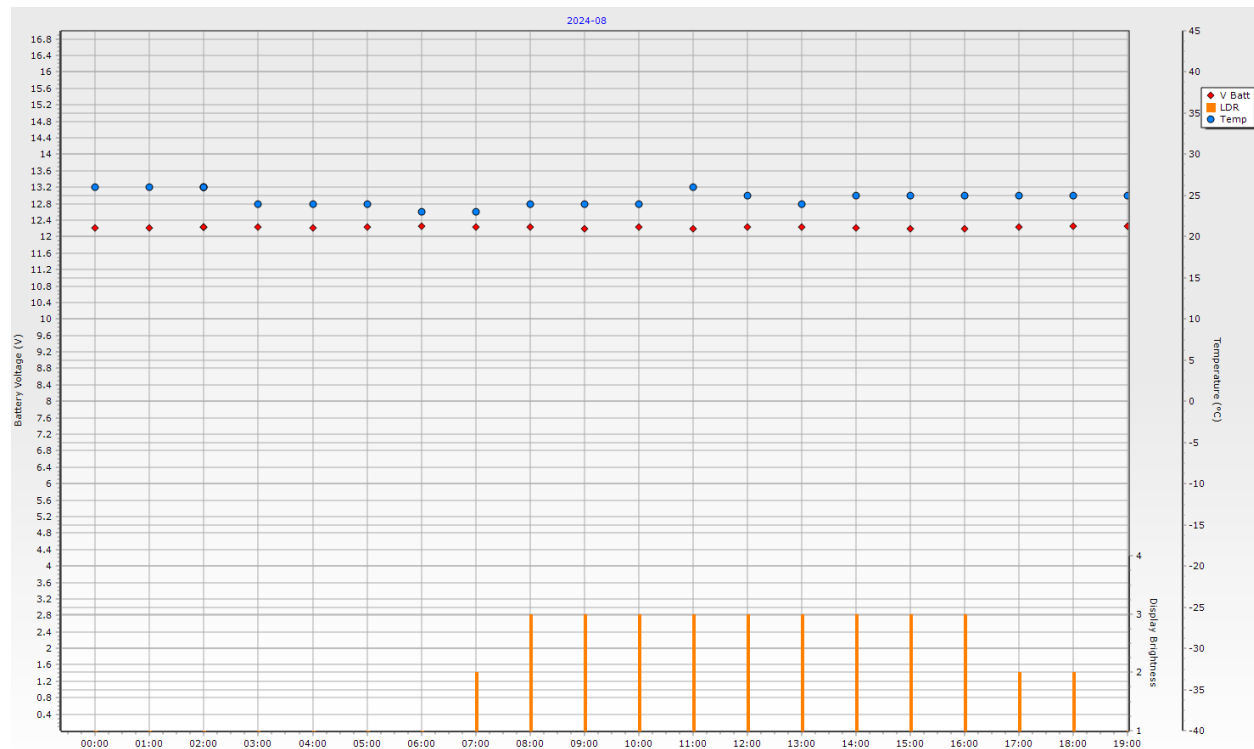


4.8 DATA

Select **"Data"** to access the tabbed values of **"Speed"** and **"Health"**.

The tables displayed will be according to the period selected on the Report and Health tab. Concerning the Direction: The R represents the receding vehicles and the A the ones approaching.

Click the Excel icon to save the data.

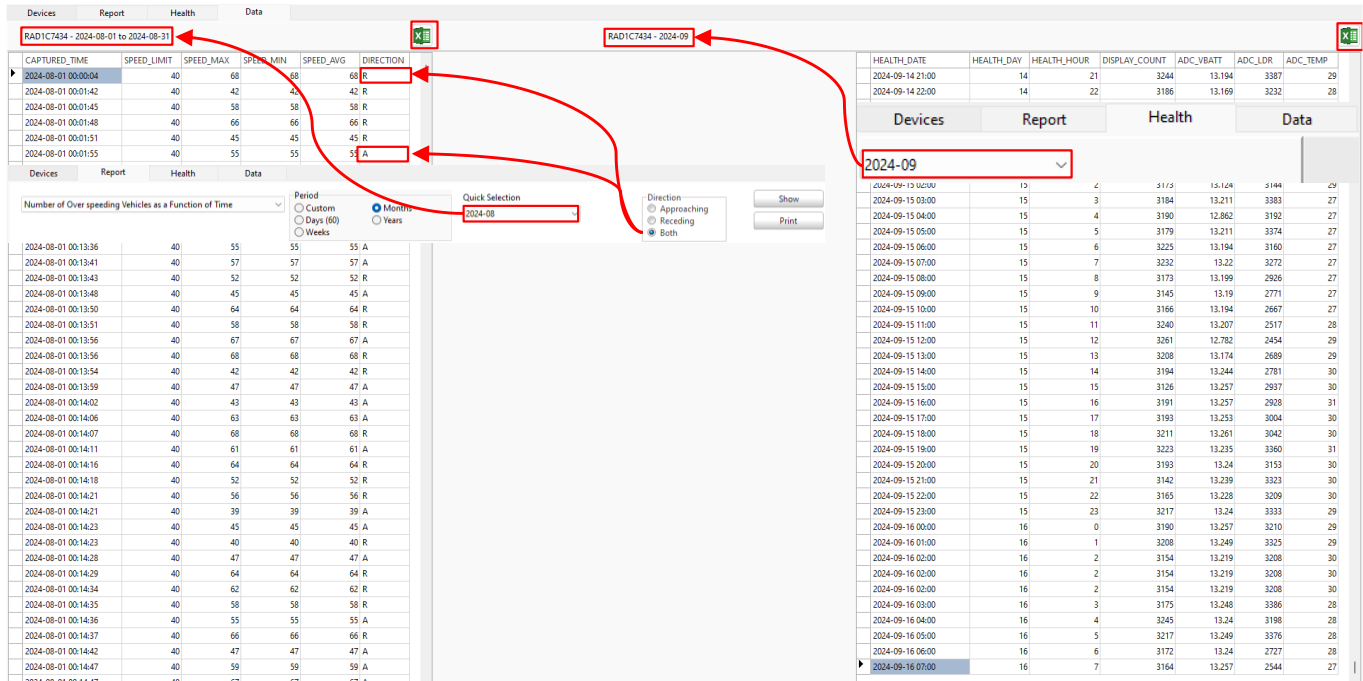

The screenshot displays the 'Data' tab of the RAD60LE software interface. The top navigation bar includes 'Devices', 'Report', 'Health', and 'Data' tabs. The 'Data' tab is active, showing a table of speed data. Red arrows highlight the 'Data' tab, the 'Excel' icon, and the 'Direction' dropdown menu. The 'Direction' menu is open, showing options for 'Approaching', 'Receding', and 'Both'. The table shows columns for 'CAPTURED_TIME', 'SPEED_LIMIT', 'SPEED_MAX', 'SPEED_MIN', 'SPEED_AVG', and 'DIRECTION'. The 'DIRECTION' column shows 'R' for receding and 'A' for approaching. The table is filtered for the period '2024-08-01 to 2024-08-31'.

CAPTURED_TIME	SPEED_LIMIT	SPEED_MAX	SPEED_MIN	SPEED_AVG	DIRECTION
2024-08-01 00:00:04	40	68	68	68	R
2024-08-01 00:01:42	40	42	42	42	R
2024-08-01 00:01:45	40	58	58	58	R
2024-08-01 00:01:48	40	66	66	66	R
2024-08-01 00:01:51	40	45	45	45	R
2024-08-01 00:01:55	40	55	55	55	A

5 RAD60L TECHNICAL DATA

Radar	
Precision	+/- 1.5 km/h
Speed range	10 km/h to 250 km/h
Detection range	10 ~ 250 m
Frequency	60 ~ 64GHz
Beam width	26° horizontal, 17.2° vertical
Power supply	11 VDC to 14.5 VDC
Approval	IC: 26970-RM68SE FCC: 2AVKZRM68-SE
Display	
Speed	Green, Amber and Red colors 330 x 465mm (13.0" x 18.4") 7-segments
Message	Monochrome Amber 160 x 640 mm (6.30" x 25.2") 64x16 pixels, full matrix
Viewing angle (lv 50%)	25° Around central axis 50° total
Enclosure	
Front	Polycarbonate 1/8" (3.2mm)
Body	ABS, UV resistant
Ingress protection	IP65
Dimensions	Height: 29.1" (740mm) Width: 28.7" (730mm) Depth: 4.0" (100mm)
Weight	12 lb (5.5kg)

6 DOPPLER RADAR

This device is certified by Industry Canada (IC) for license-exempt operation.

Operation is subject to the following two conditions:

1. This device must not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with IC radiation exposure limits set for an uncontrolled environment. End users must follow specific operating instructions to ensure RF exposure compliance, such as ensuring that the module is not installed in equipment intended for use within 20cm of the body.

The transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Changes or modifications not expressly approved by Signal Services Inc. may void the user's authority to operate the equipment.

7 TROUBLESHOOTING

NOTE

- There are no internal components serviceable by the user.

Problem

- No display.

Solution

- Check that the radar speed display parameters is not set to <Spy mode>.
- Check that the battery voltage is not in a power shedding range.
- Check the radar speed sign fuse is in working condition and verify that there is 12 VDC at the power supply connector.

Problem

- Late vehicle detection.

Solution

- Radar range can be raised in the radar parameter tab of the cloud interface.
- Check that the radar display sign is oriented properly without obstruction.

Problem

- Missing or erroneous speed log entries.

Solution

- Check that speed logging is enabled.
- Check that the clock is set properly.
- Check that the radar display sign is oriented properly without obstruction.

For more information or technical support, please contact us.



Signal Services | Road Signal Equipment
FABRICATION • SALES • RENTALS

Resources

Technical service: extension 2232, servicetechnique@signal.ca

Returns: extension 2255, rma@signal.ca

700 Montée Monette, Saint-Mathieu (Québec) Canada J0L 2H0

T. (450) 444-0006 | F. (450) 444-0045

www.signal.ca