MINEW



Bluetooth® 5.0 Door Sensor 2.0

Operation Manual

Catalogue

Bluetooth® 5.0 Door Sensor 2.0（S4） 3

App Introduction 3

Software Installation 3

Device List 4

10.1 Historical Information 5

10.2 Device Details 6

10.3.1 Device Name 7

10.3.2 Room 8

10.3.3 Adv Parameters Configuration 9

10.3.4 Working Hours Configuration 11

10.3.5 Storage Switch 12

10.3.6 Door Opening Light 13

10.3.7 Upgrade Firmware 13

10.3.8 Factory Reset 14

Statement 15

Minew

Bluetooth® 5.0 Door Sensor 2.0 (S4)

App Introduction

MinewLink APP is designed to manage Minew's smart hardware products. Users can scan devices to view basic information and configure settings, enabling interconnectivity among multiple devices.

Software Installation

Download the MinewLink App:

For Android Systems:Search for "MinewLink" in the Google Play to download.


If you encounter any issues during the download, please contact our staff to obtain the App installation package.

Minew

Device List

1. Tap on the "Bluetooth® 5.0 Door Sensor 2.0(S4)" module on the homepage to enter the device list interface. By default, the Bluetooth scanning feature will be activated the first time you enter this interface. All nearby S4 devices detected will be added to this list. The displayed device information includes: Device MAC, door sensor's open/close status, battery level, signal strength, and Tamper Status.

2. The top input box supports searching by Device Name or MAC address.

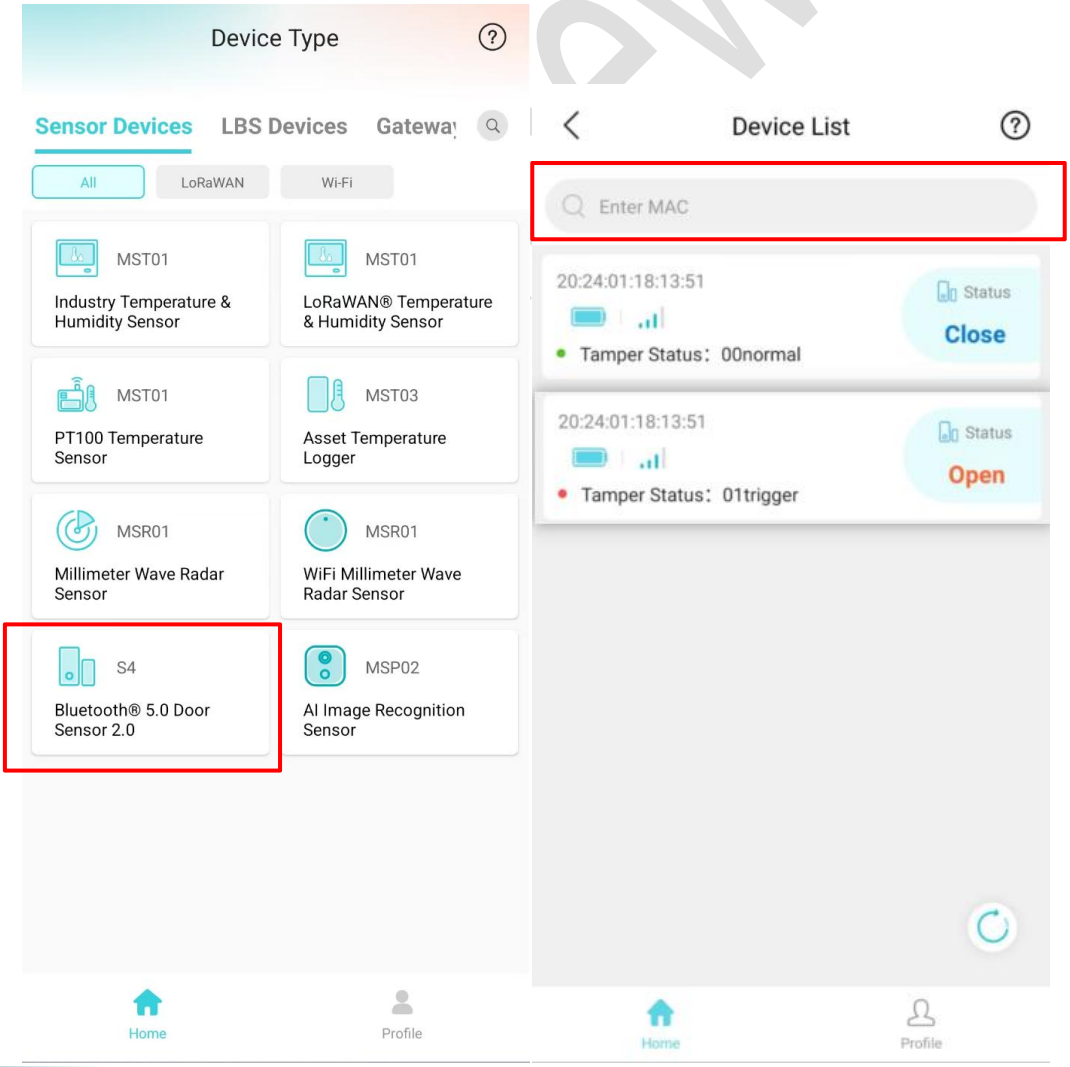

Historical Information

1. Connecting to the Bluetooth® 5.0 Door Sensor 2.0:

   1) Entering the Device List: On the Device List, tap the "S4 Intelligent Door Sensor" module to view all Intelligent Door Sensor devices.

   2) Device Connection: Select a device to connect. The system will prompt for the device key. Enter the correct password minewtech1234567 and click confirm to complete the connection.

   3) Viewing Historical Information: After a successful connection, you will be automatically redirected to the historical information interface, where you can view the device's historical data.

   4) Automatic Disconnection: The device will automatically disconnect from the APP after 5 minutes of connection and return to the device list interface.


2. Syncing Data Operation

   1) No Historical Data Prompt:


If the storage switch has not been activated after the device is powered on, or if there has been no change in the door sensor status and tamper key, clicking "Sync Data" will pop up a message: "This device does not have any saved historical data."

   2) Sync and View Historical Data:

- When the storage switch is activated, and there has been a change in the door sensor status or tamper key, you can select a time interval (default is the last 24 hours from the current time).
- After clicking "Sync Data," the changes in door sensor status and tamper key status within the selected time period will be displayed.
- You can also share or save this data via the "Export Data" button.

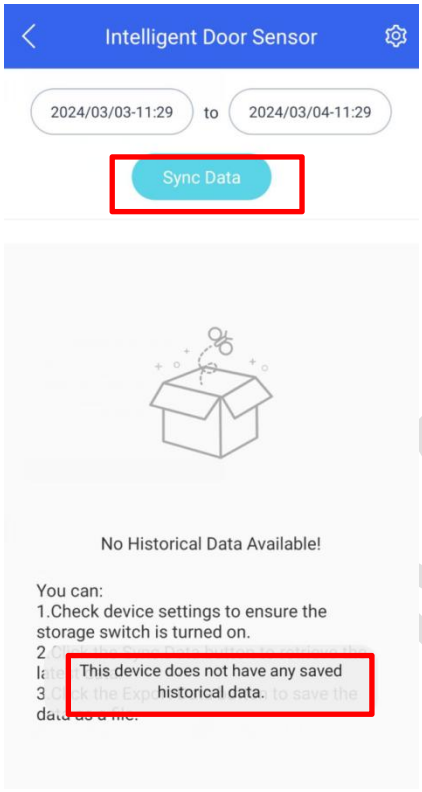

No Historical Data

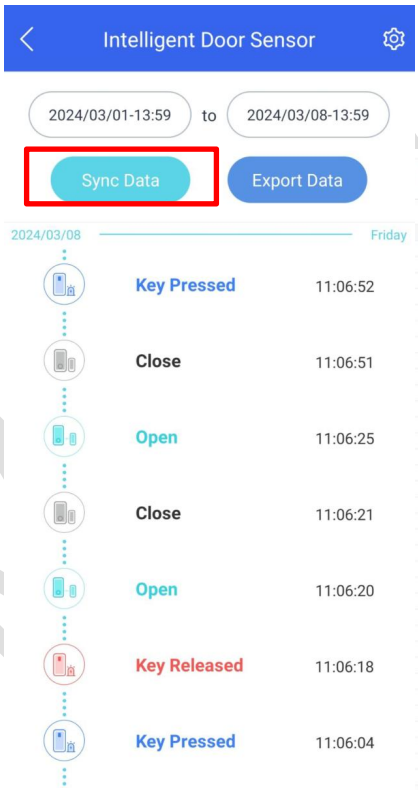


View Historical Data



Export Data


Device Details

Click the settings button in the top right corner of the historical information interface to enter the device details interface.

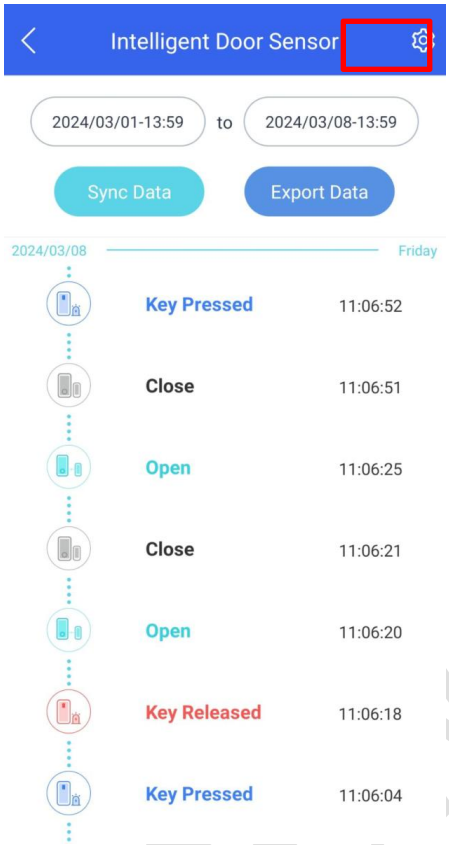

Device Name


Click on the "Device Name" entry in the device details interface, enter the device name in the popup. It supports uppercase and lowercase letters, numbers. The length is limited to 8 characters, and the name is saved locally on the phone.

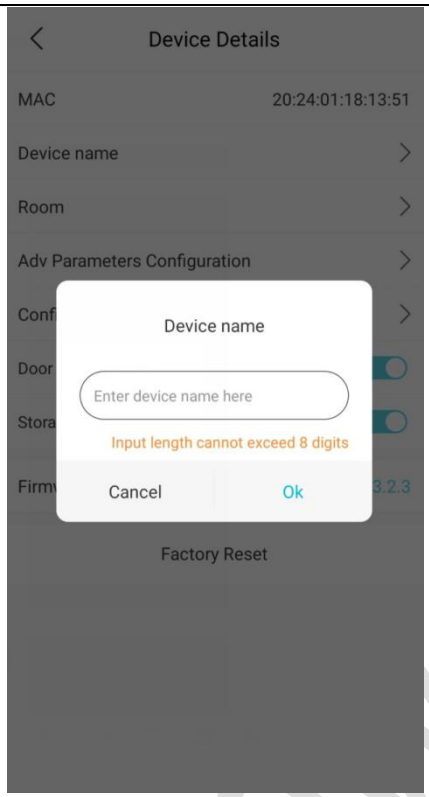

Device Name

Room

Click on the "Room" entry in the device information interface, enter information in the popup to save the assigned room information. This information is saved locally on the phone.

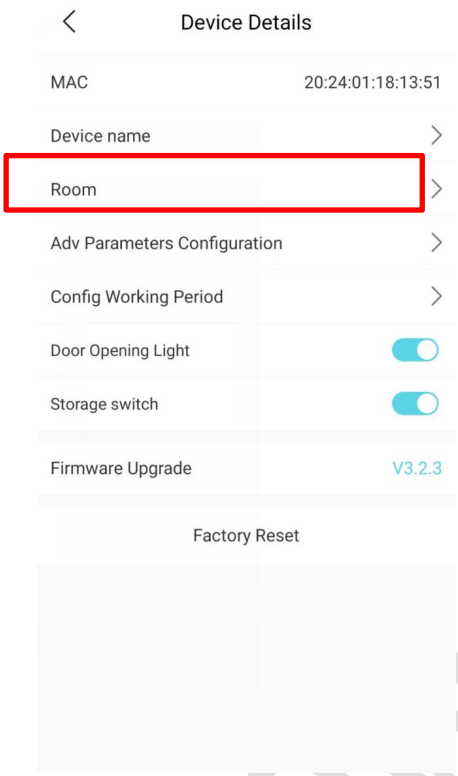

Assigned Room

Adv Parameters Configuration

1. Enter Adv Parameter Configuration:

In the device detail interface, click "Adv Parameters Configuration" to enter the adv parameter configuration interface.

2. Frame Switching and Configuration:

In the opened interface, tab switching between Device Info (hereinafter referred to as Info Frame) and Combination Frame is supported. Users can configure the adv interval and adv power for both the Info Frame and Combination Frame separately. In Energy-saving mode, it is also possible to set the duration of the adv.


3. Operating Modes:

Regular Mode: In this mode, the Combination Frame will continuously broadcast at a fixed cycle (default 1s).

Energy-saving Mode: The Combination Frame will only broadcast for a certain duration when the door magnetic state changes and will not broadcast at other times.Changes in the tamper key status will also trigger the Combination frame broadcast.

Important Notes:

1) The system is set to Regular Mode by default.
2) After changing the operating mode, you need to click the "Confirm" button to confirm the modification for it to take effect.

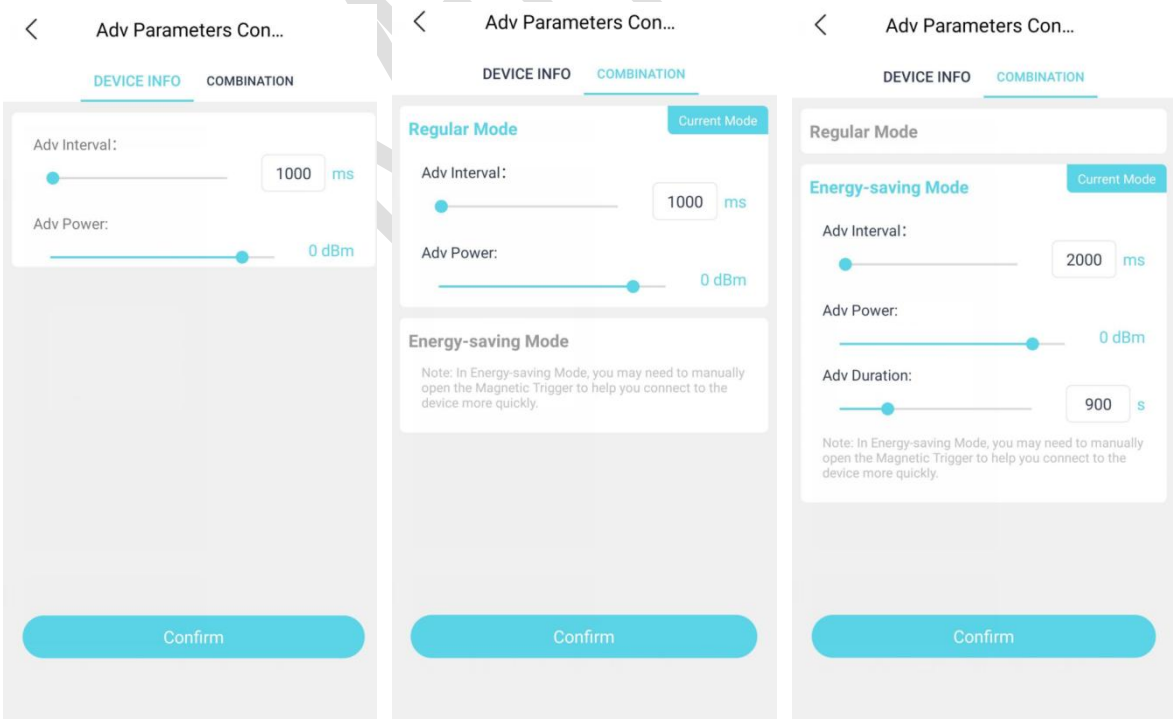


Info Frame Combination Frame

Working Hours Configuration

1. Enter Work Period Settings:

In the device detail interface, choose "Working Hours Configuration" to enter the configuration interface for working hours. Here, you can customize the monitoring period for the door and window switches. During non-working hours, the door and window switches will not trigger Combination frame broadcasts and will not be recorded in the history (this does not affect the tamper key switch records).

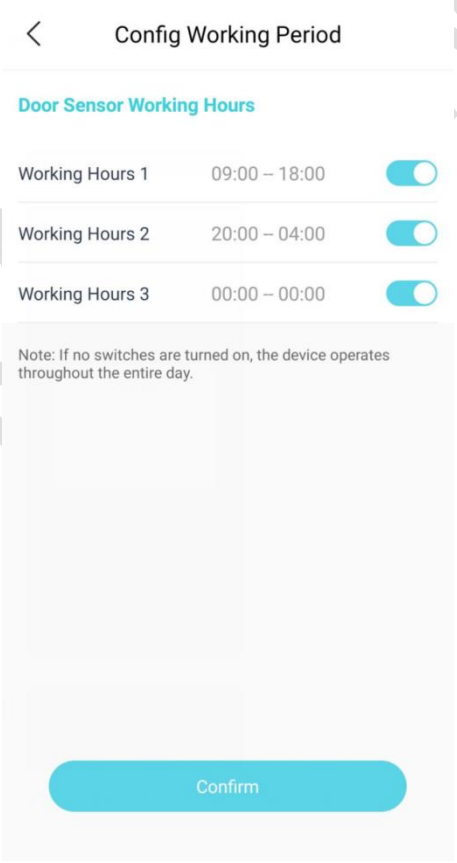

2. Important Notes:


1) If no switches are activated, monitoring covers the entire day.

2) If switches are activated, then:

- If Start Time < End Time, monitoring occurs within the same day.
- If Start Time = End Time, monitoring covers the entire day.(If 00:00~00:00 is selected, the switch will automatically turn off.)
- If Start Time > End Time, monitoring extends into the next day.

Storage Switch

Turning on the "Storage Switch" in the device details interface allows you to directly send commands to control the storage switch function of the S4 device. Turning off this switch will prevent the device from storing historical records. For a detailed introduction to historical records, please see section 10.2 Historical Information.

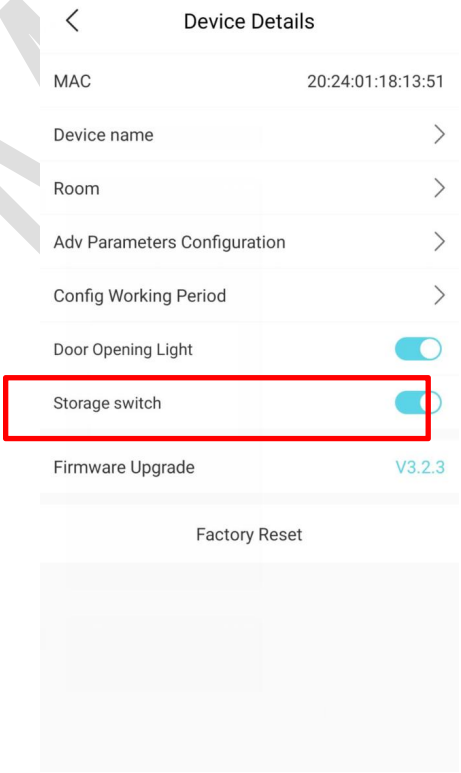


Storage switch

Door Opening Light


Turning on the "Door Opening Light " in the device details interface (default is off).

When the door magnetic sensor changes state from "closed" to "open," a blue light will flash 3 times at a 200ms interval (light on for 200ms).

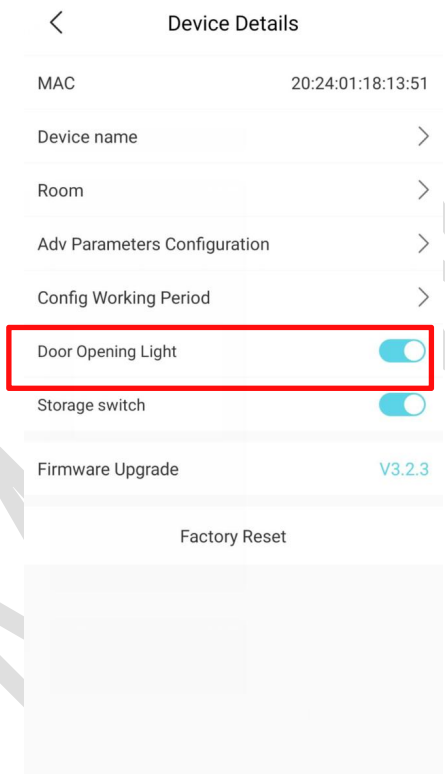

Upgrade Firmware

Click on the "Upgrade Firmware" option in the device information interface. A pop-up will ask if you want to upgrade the firmware. Click the "Confirm" button in the pop-up, select the firmware upgrade package locally, and transfer it to the device via Bluetooth for the upgrade.

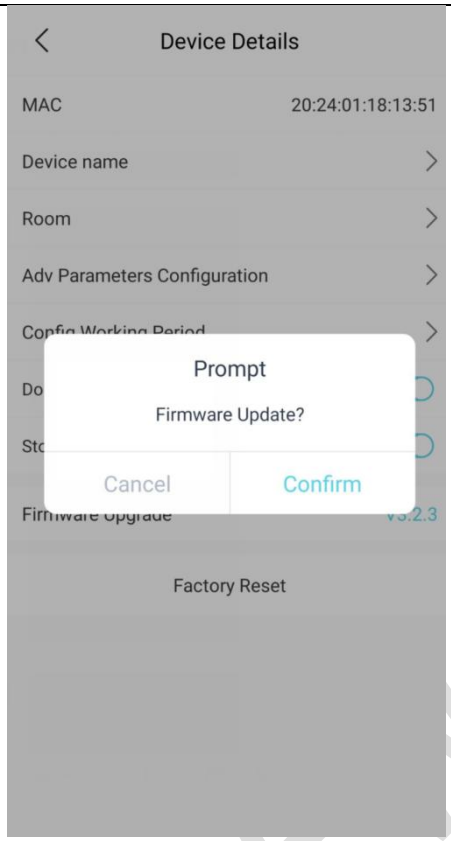

Upgrade Firmware

Factory Reset

Click on the "Factory Reset" option in the device information interface. Click the "Confirm" button in the pop-up, and the device will be restored to factory settings, with all parameters reverting to their default values as listed below:

Name	Default	Parameter Range
Adv Mode	Regular Mode	Regular Mode/Energy-saving Mode
Storage Switch	Off	On/Off
Door Opening Light Switch	Off	On/Off
Door Magnetic Sensor Working Hours	Off	On/Off

Switch		
Door Magnetic Sensor Working Hours Range	00:00~00:00	24Hours
Device Info Frame Adv Interval	4000ms	100ms~60000ms
Device Info Frame Adv Power	0dBm	-40dbm~+4dbm
Combination Frame Adv Interval(Regular Mode)	1000ms	100ms~5000ms
Combination Frame Adv Interval(Energy-saving Mode)	900ms	100ms~5000ms
Combination Frame Adv Power	0dBm	-40dbm~+4dbm
Combination Frame Adv Duration(Energy-saving Mode)	60s	1s~3600s
Password (16 digits)	minewtech1234567	/

Statement

Rights Statement: This manual and all the contents it contains are owned by Shenzhen Minew Technologies Co., Ltd. and is protected by the laws of China and applicable international conventions regarding copyright. The company has the

right to change the content of this manual according to the needs of technological development and change the version without notice. Without the written permission and authorization of the company, any individual, company group, or organization may not change the contents of this manual or otherwise use part or all of the contents of this manual, violators will be held responsible according to law.

SHENZHEN MINEW TECHNOLOGIES CO LTD. reserves the right of final interpretation of this manual to the extent that it differs from the actual product, and is subject to change without notice. The company does not assume responsibility for property or personal injury caused by abnormal operation of the customer, please follow the technical specifications in the manual to design and operate the corresponding products.

Minew