

ESSENZA
MINI
MY MACHINE

NESPRESSO®

 EN	Instruction manual	 CN	3
 HK		 KR	18
 TW			33

Instruction manual /

EN

CN

Nespresso is an exclusive system creating the ultimate Espresso, time after time. All Nespresso machines are equipped with a unique extraction system that guarantees up to 19 bar pressure. Each parameter has been calculated with great precision to ensure that all the aromas from each capsule can be extracted, to give the coffee body and create an exceptionally thick and smooth crema.

19


⚠ CAUTION: when you see this sign, please refer to the safety precautions to avoid possible harm and damage.

i INFORMATION: when you see this sign, please take note of the advice for the correct and safe usage of your coffee machine.

⚠ -: 当看到此标志请参考安全预防措施手册以避免可能的伤害和损坏。



Packaging Content /




User manual



“Welcome to Nespresso” Folder



Nespresso capsule tasting gift



Coffee Machine

Content /

Packaging Content /	3
Safety Precautions /	4-8
Machine Overview /	9
Specifications /	9
First Use Or after a long period of non-use /	10
Coffee Preparation /	10-11
Programming the Water Volume /	11
Energy saving mode /	12
Reset to Factory Settings /	12
Cleaning /	13
Descaling /	13-15
Emptying the System before a period of non-use and for frost protection, or before a repair /	15
Troubleshooting /	16
Disposal and Environmental Protection /	16
Limited Guarantee /	17
Contact Nespresso Club /	17



⚠ CAUTION: when you see this sign, please refer to the safety precautions to avoid possible harm and damage.

ℹ INFORMATION: when you see this sign, please take note of the advice for the correct and safe usage of your appliance.

⚠ CAUTION: the safety precautions are part of the appliance. Read them carefully before using your new appliance for the first time. Keep them in a place where you can find and refer to them later on.

- The appliance is intended to prepare beverages according to these instructions.
- Do not use the appliance for anything other than its intended use.
- This appliance has been

designed for indoor and non-extreme temperature conditions use only.

- Protect the appliance from direct sunlight effect, prolonged water splash and humidity.
- This appliance is intended to be used in households and similar applications only such as: staff kitchen areas in shops, offices and other working environments, farm houses; by clients in hotels, motels and other residential environments; bed and breakfast type environments.
- This appliance may be used by children of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are fully aware of the dangers involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and

they are supervised by an adult.

- Keep the appliance and its cord out of reach of children under 8 years of age.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received instruction to use the appliance safely and understand the dangers.
- Children shall not use the appliance as a toy.
- The manufacturer accepts no responsibility and the guarantee will not apply for any commercial use, inappropriate handling or use of the appliance, any damage resulting from use for other purposes, faulty operation, non-professionals' repair or failure to comply with the instructions.

Avoid risk of fatal electric shock and fire

- In case of an emergency: immediately remove the plug from the power socket.
- Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect connection voids the guarantee.

The appliance must only be connected after installation

- Do not pull the cord over sharp edges, clamp it or allow it to hang down.
- Keep the cord away from heat and damp.
- If the supply cord or the plug are damaged, they must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid all risks.

- If the supply cord or the plug are damaged, do not operate the appliance. Return the appliance to the *Nespresso Club* or to a *Nespresso* authorized representative.
- If an extension cord is required, use only an earthed cord with a conductor cross-section of at least 1.5 mm² or matching input power.
- To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
- Always place it on a horizontal, stable and even surface. The surface must be resistant to heat and fluids, like water, coffee, descaler or similar.
- Disconnect the appliance from the mains when not in use for a long period. Disconnect by pulling out the plug and not by pulling the cord itself or the cord may

become damaged.

- Before cleaning and servicing, remove the plug from the mains socket and let the appliance cool down.
- To disconnect the appliance, stop any preparation, then remove the plug from the power socket.
- Never touch the cord with wet hands.
- Never immerse the appliance or part of it in water or other liquid.
- Never put the appliance or part of it in a dishwasher.
- Electricity and water together is dangerous and can lead to fatal electrical shocks.
- Do not open the appliance. Hazardous voltage inside!
- Do not put anything into any openings. Doing so may cause fire or electrical shock!
- The use of accessory attachments not recommended by the manufacturer may result in

fire, electric shock or injury to persons.

Avoid possible harm when operating the appliance

- Never leave the appliance unattended during operation.
- Do not use the appliance if it is damaged, has been dropped or not operating perfectly. Immediately remove the plug from the power socket. Contact the *Nespresso Club* or *Nespresso* authorized representative for examination, repair or adjustment.
- A damaged appliance can cause electrical shocks, burns and fire.
- Always completely close the lever and never lift it during operation. Scalding may occur.
- Do not put fingers under coffee outlet, risk of scalding.
- Do not put fingers into capsule compartment or
- the capsule shaft. Danger of injury!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.
- Never use an already used, damaged or deformed capsule.
- If a capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation. Call the *Nespresso Club* or *Nespresso* authorized representative.
- Always fill the water tank with cold, fresh drinking water.
- Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
- Replace water in water tank when the appliance is not operated for a weekend or a similar period of time.
- Do not use the appliance without the drip tray and drip grid to avoid spilling

any liquid on surrounding surfaces.

- Do not use any strong cleaning agent or solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.
- To clean machine, use only clean cleaning tools.
- When unpacking the machine, remove the plastic film and dispose.
- This appliance is designed for *Nespresso* coffee capsules available exclusively through the *Nespresso* Club or your *Nespresso* authorized representative.
- All *Nespresso* appliances pass stringent controls. Reliability tests under practical conditions are performed randomly on selected units. This can show traces of any previous use.
- *Nespresso* reserves the right to change instructions without prior notice.

Descaling

- *Nespresso* descaling agent, when used correctly, helps ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as the first day.
- Descaling according to user manual recommendations.



•


8

**SAVE THESE
INSTRUCTIONS**
**Pass them on to any
subsequent user.**
**This instruction manual is
also available as a PDF at
nespresso.com**



•


8



-
-
-
- *Nespresso*
-
- *Nespresso*
-
-
-
-
- *Nespresso*
Nespresso
Nespresso **nespresso.com**
 PDF
Nespresso
- *Nespresso*

Machine Overview /

(EN)
(CN)

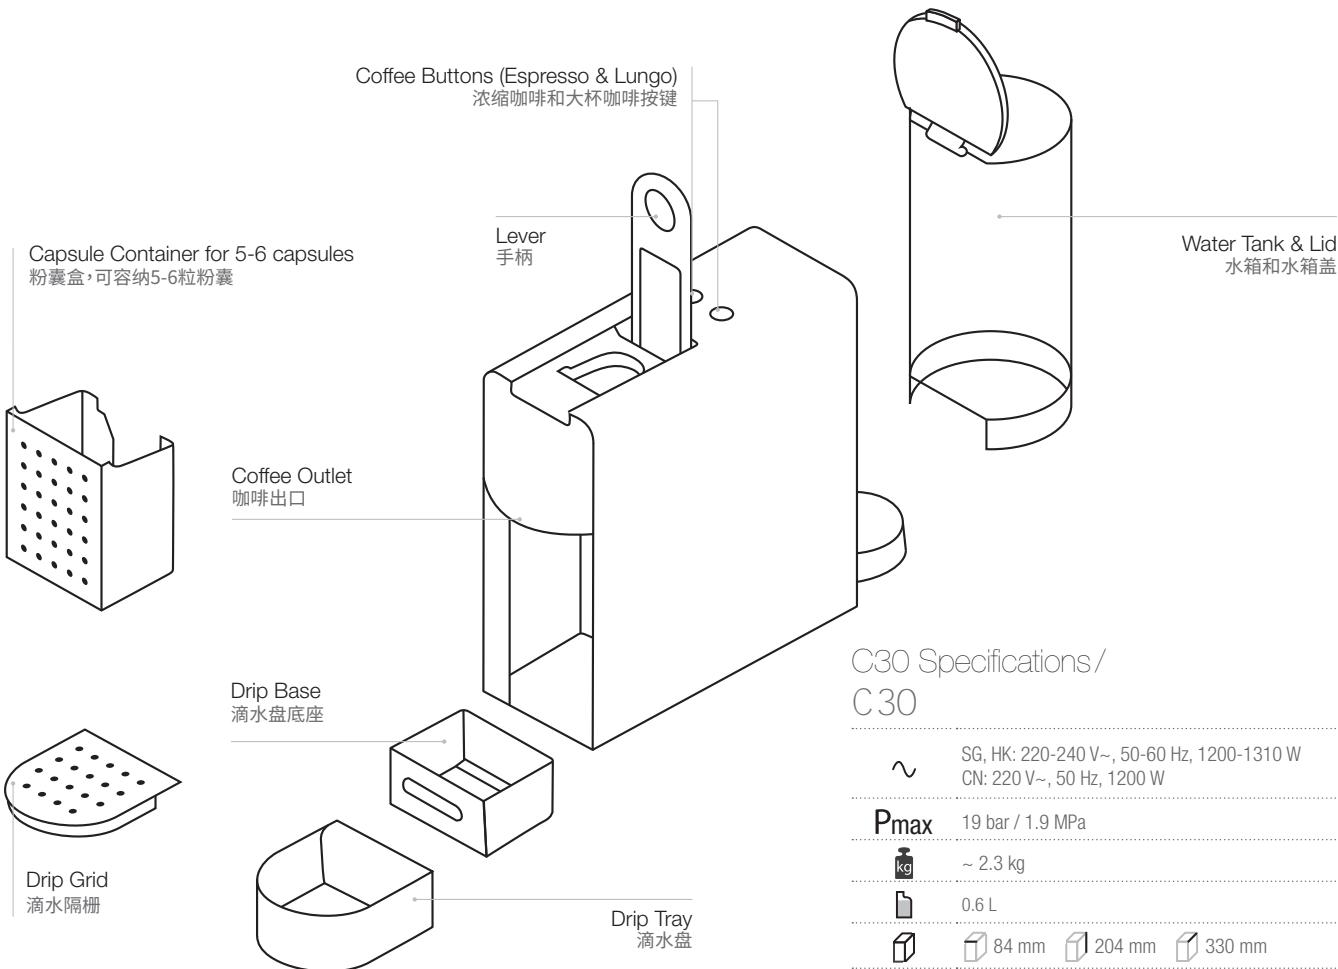

(EN) First use or after a long period of non-use /

(CN)

⚠ First, read the safety precautions to avoid risks of fatal electrical shocks and fire.




i **Factory settings:** Espresso cup: 40 ml, Lungo cup: 110 ml; Auto Off mode: 9 mins.

40

110

9

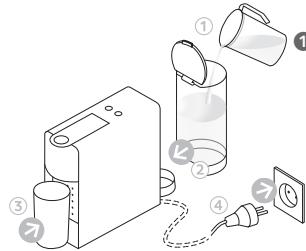

- ① Rinse the water tank** before filling with potable water.
Place a container (min. 1 L) under coffee outlet.
Plug into power outlet.

1



- ② To turn the machine ON,** press either the Espresso or Lungo button.
- Blinking Lights: heating up (25 seconds)
- Steady Lights: ready

25

- ③ Press the Lungo button** to rinse the machine. Repeat 3 times.

3

- ④ To turn the machine off** before automatic Auto Off mode, press both the Espresso and Lungo buttons simultaneously.


Coffee Preparation /

- ① To turn the machine ON,** press either the Espresso or Lungo button.
- Blinking Lights: heating up (25 seconds)
- Steady Lights: ready



25



- ② Lift the lever** completely and insert the capsule.

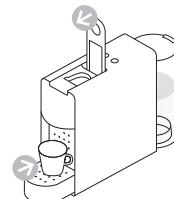

- ③ Close the lever** and place a cup under the coffee outlet.

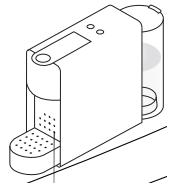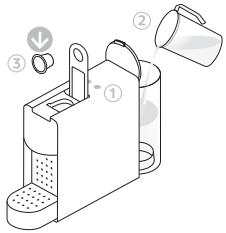


(EN) Energy saving mode /

(CN)



This machine is equipped with an energy saving feature.

To change this setting:

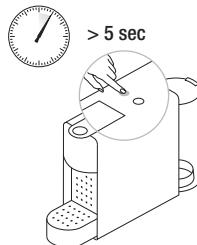

- With machine turned off, press and hold the Espresso button for 5 seconds.
The Espresso button will blink to indicate the current setting.

5




The machine will automatically enter Auto Off mode after 9 minutes.

9

- To change this setting press the Espresso button:
One time for Auto Off mode after 30 minutes.
One more time for Auto Off mode after 9 minutes.

- 1x Single blinking: 9 mins mode
- 2x Double blinking: 30 mins mode

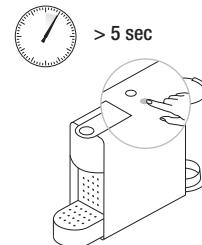

- To exit the energy saving mode press the Lungo button for 5 seconds.

5


Reset to Factory Settings /



Factory settings: Espresso cup: 40 ml, Lungo cup: 110 ml; Auto Off mode: 9 minutes.


40ml, 110ml,

9

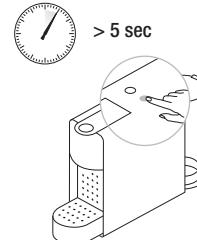


- With machine turned off, press and hold down the Lungo button for 5 seconds.

5

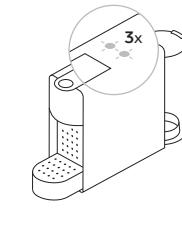

- LEDs will blink fast 3 times to confirm machine has been reset to factory settings.

LED
3

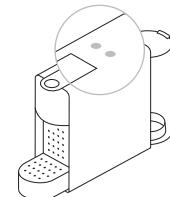

- LEDs will then continue to blink normally, as heating up, until ready.
- Steady Lights: ready


LED

Cleaning/

EN


CN

⚠ Risk of fatal electrical shock and fire. Never immerse the appliance or part of it in water. / Be sure to unplug the machine before cleaning. / Do not use any strong cleaning agent or solvent cleaner. / Do not use sharp objects, brushes or sharp abrasives. / Do not place in a dishwasher.

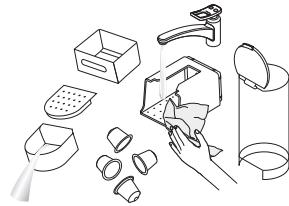

① Empty the drip tray, the drip base and the capsule container every day. Also remove the water tank with its lid and clean them all with odorless detergent and rinse with warm / hot water.

/

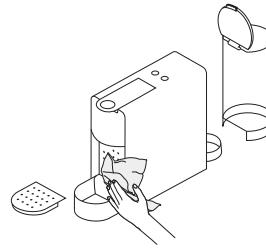


② Dry with a fresh and clean towel, cloth or paper and reassemble all parts. Clean the coffee outlet and inside the machine regularly with a damp cloth.

Descaling/

⚠ The descaling solution can be harmful. Avoid contact with eyes, skin and surfaces. The following table will indicate the descaling frequency required for the optimum performance of your machine, based on water hardness. For any additional questions you may have regarding descaling, please contact your *Nespresso Club*.



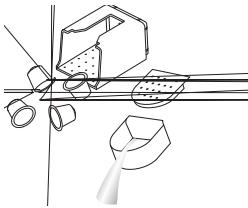

- ⑩ When ready,** repeat steps 4 and 7 to now rinse the machine. Repeat twice.

7

4

- ⑪ To exit the descaling mode,** press both the Espresso and Lungo buttons for 5 seconds.

5

Water hardness:/


	fH	dH	CaCO ₃	(40 ml)
H (HIGH) / 高	36	20	360 mg/l	300
M (MEDIUM) / 中	18	10	180 mg/l	600
L (LOW) / 低	0	0	0mg/l	1200

fH French degree/
dH German Grade/
CaCO₃ Calcium Carbonate/




- ⑫ Empty** the drip base.


Emptying the system before a period of non-use and for frost protection, or before a repair/

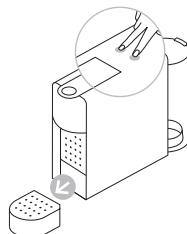

- ① To enter the emptying mode,** press both the Espresso and Lungo buttons to turn the machine off.

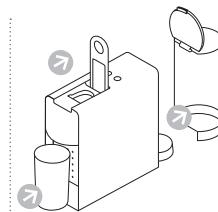


- ② Remove** the water tank and open the lever. Place a container under the coffee outlet.

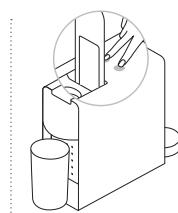

- ③ Press both** the Espresso and Lungo buttons for 5 seconds. Both LEDs blink alternatively.

5
LED

- ④ Emptying process begins.**
Machine switches off automatically when procedure is finished.

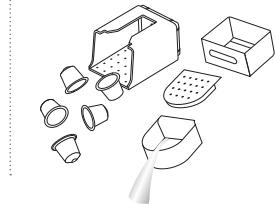

- ⑤ Close** the lever. Empty and clean the used capsule container, the drip tray and the drip base.

(EN) Troubleshooting /

(CN)

No light indicator.	- Check the power outlet, plug, voltage, and fuse. In case of problems, call the Nespresso Club.		
No coffee, no water.	- First use: fill water tank with warm water (max. 55° C) and run through machine according to instructions on page 9. - Water tank is empty. Fill water tank. - Descale if necessary; see Descaling section.	9 55°C	
Coffee comes out very slowly.	- Flow speed depends on the coffee variety. - Descale if necessary; see Descaling section.		
Coffee is not hot enough.	- Preheat cup. - Descale if necessary.		
Capsule area is leaking (water in capsule container).	- Position capsule correctly. If leakages occur, call the Nespresso Club.		
Irregular blinking.	- Send appliance to repair or call the Nespresso Club.		
No coffee, just water runs out (despite inserted capsule).	- In case of problems, call the Nespresso Club.		

Disposal and environmental protection /

This appliance complies with the EU Directive 2012/19/EC. Packaging materials and appliance contain recyclable materials.

Your appliance contains valuable materials that can be recovered or can be recycled. Separation of the remaining waste materials into different types facilitates the recycling of valuable raw materials. Leave the appliance at a collection point. You can obtain information on disposal from your local authorities.

To know more about Nespresso sustainability strategy, go to www.nespresso.com/positive.

EU Directive 2012/19/EC

www.nespresso.com/positive

Nespresso

Limited Guarantee /

Nespresso guarantees this product against defects in materials and workmanship for a period of 2 years. The warranty period begins on the date of purchase and Nespresso requires presentation of the original proof of purchase to ascertain the date. During the warranty period, Nespresso will either repair or replace, at its discretion, any defective product at no charge to the owner. Replacement products or repaired parts will be warranted only for the unexpired portion of the original warranty or six months, whichever is greater. This limited warranty does not apply to any defect resulting from negligence, accident, misuse, or any other reason beyond Nespresso's reasonable control, including but not limited to: normal wear and tear, negligence or failure to follow the product instructions, improper or inadequate maintenance, calcium deposits or descaling, connection to improper power supply, unauthorized product modification or repair, use for commercial purposes, fire, lightning, flood or other external causes. This warranty is valid only in the country of purchase or in such other countries where Nespresso sells or services the same model with identical technical specifications. Warranty service outside the country of purchase is limited to the terms and conditions of the corresponding warranty in the country of service. Should the cost of repairs or replacement not be covered by this warranty, Nespresso will advise the owner and the cost shall be charged to the owner. This limited warranty shall be the full extent of Nespresso's liability however caused. Except to the extent allowed by applicable law, the terms of this limited warranty do not exclude, restrict or modify the mandatory statutory rights applicable to the sale of this product and are in addition to those rights. If you believe your product is defective, contact Nespresso for instructions on how to proceed with a repair. Please visit our website at www.nespresso.com for contact details.

EN
CN

Nespresso

Nespresso
Nespresso

Nespresso

Nespresso

Nespresso
Nespresso

Nespresso

Nespresso

www.nespresso.com

Contact the Nespresso Club /

As we may not have foreseen all uses of your appliance, should you need any additional information, in case of problems or simply to seek advice, call the Nespresso Club or your Nespresso authorized representative. Contact details for your nearest Nespresso Club or your Nespresso authorized representative can be found in the «Welcome to Nespresso» folder in your machine box or at nespresso.com

nespresso.com

/

(19bar)

⚠ 當看到此標誌,請參閱安全資訊,以避免發生任何危害及損壞。



當看到此標誌,請注意咖啡機的正確及安全使用忠告。



- 이 표시를 보시면, 야기될 수 있는 상해를
방지하기 위한 안전 수칙을 참조하십시오.



/

18
19-23
24
24
25
25-26
26
27
27
28
29-30

/

30

/

31

/

31

/

32

/

32

/

30

/



31

/

31

/

32





- 咖啡機的設計是按照這些指引以調製飲品的。
- 請勿使用咖啡機作其他用途。
- 咖啡機只適用於室內及非極端溫度的情況下使用。
- 請勿將咖啡機長期暴露於陽光直接照射或潮濕的環境中。
- 本咖啡機僅為家用電器，並不適用於：商店、辦公室及其他工作環境內的員工茶水間；農舍；供客房旅客使用的酒店、汽車旅館以及其他居住環境、

民宿等。

- 兒童如年滿8歲而在監護人安全陪同並完全明白當中涉及危險性的情況下，方可使用此咖啡機。除非由成年人陪同並已年滿8歲，否則不應由兒童清洗或維修咖啡機。
- 請將咖啡機及電線放置於8歲以下兒童接觸不到的地方。
- 此咖啡機並不適合體能、感覺或精神力退減、或缺乏經驗和知識之人士使用，除非他們在確保其安全之人士監督及指引下使用，並已了解當中危險。
- 請勿讓兒童把玩咖啡機。
- 對所有商務用途、非適當使用或不遵守指引之行為，包括其他使用目的、錯誤操作、非專業維修或沒用遵從使用指引而導致咖啡機損壞，生產商既不負責，亦不能提供保養維修。
- 如遇突發意外：請即把插頭拔離電插座。
- 請將咖啡機連接至適當的總接地電源。請確保電源電壓跟電壓表所指定的電壓相同。非

正確使用電源連接將令保用證無效。

- 切勿把電線拖過銳利角位，夾緊或令電線垂下。
- 請將電線遠離熱源及水源。
- 如果電源線或插頭受損，必須由製造商、其服務代理商或相關合資格人士進行更換，以免造成危險。
- 如電線或插頭已受損，切勿使用咖啡機。請把咖啡機送回 *Nespresso* 俱樂部或 *Nespresso* 的授權代表。
- 表。
- 如需使用拖板，請使用導電橫切面至少有1.5立方毫米之接地電線。
- 為避免導致嚴重損害，切勿把咖啡機放置於發熱表面或其旁邊，例如是放射性電器、煮食台、氣體爐、明火爐或相關電器。
- 請將咖啡機放置在穩固的平面上。此表面應具有防熱和防水功能（避免咖啡、除磷劑或有關液體沾濕地方）。
- 當長期停用咖啡機時，請把總電源切斷。切斷電源時請拔插頭，避免拉扯電線令其損壞。
- 清洗或維修咖啡機前，請拔離主插頭，並讓咖啡機冷卻。
- 本機器限用於所提供之底座。
- 接觸電線時請保持雙手乾爽。
- 切勿把咖啡機或其任何部份浸於水或其他液體中。
- 切勿把咖啡機或其任何部份放於洗碗機內。
- 如電線接觸會產生危險，並可引發致命觸電。
- 切勿打開咖啡機。小心危險電壓！
- 切勿放置任何東西於出口處，此舉或可導致火警或觸電！
- 如使用非製造商建議的輔助配件，可能會導致火災、觸電或人身傷害。
- 咖啡機操作期間請勿離開。
- 切勿使用已受損或操作不暢順之咖啡機，請即把插頭拔離電插座，並聯絡 *Nespresso* 俱樂部或 *Nespresso* 的授權代表以

- 進行檢查或維修。
- 已受損的咖啡機可導致觸電、燙傷或火警意外。
- 操作期間，請保持槓桿合上及切勿提起槓桿。此舉或會導致燙傷。
- 切勿把手指放在咖啡出口，此舉或會導致燙傷。
- 切勿把手指放進粉囊格或粉囊軸中，以免發生意外！
- 水或會於沒經刀片位排孔的粉囊附近流出而損害咖啡機。
- 請勿使用已用過、損壞或變形的膠囊。
- 如粉囊堵塞於粉囊格中阻，請於其開始操作前關掉咖啡機，並把插頭拔掉。請致電 Nespresso俱樂部或其授權之代表進行維修。
- 水箱只可倒入新鮮食水。
- 如長時期不會使用咖啡機（如假期期間），請清空水箱。
- 如於週末期間或於一段時間內未使用咖啡機後，請更換水箱內的水。
- 切勿使用沒有滴水盤和滴水柵格之咖啡機，以免任何液體濺出四周。

- 切免觸碰滾燙的表面，應使用手柄、保護層或按鈕位置。
- 請使用適當的清潔工具清洗咖啡機。
- 取出咖啡機時，請移除塑膠膜並棄掉。
- 此咖啡機只適用Nespresso俱樂部或Nespresso的授權代表提供之咖啡粉囊。
- Nespresso的所有產品都經過嚴格的控制管理，並隨機抽取部件在實際狀況中進行可靠性測試。因此可能出現曾經使用的痕跡。
- Nespresso保留權利在不給予預先通知的情況下更改使用指南。

www.nespresso.com
PDF



! -



HK

KR


8


8

8

1.5 mm²

www.nespresso.com
PDF

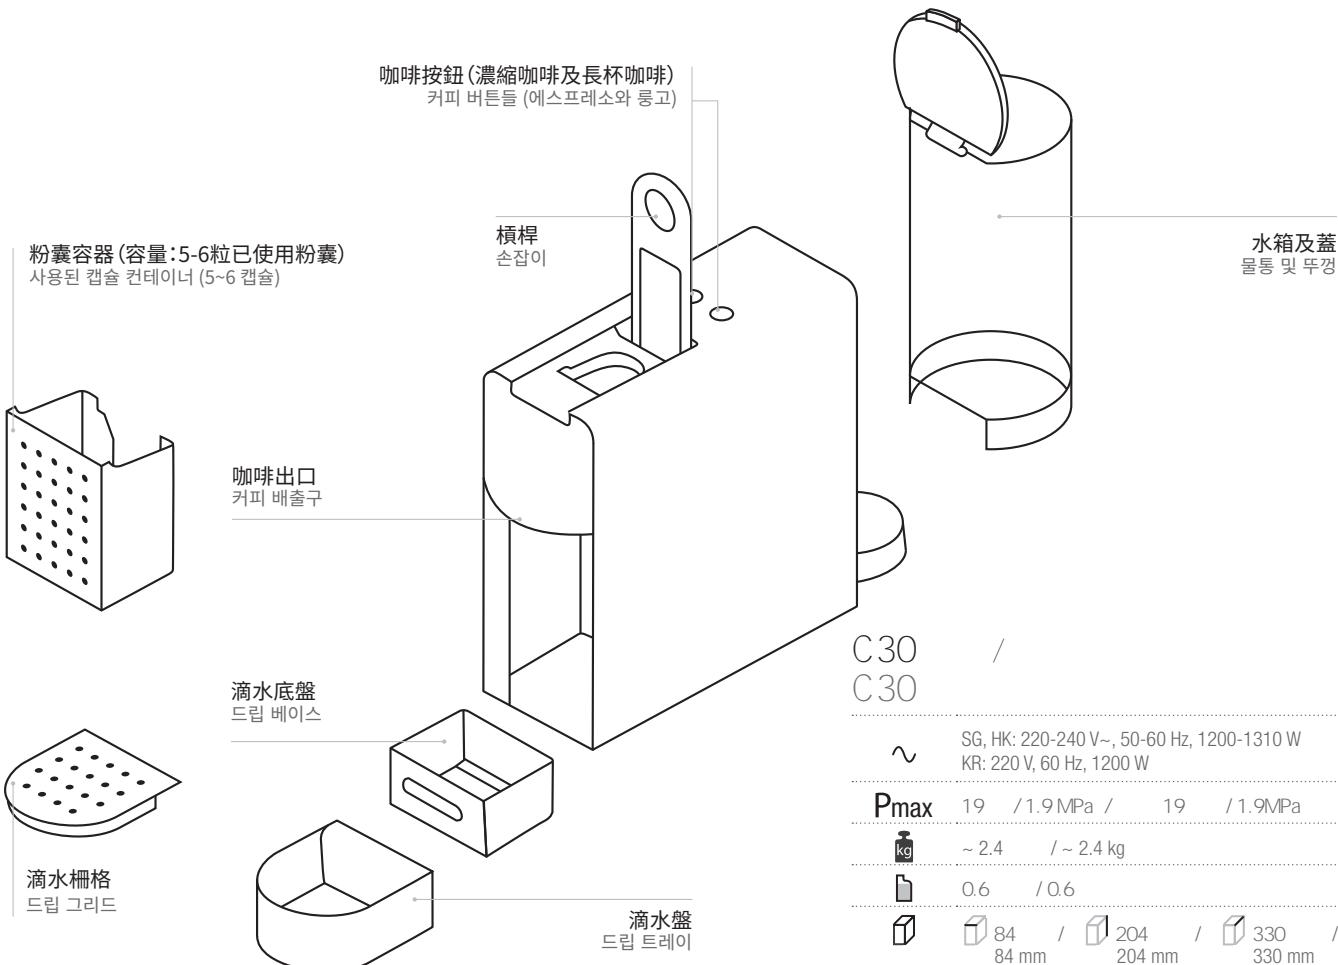

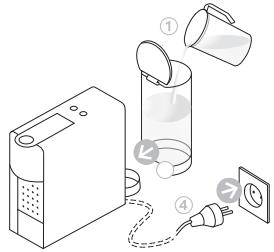



切勿提起槓桿。請參閱安全資訊，避免操作咖啡機時發生損傷。




您可在咖啡按鈕仍閃燈時按下任何咖啡按鈕。咖啡將在咖啡機準備完成後自動流出。

- ④ 40 毫升) 或長杯咖啡 (110 毫升) 按鈕。
完成沖調後，咖啡將自動停止流出。如要手動停止咖啡
流出或增加咖啡，可再次按下按鈕。


(40ml) (110ml)



- ⑤ 提起及合上槓桿，令已使用之粉囊掉於粉囊
容器內。

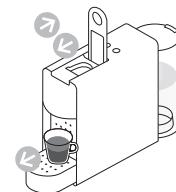


- ① 待其完成加熱 (持續亮燈)。
在水箱中倒入新鮮食水，放入粉囊。

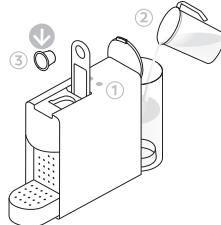


- ② 杯放在咖啡出口。
長按濃縮咖啡或長杯咖啡按鈕。
直至達到理想杯量才放開按鈕。
指示燈會閃爍3次以作確認。
杯量大小已作儲存。



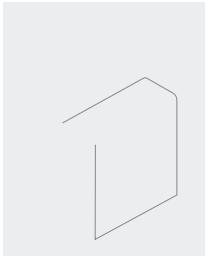




切勿將咖啡機或部件浸於水中。/ 清洗前必須先拔掉電源。/ 切勿使用強烈的清潔劑或溶劑。/ 避免使用尖銳、粗糙的工具或刷子。/ 不得放入洗碗機。

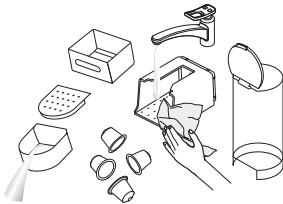

①

、滴水底盤及粉囊容器。
同時取下水箱和蓋，用無味的清潔劑清潔後，
再以溫水／熱水沖洗。

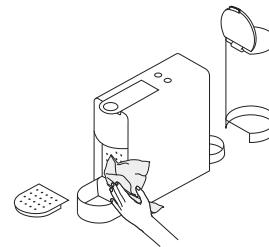

②

、抹布或紙巾抹乾，並重新
組裝。定期用濕布清潔咖啡出口及咖啡
機內部。

⚠ 除磷液為有害物質，應避免觸及眼睛、皮膚和其他表面。請參考下表，以檢示不同水硬度所需要的除磷頻率，將咖啡機保持最佳狀態。如您對除磷過程有任何其他問題，請聯絡Nespresso俱樂部。



⑩ 4 7 清
洗咖啡機。重複兩次。

7

⑪ 按鈕5秒。

4

可同時長按濃縮咖啡及長杯咖啡

5




⑫ 滴水底盤。


	fH	dH	CaCO ₃	(40 ml)
H () / H (높음)	36	20	360 mg/l	300
M () / M (중간)	18	10	180 mg/l	600
L () / L (낮음)	0	0	0mg/l	1200

fH 法國硬度等級/
dH 德國硬度等級/
CaCO₃ 碳酸鈣/


如果達至以下
況,請開始除磷:/

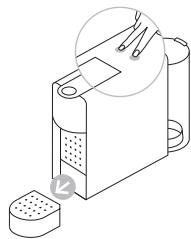

① 可
同時按下濃縮咖啡及長杯咖
啡按鈕,關掉咖啡機。

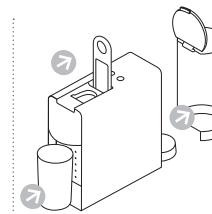

② 及提起橫
桿,並在咖啡出口下
方放置一個容器。

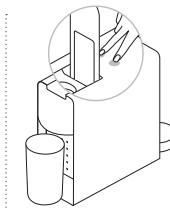

③ 濃縮咖啡及長杯
咖啡按鈕5秒。
兩個按鈕會輪流閃燈。

5

④ 程序會隨即開始。
清空後,咖啡機會自動
關機。



⑤ 橫桿。
清理及清洗粉囊容器、滴水盤及滴
水底盤。

- 總電源，包括電插座、電壓及保險絲。如有問題，請聯絡Nespresso俱樂部。

- 首次使用：為水箱加入暖水（最高55°C），
讓水流過咖啡機內部。 25

- 水箱已空，可注入食水。
- 請為咖啡機除磷。參閱「除磷」部分。

- 流速視乎咖啡種類而定。
- 請為咖啡機除磷。參閱「除磷」部分。

- 咖啡杯
- 如有必要，請為咖啡機除磷。

- 正確放置粉囊。如仍出現漏水，請聯絡Nespresso俱樂部。

- 將咖啡機送往維修或聯絡Nespresso俱樂部。
- 如有問題，請聯絡Nespresso俱樂部。

(55°C)

25

().

EU Directive 2012/19/EC要求。所有包裝物料和產品本身均有採用循環再造物料。咖啡機內含可回收或循環再造的有用物料。只要分類處理廢棄物，即可將有用的原材料循環再造。請將本產品棄置於環保收集站。您可向有關部門索取棄置處理的資料。有關Nespresso可持續發展策略的詳情，請瀏覽www.nespresso.com/positive

EU 2012/19/EC

www.nespresso.com/positive

(HK)
(KR)


Nespresso

Nespresso 提供2年商品有限保固，保固期限內擔保本產品在材料及製作上的瑕疵。保固期由購買日起算，客戶需出示證明購買之單據正本，以確認日期。在保固期限內損壞的產品，Nespresso 將依其狀況決定修理或更換。更換後的產品或維修後的零件，享有原購買日期保固期，或維修零件六個月保固，兩者中較長期限。本產品之有限保固並不適用下列原因所造成的損壞：包括意外人為疏失、插錯電壓插頭、使用不當或其他 Nespresso

⚠ : 當您看到這個符號時,請參閱安全須知以
避免不當操作所造成的傷害或損傷。




:



Nespresso



Nespresso



	33
	34-35
	36
	36
	37
	37-38
	38
	39
	39
	40
	40-42
	42
	43
	43
	44
Nespresso Club	44

(TW)



8 8

1.5

Nespresso

Nespresso Club
Nespresso

Nespresso


Nespresso

Nespresso

Nespresso Club
Nespresso

Nespresso Club
Nespresso

nespresso.com
PDF

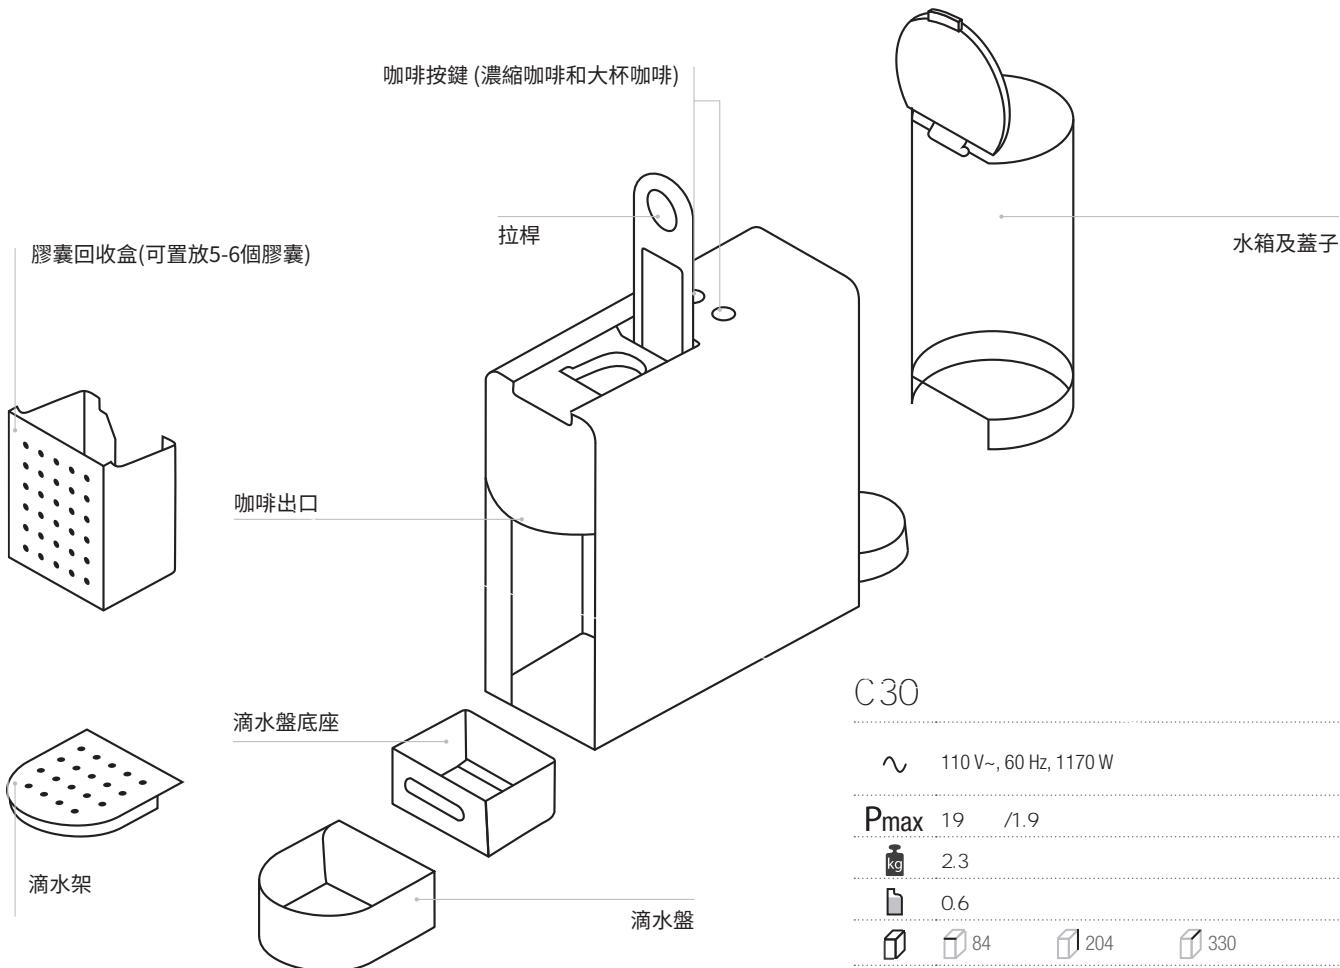

C30

~ 110 V~, 60 Hz, 1170 W

P_{max} 19 /1.9

2.3 kg

0.6 l

84

204

330


: 9




25

④

25

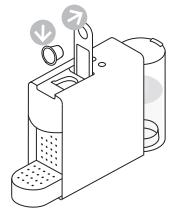

②

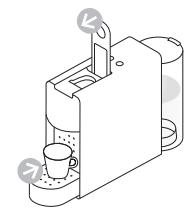

③


(TW)




④

(40 °)

(110 °)

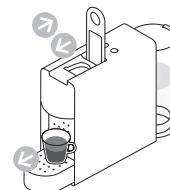

⑤

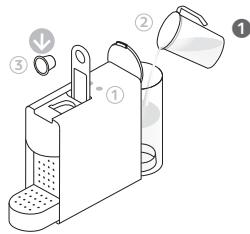




①

()



②


LED

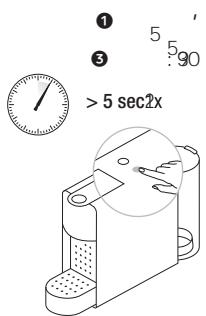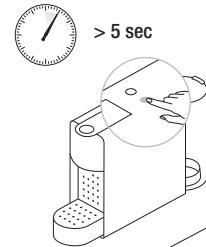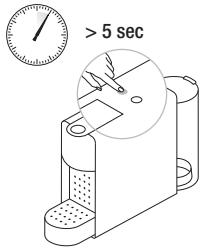


1 : , 40 .. 110 , 9



/ / / /

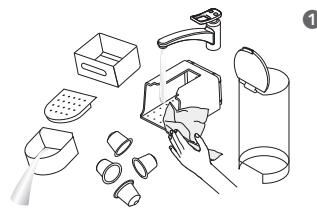

①

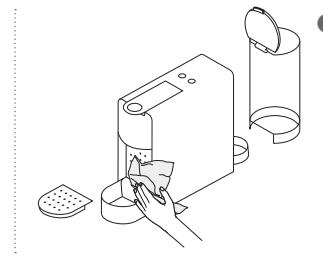

②



Nespresso Club

(TW)

⑩ 7 , . 4


⑪

5 ,


⑫

水質:


	fH	dH	CaCO ₃	除鈣後:	
H ()	36	20	360 mg/l	300	fH
M ()	18	10	180 mg/l	600	dH
L ()	0	0	0mg/l	1200	CaCO ₃

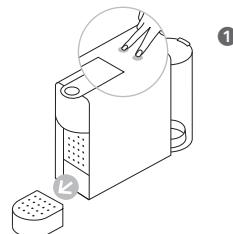

①

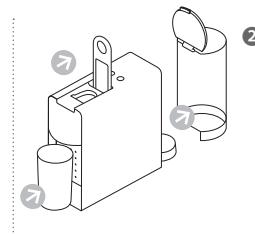


②

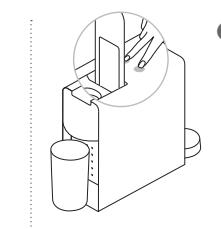

③

5 LED

④

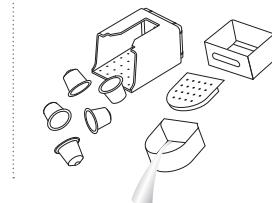

⑤

顯示燈號不亮。

Nespresso

沒有咖啡，沒有水。

55°C

38

咖啡流出速度過慢。

咖啡溫度不足。

於膠囊回收盒內發現液體。

Nespresso

不正常閃爍。

Nespresso

只有水但沒有咖啡流出(即使已經放了咖啡膠囊)。

Nespresso

2012/19/EU

Nespresso

www.nespresso.com/positive

(TW)

Nespresso 2
Nespresso

Nespresso

Nespresso

www.nespresso.com

Nespresso

Nespresso

Nespresso Club

Nespresso

Nespresso Club
"Welcome to Nespresso"

15

Nespresso תהיה אחראית לכל פגם בחומר ובטיב המכונה במשך שנה אחת מהתאריך הרכישתה. בתקופת האחריות Nespresso תחזק או תחליף כל מוצר גסום על פי שיקול דעתה ולא תשלום הרכיש. האחריות על מוצרים שהוחלפו או תיקי מתוקנים, תהיה למשך הזמן הנדרה למקומית האחריות המקורית או ששנה חדשניים, הזמן האחרון מביניהם.

אחריות מוגבלת זו, אינה מסה פנס מוניצ' עקב תאונה, חנוכה, שימוש שגוי, או הקפדה על הראות ההפעלה, בלאי ושבה, שימוש מסחרי, שימוש במתח או בזרם החוזג מהנקוב על המוצר, שימוש תוארי המוצר לאל אשו, שירות, מכת ברך, טיפול או סיבות חוץיות אחרות.

פרט להיקף שטחייה החוקי, הרמאות לאריות ווגבלת זו, אינם שלולים, אינם מגבלים או משנהים את הזכויות החוקיות והתקופות בעת מכרית מוצר זה והם נספחים לזכויות אלו. אם הנך סבר שה מוצר פגום, צור קשר בהקדם עם מועדון Nespresso על מנת לעדכן את דרכי ההתקשרות לאיסוף ולהחזרת המכשיה.

צור קשר עם מועדון נספרסו

למיידנו סופף, במידה ונתקלת בעייה או כדי לקבל הכוונה והמלצת, תוכל ליצור קשר עם מועדון נספרסו, בכל עת. תוכל למצוא את פרטי יצירת קשר עם מועדון נספרסו בכתובת www.nespresso.com, בכל או בחוברת "ברוך הבא" שבאריזת המכונה.

IL

תפועל תקלות

- הנורחות לא דולקוט.**

 - בדוק את אספקת המתח, חתקע, סיווג המתח והنتיג במקורה של בעיה, פנה למועדון *Nespresso*.

אין זרימת קפה, אין זרימת מים.

- מיכל המים רק. מלא מים במיכל המים.
 - הוסף אבנית במחקה האזורה (או סעיף הסרתת אבנית).

הקופה זורם באיטיות רבה.

- מהירות הזרימה תליה בסוג הקופה.
- הרים אבטחת מוגברת האורך (ואנו שואף להרמת אבטחת).

- יש לחם את הספל מראש.
- הסדר אבני במקורה הצורך (ראו סעיף הסרת אבנית).

דילפה באוצר הקפסולות (מיים במלחין הקפסולות).

- מיקם את הקפסולה כראוי. במקרה של דילפה חוזרת, יש לפנות למילוי *Nespresso*.

הבהוב לא סדיה. - יש לפנות למועדון Nespresso.

. Nespresso - במקורה של בעיה, יש לנפות למועדון רקן אין יציאה של קפה אלא רה של מים (אך על פי שהוכנשה קפסולות).

פינוי והגנה על הסביבה

מכשיר זה תואם את התקן האירופאי EU Directive CE 2002/96/EC. חומר האזנה של המכירה מכיל חומרים הנוגנים למינוחו. מוצר זה מכל חומרים בעלי ערך היקולים לשמש למינוחו נספף. ההפדרה של החומרים ההורמים מינוחו של חומר גלם יקר ערך. אנא העברת את המכינה לאירוע פסטולות ייעוד. ניתן לבקש מידע על סלוק מקוודזון **Nespresso**.

לידיעות על פעילות המיזהו על סורטס וגונה על הסביבה, פה לאחד או איןترنت www.nespresso.com

⑫ **רוקן את בסיום הניקוז.**




❬ על מנת לצאת ממצב ניקוי אבן, לחץ ב זמניית על כפתורי האספראט והלונגו למשך 5 שניות.

❭ כאשר המכונה מוכנה חוזר על שלבים 4 ו 7 על מנת לשטוף את המכונה. חוזר פעמיים על שלב זה.


		ניקוי אבן לאחלה:			קשישות מים:			
		40 ml	CaCO ₃	dH	fH	H גבהה	M בנינה	L מוכחה
צפטני	fH	300	360 mg/l	20	36			
גרמי	dH	600	180 mg/l	10	18			
סידן פחמתי	CaCO ₃	1200	0mg/l	0	0			

ריקון המערכת לפני תקופת אחכה של חומר שימוש, להגנה מפני קור או לפני תיקון

❸ **לחץ על כפתורי האספראט והלונגו למשך 5 שניות.**
שתי המרות יבהירו לסתגן.

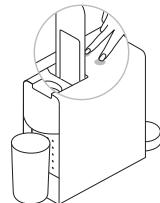


❹ **הסר את מיכל המים.**
ופתח את ידיית הרמה.
הנה מיכל קבלת מתחת
לפתח יצאת הקפה.

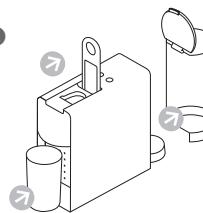

❻ **לכיסוה למצב ריקון,** לחץ ב זמניית על כפתור האספראט
והלונגו לכיבוי המכונה.



❽ **סגור את ידיית הרמה.**
חזר ושטוף את מיכל הקפסולות
המשומשות, אך הניקוז ובסיום
הניקוז.

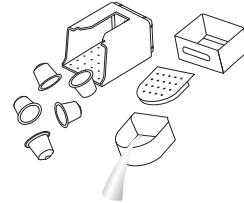

❾ **תהליך הריקון** החל המכונה תכבה באופן אוטומטי עם
סיום התהליך.




משך זמן משוער 15 דקות.


- 3** מלא שקיית אחת של מיל ניקוי האבטנית של נספרסו לתוך מיכל מים. הוסף מים למיל עד ליקן של 0.6 ליטר.




- 2** הרקן את אגן הניקוז ואת מיכל הקפסולות המשומשות.

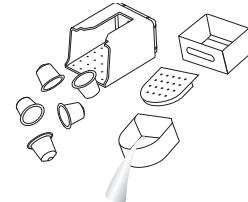


- 1** פותח וסגור את הדית' לפיליטה אוטומטית של הקפסולה המשומשת לתוך מיכל הקפסולות המשומשות.

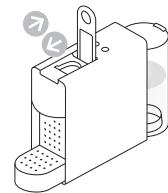


- 6** שתי הנורות ייהבבו.

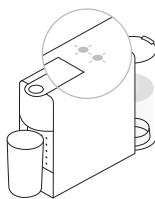

- 5** לכיסה למאכ' ניקוי אבטנית, בזמן שהמכהה במצב דולקן, לחץ בו זמני על כפתור האספרסו והלגוו למשך 5 שניות.

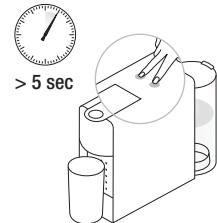


- 4** הנה מיכל של 1 ליטר ללחוץ מחרת לפתח יציאת הקפה

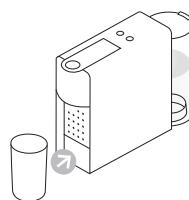


- 9** הרקן ושתוף את מיכל המים מלא במי שתייה.









- 8** מלא שוב את מיכל המים בandal המשומש שבמיכל הקבלת וחזר על שלבים 1 ו-4.

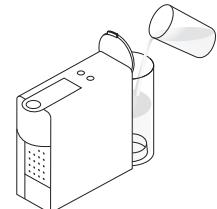

- 7** לחץ על כפתור הולגו שבעם אחת והמתן עד שימושם יתפרק.

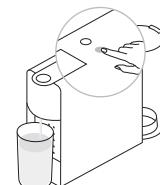



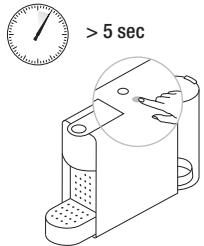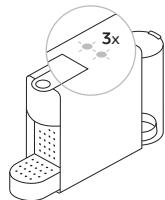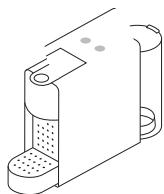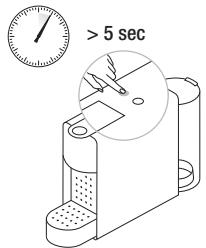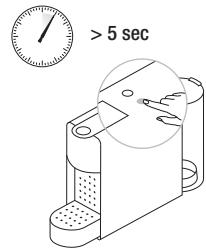



⚠️ לעולם אין להרים את הידית במהלך הפעלת המכונה, יש לנתק באמצעות זיהירות כדי למנוע נזק אפשרי.



בזמן התמחמות המכונה, ניתן לבחור את ספל הקפה המועדף עליו וללחוץ על הכפתור הקפה יהל לזרום באופן אוטומטי כשהמכונה תהיה מוכנה.

5 קח את ספל הקפה. פתח וסגור את הידית לפלייטה אוטומטית של הקפסולה המשמשת לזרק מיל האגירה הפנימית.




4 להתחיל לחץ על כפתור האספרסו (40 מ"ל) או הולגנו (110 מ"ל). זרימת הקפה תחל אוטומטית. לעצירת זרם הקפה לחץ שוב.







תכנות גובה המים

2 הנז ספל תחתفتحת יציאת הקפה. לחץ וחזק את פטום האספרסו או הולגנו. שחרר את לחיצת הכפתור כאשר הגעתו למOUT המים הרצiosa. הפעטור יירבע 3 פעמים לאישור הכמות החדשות. כמות המים נקבעה.

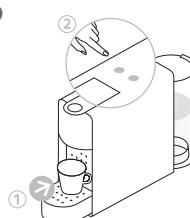


1 הדלק את המכונה והמתן עד שתיהיה מוכנה לשימוש (נרתות יופיע באורך קבוע). מלא את מיכל המים במ"י שתייה והכנס קפסולות נספרסו.

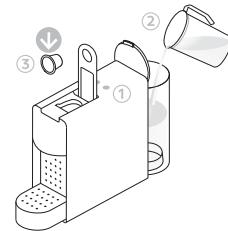

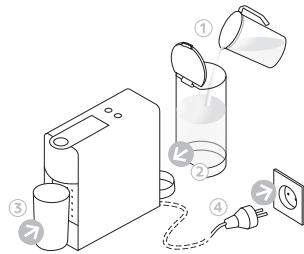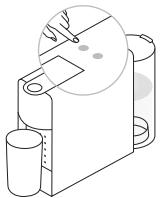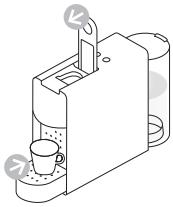

סקירת המכונה

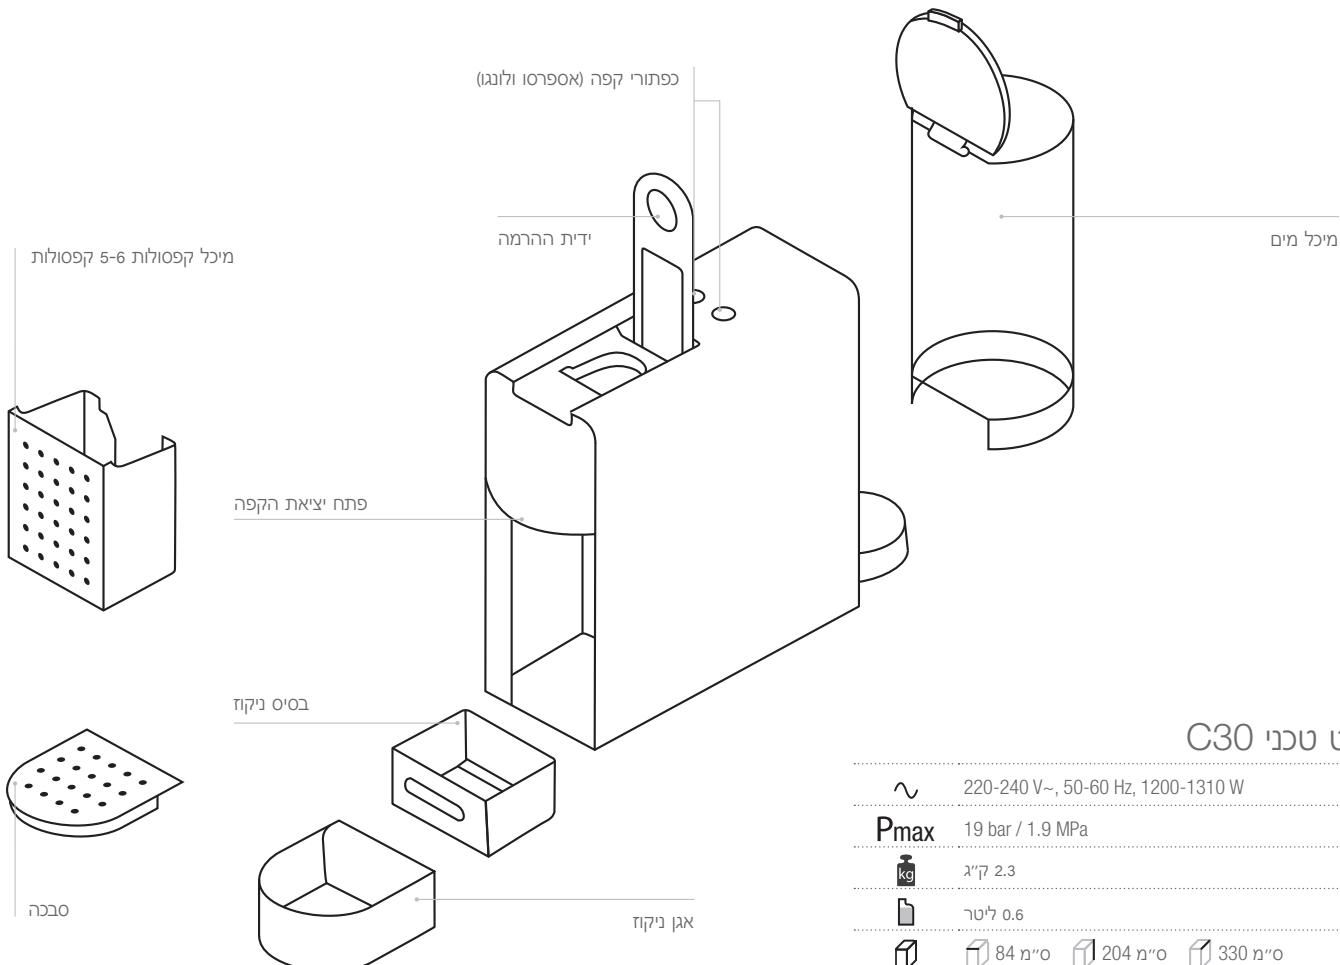

מפורט טכני C30

~ 220-240 V~, 50-60 Hz, 1200-1310 W

P_{max} 19 bar / 1.9 MPa

kg 2.3

liter 0.6

ס"מ 330 ס"מ 204 ס"מ 84 ס"מ 55

את הזכות לשנות הוראות
ללא התראה מוקדמת.

ניקוי אבניית

- שימוש בערכת ניקוי אבניית של נספרסו, יסיע עבתחזקה נכונה של המכונה ובכך להאריך את חי' המכונה וליהנות מקופה מושלמת כמו ביום הראשון.
- יש לפעול לפני הנחיות ניקוי האבניית שבהוראות הפעלה אלו ובתדירות המומלצת.

שמור על הוראות הפעלה אלו

העבר אותן לכל מי שמשתמש במכשיר.
הוראות אלו זמינים כקובץ PDF באתר נספרסו

www.nespresso.com

- יש להחליף את המים במיכל המים כאשר לא בוצע שימוש במכונה לפחות זמן ממושך, למשל בסופי שבוע.
- אין להשתמש במכשיר אלא אגן הניקוז והסבכה כדי להמנע משפיכת נזלים על המשטחים מסביב.
- אין להשתמש בחומר ניקוי חזק או בחומרים ממיסים. השתמש במליטה לחחה וחומר ניקוי עדין כדי לנוקות את משטח המכונה.
- כדי לנוקות את המכונה השתמש רק באביזרי ניקוי.
- בעת הוצאת המכונה מאיריזטה, הסר את הנילון והשליך לפח.
- מכשיר זה תוכנן לשימוש עם קופסולות קפה של נספרסו הזמיןות דרך מועדון נספרסו.
- כל מילונות נספרסו עוברות בבדיקות מחמירות וחילקו אף נלקח לבדיקות פיזיות. על כן יתכן ובחילוק מהמכונות יראו סימני של שימוש, הנובעים מאותן בדיקות.
- נספרסו שומרת לעצמה ממושך.

- יש לסגור את ידית הרימה תמיד ואין להריםה בזמן פועלות המכונה. הדבר עלול לגרום לכויות.
- אין להניח את האכבות מתחת לפתח יציאת הקפה או המים החמים, סכתת כויה.
- אין להכניס אכבות לתוך פתח הכנסת הקפסולה או לפתח פליטת הקפסולה. סכתת פצעיה!
- מים עלולים לדוחם סביבה הקפסולה כאשר ארינה מתנקבת ע"י הלביבים ולגרום נזק למכשיר.
- אין להשתמש בקפסולה משומשת, פגומה או מעוותת.
- במידה וקפסולה נתעה בבית הקפסולות, יש לכבות את המכונה ולהוציא את תקע החשמל בטרם יבוצע כל שימוש נסוף במכונה. צור קשר עם מועדון נספרסו או עם נציגי המורשים.
- מלא את מיכל המים במים טריים וראויים לשתייה בלבד.
- רוקן את מיכל המים במידה ולא יעשה שימוש במכיר לפרק זמן התחסמלות.

- לעולם אין להכניס את המכשיר לתוך מדייח כלים. היצروف של חשמל ומים הינו מסוכן ועלול לגרום להתחשמלוות קטלנית.
- אין לפתח את גוף המכשיר, מתח חשמלי מסוכן!
- אין להכניס חפצים לתוך פתחי המכשיר. פעללה זו עלולה לגרום לדיליקה או התחסמלות!
- השימוש באביזרים חיצוניים אינם מומלץ ע"י הייצור לאחר שהדבר עלול לגרום לשריפה, שוק חשמלי או פגיעה בבני אדם.
- יש להמנع מפגיעת נזק אפשריים כאשר מתפעלים את המכשיר.**
 - אין להשאיר את המכשיר ללא השגחה במהלך פעולה.
 - אין להשתמש במכשיר במידה וניזוק או אינו פועל כראוי. הוצא את תקע החשמל מיידית. צור קשר עם מועדון נספרסו או עם נציגי המורשים כדי לבדוק את התקלה או לתקן.
 - מכיר פגום עלול לגרום לדיליקה, כוויות או



- כדי למנוע נזק וסכנה, אין למקם את המכשיר על גבי משטחים חמימים כגון רדייטורים, כיריים, מבוערים, גז, להבה פתוחה וכדומה, או בקרבתם.
- יש להניח את המכשיר על משטח יציב ומואzon. המשטח חייב להיות חסין אש ונזלים, כגון: מים, קפה, מסיר אבנית וכדומה.
- נתק את המכשיר בשימוש לפרקי זמן ממושך. נתק באירועים הוצאות תקע החשמל ולא על ידי משיכת כבל החשמל עצמו, פעולה זו עלולה לגרום נזק לכבל החשמל.
- טרם ניקוי המכונה יש לנתקה מהחשמל ולנתק עיי' משייכה בכבל החשמל.
- על מנת לנתק את המכשיר יש לעצור באופן מוחלט את תהליך ההכנה ורק אז להסיר את התקע משקע החשמל. לעומת זאת ניתן לנתק את החשמל בידים רטבות.
- לעולם אין לגעת בכבל החשמל או חקל ממנו.

- יש לחבר את המכשיר לשקע חשמל מתאים עם הארקה בלבד. וזאת כי מתח החשמל המצוין בטלת הדירוג תואם למתח החשמל שברשותך. שימוש בחיבורים לא מתאימים מבטל את האחוריות.

את המכשיר יש לחבר ארוך ורק לאחר התקנה.

- אין למשור את כבל החשמל מעל קצוות כדים, לייצור לחץ או לאפשר לו להשתלשל מטה.
- הרחק את הcabל מחום או לחות.
- אם יש פגם בכבל החשמלי או בתקע, יש להחליף אותו באמצעות היצרן, סוכן השירות שלו או אדם מוסמך אחר, כדי להימנע מסכנה.
- אם יש פגם בכבל החשמלי או בתקע, אל תפעיל את המכשיר החזר את המכשיר לנציג המורשה של *Nespresso*. או *Nespresso*. במידה ונדרש כבל מריר, השתמש בכבל עם הארקה בלבד בעל חוטי הולכה בעובי 1.5 ממי' לפחות, או בתקע תואם.
- מלאו אחר הוראות הבטיחות במלואן כדי למנוע סכנת התחשמלות ושריפה.
- במקרה חרום יש לנתק באופן מיידי את הcabל מהחשמל.



**זהירות - כשהניר
רואה סימן זה, אנא
התיחס להוראות
הבטיחות בכך למנוע
פגעה ונזק אפשרי.**

**(סימן זה יש לקרוא את
ההוראות לשימוש בטוח
ונכון במכשיר.**

**זהירות - הוראות
הבטיחות הן חלק
מהמכשיר. קרא
אותן במלואן בטרם
שימוש במכשיר בפעם
הראשונה. שמור אותן
במקומות נגישים
למצוא במועד מאוחר
ויתר.**

- המכשיר נדרש להכנות מראשות לפאי הוראות אלו.
- יש להשתמש במכשיר בלבד.
- מכשיר זה נדרש לשימוש ביתי ובטפרטורות שאין קייזיות בלבד.
- הגן על המכשיר מאזור שמשיש, חשיפה ממושכת לנזץ' מים ולחות.
- המכשיר נדרש לשימוש ביתי וברחבים פרטיים

הוראות הפעלה

תיק

3	תיק האриזה
5-4	הוראות בטיחות
6	סקירת המכונה
6	מפורט טכני
7	שימוש ראשוני לאחר תקופת ארחכה שבמהלכה הממשיר לא הופעל
8-7	הנתת קפה
8	תנכות כמות המים
9	מצב חיסכון בחשמל
9	איפוס להגדרת יצן
10	ליקוי המסתה
12-10	ליקוי אבטחת
12	ירוקן המשענכת לפני תקופת ארככה של חסור שימוש, להגנה מפני קור או לפני תקיקן.
13	תשליל תקלות
13	פינוי והגנה על הסביבה
14	אחריות מוגבלת
14	צורך עורך עם מועדון נספרסו


Nespresso, מפונה אקוולטטיבית להפקת אספרסו מושלם פעם אחר פעם. כל מכונות Nespresso בעלות טרממת מיידי ייוזנית הפעלתה על לחץ מיידי גובה ביזור 19 בר כל פרט对她 במעטת תוקן בהירות בבה ובויק נוחב על מנת להבטיח כי כל האחננות, בכל תעקבות הקפה, יתבטאו במלוא עצמתו ועניןיו גוף, מרקם סמיך וקרמה קטיפתייה.

זהירות: כחסימן זה מופיע, אנא קרא ומלא אחר ההוראות הבטיחות במלואן כדי למנוע פגעה ונזק אפשריים.

מידע: כחסימן זה המופיע יש לקרוא את העצת לשימוש בטוח וטוב יותר של מכונת הקפה שלך.



תיק האריזה

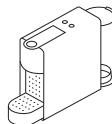


מכונת קפה




קפסולות נספרסו לטעימה



חוברת "ברוך הבא לנספרסו"

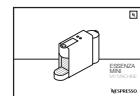

הוראות הפעלה

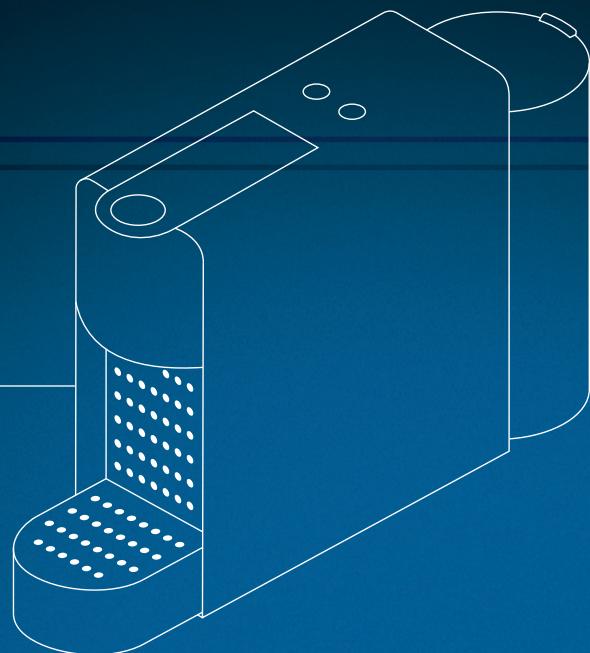

ESSENZA
MINI
MY MACHINE

NESPRESSO®