

ESSENZA  
MINI  
MY MACHINE

NESPRESSO®

|  |                    |  |    |
|--|--------------------|--|----|
|  EN | Instruction manual |  CN | 3  |
|  HK |                    |  KR | 18 |
|  TW |                    |  | 33 |

# Instruction manual /

EN

CN

Nespresso is an exclusive system creating the ultimate Espresso, time after time. All Nespresso machines are equipped with a unique extraction system that guarantees up to 19 bar pressure. Each parameter has been calculated with great precision to ensure that all the aromas from each capsule can be extracted, to give the coffee body and create an exceptionally thick and smooth crema.


19

**⚠ CAUTION:** when you see this sign, please refer to the safety precautions to avoid possible harm and damage.

**i INFORMATION:** when you see this sign, please take note of the advice for the correct and safe usage of your coffee machine.



## Packaging Content /




User manual



“Welcome to Nespresso” Folder



Nespresso capsule tasting gift



Coffee Machine

## Content /

|   |       |
|---|-------|
| Packaging Content /   | 3     |
| Safety Precautions /  | 4-8   |
| Machine Overview /  | 9     |
| Specifications /  | 9     |
| First Use Or after a long period of non-use /   | 10    |
| Coffee Preparation /  | 10-11 |
| Programming the Water Volume /  | 11    |
| Energy saving mode /  | 12    |
| Reset to Factory Settings /   | 12    |
| Cleaning /  | 13    |
| Descaling /   | 13-15 |
| Emptying the System before a period of non-use and for frost protection, or before a repair / | 15    |
| Troubleshooting /   | 16    |
| Disposal and Environmental Protection /   | 16    |
| Limited Guarantee /   | 17    |
| Contact Nespresso Club /  | 17    |



**⚠ CAUTION:** when you see this sign, please refer to the safety precautions to avoid possible harm and damage.

**ℹ INFORMATION:** when you see this sign, please take note of the advice for the correct and safe usage of your appliance.

**⚠ CAUTION:** the safety precautions are part of the appliance. Read them carefully before using your new appliance for the first time. Keep them in a place where you can find and refer to them later on.

- The appliance is intended to prepare beverages according to these instructions.
- Do not use the appliance for anything other than its intended use.
- This appliance has been

designed for indoor and non-extreme temperature conditions use only.

- Protect the appliance from direct sunlight effect, prolonged water splash and humidity.
- This appliance is intended to be used in households and similar applications only such as: staff kitchen areas in shops, offices and other working environments, farm houses; by clients in hotels, motels and other residential environments; bed and breakfast type environments.
- This appliance may be used by children of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are fully aware of the dangers involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and

they are supervised by an adult.

- Keep the appliance and its cord out of reach of children under 8 years of age.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received instruction to use the appliance safely and understand the dangers.
- Children shall not use the appliance as a toy.
- The manufacturer accepts no responsibility and the guarantee will not apply for any commercial use, inappropriate handling or use of the appliance, any damage resulting from use for other purposes, faulty operation, non-professionals' repair or failure to comply with the instructions.

### Avoid risk of fatal electric shock and fire

- In case of an emergency: immediately remove the plug from the power socket.
- Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect connection voids the guarantee.

### The appliance must only be connected after installation

- Do not pull the cord over sharp edges, clamp it or allow it to hang down.
- Keep the cord away from heat and damp.
- If the supply cord or the plug are damaged, they must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid all risks.

- If the supply cord or the plug are damaged, do not operate the appliance. Return the appliance to the *Nespresso Club* or to a *Nespresso* authorized representative.
- If an extension cord is required, use only an earthed cord with a conductor cross-section of at least 1.5 mm<sup>2</sup> or matching input power.
- To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
- Always place it on a horizontal, stable and even surface. The surface must be resistant to heat and fluids, like water, coffee, descaler or similar.
- Disconnect the appliance from the mains when not in use for a long period. Disconnect by pulling out the plug and not by pulling the cord itself or the cord may

become damaged.

- Before cleaning and servicing, remove the plug from the mains socket and let the appliance cool down.
- To disconnect the appliance, stop any preparation, then remove the plug from the power socket.
- Never touch the cord with wet hands.
- Never immerse the appliance or part of it in water or other liquid.
- Never put the appliance or part of it in a dishwasher.
- Electricity and water together is dangerous and can lead to fatal electrical shocks.
- Do not open the appliance. Hazardous voltage inside!
- Do not put anything into any openings. Doing so may cause fire or electrical shock!
- The use of accessory attachments not recommended by the manufacturer may result in

fire, electric shock or injury to persons.

### Avoid possible harm when operating the appliance

- Never leave the appliance unattended during operation.
- Do not use the appliance if it is damaged, has been dropped or not operating perfectly. Immediately remove the plug from the power socket. Contact the *Nespresso Club* or *Nespresso* authorized representative for examination, repair or adjustment.
- A damaged appliance can cause electrical shocks, burns and fire.
- Always completely close the lever and never lift it during operation. Scalding may occur.
- Do not put fingers under coffee outlet, risk of scalding.
- Do not put fingers into capsule compartment or the capsule shaft. Danger of injury!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.
- Never use an already used, damaged or deformed capsule.
- If a capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation. Call the *Nespresso Club* or *Nespresso* authorized representative.
- Always fill the water tank with cold, fresh drinking water.
- Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
- Replace water in water tank when the appliance is not operated for a weekend or a similar period of time.
- Do not use the appliance without the drip tray and drip grid to avoid spilling

any liquid on surrounding surfaces.

- Do not use any strong cleaning agent or solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.
- To clean machine, use only clean cleaning tools.
- When unpacking the machine, remove the plastic film and dispose.
- This appliance is designed for *Nespresso* coffee capsules available exclusively through the *Nespresso* Club or your *Nespresso* authorized representative.
- All *Nespresso* appliances pass stringent controls. Reliability tests under practical conditions are performed randomly on selected units. This can show traces of any previous use.
- *Nespresso* reserves the right to change instructions without prior notice.

## Descaling

- *Nespresso* descaling agent, when used correctly, helps ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as the first day.
- Descaling according to user manual recommendations.



•

8

## SAVE THESE INSTRUCTIONS

Pass them on to any subsequent user.

This instruction manual is also available as a PDF at [nespresso.com](http://nespresso.com)



•

•

•

•


•

•

•

8

8




- 
- 
- 
- *Nespresso*
- 
- *Nespresso*
- 
- 
- 
- 
- *Nespresso*  
*Nespresso*  
Nespresso      **nespresso.com**  
                    PDF  
Nespresso
- *Nespresso*

# Machine Overview /

EN

CN

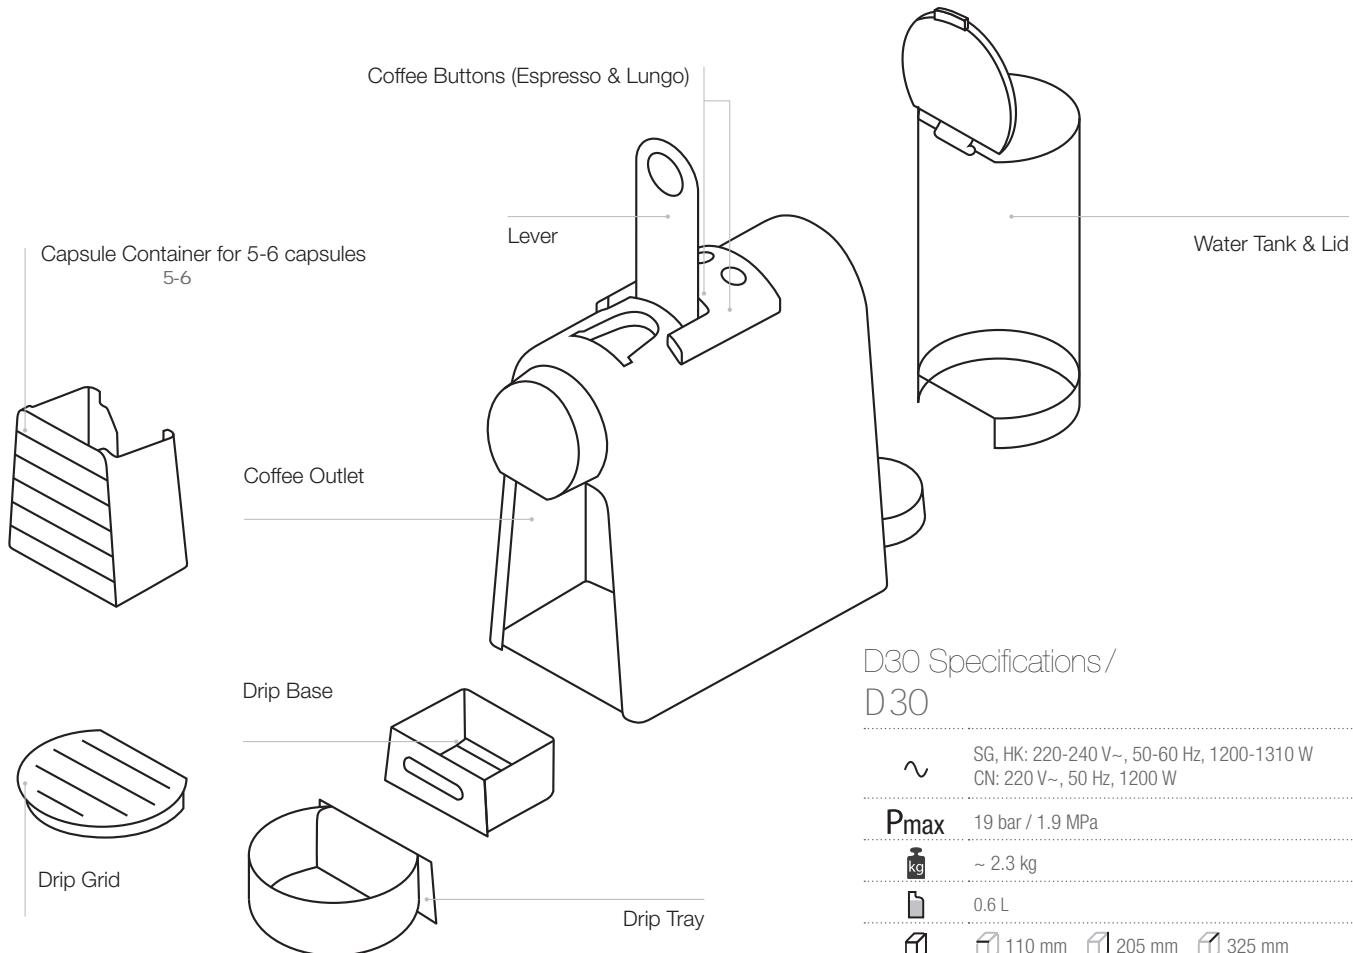

(EN) First use or after a long period of non-use /

(CN)

**⚠ First, read the safety precautions** to avoid risks of fatal electrical shocks and fire.




**i** Factory settings: Espresso cup: 40 ml, Lungo cup: 110 ml; Auto Off mode: 9 mins.

40

110

9

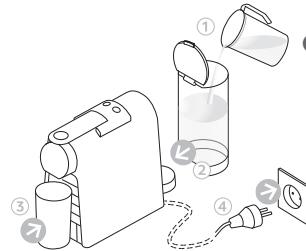

- ① Rinse the water tank before filling with potable water.  
Place a container (min. 1 L) under coffee outlet.  
Plug into power outlet.

1



- ② To turn the machine ON, press either the Espresso or Lungo button.  
- Blinking Lights: heating up (25 seconds)  
- Steady Lights: ready

25

- ③ Press the Lungo button to rinse the machine. Repeat 3 times.


3

- ④ To turn the machine off before automatic Auto Off mode, press both the Espresso and Lungo buttons simultaneously.


## Coffee Preparation /

- ① To turn the machine ON, press either the Espresso or Lungo button.  
- Blinking Lights: heating up (25 seconds)  
- Steady Lights: ready

25

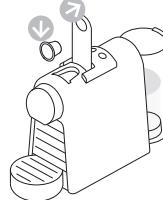

- ② Lift the lever completely and insert the capsule.

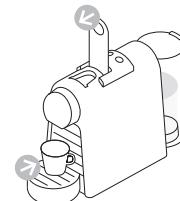

- ③ Close the lever and place a cup under the coffee outlet.

## Coffee Preparation /

EN

CN

**⚠ Never lift the lever** during operation and refer to the important safeguards to avoid possible harm when operating the appliance.



**i** During heat up, you can press either coffee button while blinking. The coffee will then flow automatically when the machine is ready.



- ④ Press the Espresso (40 ml) or the Lungo (110 ml) button to start.**  
Preparation will stop automatically. To stop the coffee flow or top up your coffee, press again.


40ml

110ml



- ⑤ Remove the cup.** Lift and close the lever to eject the capsule into the used capsule container.

## Programming the Water Volume /

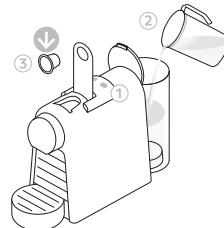

- ① Turn the machine on** and wait for it to be in ready mode (steady lights).  
Fill the water tank with fresh potable water and insert the capsule.



- ② Place a cup** under the coffee outlet.  
Press and hold the Espresso or Lungo button.  
Release button once the desired volume is served.  
LED will blink fast 3 times to confirm new setting.  
Water volume level is now stored.

LED

3

## (EN) Energy saving mode /


(CN)



This machine is equipped with an energy saving feature.



To change this setting:

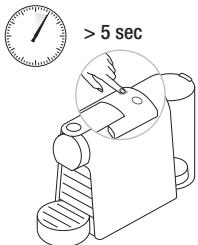


- ① With machine turned off, press and hold the Espresso button for 5 seconds.  
The Espresso button will blink to indicate the current setting.

5

- ② To change this setting press the Espresso button:  
One time for Auto Off mode after 30 minutes.  
One more time for Auto Off mode after 9 minutes.

- 1x Single blinking: 9 mins mode  
• 2x Double blinking: 30 mins mode

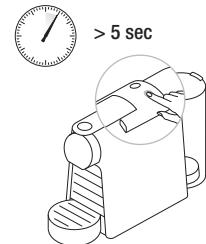

- ③ To exit the energy saving mode press the Lungo button for 5 seconds.


5

## Reset to Factory Settings /




Factory settings: Espresso cup: 40 ml, Lungo cup: 110 ml; Auto Off mode: 9 minutes.

40ml, 110ml, 9

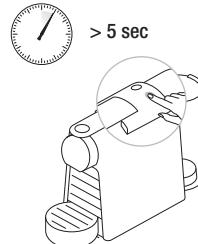

- ① With machine turned off, press and hold down the Lungo button for 5 seconds.

5

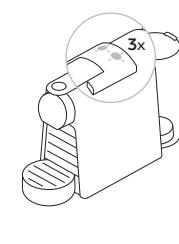


- ② LEDs will blink fast 3 times to confirm machine has been reset to factory settings.





LED  
3



- ③ LEDs will then continue to blink normally, as heating up, until ready.  
- Steady Lights: ready

LED

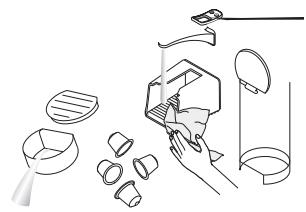

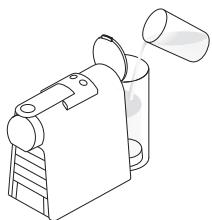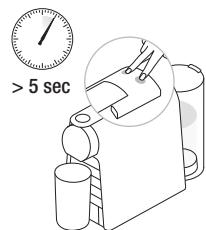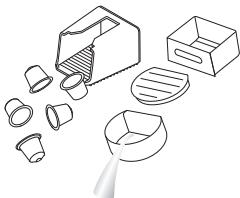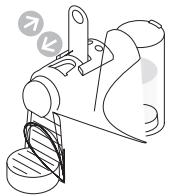

- ⑩ When ready,** repeat steps 4 and 7 to now rinse the machine. Repeat twice.

7

4

- ⑪ To exit the descaling mode,** press both the Espresso and Lungo buttons for 5 seconds.

5

#### Water hardness:/


|                | fH | dH | CaCO <sub>3</sub> | (40 ml) |
|----------------|----|----|-------------------|---------|
| H (HIGH) / 高   | 36 | 20 | 360 mg/l          | 300     |
| M (MEDIUM) / 中 | 18 | 10 | 180 mg/l          | 600     |
| L (LOW) / 低    | 0  | 0  | 0mg/l             | 1200    |

fH French degree/  
dH German Grade/  
CaCO<sub>3</sub> Calcium Carbonate/




- ⑫ Empty** the drip base.


#### Emptying the system before a period of non-use and for frost protection, or before a repair/

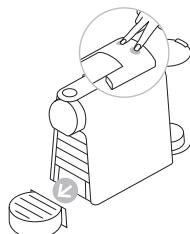

- ① To enter the emptying mode,** press both the Espresso and Lungo buttons to turn the machine off.

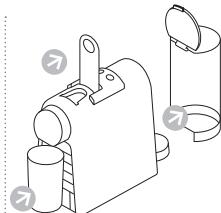


- ② Remove** the water tank and open the lever. Place a container under the coffee outlet.

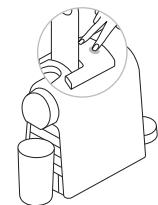

- ③ Press both** the Espresso and Lungo buttons for 5 seconds. Both LEDs blink alternatively.

5  
LED

- ④ Emptying process begins.**  
Machine switches off automatically when procedure is finished.

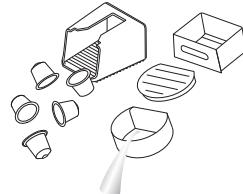

- ⑤ Close** the lever.  
Empty and clean the used capsule container, the drip tray and the drip base.

## (EN) Troubleshooting /

(CN)

|  |   |           |  |
|--|---|-----------|--|
| No light indicator.  | - Check the power outlet, plug, voltage, and fuse. In case of problems, <b>call</b> the Nespresso Club.   |           |  |
| No coffee, no water.                                       | - First use: <b>fill</b> water tank with warm water (max. 55° C) and <b>run through</b> machine according to instructions on page 9.<br>- Water tank is empty. <b>Fill</b> water tank.<br>- <b>Descale</b> if necessary; see Descaling section. | 9<br>55°C |  |
| Coffee comes out very slowly.                              | - Flow speed depends on the coffee variety.<br>- <b>Descale</b> if necessary; see Descaling section.  |           |  |
| Coffee is not hot enough.                                  | - Preheat cup.<br>- <b>Descale</b> if necessary.  |           |  |
| Capsule area is leaking (water in capsule container).      | - Position capsule correctly. If leakages occur, <b>call</b> the Nespresso Club.  |           |  |
| Irregular blinking.  | - Send appliance to repair or <b>call</b> the Nespresso Club.   |           |  |
| No coffee, just water runs out (despite inserted capsule). | - In case of problems, <b>call</b> the Nespresso Club.  |           |  |

## Disposal and environmental protection /

This appliance complies with the EU Directive 2012/19/EC. Packaging materials and appliance contain recyclable materials.

Your appliance contains valuable materials that can be recovered or can be recycled. Separation of the remaining waste materials into different types facilitates the recycling of valuable raw materials. Leave the appliance at a collection point. You can obtain information on disposal from your local authorities.

To know more about Nespresso sustainability strategy, go to [www.nespresso.com/positive](http://www.nespresso.com/positive).

EU Directive 2012/19/EC

[www.nespresso.com/positive](http://www.nespresso.com/positive)

Nespresso

## Limited Guarantee /

EN  
CN

**Nespresso guarantees** this product against defects in materials and workmanship for a period of 2 years. The warranty period begins on the date of purchase and Nespresso requires presentation of the original proof of purchase to ascertain the date. During the warranty period, Nespresso will either repair or replace, at its discretion, any defective product at no charge to the owner. Replacement products or repaired parts will be warranted only for the unexpired portion of the original warranty or six months, whichever is greater. This limited warranty does not apply to any defect resulting from negligence, accident, misuse, or any other reason beyond Nespresso's reasonable control, including but not limited to: normal wear and tear, negligence or failure to follow the product instructions, improper or inadequate maintenance, calcium deposits or descaling, connection to improper power supply, unauthorized product modification or repair, use for commercial purposes, fire, lightning, flood or other external causes. This warranty is valid only in the country of purchase or in such other countries where Nespresso sells or services the same model with identical technical specifications. Warranty service outside the country of purchase is limited to the terms and conditions of the corresponding warranty in the country of service. Should the cost of repairs or replacement not be covered by this warranty, Nespresso will advise the owner and the cost shall be charged to the owner. This limited warranty shall be the full extent of Nespresso's liability however caused. Except to the extent allowed by applicable law, the terms of this limited warranty do not exclude, restrict or modify the mandatory statutory rights applicable to the sale of this product and are in addition to those rights. If you believe your product is defective, contact Nespresso for instructions on how to proceed with a repair. Please visit our website at [www.nespresso.com](http://www.nespresso.com) for contact details.

Nespresso

Nespresso  
Nespresso

Nespresso

Nespresso

Nespresso  
Nespresso

Nespresso

Nespresso

/  
[www.nespresso.com](http://www.nespresso.com)

## Contact the Nespresso Club /

**As we may not have foreseen all uses of your appliance**, should you need any additional information, in case of problems or simply to seek advice, call the Nespresso Club or your Nespresso authorized representative. Contact details for your nearest Nespresso Club or your Nespresso authorized representative can be found in the «Welcome to Nespresso» folder in your machine box or at [nespresso.com](http://nespresso.com)

nespresso.com

(HK)  
(KR)

Nespresso

/

( 19bar)



19

Nespresso

/


18  
19-23  
24  
24

25  
25-26  
26  
27  
27  
28  
29-30

30  
31  
31  
32  
32

Nespresso

/



Nespresso



Nespresso





8



8



8

Nespresso  
Nespresso

1.5

Nespresso  
Nespresso



—

- 
- 
- 
- 
- [www.nespresso.com](http://www.nespresso.com)  
PDF
- *Nespresso*  
*Nespresso*
- 
- *Nespresso*
- 



—

- 
- *Nespresso*
- 
- *Nespresso*
- 
- 
- 
- 
- 



—

HK

KR

8

8

8

1.5 mm<sup>2</sup>





(KR)

[www.nespresso.com](http://www.nespresso.com)  
PDF

(HK)  
(KR)

/

5-6  
(5~6 )

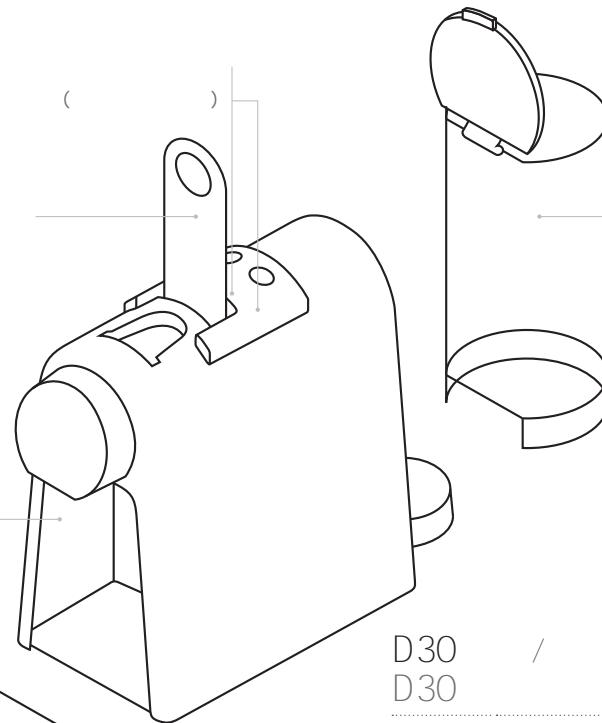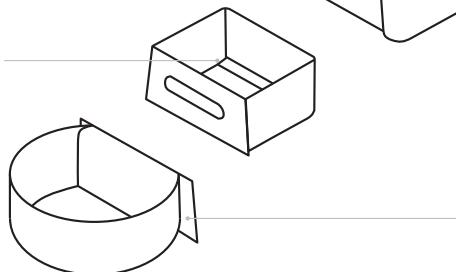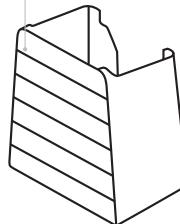

D30  
D30

/




SG, HK: 220-240 V~, 50-60 Hz, 1200-1310 W  
KR: 220 V, 60 Hz, 1200 W

P<sub>max</sub> 19 / 1.9 MPa / 19 / 1.9 MPa

kg ~ 2.4 / ~ 2.4 kg

l 0.6 / 0.6

mm 110 / 205 / 325  
110 mm 205 mm 325 mm

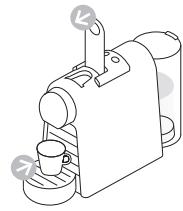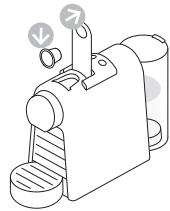

(HK)

(KR)



:



④

40


(40ml)

110

(110ml)



⑤



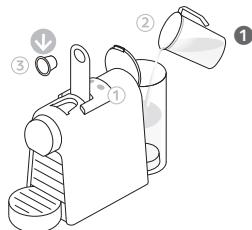



)





(



3

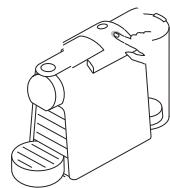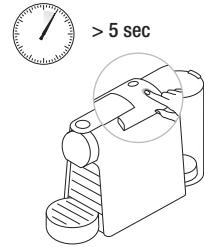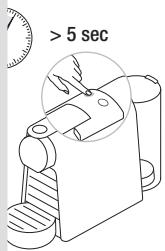

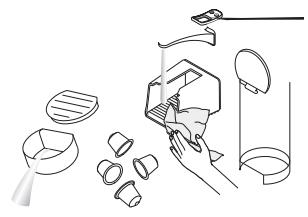

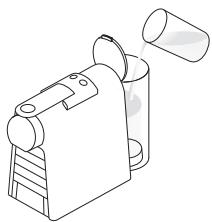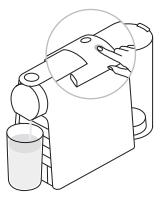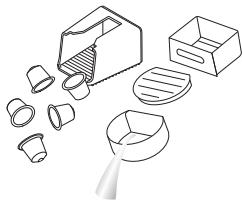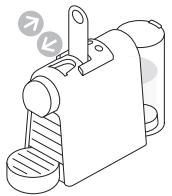

(HK)  
(KR)

⑩ 4 7

7  
4

⑪

5

5


⑫




|              | fH | dH | CaCO <sub>3</sub> | (40 ml) | fH                | / |
|--------------|----|----|-------------------|---------|-------------------|---|
| H( ) / H(높음) | 36 | 20 | 360 mg/l          | 300     | dH                | / |
| M( ) / M(중간) | 18 | 10 | 180 mg/l          | 600     | CaCO <sub>3</sub> | / |
| L( ) / L(낮음) | 0  | 0  | 0mg/l             | 1200    |                   |   |



①

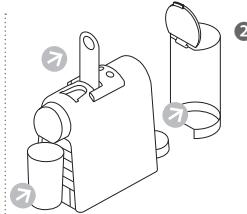

②

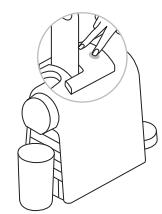


③

5

5

④

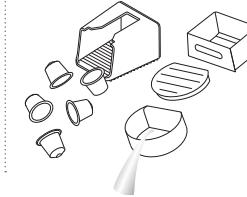

⑤

/

Nespresso

55°C

25

( 55°C)

25

Nespresso

( ).

Nespresso

Nespresso

EU Directive 2012/19/EC

EU 2012/19/EC

Nespresso

[www.nespresso.com/positive](http://www.nespresso.com/positive)

[www.nespresso.com/positive](http://www.nespresso.com/positive)

(HK)

(KR)

Espresso

Nespresso 2

Nespresso

Nespresso

Nespresso

Nespresso


19



:



:



Nespresso



Nespresso



|                |       |
|----------------|-------|
| Nespresso      | 33    |
|                | 34-35 |
|                | 36    |
|                | 36    |
|                | 37    |
|                | 37-38 |
|                | 38    |
|                | 39    |
|                | 39    |
|                | 40    |
|                | 40-42 |
|                | 42    |
|                | 43    |
|                | 43    |
|                | 44    |
| Nespresso Club | 44    |

(TW)



⚠

ⓘ

⚠

8 8

1.5

8

Nespresso

Nespresso Club  
Nespresso

Nespresso


Nespresso

Nespresso

Nespresso Club  
Nespresso

Nespresso Club  
Nespresso

[nespresso.com](http://nespresso.com)  
PDF

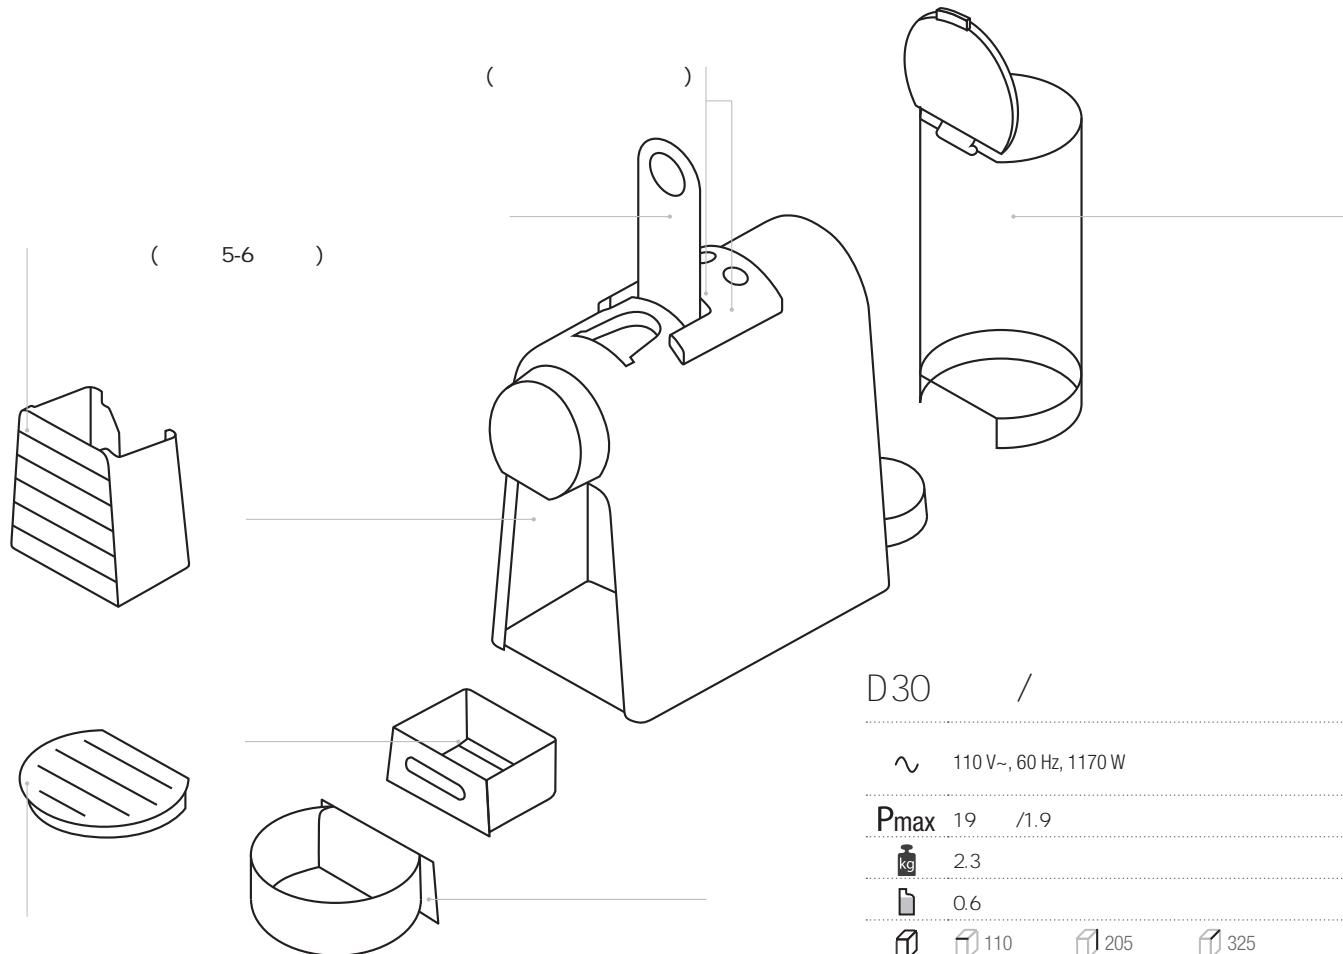




(TW)




(40 )

(110 )

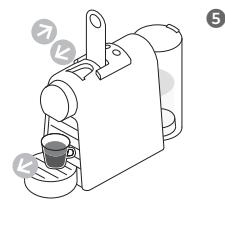


5

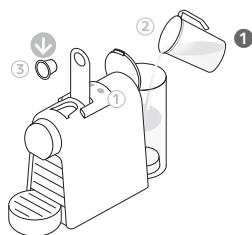

( )



2

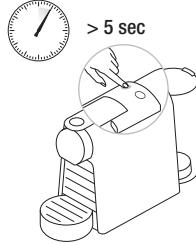

①

5



9

②

30

9

:

9

1x

:


30

:

30




&gt; 5 sec

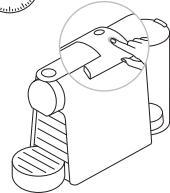

③

5

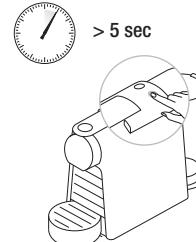

①

5


40

,

110

,


9

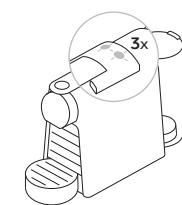

② LED




③ LED




[www.nespresso.com/descaling](http://www.nespresso.com/descaling)



5

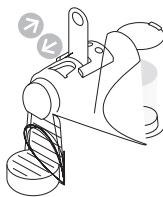

①

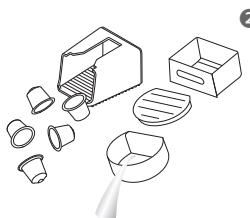

②




③

Nespresso


0.6



④

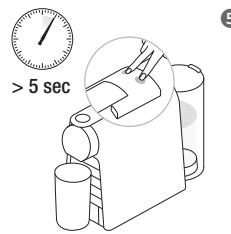

⑤

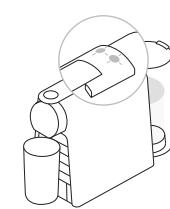


⑥

LED



⑦

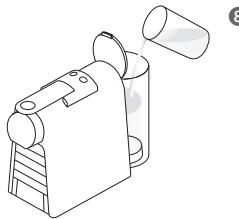

⑧



⑨

(TW)

⑩ 7 , . 4


⑪

5 ,


⑫




|       | fH | dH | CaCO <sub>3</sub> | ☕ (40 ml) |                   |
|-------|----|----|-------------------|-----------|-------------------|
| H ( ) | 36 | 20 | 360 mg/l          | 300       | fH                |
| M ( ) | 18 | 10 | 180 mg/l          | 600       | dH                |
| L ( ) | 0  | 0  | 0mg/l             | 1200      | CaCO <sub>3</sub> |

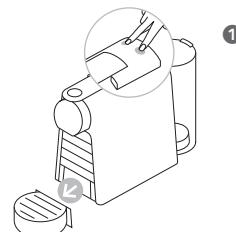

①

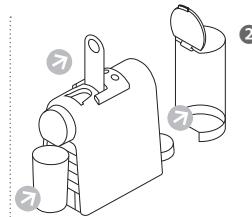


②

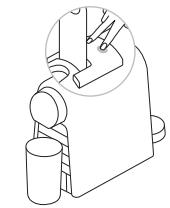

③

5 LED

④

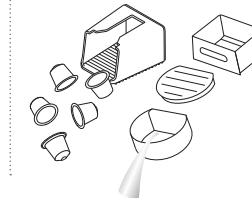

⑤

Nespresso

55°C

38

Nespresso

Nespresso

( ) Nespresso

2012/19/EU

Nespresso

[www.nespresso.com/positive](http://www.nespresso.com/positive)

(TW)

Nespresso 2  
Nespresso

Nespresso

Nespresso

www.nespresso.com

Nespresso

Nespresso

---

## Nespresso Club

Nespresso

Nespresso Club  
"Welcome to Nespresso"

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

Nespresso תהיה אחראית לכל פגם בחומר ובטיב המכונה במשך שנה אחת מהתאריך הרכישתה. בתקופת האחריות Nespresso תתקן או תחליף כל מוצר גזם על פי שיקול דעתה ולא תשלום הרכיש. האחריות על מוצרים שהוחלפו או תיקי מתוקנים, תהיה למשך הזמן הנדרה למקומית האחריות המקורית או ששנה חדשניים, הזמן האחרון מביניהם.

אחריות מוגבלת זו, אינה מסה פנס מוניצ' עקב תאונה, חנוכה, שימוש שגוי, או הקפדה על הראות ההפעלה, בלאי ושב, שימוש מסחרי, שימוש במתח או בזרם החוזג מהמקוב על המוצר, שימוש תוארי המוצר לאיל אשו, שירות, מכת ברך, טיפול או סיבות חוץיות אחרות.

פרט להיקף שפטהו החוק, הנאים לאחריות מוגבלת זו, אינם שלולים, אינם מגבלים או משנהים את הזכויות החוקיות והתקופות בעת מכרית מוצר זה והם נספחים לזכויות אלו. אם הנך סבר שהמוצר פגם, צור קשר בהקדם עם מועדון Nespresso על מנת לעדכן את דרכי ההתקשרות לאיסוף ולהחזרת המכשיה.

## צור קשר עם מועדון נספרסו

**למיידנו סופף**, במידה ונתקלת בעייה או כדי לקבל הכוונה והמלצת, תוכל ליצור קשר עם מועדון נספרסו, בכל עת. תוכל למצוא את פרטי יצירת קשר עם מועדון נספרסו בכתובת [www.nespresso.com](http://www.nespresso.com), בכל או בחוברת "ברוך הבא" שבאריזת המכונה.

## תפועל תקנות

11

### הנורוות לא דלקות.

- בדוק את אספект המתח, חתך, סיג המתח והנתיב במקורה של בעיה, פנה למועדון סססpresso Nespresso.

### אין זרימת קפה, אין זרימת מים.

- שימוש ראשוני: מלא את מכל המים ב-250 מילilitרים (מליטרים 55) והזרם מפסיק בטעות למשך 7 דקות.
- מלא המים שנית, מלא מים במכל המים.
- החר אבנית במקורה אזור (או סעיף הסרת אבנית).

### הקפה זורם באיטיות רבה.

- מהירות הזרמה תלולה בסוג הקפה.
- הסיר אבנית במקורה הצור (ראו סעיף הסרת אבנית).

### הקפה אינו חם די.

- יש לחנק את הספל מראש.
- הסר אבנית במקורה החור (או סעיף הסרת אבנית).

### דיליפה באזורי הקפסולות (מים במיכל הקפסולות).

- מנקם את הקפסולות כראוי. במקורה של דיליפה חזרת, יש לפנות למועדון סססpresso Nespresso.

### הברוב לא סדי.

- יש לפנות למועדון סססpresso Nespresso.

### אין יציאה של קפה אלא רק של מים (אף על פי שהוכנעה קפסולה).

- במקורה של בעיה, יש לפנות למועדון סססpresso Nespresso.

## פינוי והגנה על הסביבה

מכשיר זה תואם את התקן האירופאי CE Directive 2002/96/EC. חומריו האריזה של המכשיר מכילים חומרים הנזננים למיחוזו, ומצור הר מכיל חומרים בעלי ערך היסלים לשימוש לוייזור בסוף ההפדרה של החומרים הנזננים מאפשרת מיחזור של חומר גלם יקי' ערך אס האבעת את המטען לאטור פסולת ייעדי. ניתן לקבל מידע על סילוק ממועדון סססpresso Nespresso למידע על פעילות המיחזור של נספרסו והגנה על הסביבה, פונה לאטור האינטרנט [www.nespresso.com](http://www.nespresso.com)

⑫ רוקן את בסיס הnickoz.



❬ על מנת לצאת ממצב ניקוי אבנית, לחץ ב זמניית על כפתורי האספראטו והלונגו למשך 5 שניות.

❭ כאשר המכונה מוכנה חזר על שלבים 4 ו 7 על מנת לשטוף את המכונה. חזר על שלב זה.


|        | ניקוי אבנית לאלה:         |                               |          | קשהות מים: |         |  |
|--------|---------------------------|-------------------------------|----------|------------|---------|--|
|        | fh<br>300                 | CaCO <sub>3</sub><br>360 mg/l | dH<br>20 | fh<br>36   | H גבהה  |  |
| czפטני | dh<br>600                 | 180 mg/l                      | 10       | 18         | M בננית |  |
| גדמי   | CaCO <sub>3</sub><br>1200 | 0mg/l                         | 0        | 0          | L מוגה  |  |

## ריקון המערכת לפני תקופת אחכה של חומר שימוש, להגנה מפני קור או לפני תיקון

❸ לחץ על כפתורי האספראטו והלונגו למשך 5 שניות. שתי המנות יתבהב לסתגן.




❹ הסור את מיכל המים. פותח את ידיית הרמהה. הנה מיכל קיבולת מתחת לפתח יצאת הקפה.

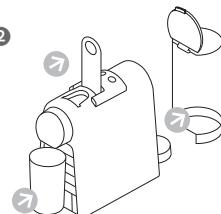

❺ לכיסוה למצב ריקון, לחץ ב זמניית על כפתור האספראטו והלונגו ללבוי המכונה.



❻ סגור את ידיית הרמהה. לחוץ ושתוף את מיכל הקפסולות המשמשות, און הnickoz ובסיס הnickoz.

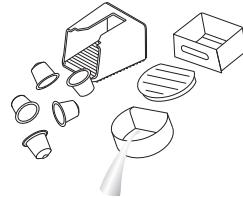

❼ תחילר הריקון החל המכונה תכבה באופן אוטומטי עם סיום הרתיחה.



משך זמן משוער 15 דקות.


- 3** מלא שקיית אחת של מיל ניקוי האבנית של נספרסו לתוך מיכל מים. הוסף מים למיל עד ליקן של 0.6 ליטר.




- 2** הרקן את אגן הנקוי ואת מיכל הקפסולות המשמשות.




- 1** פותח וסגור את הדית' לפיליטה אוטומטית של הקפסולה המשמשת לתוך מיכל הקפסולות המשמשות.

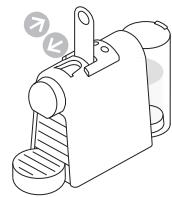

- 6** שתי הנורות ייהבבו.

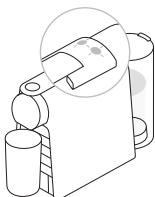

- 5** לכיסה למאכ' ניקוי אבנית, בזמן שהמכה במצב דולקן, לחץ בו זמני על כפתור האספרסו והלגו למשך 5 שניות.

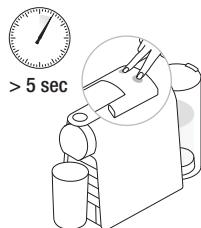


- 4** הניח מיכל של 1 ליטר לפחות ממחחת לפתח יציאת הקפה



- 9** הרקן ושתוף את מיכל המים מלא במי שתייה.



- 8** מלא שוב את מיכל המים בоздל המשמש שבמיכל הקבלת וחזר על שלבים 1 ו-4.

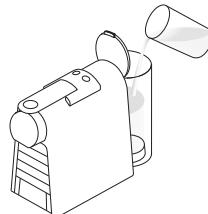


- 7** לחץ על כפתור הולגו פעמי אחת והמתן עד שימוש המים יתறקו.




**! סכנה למכת חשמל קטלנית ולשריפה.** אין לטבול את המכשיר או חלקים ממנו במים. זכחו לנתק את המכונה מהחשמל לפני הנקוי. אין להשתמש בחומר ניקוי חזק או בחומרים ממיסים. אין להשתמש בחפצים חדים, מברשות או סופג מחוספס. אין לשימוש במדיח כלים.

**② יבש עם מגבת נקייה ויבשה או עם נייר סופג וחבר את כל החלקים. נחה את פתח יציאת הקפה ואת חלקו המכונה עם מטילתיה להחה. לעיתים קרובות.**



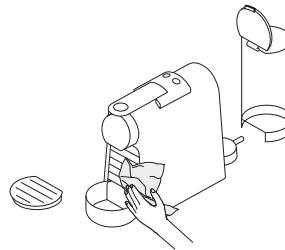


**① רוקן את אגן הנקז, את בסיס הנקז ואת מכל הקפסולות המשמשות בכל יום. בנוסף, הסר את מיכל המים ואת המכונה שלוי ונחה אומת עם חומר ניקוי כלים ושתוף עם מים פושרים / חמימים.**

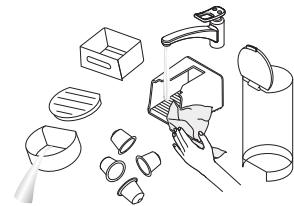

## ניקוי אבנית

**! נזול להסרת האבנית עשוי לגרום נזק.** יש למנוע מגע בעיניים או בעורו לשםירה על תקינות אופטימלית של מכונתך יש לבצע ניקוי אבנית על פי הטבלה המצורפת. לשאלות נוספות בנושא ניקוי אבנית, נא ליצור קשר עם מועדון נספרסו.

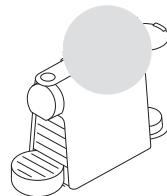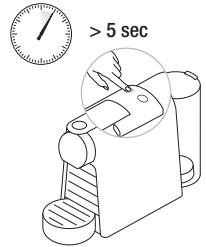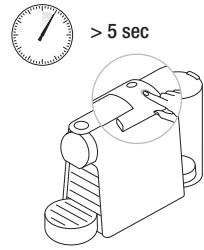

## ⚠ לעולם אין להרים את הידית במהלך הפעלת המכונה, יש לנתק באמצעות זיהירות כדי למנוע נזק אפשרי.



**בזמן התמחמות המכונה**, ניתן לבחור את ספל הקפה המועדף עלי' וללחוץ על הכפתור הקפה יהל לזרום באופן אוטומטי כשהמכונה תהיה מוכנה.

- 5 קח את ספל הקפה.** פתח וסגור את הידית לפיליטה אוטומטית של הקפסולה המשמשת לזרק מיל האגירה הפנימית.




- 4 להתחיל לחץ על כפתור האספרסו (40 מ"ל) או הולגנו (110 מ"ל).** זרימת הקפה תחל אוטומטית. לעצירת זרם הקפה לחץ שוב.



## תכנות גובה המים

- 2 הנח ספל תחת פתוח יציאת הקפה.** לחץ וחזק את פטום האספרסו או הולגנו. שחרר את לחיצת הכפתור כאשר הגעתו למOUT המים הרצiosa. הפעטור יירבע 3 פעמים לאישור הכמות החדשות. כמות המים נקבעה.

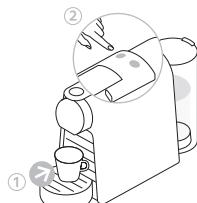

- 1 הדלק את המכונה והמתן עד שתיהיה מוכנה לשימוש.** (נרות יופיע באורך קבוע). מלא את מכל המים במ' שתייה וכמם קפסולות נספרסו.



שימוש ראשון לאחר תקופה ארוכה שבמהלכה המכשיר לא הופעל

## ⚠ קרא ומלא אחר הוראות הבטיחות במלואן כדי למנוע פגעה ונזק אפשריים.




הגדרות יצהן: ספל אספרסו: 40 מ"ל, ספל לונגו 110 מ"ל, כיבוי אוטומטי: 9 דקות.

### ② להפעלת המכונה, לחץ על כפתור האספרסו או הלוונגו.

- המכונה מתחממת במשך 25 שניות (נורות מהברשות)
- הנורת יושע באור קבוע: המכונה מוגנה לשימוש



### ① שטוף את מכל המים טרם מלאי במילוי שתייה. הנוזל מכיל קבוקולת (לפחות 1 ליטר) תחת פתח יציאת הקפה. חבר את המכונה לשקע החשמל.

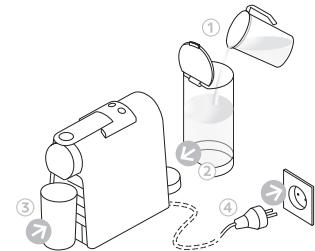


### ④ לכיבוי המכונה טרם מופעל הכיבוי האוטומטי, לחץ בו זמני על כפתור האספרסו והלוונגו.


③ לחץ על כפתור הלוונגו לשטיפת המכונה. חזר על הפעולה 3 פעמים.

## הכנות קפוה

### ③ סגור את הדית והנוזל ספל מותחן לפתח יציאת הקפה.

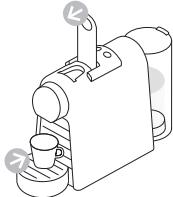


### ② הרם את ידיית הרמה והכמו. Nespresso Capsules Only.

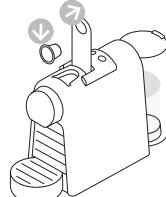

### ① להפעלת המכונה, לחץ על כפתור האספרסו או הלוונגו. - המכונה מתחממת במשך 25 שניות (נורות מהברשות) - הנורת יושע באור קבוע: המכונה מוגנה לשימוש

## סקירת המכונה

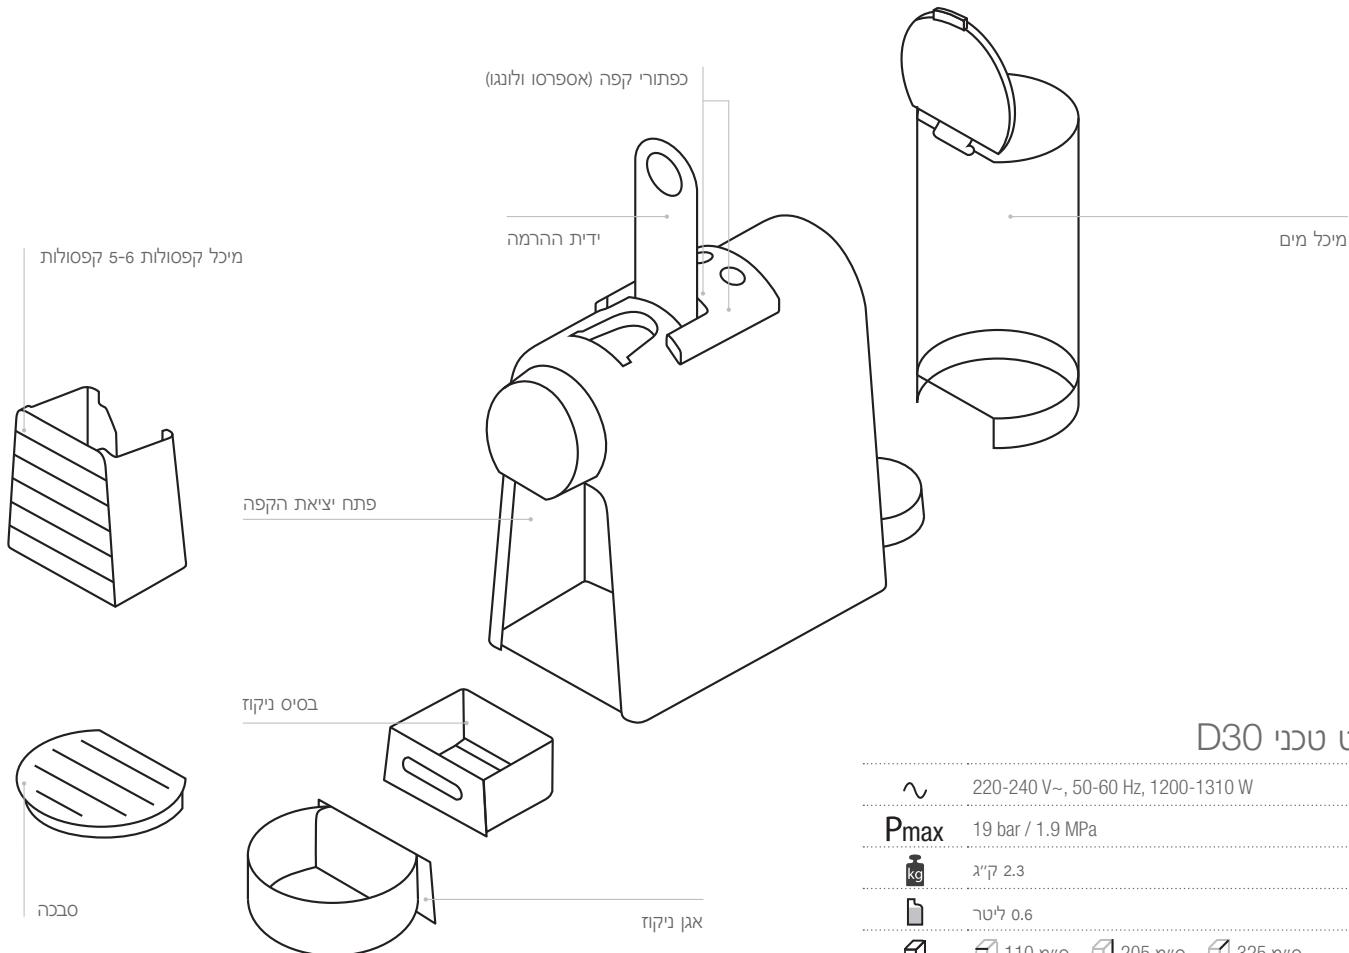

### מפורט טכני D30

~ 220-240 V~, 50-60 Hz, 1200-1310 W

**P<sub>max</sub>** 19 bar / 1.9 MPa

**kg** 2.3

**liter** 0.6

ס"מ 325 ס"מ 205 ס"מ 110

את הזכות לשנות הוראות  
ללא התראה מוקדמת.

### **ניקוי אבניית**

- שימוש בערכת ניקוי אבניית של נספרסו, יסיע עתוחזקה נכונה של המכונה ובכך להאריך את חיים המכונה וליהנות מקפה מושלים כמו ביום הראשון.
- יש לפעול לפני הנחיות ניקוי האבניית שבהוראות הפעלה אלו ובתדירות המומלצת.

### **שמור על הוראות הפעלה אלו**

העברית אותן לכל מי שמשתמש במכשיר.  
הוראות אלו זמינים כקובץ PDF באתר נספרסו

[www.nespresso.com](http://www.nespresso.com)

- יש להחליף את המים במיכל המים כאשר לא בוצע שימוש במכונה לפחות זמן ממושך, למשל בסופי שבוע.
- אין להשתמש במכשיר אלא אגן הניקוז והסבכה כדי להמנע משפיכת נוזלים על המשטחים מסביב.
- אין להשתמש בחומר ניקוי חזק או בחומרים ממיסים. השתמש במליטה לחחה וחומר ניקוי עדין כדי לנוקות את משטח המכונה.
- כדי לנוקות את המכונה השתמש רק באביזרי ניקוי.
- בעת הוצאת המכונה מאיריזטה, הסר את הנילון והשליך לפח.
- מכשיר זה תוכנן לשימוש עם קופסולות קפה של נספרסו הזמיןות דרך מועדון נספרסו.
- כל מכוניות נספרסו עוברות בבדיקות מחמירות וחילקו אף נלקח לבדיקות פיזיות. על כן יתכן ובחילוק מהמכונות יראו סימני של שימוש, הנובעים מאותן בדיקות.
- נספרסו שומרת לעצמה ממושך.

- יש לסגור את ידית הרימה תמיד ואין להריםה בזמן פועלות המכונה. הדבר עלול לגרום לכוויות.
- אין להניח את האכבות מתחת לפתח יציאת הקפה או המים החמים, סכתת כויה.
- אין להכניס אכבות לתוך פתח הכנסת הקפסולה או לפתח פליטת הקפסולה. סכתת פצעיה!
- מים עלולים לדוחם סביבה הקפסולה כאשר ארינה מתנקבת ע"י הלביבים ולגרום נזק למכשיר.
- אין להשתמש בקפסולה משומשת, פגומה או מעוותת.
- במידה וקפסולה נתעה בבית הקפסולות, יש לכבות את המכונה ולהוציא את תקע החשמל בטרם יבוצע כל שימוש נסוף במכונה. צור קשר עם מועדון נספרסו או עם נציגי המורשים.
- מלא את מיכל המים במים טריים וראויים לשתייה בלבד.
- רוקן את מיכל המים במידה ולא יעשה שימוש במכיר לפרק זמן התחסמלות.

- לעולם אין להכניס את המכשיר לתוך מדייח כלים. היצروف של חשמל ומים הינו מסוכן ועלול לגרום להתחשמלוות קטלנית.
- אין לפתח את גוף המכשיר, מתח חשמלי מסוכן!
- אין להכניס חפצים לתוך פתחי המכשיר. פעללה זו עלולה לגרום לדיליקה או התחסמלות!
- השימוש באביזרים חיצוניים אינם מומלץ ע"י הייצור לאחר שהדבר עלול לגרום לשריפה, שוק חשמלי או פגיעה בבני אדם.

- **יש להמנع מפגיעת נזק אפשריים כאשר מתפעלים את המכשיר.**
- אין להשאיר את המכשיר ללא השגחה במהלך פעולה.
- אין להשתמש במכשיר במידה וניזוק או אינו פועל כראוי. הוצא את תקע החשמל מיידית. צור קשר עם מועדון נספרסו או עם נציגי המורשים כדי לבדוק את התקלה או לתקנה.
- מכשיר פגום עלול לגרום לדיליקה, כוויות או



- כדי למנוע נזק וסכנה, אין למקם את המכשיר על גבי משטחים חמימים כגון רדייטורים, כיריים, מבוערים, גז, להבה פתוחה וכדומה, או בקרבתם.
- יש להניח את המכשיר על משטח יציב ומואzon. המשטח חייב להיות חסין אש ונזלים, כגון: מים, קפה, מסיר אבנית וכדומה.
- נתק את המכשיר בשימוש לפרקי זמן ממושך. נתק באירועים הוצאות תקע החשמל ולא על ידי משיכת כבל החשמל עצמו, פעולה זו עלולה לגרום נזק לכבל החשמל.
- טרם ניקוי המכונה יש לנתקה מהחשמל ולנתק עיי' משייכה בכבל החשמל.
- על מנת לנתק את המכשיר יש לעצור באופן מוחלט את תהליך ההכנה ורק אז להסיר את התקע משקע החשמל. לעומת זאת ניתן לנתק את החשמל בידים רטבות.
- לעולם אין לגעת בכבל החשמל או חקל ממנו.

- יש לחבר את המכשיר לשקע חשמל מתאים עם הארקה בלבד. וזאת כי מתח החשמל המצוין בטלת הדירוג תואם למתח החשמל שברשותך. שימוש בחיבורים לא מתאימים מבטל את האחוריות.

### **את המכשיר יש לחבר ארוך ורק לאחר התקנה.**

- אין למשור את כבל החשמל מעל קצוות כדים, לייצור לחץ או לאפשר לו להשתלשל מטה.
- הרחק את הcabל מחום או לחות.
- אם יש פגם בכבל החשמלי או בתקע, יש להחליף אותו באמצעות היצרן, סוכן השירות שלו או אדם מוסמך אחר, כדי להימנע מסכנה.
- אם יש פגם בכבל החשמלי או בתקע, אל תפעיל את המכשיר נציג המורשה של *Nespresso*. או *Nespresso*. במידה ונדרש כבל מריר, השתמש בכבל עם הארקה בלבד בעל חוטי הולכה בעובי 1.5 ממי' לפחות, או בתקע תואם.

כגון: אזורנו נוחות אישים, משרדים קטנים בלבד וסבירות עבודה דומה.

- המכשיר אינו מיועד לשימוש על ידי ילדים מתחת לגיל 8 או על ידי אנשים בעלי מגבלות או בעלי ניסיון ידיע שאיןם בעלי השגחה או הדרך מתאימה. אין לתת לילדים لنיקות או לתחזק את המכשיר ללא השגחה.
- שמר על המכשיר וכבל המכשיר מחוץ להישג ידם של ילדים מתחת לגיל 8.

- המכשיר אינו מיועד לשימוש על ידי אנשים בעלי מגבלות או בעלי ניסיון ידיע שאיןם בעלי השגחה או הדרך מתאימה ולאחר ידוע הבנתם לגבי נזקים אפשריים.
- אין לאפשר לילדים לשחק עם המכשיר.

- נספרו אינה אחראית במכשיר ונגרם נזק בעקבות שימוש לא ראוי במכשיר.

**מלאו אחר הוראות  
הבטיחות במלואן כדי  
למנוע סכנת התחשמלות  
ושריפה.**

- במקרה חרום יש לנתק באופן מיידי את הcabל מהחשמל.



**זהירות - כשהניר  
רואה סימן זה, אנא  
הבטיחות בכך למנוע  
פגעה ונזק אפשרי.**

**ז' מידע - כאשר מופיע  
סימן זה יש לקרוא את  
העצות לשימוש בטוח  
ונכון במכשיר.**

**זהירות - הוראות  
הבטיחות הן חלק  
מהמכשיר. קרא  
אותן במלואן בטרם  
שימוש במכשיר בפעם  
הראשונה. שמור אותן  
במקומות נגישים  
למצוא במועד מאוחר  
ויתר.**

- המכשיר נדרש להכנות מראשות לפאי הוראות אלו.
- יש להשתמש במכשיר בלבד.
- מכשיר זה נדרש לשימוש ביתי ובטפרטורות שאיןן קיצוונות בלבד.
- הגן על המכשיר מאזור שמשי, חשיפה ממושכת לנזקי מים ולחות.
- המכשיר נדרש לשימוש ביתי וברחבים פרטיים

## הוראות הפעלה

### תיק

|       |   |
|-------|---|
| 3     | תיק האриזה  |
| 5-4   | הוראות בטיחות   |
| 6     | סקירה המוכנה  |
| 6     | מפרט טכני   |
| 7     | שימוש ראשוני לאחר תקופת אורך שבמהלכה הממשיר לא הופעל                      |
| 8-7   | הנתת קפה  |
| 8     | תכנות כמות המים   |
| 9     | מצב חיסכון בחשמל  |
| 9     | איפוס להגדרת יצן  |
| 10    | ליקוי המוכנה  |
| 12-10 | ליקוי אבטחת   |
| 12    | ריקון המשענכת לפני תקופת אחכה של חסור שימוש, להגנה מפני קור או לפני תקון. |
| 13    | תשליל תקלות   |
| 13    | פינוי והגנה על הסביבה   |
| 14    | אחריות מוגבלת   |
| 14    | צור קשר עם מודען נספרטו   |


Nespresso, מפונה אקוולטטיבית להפקת אספרסו מושלם פעם אחר פעם. כל מכונת Nespresso בעלת מערכת מיידי ייוזנית הפעלה על לחץ מיידי גובה 19 בר כל פרט במערכת תוכנן בהירות בבה ובויק נוח על מנת להבטיח כי כל האחננות, בכל תעבורה החקפה, יתבצעו במלוא עצמתם ויעניקו גוף, מפרק סמיך וקרמה קטיפתית.

**זהירות:** כחסימן זה מופיע, אנא קרא ומלא אחר ההוראות הבטיחות במלואן כדי למנוע פגעה ונזק אפשריים.

**מידע:** כחסימן זה המופיע יש לקרוא את העצת לשימוש בטוח וטוב יותר של מכונת הקפה שלך.



### תיק האריזה




מכונת קפה



קפסולות נספרטו לטעימה




חוברת "ברוך הבא לנספרטו"



הוראות הפעלה



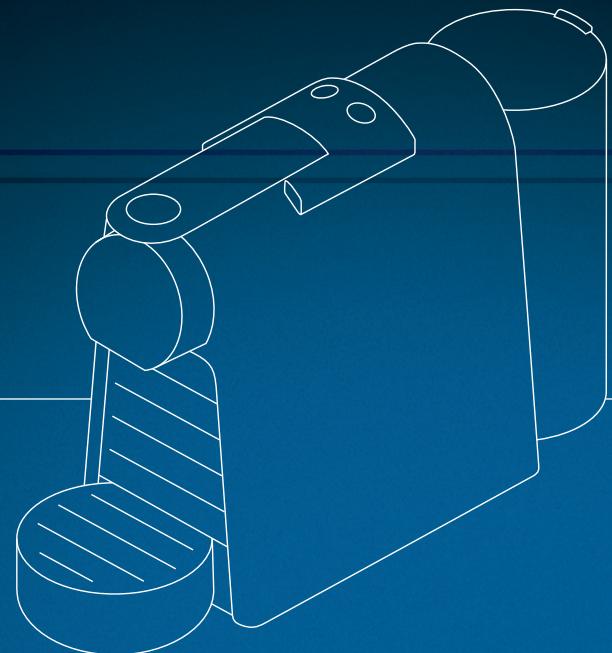

ESSENZA  
MINI  
MY MACHINE

NESPRESSO®