

NESPRESSO
EXPERT&MILK
MY MACHINE

NESPRESSO®

 **Instruction manual**


 CN

3

 HK

 KR

33

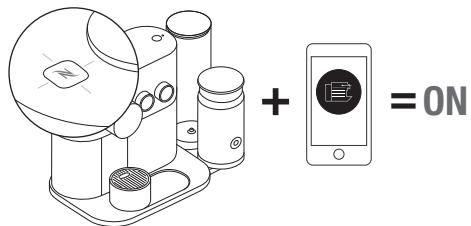

C85 Specifications/
C85 规格

Content / 内容

EN Safety Precautions



Avoid risk of fatal electric shock and fire.

- In case of an emergency: immediately remove the plug from the power socket.
- Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect connection voids the warranty.

The appliance must only be connected after installation.

- Do not pull the cord over sharp edges, clamp it or allow it to hang down.
- Keep the cord away from heat and damp.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid all risks.

- If the cord is damaged, do not operate the appliance; return the appliance to the *Nespresso Club* or to a *Nespresso* authorised representative.
- If an extension cord is required, use only an earthed cord with a conductor cross-section of at least 1.5 mm² or matching input power.
- To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
- Always place it on a horizontal, stable and even surface. The surface must be resistant to heat and fluids, like water, coffee, descaler or similar liquids.
- Disconnect the appliance from the mains when not in use for a long period. Disconnect by

- pulling out the plug and not by pulling the cord itself or the cord may become damaged.
- Before cleaning and servicing, remove the plug from the mains socket and let the appliance cool down.
- Never touch the cord with wet hands.
- Never immerse the appliance or part of it in water or other liquid.
- Never put the appliance or part of it in a dishwasher.
- Electricity and water together is dangerous and can lead to fatal electrical shocks.
- Do not open the appliance. Hazardous voltage inside!
- Do not put anything into any openings. Doing so may cause fire or electrical shock!
- The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock or injury to

- persons.
- Use cold milk for better quality foam.
- Use UHT Milk (or minimum fresh pasteurized).

Avoid possible harm when operating the appliance.

- Never leave the appliance unattended in case of manually operated brewing mode. In case of pre-programmed or remote brewing mode, additional safety precautions must be undertaken to avoid any possible harm, such as: respect the intended use, make sure the cup of adequate size is placed on the cup support, slider is completely closed, ensure there is water in the water tank and keep the appliance and its cord out of reach of unassisted children or pets.
- Do not use the appliance if it

EN Safety Precautions

is damaged or not operating perfectly. Immediately remove the plug from the power socket. Contact the *Nespresso Club* or *Nespresso* authorised representative for examination, repair or adjustment.

- A damaged appliance can cause electrical shocks, burns and fire.
- Always completely close the slider and never open it during operation. Scalding may occur.
- Do not put fingers under coffee outlet, risk of scalding.
- Do not put fingers into capsule compartment or the capsule shaft. Danger of injury!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.
- Never use a damaged or deformed capsule. If a

capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation. Call the *Nespresso Club* or *Nespresso* authorised representative.

- Fill the water tank only with fresh potable water.
- Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
- Replace water in water tank when the appliance is not operated for a weekend or a similar period of time.
- Do not use the appliance without the drip tray and drip grid to avoid spilling any liquid on surrounding surfaces.
- Do not touch hot surfaces. Use handles, protected surfaces or knobs.
- To avoid scalding, keep always the milk frother lid closed during preparation.
- Do not use any strong

cleaning agent or solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.

- To clean machine, use only clean cleaning tools.
- When unpacking the machine, remove the plastic film and dispose.
- This appliance is designed for *Nespresso* coffee capsules available exclusively through the *Nespresso Club* or your *Nespresso* authorised representative.
- All *Nespresso* appliances pass stringent controls. Reliability tests under practical conditions are performed randomly on selected units. This can show traces of any previous use.
- *Nespresso* reserves the right to change instructions without prior notice.
- This machine contains magnets.

Descaling


- *Nespresso* descaling agent, when used correctly, helps ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as the first day.
- *Nespresso* descaling agent has been specifically developed for *Nespresso* machines; the use of any other descaling agent may lead to machine component damage or an insufficient descaling process.
- Your *Nespresso* machine calculates when a descale is necessary based on the amount of water used and your water hardness level. This is set at the first use with the help of the water hardness test stick. Make sure to test the water hardness again if you use your machine in another state/region.

安全须知

- Make sure you descale your machine as soon as the machine requests it; a late descaling procedure may not be completely efficient.

Cleaning the Aeroccino

- Clean after each preparation. Use detergent and rinse with warm/hot water. For Aeroccinos, remove seal from lid and remove whisk.
- Unplug appliance when not in use for a long period and before cleaning. Allow to cool down before putting on or taking off parts, and before cleaning. Remove the appliance from the base before cleaning.
- Please make sure the bottom of the Aeroccino and area underneath the base is dry, especially the connector area, prior to use.

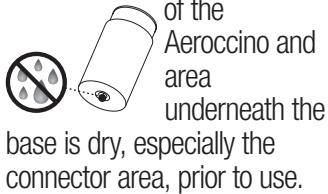

Electricity and water together can cause a fatal electric shock.



- Never immerse the base nor the Aeroccino in water or other liquid. Do not clean in dishwasher.

Electricity and water together can cause a fatal electric shock.



- Dry all Aeroccino with a fresh and clean towel, cloth or paper and reassemble all parts.



- If the bottom part of the Aeroccino is wet, dry it before putting it back in contact with the plug.



SAVE THESE INSTRUCTIONS

Pass them on to any subsequent user.


This instruction manual is also available as a PDF at nespresso.com



- 8

8
8

④ 安全须知



Nespresso

Nespresso

Nespresso

/


Nespresso
Nespresso

(CN) 安全须知



www.nespresso.com




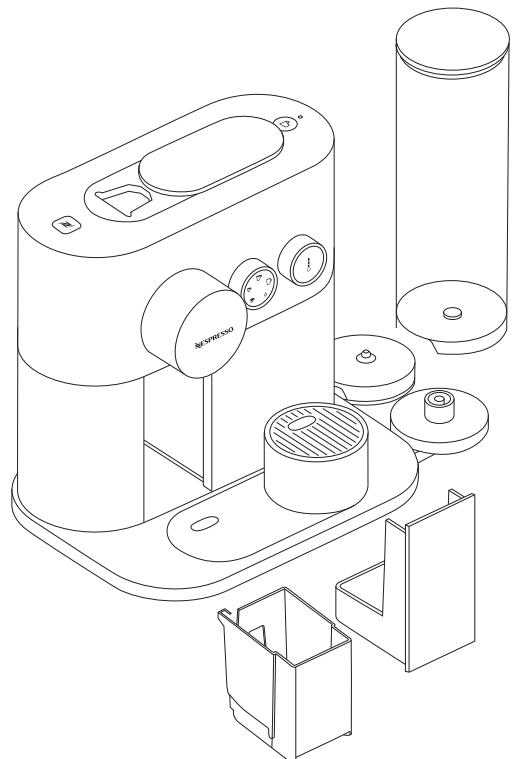


(EN) First Use (or after a long period of non-use) / 首次使用 (或长期闲置后)
(CN)

⚠ Read the safety precautions first to avoid risks of fatal electrical shock and fire.

- ① Remove** the water tank and capsule container to clean them. (see cleaning section).

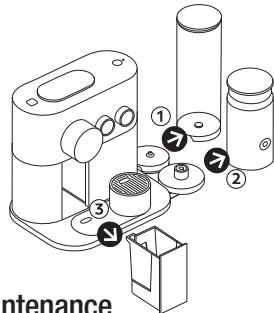


- ② Adjust** the cable length and store the excess under the machine. Ensure machine is in the upright position.

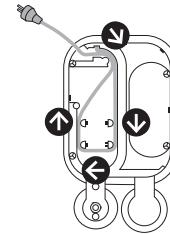


⚠ Removable parts are not dishwasher safe.

⚠ Water tank and maintenance module is not dishwasher safe.

- ③ Fill** the water tank with fresh potable water.

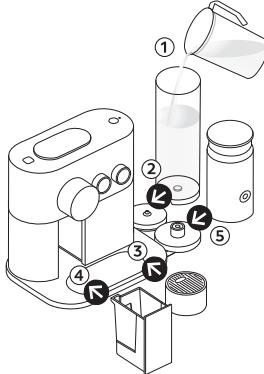

- ⑤ Plug** the machine into the mains.

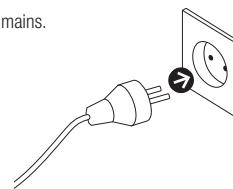

- ④ Place** the water tank on its base and place the drip tray and the capsule container in position.

Turning the machine ON/OFF/机器开关


- ① Turn the machine ON** by pressing the brewing button, moving the dials or by opening the slider. Lights will blink. Heating up takes approximately 25-30 seconds. Steady lights: machine is ready.

25-30

- ② Turn the machine OFF** by turning the temperature dial anti clockwise until it reaches 0 temperature. The light will blink for 5 seconds before shutting off.

5

"0"

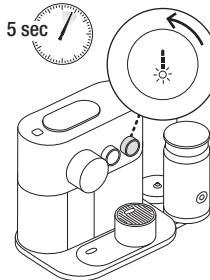


- ③ To connect your machine**, please follow the instructions in sections "Get the App" and "Pairing" on page 3.
Multiple devices can be connected to your Nespresso Expert&milk machine only if using a unique Club Members number. To pair these additional devices, please follow the instructions in the sections "Get the App" and "Pairing".



App


- ④ Before making any coffee**, make sure to rinse your machine by:
1. Placing a container under coffee outlet.
 2. Close the slider, select the Lungo icon and press the brewing button.
 3. Repeat three times.
 4. Select hot water icon and press the brewing button.
 5. Repeat two times.
 6. Empty the drip tray.

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.

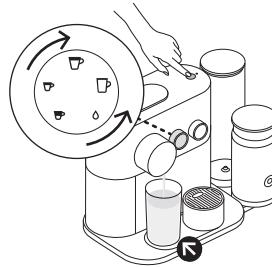

(EN)

(CN)

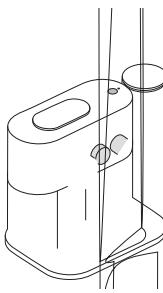


10 sec

(EN) Aeroccino instructions of use /
(CN) Aeroccino - 使用说明

⚠ CAUTION: Risk of electrical shock and fire! Make sure the under side of the milk frother is dry.

:

i **TIP:** For optimal milk froth, use whole or semi skimmed milk at refrigerated temperature (about 4-6 °C). To guarantee hygiene conditions, use heat treated milk (pasteurized), refrigerated & freshly opened only. Milk which has been frozen will not froth.
要制作最佳奶沫,请使用冷藏的全脱脂和半脱脂鲜奶(大约摄氏4-6°C)。为确保干净卫生,请使用已高温杀菌的牛奶(巴士杀菌)、冷藏且刚开封的牛奶。
冷冻过的牛奶不能打奶泡。

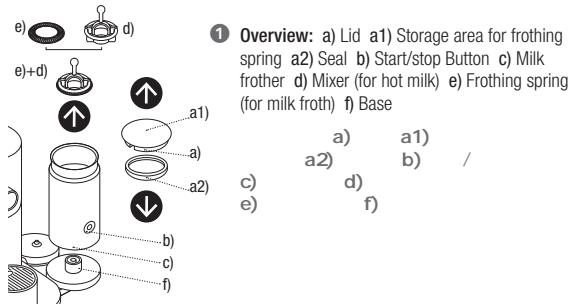

- ① **Overview:** a) Lid a1) Storage area for frothing spring a2) Seal b) Start/stop Button c) Milk frother d) Mixer (for hot milk) e) Frothing spring (for milk froth) f) Base




- ② **Clean** before the first use. Attach the relevant whisk.


⚠ CAUTION: To ensure hygienic conditions and proper maintenance of the equipment, it is highly recommended to not use special enriched milks, powdered reconstituted milks nor flavoured milks. **⚠ CAUTION:** Syrup, sugar, chocolate powder or any other additives should not be added directly in the jug. This may damage the coating during the preparation.

⚠ :

⚠ :

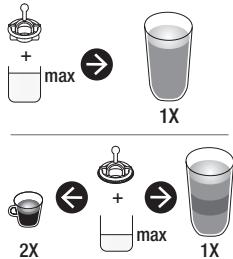

- ③ Fill milk frother up to one of the two "Max" level indicators.

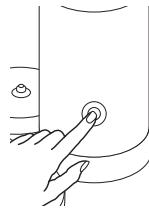

- ④ Place the lid on the Aeroccino. For a hot preparation, briefly press button to start. Button lights up Red. Take approx. 70-80 sec. For cold milk froth, keep button pressed for approx. 2 seconds. Button lights up Blue. Takes approx. 60 sec.


70-80
2
60

⚠ CAUTION: Use only a non-metal spoon to collect the foam in the jug. **⚠ CAUTION:** Clean before the first use and after each use according to the cleaning instructions. **⚠ CAUTION:** Ensure the jug is cold before removing it from the base. Or, if removing with care, rinse with cold water immediately to cool down the jug and avoid burning risks.


⚠ :
⚠ :

⚠ :

EN Cleaning the Aeroccino / CN 清洁 Aeroccino

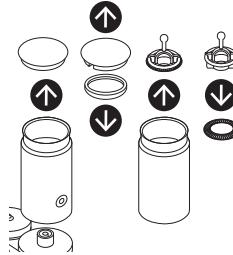


- ① Remove the jug from the base, remove seal from lid, remove the whisk, remove the spring from the whisk.

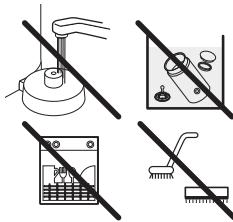


- ③ Do not put the jug in the dishwasher and do not immerse into water for cleaning purposes, do not water the bottom part of the Aeroccino which contains the electrical plug, but clean the interior of the Aeroccino with detergent and rinse with warm/hot water. Use non-abrasive materials.



⚠ CAUTION: In case base needs to be cleaned unplug it first and use only a damp cloth. Make sure the connector is dry before operating. Do not immerse the base in water neither put in the dishwasher. **⚠ CAUTION:** If the bottom part of the jug is wet, dry it before putting it back in contact with the plug. **⚠ CAUTION:** Only use non-abrasive cleaning materials. Do not use abrasives, sharp objects, brushes: risk of scratches and harm to the jug coating.

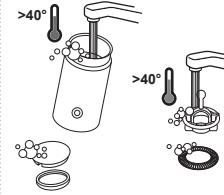

- ② Wash inner jug, seal, lid, whisk and spring with detergent and rinse with warm/hot water.

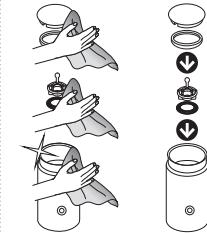

- ④ Dry all Aeroccino parts with a fresh and clean towel, cloth or paper and reassemble all parts.

Entering the settings mode / 进入设置模式

To enter a settings mode:

- Ensure machine is OFF and slider is closed.
- Press the brewing button for 6 seconds.
- Select the relevant dial.
- Press the brewing button.

- 机器处于关机状态,滑盖关闭。
- 按住制备按键6秒钟。
- 选择相应旋钮。
- 按下制备按键。

To exit settings mode:

- The machine goes back to stand-by mode automatically after 30 seconds.
- Open the slider.

- 30秒后机器自动退回待机模式。
- 或者打开滑盖。

Settings mode options:

	Ristretto: Descaling
	Espresso: Emptying the system
	Lungo: Reset to factory settings
	Americano: Water hardness
	Hot water: Energy savings mode
	All Lights lit up: Bluetooth®

	(Ristretto)
	(Espresso)
	(Lungo)
	(Americano)

Settings mode: Energy Saving Concept / 设置模式：节能概念

The machine will turn into OFF mode automatically after 9 minutes of non-use.

作9分钟后,机器自动关闭电源。

① To change automatic OFF mode:

- Enter settings mode and select the hot water icon [●].
- Press the brewing button for confirmation.
- Use temperature dial to choose desired time.
- Confirm by pressing the brewing button.

You can now program another auto OFF mode:

- | | |
|--|--------------|
| | → 9 minutes |
| | → 30 minutes |
| | → 2 hours |
| | → 8 hours |

The selected icon will blink twice to confirm change has been made and then the machine will turn OFF.

自动关机模式：

- 进入设置模式,选择热水按键 [●]。
- 按下制备按键以确认。
- 使用温度调节拨盘选择需要的时间。
- 按下制备按键确认。

可选自动关机模式：


- | | |
|--|------|
| | → 9 |
| | → 30 |
| | → 2 |
| | → 8 |

选中图标将闪烁两次确认变更,然后机器将关机。

(EN)
(CN)



Programming the water volume / 设定杯量

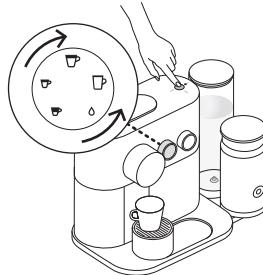

Any coffee button can be programmed:



Ristretto: from 15 to 30 ml



Espresso: from 30 to 70 ml



Lungo: from 70 to 130 ml



Americano: coffee from 15-110 ml,
Hot water from 25 to 300 ml



Hot water from 50 to 300 ml



15-30



30-70



70-130



15-110 25-300



50-300

→ To program Ristretto, Espresso and Lungo volumes:

1. Ensure the machine is ON.
2. Open the slider and insert the capsule.
3. Close the slider.
4. Select desired coffee and press and hold brewing button.
5. Release the button when desired volume is reached.
6. Brewing button will flash 3 times for confirmation.

→ To program Americano volume:

1. Select Americano recipe and press and hold brewing button until desired coffee volume is reached.
2. Press and hold again and keep pressed until desired water volume is reached.
3. Brewing button will flash once for confirmation.
4. Water and coffee volume are now stored.

→ To program water volume:

1. Select hot water icon and press and hold brewing button until desired water volume is reached.
2. Water volume is now stored.

→
1. 2. 3. 4.
6. 5.

→
1. 2. 3. 4.
6. 5.

→
1. 2. 3. 4.
6. 5.



Settings mode: Reset to Factory Settings / 设置模式：恢复出厂设置



If you reset to factory settings, this will cancel the pairing and
capsule stock management and reset the water hardness level.

设备配对，胶囊库存会被清除，水质硬度水平会被重置。



Settings mode: Reset to Factory Settings / 设置模式：恢复出厂设置

(EN)
(CN)

Factory settings are:

1. Ristretto (25 ml), Espresso (40 ml), Lungo (110 ml), Americano (25 ml coffee; 125 ml hot water).
Or select the drop icon for hot water (200 ml).
2. Automatic OFF mode after 9 minutes.
3. The water hardness set by default is hard.
4. No device paired.

To do it via your machine:

- Ensure machine is OFF and slider is closed.
- Press brewing button for 6 seconds - both dials will flash to confirm you are in settings mode.
- Select Lungo cup and press brewing button.
- The Lungo cup will blink to confirm you have entered this mode.
- To exit this mode without doing a factory reset, push the brewing button. No/Exit: ! Yes / Confirm: !!
- To factory reset, turn temperature dial up to maximum position and press brewing button
- All lights will blink to confirm.

1. 茄斯崔朵 (25 ml), 浓缩咖啡 (40 ml), 大杯咖啡 (110 ml), 美式咖啡 (25 ml 咖啡; 125 ml 热水)。热水 (200 ml)。
2. 自动关机模式: 9分钟。
3. 水质硬度设置为高硬度。
4. 无配对设备。

- 确保机器关闭，滑盖处于关闭状态。
- 按住制备按键6秒钟 - 两个拨盘闪烁提示已进入设置模式。
- 选择大杯咖啡，按制备按键。
- 大杯咖啡灯闪烁确认已选择恢复出厂设置模式。
- 如果要放弃更改，按下制备按键。否/退出：！是/确认：!!
- 调节温度拨盘到最高位置，按下制备按键恢复出厂设置。
- 所有灯闪烁确认恢复出厂设置成功。


Settings mode: Emptying the System before a period of non-use or for frost protection / 设置模式：排空

⚠ Steam may come out of outlet.

i The machine remains blocked for 10 minutes after emptying!
清空模式结束后，机器会被锁定10分钟。


① Remove the water tank.
Place a container under the coffee outlet. Remove, empty and place back the drip tray.

② Ensure machine is OFF,
and slider is closed.

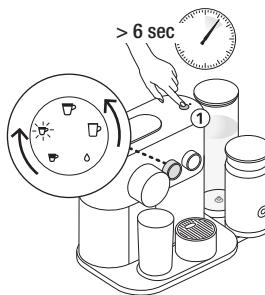

③ Enter settings mode:

- Press brewing button for 6 seconds - both dials will flash to confirm you are in settings mode.
- Select Espresso and press brewing button - Espresso icon flashes for confirmation.
- To exit this mode without doing a factory reset, push the brewing button. No/Exit: ! Yes / Confirm: !!
- To factory reset, turn temperature dial up to maximum position and press brewing button.
- The emptying process will begin.
- When the procedure is finished, clean the drip tray and the cup support.
- Machine turns to OFF mode automatically when empty.



EN Cleaning / 清洗



CN

i To ensure hygienic conditions, it is highly recommended to empty and clean the used capsule container every day.
为确保清洁，强烈建议每天清空并清洗胶囊仓。


① Remove lid and water tank and clean them all with odorless detergent and rinse with warm / hot water.

② Dry all water tank container parts with a fresh and clean towel, cloth or paper and reassemble all parts.

③ Clean the surface of the machine, including under the metallic grid, with a damp cloth and odorless detergent.

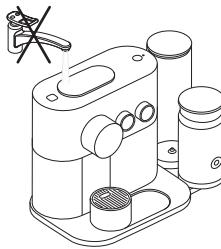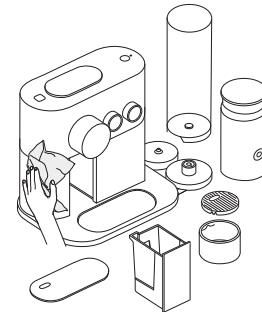

⚠ Never immerse the appliance or part of it in water or any other liquid.

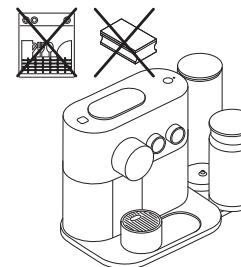

⚠ Do not use any strong or abrasive solvent, sponge or cream cleaner. Do not put in the dishwasher.



Water Hardness / 水质硬度

(EN)
(CN)

The water hardness level can be tested with the water hardness stick available on the first page of the user manual. To enter the water hardness mode:

- Ensure machine is OFF and slider is closed.
- Press brew button 6 seconds, both dials will flash for confirmation.
- Select Americano icon, press brew button, Americano icon will flash for confirmation.
- Use the temperature dial to select the appropriate level.
- Once done, press brew button for confirmation.
- The machine will exit setting mode and turn off.

- 确保机器关闭，滑盖处于关闭状态。
- 按住制备按键6秒钟 - 两个拨盘闪烁提示已进入设置模式。
- 选择 美式咖啡按键，按制备按键，美式咖啡灯闪烁。
- 使用温度拨盘选择相应的水质硬度水平。
- 按下制备按键确认。
- 机器自动退出设置模式并关机。

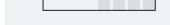Water hardness*/		Descaling after:*/					
App.		fH	dH	CaCO ₃	Cups /  (40 ml)		
		Level 0 /	0	<5	<3	< 50 mg/l	4000
		Level 1 /	1	>7	>4	> 70 mg/l	3000
		Level 2 /	2	>13	>7	> 130 mg/l	2000
		Level 3 /	3	>25	>14	> 250 mg/l	1500
		Level 4 /	4	>38	>21	> 380 mg/l	1000

* On the App, the water hardness can be adjusted any time under "Water status".

* App " "



A strong use of Americano or hot water function may lead to an earlier descaling.

(EN)
(CN)



Descaling / 除垢


⚠ Read the safety precautions on the descaling package and refer to the table for the frequency of use. The descaling solution can be harmful. Avoid contact with eyes, skin and surfaces. Never use any product other than the *Nespresso* descaling kit available at the *Nespresso* Club to avoid damage to your machine. Please refer to the table on the "water hardness" section that indicates the descaling frequency required for the optimum performance of your machine, based on water hardness. For any additional questions you may have regarding descaling, please contact the *Nespresso* Club.

i To exit the descaling mode before final validation with the temperature dial, open slider or machine goes back to stand-by mode automatically after 30 seconds.

30

i Duration approximately 20 minutes.
20

① Empty the drip tray and the used capsule container.

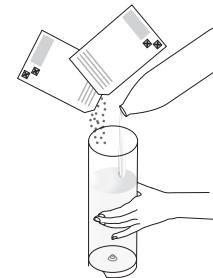

② Fill the water tank with 2 units of *Nespresso* descaling liquid and add potable water up to the max level.

2 *Nespresso*

③ Place a container (minimum volume: 1.2 L) under the coffee outlet.


1.2

- ④ To enter the descaling mode:** Ensure machine is OFF and slider is closed. Press brewing button for 6 seconds - both dials will flash for confirmation. On the recipe dial, select Ristretto icon, press brewing button to validate selection. Then, on the temperature dial, select high level "I" to confirm or lower level "O" to cancel, press brewing button to validate choice. Ristretto icon blinks to confirm you are in descaling mode.



i Ristretto icon will blink during the entire descaling process. Maintenance light will be steady ON while machine is automatically proceeding. Maintenance light will blink when a manual user action is required.


Ristretto

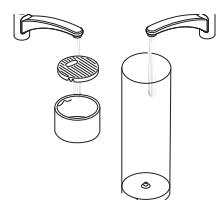

- ⑥ Rinse** the water tank, drip tray and cup support thoroughly to avoid any residue.

- ⑦ Refill the water tank** with 1.2 L fresh potable water.

1.2

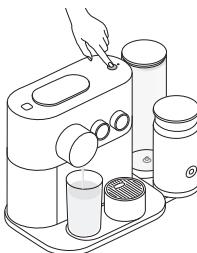

- ⑤ Press brewing button** to start the descaling cycle; descaling agent will flow through the coffee and hot water outlets. When machine stops and maintenance light blinks, remove and empty the drip tray and place back. Push brewing button again. Machine will stop when water tank is empty.

i Throughout the descaling process you can pause at any time by pressing the brewing button (e.g. to empty and place back your container). Continue by pressing the brew button again.

- ⑧ Press brewing button** to start rinsing the machine, pump will run. Machine will stop automatically when the water tank is empty. Remove and empty the drip tray and place back. The machine will automatically switch OFF when the descaling process is done. The machine is now ready for use.

i If maintenance light continues to blink after rinsing it means less than 1.2 L water was added. Repeat step 7.

1.2

7

EN Troubleshooting



Videos are available on the App and on www.nespresso.com - Go to section "services".

Pairing has not succeeded.

- Check that the *Bluetooth®* on the smartphone or tablet is activated.
- Check the compatibility of your smartphone or tablet with the machine (see page 3).

- Ensure the smartphone or tablet is placed next to the machine (max distance 20 cm) during the pairing.
- Make sure to not turn ON any microwave close to the machine during pairing.

If you want to unpair your machine, via the App.

- Go on the App "Name", click on "Machine status", then click on "Unpair this machine".
- Click on "unpair this device" to confirm the unpairing.

- Note: In case of an unpairing, all the setups and specifications will be lost and the machine will be reset to factory settings.

No lights on the coffee machine.

- Machine turned OFF automatically. See paragraph on "Energy Saving Concept".

- Check the mains: plug, voltage, fuse.

No coffee, no water, unusual coffee flow.

- Check if the water tank is correctly positioned, if empty, fill with potable water.

- Descale it if necessary.

Coffee is not hot enough.

- Preheat cup.

- Descale the machine if necessary.

The slider does not close completely or the machine doesn't start brewing.

- Empty the capsule container.

- Check that no capsule is blocked inside the machine.
(Note: do not put the finger inside the machine)

Leakage (water under the machine).

- Unplug the machine.
- Empty drip tray if full and remove all the water under the machine. Then plug again the machine.

- If problem persists, call the *Nespresso Club*.

Maintenance light is ON.

- Brew button light ON and maintenance LED slow blinking means descaling is required.

- Brew button is OFF and maintenance LED is ON means water tank is empty and/or capsule tray full.
- If problem persists, call the *Nespresso Club*.

Nespresso light is ON.

- It means your capsule stock is empty. You can order capsules via the App or *Nespresso* website.

Machine overheating or in an environment below 0°.

- Maintenance light will go on.
- Brewing button will be off.

- Temperature button will blink fast.
Please wait for all buttons to switch off, this will take a few minutes.
During this time the machine cannot be used.

Water or coffee flow does not stop even when pushing the brewing button.

- Gently move the slider towards the back of the machine to stop the flow.

- Hot water flow always stops a short time after pressing the brewing button to stop. this is a normal behavior not a troubleshooting.

No coffee flow, water goes directly into the drip tray (despite inserted capsule).

- Pull the slider to ensure it is closed.

- If problem persists, call the *Nespresso Club*.

Machine turns to OFF mode.

- To save energy the machine will turn to OFF mode after 9 minutes of non-use.
- See paragraph on "Energy Saving Concept".

- Press one of the coffee buttons to turn to "ON-mode" or open the slider.

Capsule container and drip tray are stuck.


- Unplug the main.
- Lift the machine.

- Use the hole underneath the machine to manually push out the container.
- Clean the capsule container, the drip tray and the insert.




故障处理

(CN)

 在 App 应用和网站(www.nespresso.com)上,可以观看视频。



3

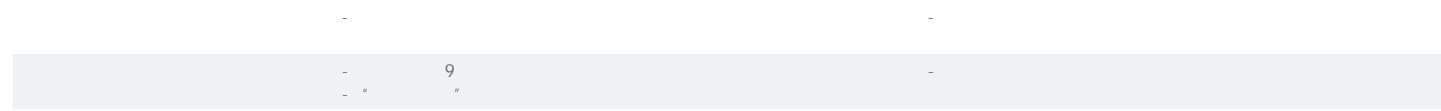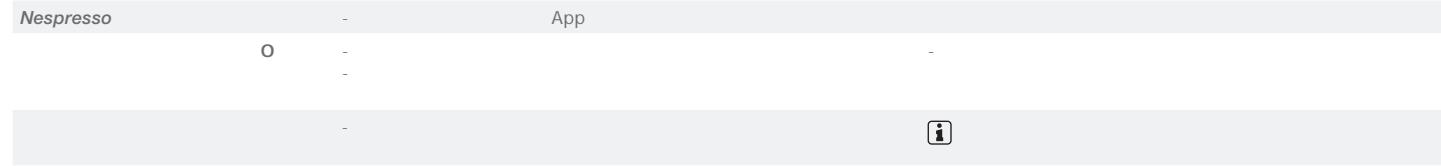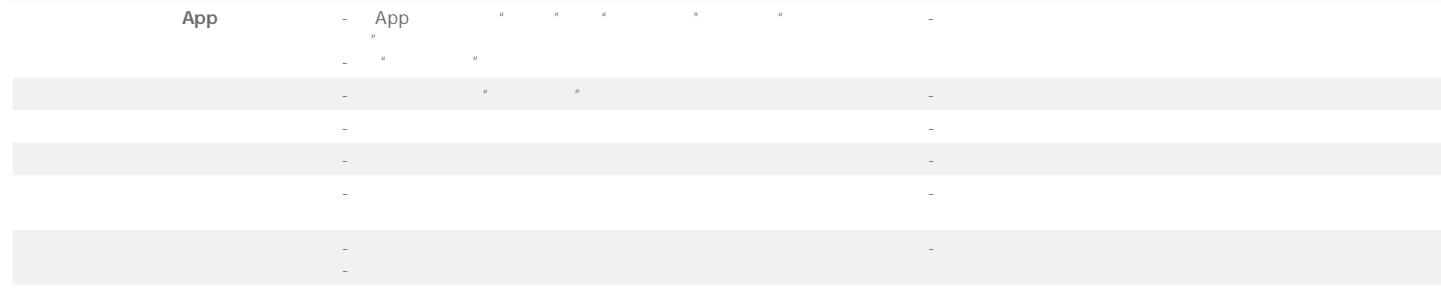

9

EN Troubleshooting milk froth preparation/
CN 奶沫机故障处理

Aeroccino does not start.

- Be sure to position the jug correctly on a clean base. Be sure to attach the whisk to the jug correctly.

Quality of milk froth not up to standard.

- Be sure to use whole or semi-skimmed milk at refrigerated temperature (about 4-6 °C). For a best result, the milk must be newly opened.
- Be sure to use the appropriate whisk and the jug is clean.
- It is highly recommended to not use special enriched milks, powdered reconstituted milks nor flavoured milks.

Red Button blinking.

- a) The appliance is too hot. Rinse it under cool water.

- b) Whisk is missing.

- c) Not enough milk. Fill milk frother up to one of the two "max" level.

Milk Overflows.

- Be sure to use the appropriate whisk.
- Check the corresponding indicator level.

4-6

a)

b)

c)

Contact the Nespresso Club / 联系奈斯派索用户俱乐部

EN

CN

As we may not have foreseen all uses of your appliance, should you need any additional information, in case of problems or simply to seek advice, call the Nespresso Club or your Nespresso authorised representative.

Contact details for your Nespresso Club or your Nespresso authorised representative can be found in the "Welcome to Nespresso" folder in your machine box or at nespresso.com

nespresso.com

Disposal and environmental protection / 废物处理及环境保护

This appliance complies with the EU Directive 2012/19/EC. Packaging materials and appliance contain recyclable materials.

Your appliance contains valuable materials that can be recovered or can be recycled. Separation of the remaining waste materials into different types facilitates the recycling of valuable raw materials. Leave the appliance at a collection point. You can obtain information on disposal from your local authorities.

To know more about Nespresso sustainability strategy, go to www.nespresso.com/positive

EU Directive 2012/19/EC

www.nespresso.com/positive

Nespresso

Limited Guarantee / 有限保修



Nespresso guarantees this product against defects in materials and workmanship for a period of 2 years. The warranty period begins on the date of purchase and Nespresso requires presentation of the original proof of purchase to ascertain the date. During the warranty period, Nespresso will either repair or replace, at its discretion, any defective product at no charge to the owner. Replacement products or repaired parts will be warranted only for the unexpired portion of the original warranty or six months, whichever is greater. This limited warranty does not apply to any defect resulting from negligence, accident, misuse, or any other reason beyond Nespresso's reasonable control, including but not limited to: normal wear and tear, negligence or failure to follow the product instructions, improper or inadequate maintenance, calcium deposits or descaling, connection to improper power supply, unauthorized product modification or repair, use for commercial purposes, fire, lightning, flood or other external causes. This warranty is valid only in the country of purchase or in such other countries where Nespresso sells or services the same model with identical technical specifications. Warranty service outside the country of purchase is limited to the terms and conditions of the corresponding warranty in the country of service. Should the cost of repairs or replacement not be covered by this warranty, Nespresso will advise the owner and the cost shall be charged to the owner. This limited warranty shall be the full extent of Nespresso's liability however caused. Except to the extent allowed by applicable law, the terms of this limited warranty do not exclude, restrict or modify the mandatory statutory rights applicable to the sale of this product and are in addition to those rights. If you believe your product is defective, contact Nespresso for instructions on how to proceed with a repair. Please visit our website at www.nespresso.com for contact details.

Nespresso

Nespresso
Nespresso

Nespresso

Nespresso

Nespresso
Nespresso
/
www.nespresso.com

Nespresso

Nespresso

取得應用程式 / 앱 설치하기

HK

KR

① Nespresso

?



www.nespresso.com
www.nespresso.com

②




③



連接 / 머신과 패어링하기



Bluetooth®

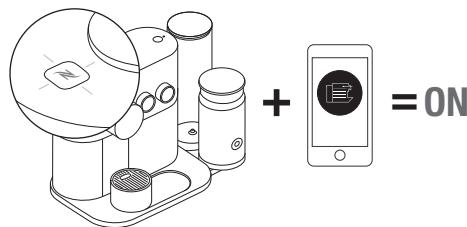

連接功能 / 연결 기능들

Nespresso
3
3

C85 規格 / 제품 사양

~	HK: 220-240V~, 50-60Hz, 1700W KR: 220VAC, 50Hz, 1700W
/	2.402 - 2.480GHz 4dBm / 4dBm
P _{max}	P _{max} 19 / 1.9 MPa / 19
kg	: -5 / : -5kg
l	1.11 / 1.11
mm	38.54 / cm 28.7 / cm 22.3 / cm

內容 / 목차

/	33
/	33
/	33
Nespresso Expert&milk /	34
Expert&milk	34
/	35
/	36-42
/	43
/ ()	44
/ /	45
/	46-47
Aeroccino - /	48-49
Aeroccino /	50
/	51
/ :	51
/ :	52
/	53
:	54
/	55
/	56
/	57-58
/	59-60
Nespresso /	61
/	62
/	62
/	62

◎ HK 安全資訊



:

•

•

•

•



:

•

•



:

•



:

•

8

•

•



:

8

•



:

•

8

•

•

Nespresso
Nespresso

1.5

Nespresso
Nespresso

UHT

(HK) 安全資訊
(KR)

안전 수칙

Nespresso
Nespresso

• *Nespresso*

• *Nespresso*

•

•

Nespresso



8

8

8

(KR) 안전 수칙

1.5 mm²

()

()

(48
)


().

(KR) 안전 수칙



www.nespresso.com
PDF



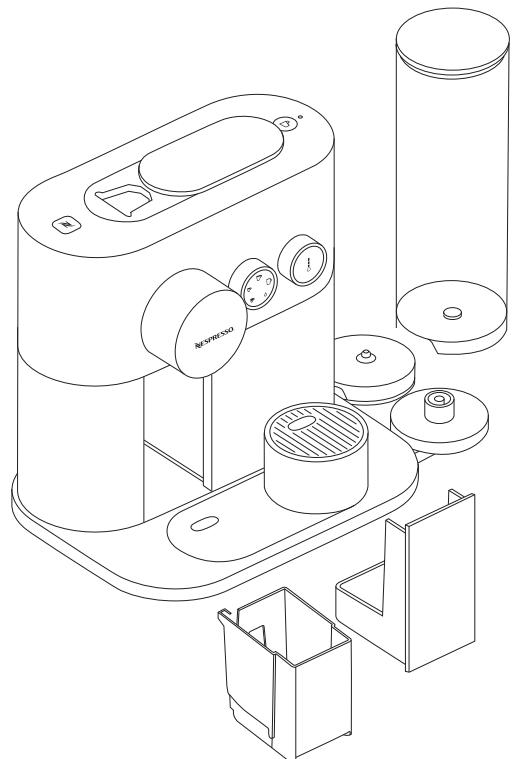


(HK) 首次使用 / 처음 사용시 (또는 장기간 미사용 후 사용시)

(KR)




①


().

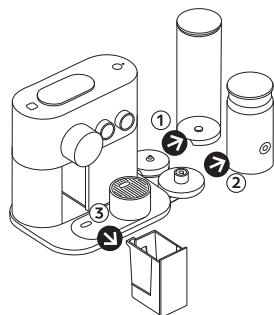

②

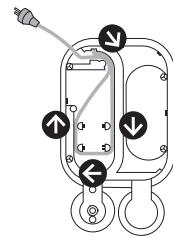


③

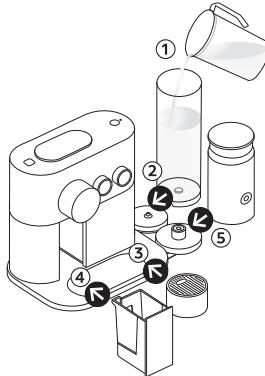

④

⑤

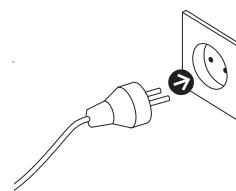

開關咖啡機 / 머신 켜기/끄기

(HK)
(KR)

①


25-30

25-30

②

OFF

5
0
5

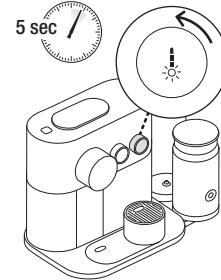

③

33

Nespresso Expert&milk
Nespresso

33

Expert&milk


④

1.
2.
3.
4.
5.
6.

3

2

1.
2.
3.
4.
5.
6.

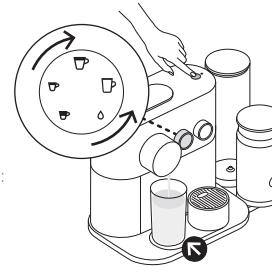

(HK)

(KR)




調製咖啡 / 커피 추출하기



25-30

25-30

①

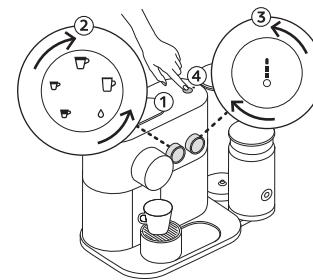

②

	Ristretto (25)
	(40)
	(110)
	Americano (25 ; 125)
	(200)

	(25 ml)
	(40 ml)
	(110 ml)
	(25 ml ; 125 ml)
	(200 ml)



③

10

10

④

10

10





10 sec

(HK) Aeroccino - 操作說明/

(KR) 에어로치노 사용법

⚠ : !

⚠ : !
! () (4-6°C) ()

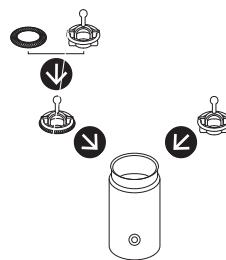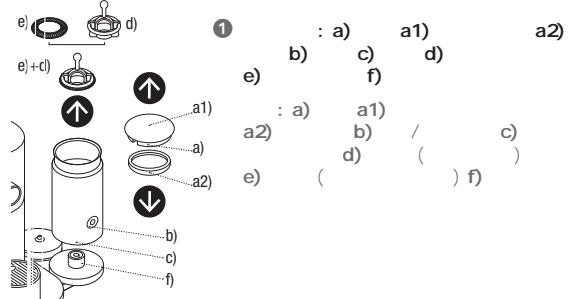


⚠ : !


⚠ : !

(HK)

(KR)

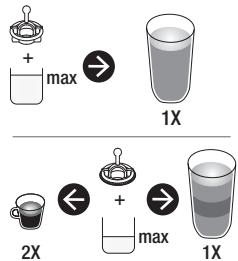

"Max"

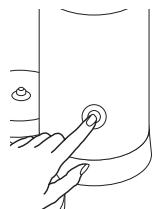

70~80

70-80
2
60
2
60

⚠ : ⚠ :



⚠ : ⚠

⚠ : ⚠



⚠ : ⚠

⚠ : ⚠

(HK) 清潔 Aeroccino/
(KR) 에어로치노 세척하기

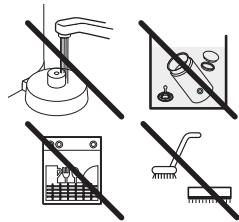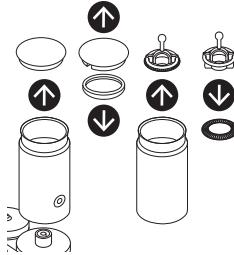

Aeroccino

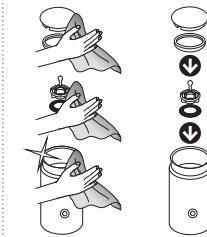
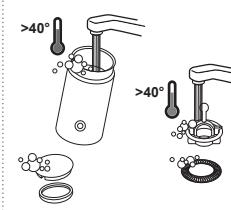


Aeroccino


進入設定模式 / 설정 모드로 들어가기

HK

KR

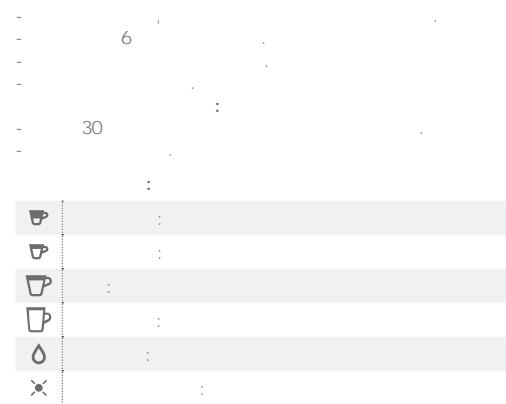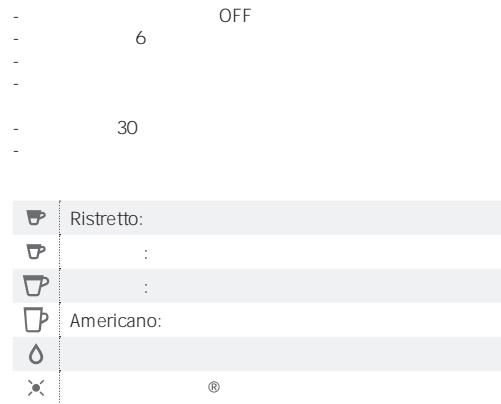


設定模式：節能概念 / 설정 모드: 에너지 절약 모드

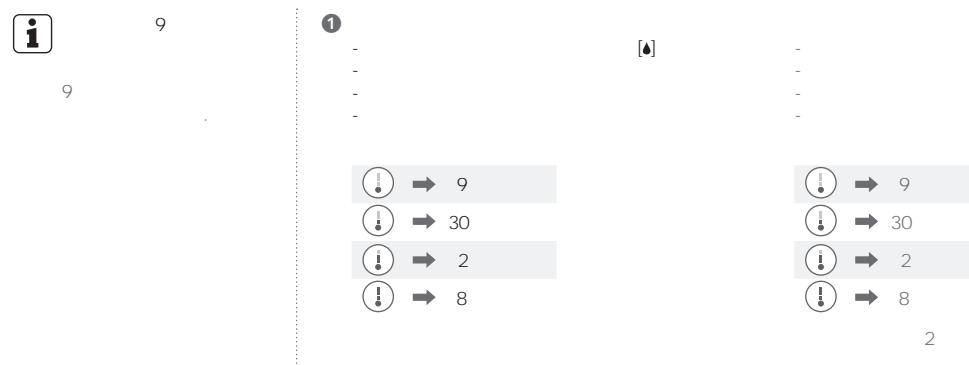

(HK)
(KR)



設定杯量大小/ 물의 양 설정하기

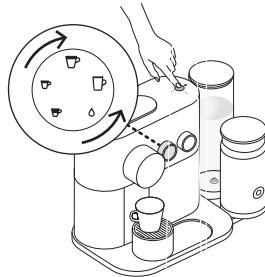

☕	Ristretto	15 - 30
☕		30 - 70
☕		70 - 130
☕	Americano	15-110
☕		: 25-300
💧		50-300

→ 1. Ristretto
2. ON
3. 5.
4. 6.
5. 3.

→ 1. Americano
2. Americano
3. 4.
4. 1.

→ 1. 2.
2. 3.

☕	: 15~30ml
☕	: 30~70ml
☕	: 70~130ml
☕	: 15~110ml / 25~300ml
💧	: 50~300ml

→ 1. 2.
2. 3.
3. 4.
4. 5.
5. 6.
6. 3.

→ 1. 2.
2. 3.

→ 1. 2.
2. 3.
3. 4.
4. 1.



設定模式：回復原廠設定/ 설정 모드: 공장 출하 설정으로 초기화

(HK)

(KR)






1. Ristretto 25 25	40	110	Americano	1. 1. 125 ml). 2. 9 3. 4.	(25 ml), (40 ml), (110 ml), (25 ml / (200 ml)).	1000
-----------------------	----	-----	-----------	---------------------------------------	---	------

-	6	(OFF)	-	6	-
-			-		-
-			-		-
-			-		-
-			-	/	/
-			-		-

(HK) 設定模式：清空系統以預備長期停用或作防霜保護 /

(KR) 설정 모드: 머신에 남아있는 물 비우기 (장기간 미사용 및 동파 방지 또는 수리 보내기 전에)

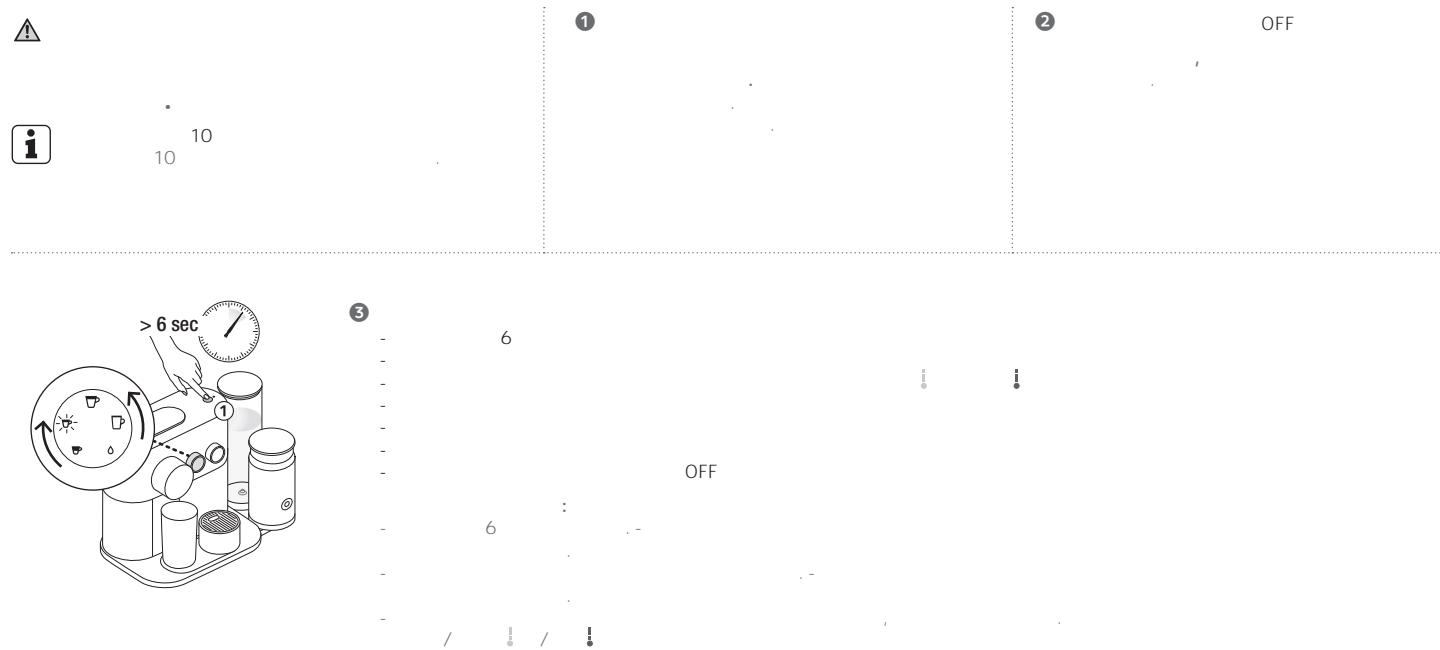

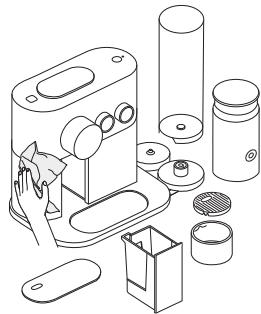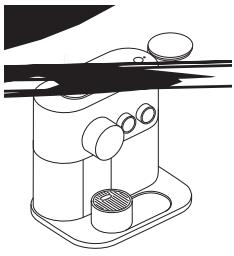

(HK) 水硬度 / 물의 경도

(KR)

1

OFF		Americano		6			
*	*						
		App.	fH	dH	CaCO ₃	/  (40 ml)	* /
		0 / 0	< 5	< 3	< 50 mg/l	4000	fH
		1 / 1	> 7	> 4	> 70 mg/l	3000	dH
		2 / 2	> 13	> 7	> 130 mg/l	2000	CaCO ₃
		3 / 3	> 25	> 14	> 250 mg/l	1500	
		4 / 4	> 38	> 21	> 380 mg/l	1000	

*

*

Water status

"Water Status"



Americano



除磷 / 디스케일링

(HK)
(KR)



Nespresso

Nespresso




30



20

①

30

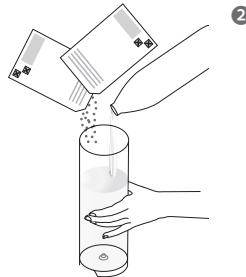

MAX
2

2 Nespresso

③

1.2

(1.2)

(HK)
(KR)



除磷 / 디스케일링

④

Ristretto

6


"I"

OFF
I

Ristretto
O


6

Ristretto

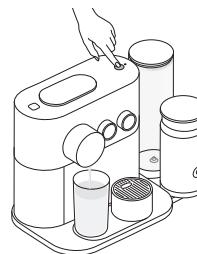

⑤

()

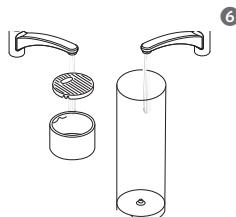

6

⑦ 1.2
1.2

⑧

OFF



7

1.2

, 1.2


7

問題解答

HK

 Nespresso	www.nespresso.com	Service	
-	®	33	20
-	Name Unpair this machine	Machine status	- unpair this device
-	OFF	-	-
-	-	-	-
-	-	-	-
-	-	-	Nespresso
-	-	-	Nespresso
Nespresso	Nespresso	Nespresso	
O	-	-	-
-	-		-
-	-	-	Nespresso
OFF	9	OFF	-
-	-	-	-
-	-	-	-

KR 문제 해결

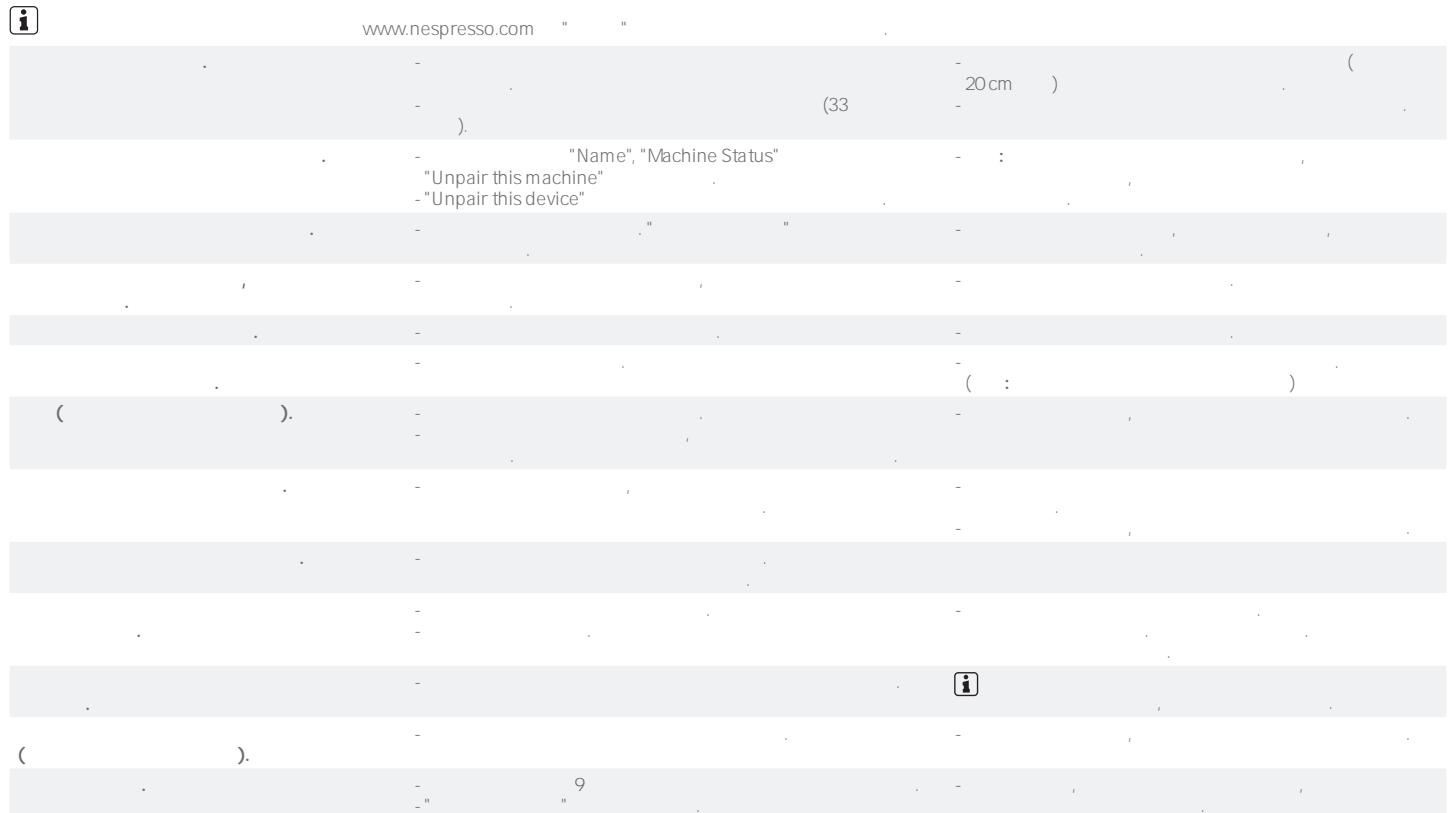

奶泡製作問題解答 / 에어로치노 문제 해결

(HK)

(KR)

Aeroccino

(4-6°C)

a)

b)

c)

(4-6°C)

a)

b)

c)

"Max"

(HK) 聯絡 Nespresso 俱樂部 / 네스프레소 클럽 연락처
(KR)

Nespresso
Nespresso

Nespresso
Nespresso

www.nespresso.com

www.nespresso.com

"Welcome to Nespresso"

棄置處理和環境保護 / 제품 폐기 및 및 환경 보호

EU Directive 2012/19/EC

EU 2012/19/EC

Nespresso

www.nespresso.com/positive

www.nespresso.com/positive

有限保養 / 제한적 보증

Nespresso 2

2

Nespresso

6

Nespresso

Nespresso

Nespresso

www.nespresso.com

(

)

www.nespresso.com

IL יצירת קשר עם מועדון נספרסו

בכל שאלה, בקשת מידע ולכל מושא אחר, תוכל ליצור קשר עם מועדון נספרסו בכל עת.
תוכל למצוא את פרטי יצירת הקשר עם מועדון נספרסו בערךת בחר הבא לנספרסו, המצורפת למכנתך.

פינוי פסולת והגנה על הסביבה

אריזות המכשיר והמכ舍יר עצמו עשויים מחומרם בעלי ערך היכולים לשמש למיחזור מסוים.
מוצר זה מכיל חומרים בעלי ערך שימושיים לשמש למיחזור סופי. אבא אהבה את המנוה לאთר פסולת "יעוד" או לאנשי שירות הליקוחות המוסמכים במועדון *Nespresso*.
www.nespresso.com פונה לאටר האינטרנט של נספרסו והגנה על הסביבה,

אחריות מוגבלת

Nespresso תהיה אחראית לכל פגם בחומר ובטיב המכונה למשך שנה אחת ממועד רכישתה. בתקופת האחריות *Nespresso* תתקן או תחליף כל מוצר פגום על פי שיקול דעתה ולא תשלום הרוכש. האחריות על מוצרים שהוחלפו או החלקיים מתוקנים, תהיה למשך הזמן הנורא לתקופת האחריות המקורי או שישה חודשים, הממן הארוך מביניהם.
אחריות מוגבלת זו, אינה מכסה פגם הנוצר עקב תאונה, הדנאה, שימוש שגוי, אי הקפדה על הוראות הפעלה, בלאי ושבב, שימוש מסחרי, שימוש במנוחה או בזרם החורג מהמקובע על המוצץ, שינוי תוואי המוצץ ללא אישושו שרפה, מכנת ברק, שיטפון או סיבות חיצוניות אחרות.
פרט להיקף שימושה החוק, התנאים לאחריות מוגבלת זו, אינםשוללים, אינם מגבלים או משנים את הזכויות החוקיות התקיפות בעת מכירת מוצר זה והם נוספיםים לזכויות אלו. אם הנרכ סבור שה מוצר פגום, צור קשר בהקדם עם מועדון *Nespresso* על מנת לעדכן את דרכי הרוחקשות לאיסוף ולהחזרת המכשיר.

תפועל תקלות הקצפת חלב

IL

הארוציינו אים פועל.

aicot hakzfat ha'chalb ayina umoda
batndrat.

הכפטור מהבב באדם.

חלב גולש החוצה.

- וזה כי כד ההקצפה מונח כראוי על הבסיס. וזה כי הסליל מונח נכון בטער הכה.

- עדיף להשתמש בחלב 3% וקר, בטפרטויה שבין 4-6 מעלות. לתזאה
אופטימאלית, על החלב להיות טרי.

א. המכשיר התחרם יתר על המידה. שטוף את המכשיר במים קרים.

- וזה כי הינך משתמש בסליל המתאים.

- וזה כי מילאת חלב עד הסימון המתאים.

- וזה כי כד ההקצפה נקי וכי השתמשה בסליל המתאים.
- לא מומלץ להשתמש חלב דל שומן, חלב מבוסס אבקה או חלב בטענים.

ב. סליל חסה.

- ג. כמוות חלב אגוז מספקיה. מלא את כד ההקצפה בחלב עד לאחד משני סימוני המיקסינום.



סרטוני הסברה זמינים באפליקציה ובכתובת www.nespresso.co.il

פעול הצמוד לא צלה.

- בזקן כו הבלתיו בסמאטרפין או הטאבלט דלקן.

- בזקן האה שוה האטה בין בסמאטרפין או הטאבלט למונטך (ראה עמוד 3).



לביטול צמוד המכונה באמצעות האפליקציה.

- באפליקציה, הקלק על "טאטואס מכונה" ולאחר מכן הקלק על "בטל צמוד המכונה".

- הקלק על "בטל צמוד המכשיר" כדי לוזא בטול הצמוד.



הנרות של כפתורי הקפה אכן דולקות.

- המכונה תכבה אוטומטית, ראה פיק' "שחזר הגדרת צ'ץ".



לא זורם מים או זרימה חריפה של קפה.

- בזקן שמייל הים ממוקם במקומו כראוי וויר, מלא במי שתייה.



הקפה אינה חם מספיק.

- חמס בראש את סס הקפה באמצעות הרמות מים דרך דרך דרך דרך.



מנגנון הרוחלה איבן נסגר עד הסוף או זרימת הקפה אינה מתהשתתת.

- רוזן את מיל הקפסולות המשמשות.



בילוי (מים מתחת המכונה).

- נתקן את המכונה מהחלשל.

- והזקן און הנקיון במידה גנאל ווש את כל המים מתחת למכונה. חרב את המכונה להחלשל.



גורת התחזוקה דולקת.

- כאשר נורט כפטור החליטה דולקת וגורת התחזוקה מהברבת לאט המשמשות היא שיש צורך בהסרה אבטית במכונה.



גורת נספרטו דולקת.

- משמשותה כי מלאי הקפסולות לר' אל. תוכל לבצע הזמנה דרך האפליקציה או אחרנו.



המכונה התהממה יתר על המידה או בסביבה מוחחת לאפס מעלה.

- גורת נספרטו החליטה לדלקן.



דרמת מים או קפה איבנה פוסקת גם לאחר להיזעה על כל כפתורי קפה.

- ההזקן את מגנט ההורחה (סליידר) אחורי לילוון חלקה האחורי של המכונה.



אין דימות מים, מים זורמים ישירות לאגן ה��cker (מזרת שוכנcosa פסולו).

- משוך את מגנט הרוחלה לוודא כי סגור עד הסוף.



מצב כבוי אוטומטי.

- כדי לחסוך באנרגיה, המכונה תיכתטו למלצב ליבוי אוטומטי לאחר 9 דקות ללא שימוש.



מיכל הקפסולות המשמשות ואגן הנקיון מתקווים.

- נתקן את המכשיר מכל החשל.

- רוזן את המכונה.

- והוא כבוי יין מושגון או הטאבלט מוקנים סמור למונטה במרקם תוליך הצמוד.

- וואו יין מושגון מוקרגול פועל ליד המכונה בת ביעוע תוליך יצמוד.

- שם לב' במידה ובצען שוב בטול צמוד למונטה, ההדרות וההארמות האישיות יאבדו, והמכונה תשחרר הגדרותה להגדתת הצמן.

- בזקן את שקע החשמל, פיז החשמל ומוחת החשמל.

- בצע ייקו אבנית במכונה במידה ונדרש.

- בצע ייקו אבנית במכונה במידה ונדרש.

- בזקן כי אין קפסולה תקינה במכונה. (שים לב' אין להכין אצבע לתוך המכונה).

- במידה והבעיה אינה נפתחת, יש ליזא קשר עם מונדז נספרטו.

- כאשר כפטור החליטה כבוי וגורת התחזוקה דולקת המשמשות היא שמייל המים ריק או מיל ההורחה המשמשות מלא.

- במידה והבעיה אינה נפתחת, יש ליזא קשר עם מונדז נספרטו.

- פרת חוגת הטמפרטורה תרגבב במיניהם, איבן המנת כנה דיקות עד של המנת זילקן, במן זה לא ניתן לרשטמש במכונה.

הזרה: דימת המים הנשיטה זמן קצר לאחר הליחשה על כפטור החליטה, או אין תקלת כך פועל המנגנון.


- במידה והבעיה אינה נפתחת, יש ליזא קשר עם מונדז נספרטו.

- לחץ על אחד מכניםו הקפה כדי להזידר לצבב במכונה פעילה, או הילק אחורות את מנגנון הרוחלה.

- דוחף את המיכל דרך ההורחה הממצא בתחתית המכונה.

- מקה את מיל הקפסולות המשמשות, און הילק וופטהה.

5 לחץ על כתרו החוליטה לתחזוקת תחליך ניקוי האבנית; בלבד מקי האבנית ייזרום דרך פתוח יציאת הקפה והחמיים. צאש המכונה תשעוץ וורת התתחזוקה תהברבב, הסר ו开会 את אגן הנקה והחזר חוזרת. לחץ על כפתור החלטה שוב המכונה תשער כאשר מיל המים ריק.

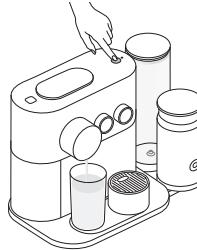

באפשרות להשרות את תחליך ניקוי האבנית על ידי לחיצה על כתרו החוליטה. להמשך פעולת ניקוי האבנית לחץ על כפתור ההחלטה שוב



8 לחץ על כפתור ההחלטה להתחילה שתייפה המכונה, שאיבת המים תחול המכונה עטchar אוטומטית אשר מיל המים יתפרק. הסר ו开会 את אגן הנקה, החזר חזירה. המכונה תיכבה אוטומטית אשר תחליך ניקוי האבנית יסתים. המכונה עת מוכנה לשימוש.

במידה ומורת התתחזוקה ממשיכה להברב לאחר השטיפה, המשמעות שהיא שbumכל המים לא יותר מ-1.2 ליטר בלבד.




4 לפניה למב ניקוי גבינה; ואילו המכונה בכיה ומגנן ההורקקה (טל"יד) סגור לחץ על כתרו החוליטה לשושן 6 שניות - שתי החותוגות ייהבבו לאישוו. בחותוגת המתמכנים, בחר באפשרות ריסטרטו, לחץ על כפתור ההחלטה לשושר הבחירה. בהמשך בחותוגת הטטפטותה, בחר מהה גובה "0" ליאישר או רמה נמוכה "0" לבטוול, לחץ על כפתור ההחלטה לאישר הבחירה. מורת הריסטרטו תהברבב לאישור כניסה למצב ניקוי האבנית.



מורת הריסטרטו תהברב לאורך כל תחליך ניקוי האבנית. מורת התתחזוקה מאייר באופן קבוע כאשר המכונה מבצעת תחליך אוטומטי. מורת התתחזוקה תהברב כאשר דרישת פעולה ידנית.

7 מלא את מיל המים ב-1.2 ליטר מי שטה.

6 שטוף היטב את מיל המים, אך הנקיוז ואת מגש הפסות למים משלקעים.

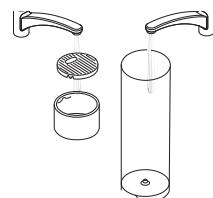



יש לקרוא את הוראות הבטיחות של גבי אריזת ערכת ניקוי האבנית ולבדוק בטבלה את תדריות השימוש המומלצת. זיהירות: נזול להסרת האבנית עשוי לגרום נזק. יש להמנע מ מגע בעיניים או בעור. אין לשתמש בערכת ניקוי שאינה של נספרסו, אשר נמכרת וэмינה דרך מועדון נספרסו, זאת כדי למנוע גרים נזק למcona. לשאלות נוספות בנושא ניקוי אבנית, נא ליצור קשר עם מועדון נספרסו.

③ הנח מיכל של 1 ליטר לפחות מותחת לפתח יציאת הקפה.

② מלא את מיכל המים בשתי שקיות של חול ניקוי האבנית של נספרסו וחוווף מים עד קן המילויים.



משך הזמן לביצוע הפעלה: 20 דקות.

① חקן את אגן הנקוז ואת מיכל הקפסולות המשומשות.

קשירות מים

ניתן לבדוק את רמת קשיות המים באמצעות מקלון קביעת קשיות מים המודבקים בעמוד הראשון של הואהו ההפולני. לנסה לוגרתת קשיות המים:

- וודא כי המכונה בבה ומגנן החילתה (הטליידר סאגה).
- לחץ על כפתור החילטה לפחות 6 שניות, שית נחוגות יhabham לאישוש.
- בחר באפשרות אמריקני, לחץ על כפתור החיליטה, פורת האמריקם התהגהב לאישוש.
- השתמש בחוגות הטמפרטורה לבחירה רמת הקשיות הרצוי.
- לאחר סיום הבחירה, לחץ על כפתור החיליטה לאישוש.
- המכונה תצא מצב גדרות ותכבה.

יקוי אבנית לאחר*					קשיות מים*
	ffff	ffff	dH	fH	
צרפתית	ffff	ffff	< 50 mg/l	< 3	רמה קשיות 0
גרמני	dH	ffff	> 70 mg/l	> 4	רמה קשיות 1
סידן כחמתי	CaCO ₃	2000	> 130 mg/l	> 7	רמה קשיות 2
		1500	> 250 mg/l	> 14	רמה קשיות 3
		1000	> 380 mg/l	> 21	רמה קשיות 4

* באמצעות האפליקציה, רמת קשיות המים ניתנת לתכנות בלבד עט, תחת "սטטוטו מים".


 שימוש נרחב במתקן אמריקני או באפשרות מים חמימים עשויה להגביר את תדירות נקיי האבנית.



❶


על מנת להבטיח תנאים היגייניים, מומלץ לרוקן ולמנקות את מכל הקפסולות המשמשות בכל יום.

- ❸ יש לנוקות את שטח המכונה
סליל מתחתי לבסיס המונען
במטלית לחנה.**

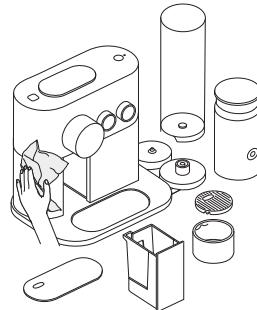


- ❹ יבש את חלקו התחתון ומיכל המים עם ספוג או
מטלית נקייה והחרור את כל החלקים.**

**⚠ אין לשתמש בחומר ניקוי חזק
או בחומרים ממיסים. אין להכניס
למדיח הכלים.**

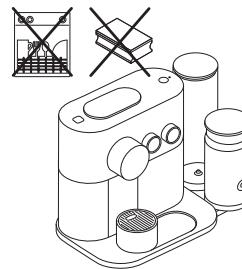

**⚠ לעולם אין לטבול את המכשיר
או חלק ממנו במים או כל נוזל
אחר.**

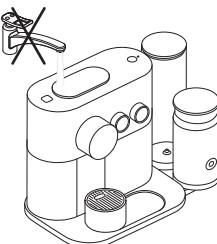

שחזור הגדרות יצן



שחזור יצן: שחזור הגדרות יצן יטול את פעולות הצימוד, את ניהול מלאי הקיטולות ואת התראות נקיי האבטחה.

הגדרות יצן:

1. רוטרשו (25 מיל'), אופרכו (40 מיל'), לוגו (110 מיל'), אמריקם (25 מיל' קפח); 125 מיל' מים חמימים), או בחר באפשרות מים חמימים (200 מיל').
2. כבוי אוטומטי לאחר 9 דקות.
3. מרת קשיות המים המוגדרת בהגדרות יצן הנה גובה.
4. אף מכשיר לא חובר למכלולת הקפה.


לביצוע הפעולה באמצעות המכונה:

- וואיא המכסה כבוה ומנגן החקלאה (סילידי) סוגה.
- לחץ והוחזק את כפתור החלטה לפחות 6 שניות - שתי פעות החוגות יידלקי לאישור כניסה למעצב הגדרות.
- בחר את אופצייתו לונגו וללחץ על כפתור החלטה.
- ווות ספל הלונגו תהברב לאישור כניסה למעצב הגדרות.
- ליצאה ממצב הגדרות מבל' לפחות לגדרות יצן, לחץ על כפתור ההחלטה, לא / יציאה ק' או אישור !!.
- איפוס הגדרות יצן, סובב את חוגת הטמפרטורה למקס'imum וללחץ על כפתור ההחלטה.
- כל הנורות ייבהם לאישור הפעולה.

ריקון המערכת לפני תקופה אחוריה של חוסר שימוש, להגנה מפני כפוף ולפני תיקון

③ כניסה לאח' הגדרות:

- לחץ והוחזק את כפתור ההחלטה לפחות 6 שניות - שתי פעות החוגות ייבbam לאישור כניסה למעצב הגדרות.
- בחר באפשרות אופרטו וללחץ על כפתור ההחלטה - מרת האופרטו תהברב לאישור מצב הגדרות.
- ליצאה ממצב הגדרות מבל' לפחות להגדרות יצן, לחץ על כפתור ההחלטה. לא / יציאה ק' או אישור !!.
- לחזרה להגדרות יצן, סובב את חוגת הטמפרטורה למקס'imum וללחץ על כפתור ההחלטה.
- תחיליך הריקון יחל.
- בסיום התהליך, קקה את און הבקז' ואת מגש המכונות.
- המכונה תיכבה אוטומטית בסיום הריקון.

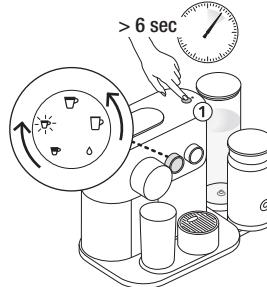

- ② **וודה כי המכונה כבוה ומנגן החקלאה (סילידי) סוגה**

⚠️ אדים עלולים לצאת מפתח יצאת הקפה.

שים לב, המכונה תיחסם לפחות 10 דקות לאחר הריקון!

- ❶ הסר את מכל המים. מקום מי מתחת לפתח יצאת הקפה. הסר ותקן את אג הניקוז, החזר למקומו.

כניסה למצב תכנות הגדרות

כניסה למצב הגדרות:

- וואלי הרכונה בכיה ומנגנון ההחלה (הסליידר) סגור.
- לחץ על כפתור החיליטה לפחות 6 שניות.

יציאה ממצב הגדרות:

- המכנה תיכנס למצב המנתה באופן אוטומטי לאחר 30 שניות.
- פתח את מנגנון ההחלה (סליידר).

אפשרויות הגדרות:


ריסטרטו: פקקי אבטחה	
אספרסו: ריקון המערכת	
לונגו: הרזרה להגדלת יצין	
אמריקן: קשיות מים	
מים חמימים: מצב חיסכון באנרגיה	
כל הperature מהברبات: חיבור בלאוות'	

תכנות כמות מים



ניתן לתוכנת כל כפתור הכנת קפה:

ריסטרטו: מ 15 מ"ל ועד 30 מ"ל	
אספרסו: מ 30 מ"ל ועד 70 מ"ל	
לונגו: מ 70 מ"ל ועד 130 מ"ל	
אמריקן: קפה מה 15 מ"ל ועד 110 מ"ל	
מים חמימים 250 מ"ל ועד 300 מ"ל	
מים חמימים: מ 50 מ"ל ועד 300 מ"ל	

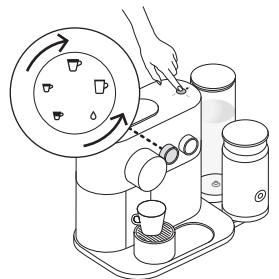

תכנות חיסכון באנרגיה

1. כדי לשנות את הכיבוי האוטומטי:

- המכנה במצב הדורתה ובו אופציית מים חיים בחוגת המתכוונים [▲].
- לחץ על כפתור החיליטה לאישור.
- השמש בשוחות הבטפותורה לבחירת הזמן הרצוי לכיבוי אוטומטי.
- לחץ על כפתור החיליטה לאישור.

ניתן להציג כיבוי אוטומטי לאחר:

9 דקות	
30 דקות	
שעותיים	
8 שעות	

האפשרות הבוחרת והבאה פעמיים לאישור השינוי ואך המכנה תיכבה.

لتוכנות כמותי ריסטרטו, אספרסו, ולונגו:

1. וואלי הרכונה דילקט. 2. פתח את מנגנון ההחלה (הסליידר) והכנסו לפוסולת ופפרסו.

3. סגור את מנגנון ההחלה (סליידר). 4. ברור את מתכוון הקפה הרצוי לחץ והזקק את כפתור החיליטה.

5. שחרור את כפתור החיליטה כשמצוות הקפה הגיעו למינות הרציה. 6. כפתור החיליטה יירחב 3 פעמים לאיישו.

لتוכנות כמותי האמריקן:

1. בחר מותכו אמריקן בחוגת המתכוונים, לחץ והזקק שב את כפתור החיליטה עד הגיעו למינות המים

הרציה. 2. לחץ והזקק שב את כפתור החיליטה עד הגיעו למינות הקפה. 3. כפתור החיליטה יירחב פעם אחת לאישור. 4. כמות הקפה והמים נקבעו והוגדרו.


لتוכנות כמות מים המתאים:

1. בחר אופציות מים חיים, לחץ והזקק את כפתור החיליטה עד הגיעו למינות המים הרציה.


2. כמות המים נעת נשמרה בזיכרון.

ניקוי ה - Aeroccino


שטייפה בית: שטוף את הcad הפנימי, האසם, המכסה, הסיליל והספירה שמעל הסוליל עם חומר נקי ומים חמימים.

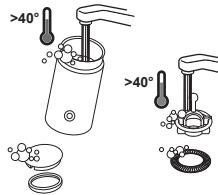


אזהרה: במדידה יש לנקות את הבסיס, ואשיית יש לנתק אותו מהחישול ואז להשתמש במטלית לחיה בלבד. אין לטבול לשודא שהחיבורים יבשוו טרם הפעלה.

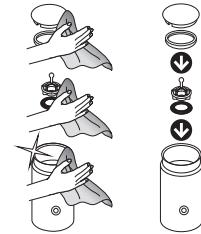

הסר אתcad מבסיסו. הסר את האטם מומכתה. הסר את הסיליל ופרק את הספירה מהסליל.

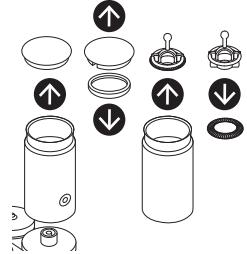

אין לשוטף אתcad במדיח הכלים ואן לטבול אותו במים למטרות נקיי, אין לטבול את החלק התחתון של הארכיזין שמכיל חיבור אלקטוחני, אף יש לנקות את פנים הארכיזין עם חומר נקי ולשטוף עם מים חמימים. יש להשתמש במטליות נקיי חלקות, שאון שורות.

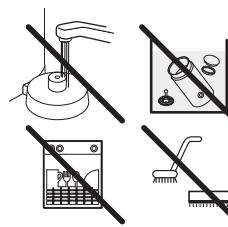

אזהרה: יש לוודא כיcad התקרר בטרם הסרתתו מהבסיס. במידה שלא הספיק להתקrar דיה יש להסיר בזהירות ולשטוף מיידית במים קרים במטרה להימנע מסכנות כויה. **⚠ אזהרה:** אם החלק התחתון שלcad רטוב, יש ליבשו לפני החזרתו לבסיס. **⚠ אזהרה:** יש לעשות שימוש אחר ורק בבד שאינו שוקץ. אין להשתמש בחפצים חדים או בדים מחוספסים שעלווה לשurst או לפגוע בציפוי שלcad.

הוראות שימוש של מקציף החלב ה - Sohoccino


IL

⚠ אזהרה: המנווע מסכנה של התחלמות או דלקה! ודאו כי הצד התיכון של המק挫יף יבש.




טייפ: על מנת לקבל ק挫יף אספטי, השתמש בחלב קר (4-6° מעלות, טרי, מפוסטר ורכז 3% שומן. חלב אשר הווקף לא יק挫יף.

② יש לנוקוט את המכשיר לפני שימושו הראשון, חבה את האסילר המקורי.

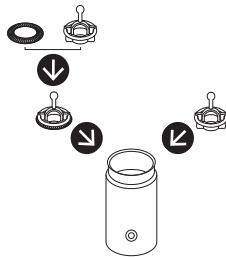


① חלקים: (a) מכסה (a1) מוקם לאחיזון הטלילים
(a2) אטום (b) כפטור העליה/יבוי (c) מק挫יף חלב
(d) סיל עירוב (חלב חם) (e) ספירלה להקצפה
(חלב מק挫ף) (f) כוס חשמלי

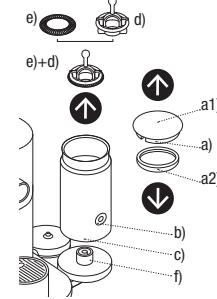


⚠ אזהרה: במטרה להבטיח תנאים היגייניים ותחזקה הולמת של המוצר, מומלץ לא להשתמש בחלב מועשר, באבקות חלב או בחלב בטעמים. ⚠ אזהרה: אין להוסיף LCD הפקפה את המוצרים הבאים: סירופ, סוכר, אבקה להכנה שוקו או כל תוסף אחר. הוספת חומרים אלו עלולה לפגוע בשכבות הציפוי של המכשיר.

④ פיתוח את המכונה לגבי האחזיתן. לכתמת מתוכן חם לחץ לחייצה קצחה על כפטור הפעילה. הcupholder דלך בבעוד איזה זמן הנכח מעורר 70-80 שניות. למתוך חלב קר, השאיר את כפטור הפעילה לחוץ לפחות 2 שניות. הcupholder משליך בצעב כחול, זמן הנכח מעורר 60 שניות.

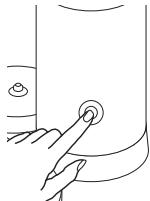

③ מלא את LCD הפקפה בחלב עד לאחד משני סימוני המילוי.

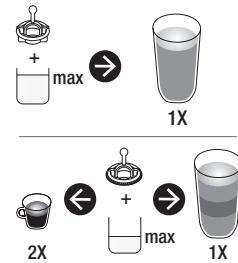


⚠ אזהרה: השתמשו אך ורק בכפית שאינה מתכתית כדי לאסוף את ק挫יף החלב מתוך הcupholder. ⚠ אזהרה: יש לנוקוט את המכשיר לפני השימוש הראשוני ולאחר כל שימוש בהתאם להוראות הנינוי. ⚠ אזהרה: יש לוודא כי הcupholder בטרם הסרתתו מהבסיס. במידה שלא הספיק להתקרר דיה יש להסיר בזירות ולשטווף מיידית במים קרים במטרה להימנע מסכנות כויה.

6 כדי לשנות את גודל הספל שנבחרת תוך כדי ההכנה, יש ללחוץ על הכפתור הרצוי. המכונה תעצור מיד במידה וגודל ספל הקפה הקיים גוזל מספל הקפה הרצוי החדש.




5 כדי לעצור את זרימת הקפה טרם סיום ההכנה לחץ על כפתור היחלה או חז את מגען ההחלקה (סלידייד) ימינה.

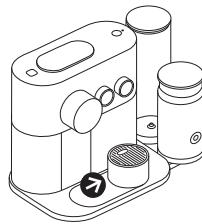


7 להנחת כוס מתכוונים גבוהה, יש להחליק את תונך הcapsules ימינה על גבי הבסיסים המטאליים.



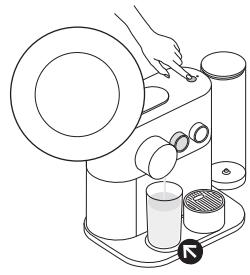


שימוש ראשון

⚠ קרא ומלא אחר הוראות הבטיחות במלואן כדי למנוע פגיעה ונזק אפשריים.

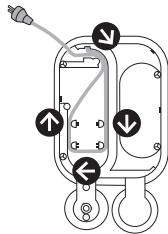


- ②** התאם את אורך הcabl הסתר את שארית הכלב במקומות האיחוסים שבתוחתיות למקרה. וודא כי המכונה מוצבת בצדורה תקינה.

⚠ חלקים חיצוניים אינם ניתנים לשטיפה במדיח כלים.

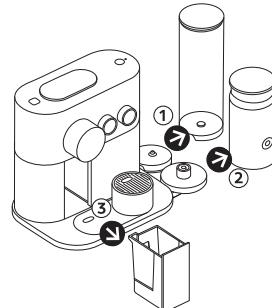

- ①** הסר את מיכל המים ומילק הקפסולות המשמשות לנקייה (אה פיק נקיי בחוגרת).


⚠ אין להכניס את מיכל המים למדיח הכלים.

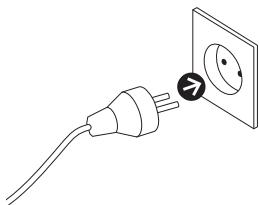


- ⑤** חיבור את המכונה לשוק החשמל

- ③** מלא את מיכל המים במיל שטיה טריים.

- ④** הצב את מיכל המים בסיסו המיועד והנתקן מגש הנקיוז ומילק הקפסולות במקום.

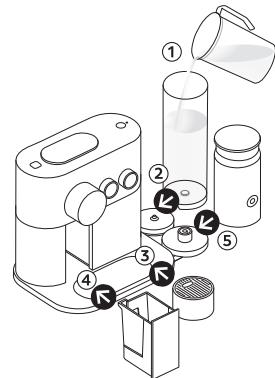

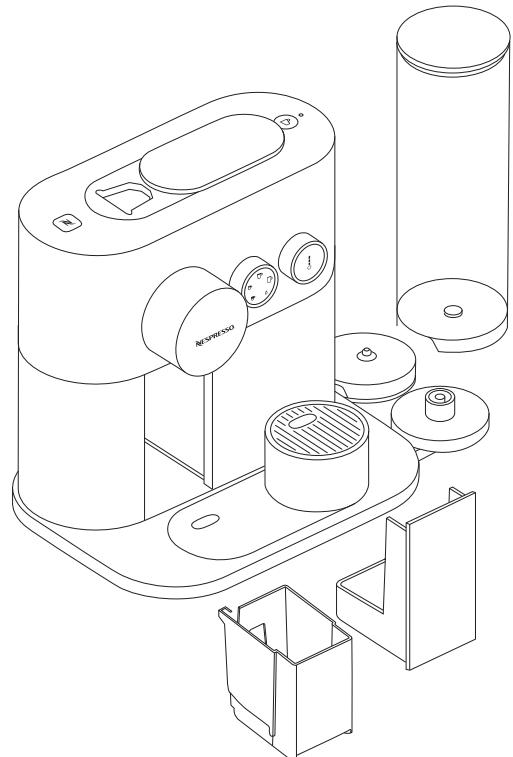

- אין להניח את האצבעות מתחת לפתח יציאת הקפה או המים החמים, סכנת כויה.
- אין להניח את האצבעות בפתח הכנסת הקפסולה, סכנת פיצעה.
- מים עשויים לדרום סיבת הקפסולה כאשר אינה מתנקבת ע"י הלhbבים ולגרום נזק למכתיר.
- אין להשתמש בקפסולה פגומה או עקרויה. במידה וקפסולה נתקעה בבית הקפסולות, יש לכבות את המכונה ולהוציא את תקע החשמל טרם יבוצע כל שימוש נוסף במכונה. צור קשר עם נציגי המורשים.
- מלא את מיכל המים במים טריים וראויים לשתייה בלבד.
- רוקן את מיכל המים במידה ולא יעשה שימוש במכתיר לפחות זמן ממושך.
- יש להחליף את המים במיכל המים כאשר לא יצא שימוש במכונה לפרק זמן ממושך.
- לא השגחה במצב חליטה באופן ידני. במקרה של טרומ תכנות או תכנות מרוחק, יש לנתקו באמצעות זהירות נוספת על מנת להמנע מפגיעה כגון: להקfid על השימוש לו ועד המכתיר, לוודאי גודל הספל המתאים מונע על תומך הכווותת מגנון ההחלה (הסליר) סגור לחלוין, ועוד כי יש מהם במייל במים, שמור את המכתיר וכבל החשמל הרחק מהשידם של ילדים או חוות מחמד.
- אין להשתמש במכתיר במידה וניזוק או אינו פועל כראוי. הוצא את תקע החשמל מיידית. צור קשר עם מועדיון נספרסו או עם נציגי המורשים כדי לבדוק את התקלה או לתקןה.
- מכתיר פגום עלול לגרום לדלקה, כוויות או התחשמלות.
- יש לסגור את ידית ההרמה תמיד ואין להריםה בזמן פעולת המכונה.
- לא השגחה במצב חליטה באופן ידני. במקרה של טרומ תכנות או תכנות מרוחק, יש לנתקו באמצעות זהירות נוספת על מנת להמנע מפגיעה כגון: להקfid על השימוש לו ועד השימושים מוגן: גודל הספל המתאים מונע על תומך הכווותת מגנון ההחלה (הסליר) סגור לחלוין, ועוד כי יש מהם במייל במים, שמור את המכתיר וכבל החשמל הרחק מהשידם של ילדים או חוות מחמד.
- אין להניח את גוף המכתיר, מתח חשמלי מסוכן.
- אין להניח חפצים לטור פתחי המכתיר. פעללה עלולה לגרום לדלקה או התחשמלות.
- השימוש באביזרים נלווים שלא מומלכים על ידי היצרן יכולם לגרום לשရיפה, התחשמלות, או נזק לוסובבים.
- השתמש בחלב קר לתוצאות הקצפה טוביה יותר.
- יש להשתמש בחלב טרי בלבד.
- **יש להמנע מפגיעה ונזק אפשריים כאשר מתפעלים את המכתיר.**
- לאולם אין לטבול את המכתיר או חלק ממנו במים או כל נזול אחר.
- לאולם אין להניח את המכתיר לטור מדיח כלים.
- היצروف של חשמל ומים הינו מסוכן ועלול לגרום להתחשמלות.
- אין לפתח את גוף המכתיר, מתח חשמלי מסוכן.
- אין להניח חפצים לטור פתחי המכתיר. פעללה עלולה לגרום לדלקה או התחשמלות.
- השימוש באביזרים נלווים שלא מומלכים על ידי היצרן יכולם לגרום לשရיפה, התחשמלות, או נזק לוסובבים.
- נתק את המכתיר מהחשמל כאשר איננו בשימוש לפרקי זמן ממושך. נתק באמצעות הקצפה טוביה יותר.
- יש להשתמש בחלב טרי עצמן, פעללה זו עלולה לגרום נזק לכבל החשמל.
- טרם ניקוי המכונה יש לנתקה מהחשמל ולהניח לה להתקarr. אין לנתק ע"י משיכה בכבל החשמל.
- לאולם אין לגעת בכבל החשמל בידים רטובות.



זהירות: הוראות

- הבטיחותן חלק מהמכשיר קרא אותו במלואו טרם שימוש המכשיר בפעם הראשונה. שמור אותו במקומן נגיש לקריאה בעת הצורך.

זהירות: כאשר סימון זה

- ופיע יש לפנות יש להוראות הבטיחות כדי למנוע פגיעה ונזק אפשריים.

זהירות: סכנה פציעה

- אפשרית, במידה ולא מתפעלים מכשיר זה בצוורה תקינה.

זהירות: לאחר שימוש,

- אין לגעת במשטחים חמימים (מערכת החילתה, פת' החיצית הקפה או רמים החמים), מתחס לחום שיורי.

זהירות: אין להכנסי

- חפצים לתוך מיכל המים.

מידע: כמשמעות סימן

- זה, יש לקרוא את העצות לשימוש בטוח וטוב יותר

- יש לחבר את המכשיר לשקע חשמל מתאים עם האראה בלבד. לבדוק כי מתחת החשמל המציג בטבלת הדירוג תואם למתח החשמל שברשורת.
- שימוש בחיבורים לא מתאימים מבטל את האחוריות.

את המכשיר יש לחבר אך ורק לאחר התקנה.

- אין למשוך את כבל החשמל מעלה קצוץ חדים, לצורך לחץ או לאפשר לו להשתלשל מטה.
- הרחק את הcabl מחום או לחות.
- במידה ופתיל ההזנה ניזוק, אין להשתמש במכוונה. כדי למנוע סיכון, יש להחליפו אך ורק בmundat שירות המאושרת על ידי היצרן/ היבואן.
- במידה ופתיל ההזנה ניזוק, אין להשתמש במכוונה. החזר את המכשיר למועדון נספרתו או לאחד מהగורמים המורשים על ידו.

- לשימוש על ידי אנשים בעלי מגבלות או על ידי אנשים שאינם יכולים עלי ניסיון וידע שלא השגחה או הדריכה מתאימה ולאחר ידוע הבנתם לגבי נזקים אפשריים.
- אין לאפשר לילדים לשחק עם המכשיר.
- נספרתו אינה אחראית במידה ונגרם נזק בעקבות שימוש לא ראוי במכשיר.

אנא עקוב אחר הוראות הניקוי בזמן ניקוי מכונת הקפה.

- נתק את המכשיר מהחשמל. אין לנוקות את המכונה בעודינה חמה.
- יש לנוקות עם ספג או מטלית להה.
- לעולם אין לטבול את המכשיר או חלקו ממגו במים או כל נוזל אחר.

פעולה זו עלולה לגרום לדיליקה או התחשמלות.

במוכנות הקפה.

- המכשיר נדרש להכנות משקאות לפי הוראות אלה. אין להשתמש במכשיר לכלי שימוש לו אינם מיועד.
- מכשיר זה נדרש לשימוש ביתי ובטפרטורות שאין קיצוניות בלבד.
- הגן על המכשיר מארור שימוש ישר, חשיפה ממושכת לנזקי מים ולחות.

המכשיר נדרש לשימוש ביתי ומרחבים פרטיים כגון: אזורי נוחות אישים, מטבחים קטנים בלבד וסיבות עובדה דומות.

- המכשיר אינו מיועד לשימוש על ידי ילדים מתחת לגיל 8 או אנשים בעלי מגבלות או על ידי אנשים שאינם בעלי ניסיון וידע ללא השגחה או הדריכה מתאימה. אין לחת לילדיים לנוקות או לתחזק את המכשיר ללא השגחה.

- שמור על המכשיר וככל המכשיר מחוץ להישג ידם של ילדים מתחת לגיל 8.

- המכשיר אינו מיועד





תיק


מפרט טכני C85

3	השג את האפליקציה
3	ציווית
3	הגדרות חיבור
4	טפלת האראה
4	Nespresso Expert&milk
5	מפרט טכני
8-6	הוראות בטיחות
9	סקנית מסנן
10	שימוש ראשוני
11	הדלקת ויבוי המכונה
13-12	הנתת קפה רגילה
14	הוראות שימוש של ה-Aeroccino -
15	נקיי ה-Aeroccino -
16	כיססה למצב תכנת הגדרות
16	תכנת חיסכון באנרגיה
16	תכנות כמהות מים
17	שחזור הגדרות ייצן
17	ריקוון המערכת
18	נקיון
19	קשהות מים
21-20	נקיון אבטחת
22	פעולת תקלות
23	פעולת תקלות הקצפת חלב
24	יצירת קשר עם מודען נספחים
24	פינוי פסולות והגנה על הסביבה
24	אחריות מוגבלת

220-240 V~, 50-60 Hz, 1700 W	~
GHz 2.480 - 2.402	
4dBm מוגדר מוקטם מיליט	תדר
בר 19	Pmax
ק"ג 5	kg
ליטר 1.11	liter
22.3 ס"מ 0 ס"מ	28.7 ס"מ 0 ס"מ
38.54 ס"מ 0 ס"מ	

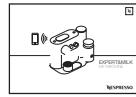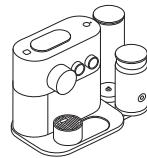



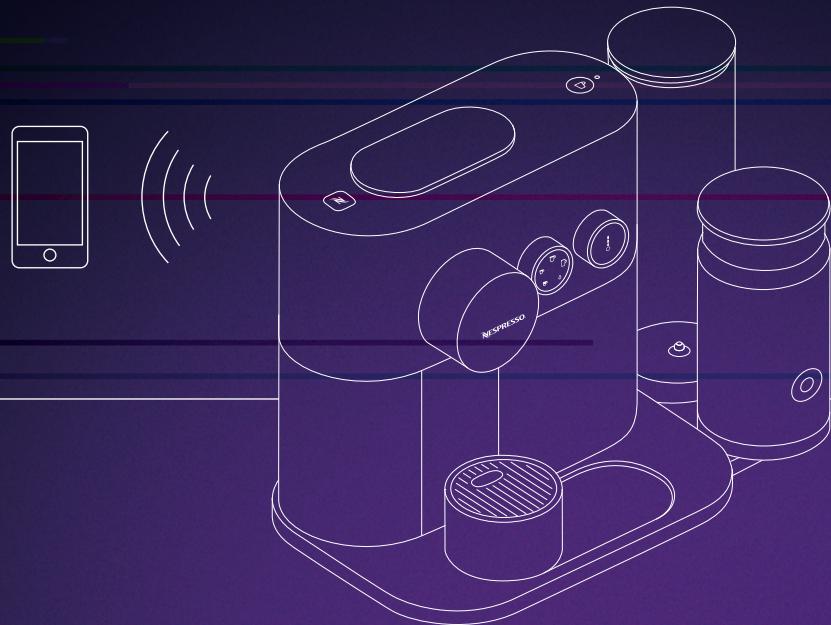

NESPRESSO
EXPERT&MILK
MY MACHINE

NESPRESSO®