
KD658 — Using Job Files

See the MWM barcode information page for TT / MSC input, recipe selection and operating methods. The indices below apply to the 31-character TT example with dimension factor 1; the screenshot shows a different installation example.

The KD658 barcode reader is used on the MWM HMI in two operating modes: **with a work file** and **without a work file**.

Working with a work file

On the automatic screen, **direct list-number selection** matches the entire scanned text (for example `001`) to the loaded work file's list number. The N header in a work file is not automatically removed from a scan. Other operating methods may use a configured section of the barcode.

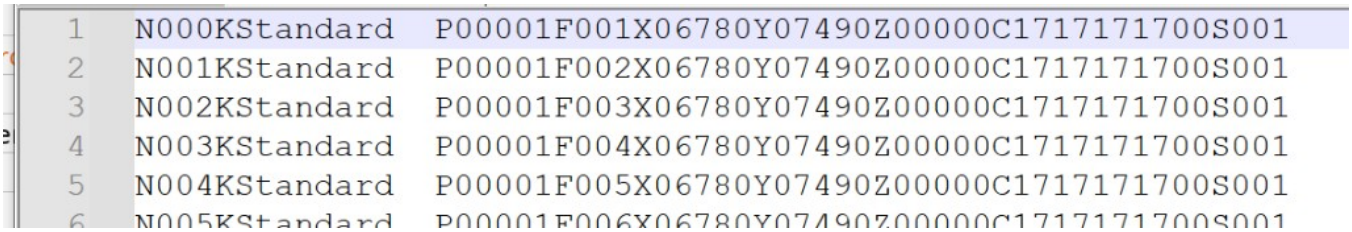

Example work file lines (`batch_test_1.txt`):

```
N000KStandard  P00001F001X06780Y07490Z00000C1717171700S001
N001KStandard  P00001F002X06780Y07490Z00000C1717171700S001
N002KStandard  P00001F003X06780Y07490Z00000C1717171700S001
```

In this example, list numbers such as `N000`, `N001`, and `N002` are used as the matching key when a barcode is scanned. The operator only needs to scan the 3 digits after N (e.g. `000`, `001`, or `002`) to reach the production data on the corresponding line.

Work file line format (KD6xx)

Each line consists of fields separated by fixed header characters. Field definitions are based on `KD6xx_BathcFile_Desc.xlsx`:

Character	Header	Size	Type	Description
N	List number	N + 3 characters	Numeric	Sequence number used for barcode matching
K	Profile code	K + 10 characters	Text	Profile definition (e.g. `Standard`, `Profiles01`)
P	BIN / Trolley number	P + 5 characters	Numeric	Pallet or trolley number
F	Window number	F + 3 characters	Numeric	Window sequence number
X	Frame X value	X + 5 characters	Numeric	The fifth character is the decimal place. E.g. `15005` = 1500.5
Y	Frame Y value	Y + 5 characters	Numeric	The fifth character is the decimal place. E.g. `15005` = 1500.5

Character	Header	Size	Type	Description
Z	Unused	Z + 5 characters	Text	Reserved field
C	Operator information	C + 10 characters	Text	Additional information for the operator
S	Quantity	S + 3 characters	Numeric	Production quantity


Example line (xlsx):

```
N000KProfiles01P00001F001X06780Y07490Z00000C1717171700S001
```

Work file example ----->>> batch_test_1.txt

Working without a work file

On the manual screen, barcode data is parsed directly from the scanned string. The required fields are configured on the MWM HMI **Load Barcode** screen. The active screen and operating mode determine the behavior, rather than file presence alone.

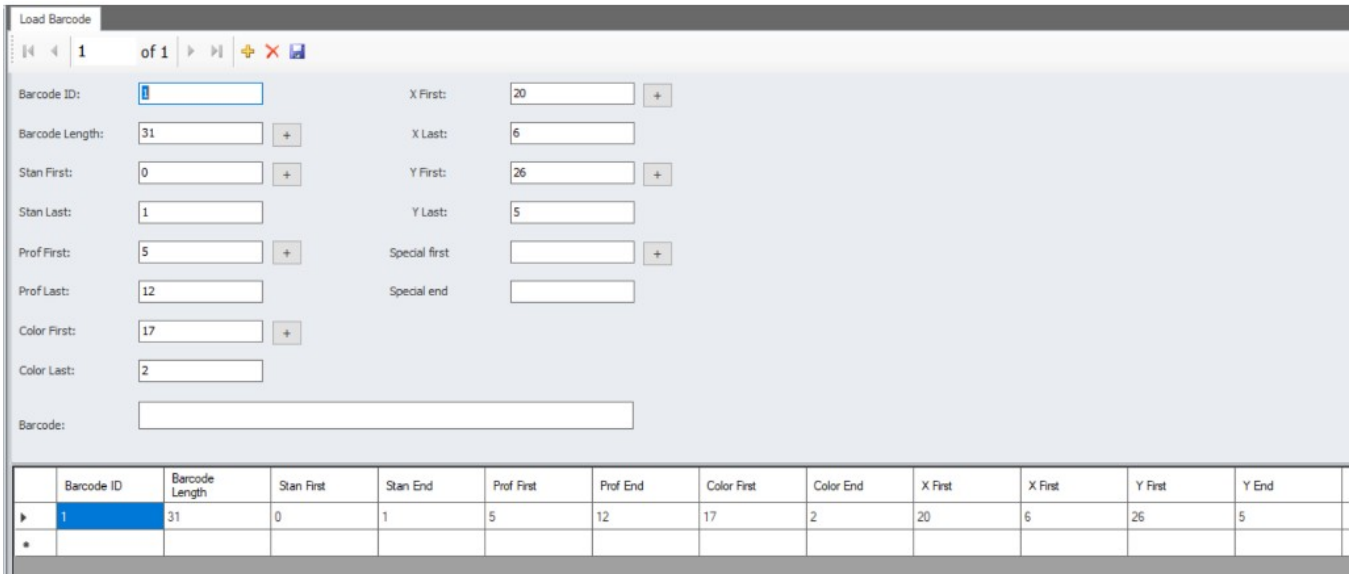

General settings

Field	Value	Description
Barcode ID	1	Barcode definition identifier. When multiple barcode formats are defined, each is saved with a different ID.
Barcode Length	31	Total character length of the scanned barcode. Parsing is performed according to this length.
Barcode	—	Test input field for barcodes. A sample barcode can be entered here to verify the configured indices and lengths.

Field parsing settings

Index values are **0-based** (the first character of the barcode is index 0). The **First** field specifies the starting index of the data within the barcode; the **Last / End** field specifies the number of characters (digits) to read starting from the First value.

Field	Value	Description
Stan First	0	Starting index of the standard character in the barcode.
Stan Last	1	Number of characters to read starting from Stan First.
Prof First	5	Starting index of the profile code in the barcode.
Prof Last	12	Number of characters to read starting from Prof First.
Color First	17	Starting index of the profile color code in the barcode.
Color Last	2	Number of characters to read starting from Color First.
X First	19	Starting index of the frame X-axis length in the barcode.
X Last	6	Number of characters to read starting from X First.
Y First	25	Starting index of the frame Y-axis length in the barcode.
Y Last	6	Number of characters to read starting from Y First.
Special first	—	Optional starting index for a custom field. Defined when additional data beyond the standard fields needs to be read.
Special end	—	Number of characters to read starting from Special first. Used together with Special first.

Summary table

Field	First	Last / End
Stan	0	1
Prof	5	12
Color	17	2
X	19	6
Y	25	6

This includes the fixed zero after each TT dimension: `289400 / 100 = 2894.00 mm` with dimension factor 1. Color contains both gasket and colour digits. Direct data input uses the manual screen; automatic operation selects a job-list row using the configured section or the entire scan. Direct list-number selection expects the list number itself (for example `001`); it does not remove an N prefix automatically.

In work-file-less mode, the scanned 31-character barcode is parsed into Stan, Prof, Color, X, and Y fields according to the indices and lengths above. If Special first / Special end are defined, an additional custom field is read using the same logic.