

PrioraFlow

Owner Manual & System Reference

Version 1.2 · May 2026

For Service Center Owners, General Managers & Operations Leadership

PrioraFlow — Owner Manual

Version: 1.2

Date: May 2026

For: Service center owners, general managers, and operations leadership

Table of Contents

1. [What Is PrioraFlow?](#)
 2. [Who Is It For?](#)
 3. [Getting Started](#)
 4. [User Roles & Permissions](#)
 5. [The Job Lifecycle](#)
 6. [The Priority Engine](#)
 7. [Next Best Actions](#)
 8. [Workshop Stages](#)
 9. [Parts Status Flow](#)
 10. [Customer Informed System](#)
 11. [The Job Board](#)
 12. [Job Detail Page](#)
 13. [Inspection System](#)
 14. [Estimate Builder & Authorization](#)
 15. [Booking Import](#)
 16. [Media & Photo Management](#)
 17. [Deferred Work](#)
 18. [Notifications](#)
 19. [Settings & Configuration](#)
 20. [Workshop Insights Dashboard](#)
 21. [Audit Logs](#)
 22. [Priority API Reference](#)
 23. [Technical Architecture](#)
 24. [Deployment Guide](#)
 25. [Security Model](#)
 26. [Glossary](#)
-

1. What Is PrioraFlow?

PrioraFlow is an **AI-powered flow-control system for the entire service center** — reception, workshop, parts, and delivery.

It is not a generic task manager. It is not a simple job tracker. PrioraFlow answers the critical question every service center faces daily:

Which vehicle needs attention right now — and what should be done about it?

The system gives **management full visibility** over every job, every stage, and every delay. It turns reactive workshop operations into a proactive, priority-driven flow.

The Problem It Solves

In a busy service center, managers oversee 15-50+ vehicles across reception, workshop, and delivery. Without a smart system:

- Promised delivery times get missed
- Customers sit waiting without updates
- Parts delays go unnoticed
- High-value or VIP customers don't get prioritized
- Vehicles sit idle because nobody noticed they were stuck
- Workshop capacity is underutilized
- Management has no real-time visibility into what's happening

PrioraFlow solves this by giving every job a **live priority score**, explaining **why** it's urgent, telling the team **exactly what to do next**, and giving **management a clear dashboard** of the entire operation.

Management Value

PrioraFlow gives owners and managers what they've never had before:

- **Real-time visibility** — See every job, every delay, every risk in one place. No more walking the floor.
- **Priority-driven operations** — The system tells the team what to focus on, based on data, not gut feeling.
- **Revenue capture** — Deferred work tracking means no lost revenue. Customer approval flow means no ambiguity.
- **Accountability** — Every status change is logged. Every action has an owner. Every delay is visible.
- **Scalability** — Works with 5 jobs or 500. The priority engine and next actions scale with the operation.

Key Differentiators

Feature	Traditional Workshop Software	PrioraFlow
Priority scoring	None — all jobs equal	Live 0-100 score, auto-updated
What to do next	Each person figures it out	Next Best Action for every job
Customer follow-up	Manual tracking	

Feature	Traditional Workshop Software	PrioraFlow
		Auto-flagged when waiting or overdue
Promised date risk	Manual mental note	Auto-calculated, flagged before it's late
Workshop ↔ Overall sync	Manual dual entry	Auto-synced, impossible to break
Parts delay visibility	Separate system	Integrated into priority score
Customer Informed flow	Sticky notes, WhatsApp groups	One-click with priority adjustment
Management visibility	Walk the floor or ask	Real-time board with priority, risk, and actions

2. Who Is It For?

Primary Decision Makers

- **Service Center Owners** — Full visibility into every job, every delay, every missed promise. ROI-driven oversight.
- **General Managers / Operations Managers** — Real-time dashboard of the entire service center: reception, workshop, and delivery.
- **Workshop Controllers** — See the full workshop flow, identify bottlenecks, allocate resources.

Active Users

- **Service Advisors** — Manage their jobs, priorities, next actions, and customer follow-ups.
- **Technicians** — Receive assignments, complete inspections, report progress.
- **Parts Coordinators** — Track parts status, update ETAs, unblock workshop.
- **Administrators** — Configure the system, manage users, and customize priority weights.

Ideal Service Center Profiles

- Premium and luxury automotive brands (Mercedes-Benz, BMW, Audi, etc.)
 - Service centers with 10+ active repair orders per advisor
 - Operations where missed promised dates cost real money and customer retention
 - Teams that want data-driven decisions, not guesswork
 - Management that needs real-time visibility, not just end-of-day reports
-

3. Getting Started

First Login

1. Open PrioraFlow in your browser (e.g., <https://your-workshop.pioraflow.com>)
2. Log in with your admin credentials (provided during setup)
3. You'll land on the **Job Board** — your main cockpit

Initial Setup

As an admin, configure these before your team starts using the system:

1. **Users & Roles** — Add your advisors, technicians, and managers (Settings → Users)
2. **Labour Rates** — Set your hourly rates for different operations (Settings → Labour Rates)
3. **Priority Weights** — Customize scoring to match your workshop's priorities (Settings → Priority Matrix)
4. **Inspection Templates** — Create or customize inspection checklists (Admin → Templates)
5. **Integrations** — Connect webhooks for notifications (Settings → Integrations)

Quick Tour

Screen	What It Shows
Job Board	All active jobs across the entire service center, sorted by priority
Job Detail	Full information for one job: status, priority, estimate, inspection, actions
Priority Snapshot	Top urgent jobs + next actions sidebar
Settings	System configuration, priority weights, users, labour rates
Admin	Dashboard stats, booking import, template management

Management sees everything. Advisors see their own jobs. Technicians see their assignments. This role-based visibility gives owners the full picture while keeping each team member focused on their work.

4. User Roles & Permissions

PrioraFlow uses **role-based access control**. Each user account is assigned one role. The role controls what screens the user can access and what backend actions they are allowed to perform.

Available Roles

Role	Purpose	Current Permission Keys
Admin	Full owner/system administrator access	*
Manager	Operational management access	jobs:read, jobs:write, customers:read, estimates:read, estimates:write, reports:read, settings:read, settings:write
Service Advisor	Advisor workflow: customers, jobs, estimates, inspections	jobs:read, jobs:write, customers:read, customers:write, estimates:read, estimates:write, inspections:read, inspections:write
Receptionist	Front-desk booking/customer creation	customers:read, customers:write, jobs:read, jobs:write
Technician	Inspection/workshop execution	inspections:read, inspections:write, jobs:read, media:write

Important: in the current backend, route-level access is mainly enforced by **role name** (admin, manager, service_advisor, etc.). The permission-key list is stored for configuration/future UI logic and should still be kept accurate when creating custom roles.

Admin Permissions

Admin is the owner-level role. Admin can:

- See all jobs, users, roles, settings, templates, labour rates, integrations, reports, and audit-sensitive configuration.
- Create, update, deactivate, and reset passwords for users.
- Create, update, and delete roles.
- Create/update/delete labour rates.
- Create/update/delete inspection templates, sections, and items.
- Update system settings, priority weights, and integrations.
- Access all jobs regardless of advisor or technician assignment.
- Archive/unarchive where supported by the workflow.

Admin-only backend actions include:

Area	Admin-only Examples
Users	Delete/deactivate users, reset user passwords
Roles	Create/update/delete roles
Labour Rates	Delete labour rates
Templates	Delete templates
System	Full access to all protected settings and configuration

Service Advisor Permissions

Service Advisor is the daily front-line role. A service advisor can:

- View job board data relevant to their advisor workflow.
- Create and update jobs.
- Move jobs through advisor-owned statuses such as Booked, Checking, Estimate Sent, Approved, and Closed when valid.
- Mark a booked customer as **Arrived**. This moves the job from booked to checking and records `arrived_at`.
- Mark a booked job as **No Show** when valid. The Kanban board safely handles `no_show` jobs even though there is no visible No Show column.
- Create/update customers.
- Read/write estimates.
- Read/write inspections where the advisor workflow requires it.
- Upload/read job media when the route allows it.

A service advisor cannot normally:

- Manage users or reset passwords.
- Create, update, or delete roles.
- Delete templates or labour rates.
- Change protected system settings.
- Access admin-only configuration screens unless explicitly allowed by the backend route.

Manager Permissions

Manager is between Admin and Service Advisor. Manager can generally:

- See all jobs.
- Manage operational settings.
- View reports and dashboard stats.
- Manage labour rates and templates where the backend allows manager access.
- Create and update users, but not perform admin-only destructive actions such as deleting roles or resetting passwords unless explicitly granted.

Receptionist Permissions

Receptionist is for front-desk intake. Receptionist can generally:

- Create and update customers.
- Create and update bookings/jobs.
- View jobs needed for booking/reception work.

Receptionist should not manage settings, roles, templates, labour rates, or password resets.

Technician Permissions

Technician is for workshop execution. Technician can generally:

- View assigned jobs/workshop tasks.
- Read and complete inspections.
- Upload media/photos.
- Update workshop-related progress where the route allows it.

Technician should not manage customers, estimates, settings, roles, users, or admin configuration.

Role-Based Job Visibility

- Advisors see **only their own jobs** by default.
- Technicians see **only jobs assigned to them**.
- Managers and admins see **all jobs**.
- Archived jobs are hidden from the active board unless the Archive filter is enabled.
- `no_show` is intentionally not a Kanban column; the board skips statuses that are not visible columns so the board remains stable.

Creating a New Role

Only an **Admin** can create a role.

Recommended process:

1. Go to **Admin → Users & Roles**.
2. Open the **Roles** section.
3. Click **Create Role**.
4. Enter:
5. **Name**: use a stable lowercase name such as `parts_coordinator` or `workshop_controller`.
6. **Description**: short business explanation.
7. **Permissions**: JSON/list of permission keys. Example: `["jobs:read", "jobs:write", "customers:read"]`.
8. Save the role.
9. Assign the role to users from the user management screen.

Backend API reference:

Action	Endpoint	Required Role
List roles	GET /api/admin/roles	Admin or Manager
Create role	POST /api/admin/roles	Admin
Update role	PATCH /api/admin/roles/:id	Admin
Delete role	DELETE /api/admin/roles/:id	Admin

Example create-role payload:

```
{
  "name": "parts_coordinator",
  "description": "Parts team member who can read jobs and update parts work",
  "permissions": ["jobs:read", "jobs:write", "customers:read"]
}
```


Safety rules:


- Do not delete a role while users are assigned to it; the backend blocks this.
- Avoid renaming core roles (admin, manager, service_advisor, technician, receptionist) unless the backend guards are also reviewed.
- If a new role must access protected screens, confirm the backend route allows that role name.

5. The Job Lifecycle

Every vehicle that enters the workshop follows a structured lifecycle. The system enforces valid transitions — you cannot skip steps or jump backwards arbitrarily.

Status Flow Diagram

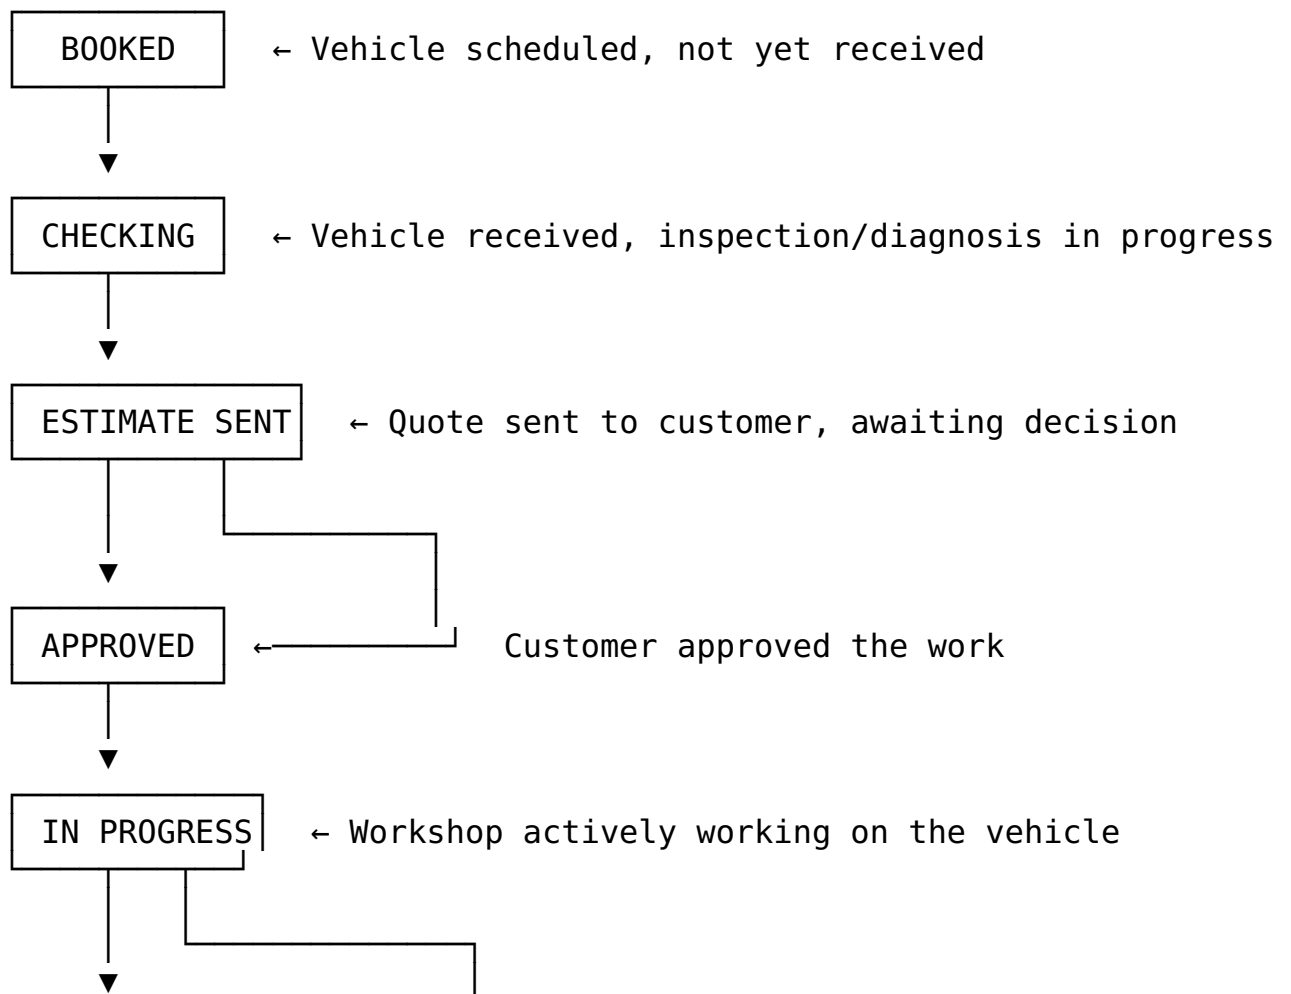

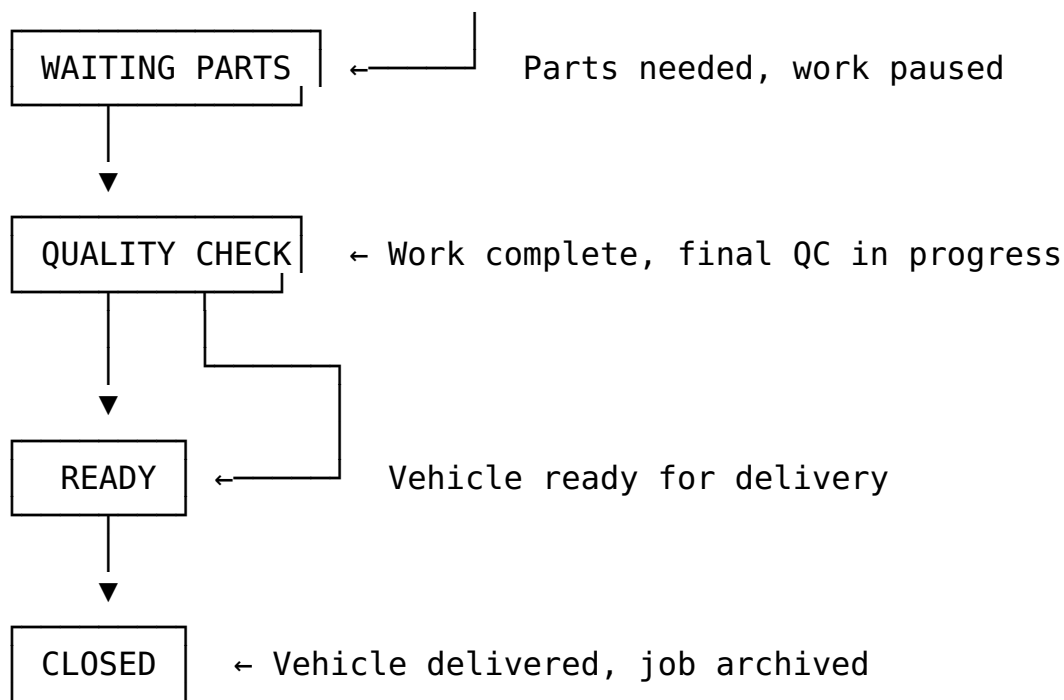

Allowed Transitions

From	Can Move To
Booked	Checking, Closed, No Show
Checking	Estimate Sent, Approved, In Progress, Closed
Estimate Sent	Checking, Approved, Closed
Approved	Estimate Sent, In Progress, Closed
In Progress	Waiting Parts, Quality Check, Ready, Closed
Waiting Parts	In Progress, Closed
Quality Check	In Progress, Ready
Ready	Quality Check, Closed
Closed	(terminal — no transitions out)
No Show	(terminal — no transitions out)

Three Operational Phases

Phase	Statuses	Who Owns It
Reception / Advisor	Booked, Checking, Estimate Sent, Approved	Service Advisor
Workshop	In Progress, Waiting Parts, Quality Check	Workshop / Technician
Delivery	Ready, Closed	Service Advisor

Side Effects on Status Changes

The system automatically handles these when status changes:

Action	What Happens
Move from Booked to Checking / click Arrived	arrived_at timestamp is set
Move from Booked to No Show	Job status becomes no_show; Workshop Stage is cleared; job is not shown in visible Kanban columns
End-of-day no-show cron	At 9:00 PM Dubai, remaining booked jobs with empty arrived_at are marked no_show
Move to Ready	completed_at timestamp is set
Move to Closed	invoiced_at timestamp is set
Move away from Closed	invoiced_at and archived_at are cleared
Move back to Booked	arrived_at is cleared
Move away from Ready (backwards)	completed_at is cleared
Move to Waiting Parts	Workshop Stage is cleared; Parts Status auto-sets to "Order Parts"
Parts Status → Parts Ready	Workshop Stage auto-sets to "Waiting to Start"
Workshop Stage → WIP	Overall status auto-sets to "In Progress"
Workshop Stage → Quality Check	Overall status auto-sets to "Quality Check"
Workshop Stage → Ready Handover	Overall status auto-sets to "Ready"

6. The Priority Engine

This is the heart of PrioraFlow. Every active job receives a **live priority score** from 0 to 100 — a single number that drives all risk badges, urgency labels, and dashboard sorting.

Single Score System

There is **one scoring system**. The same priorityScore determines: - The priority level badge (Low / Normal / High / Critical) on every card - The action card urgency label - Dashboard sorting and filtering - Stats counters

No separate calculations. No mismatched thresholds. One number, one meaning.

Priority Levels

Score Level	Color	Meaning
0-21 Low	Grey	No urgency. Normal progress.
22-39 Normal	Blue	Standard attention needed.
40-59 High	Amber	Elevated urgency — act soon.
≥ 60 Critical	Red	Immediate action required.

How the Score Is Calculated

Formula: $\text{Priority} = \min(100, 10 + \sum(\text{active factor weights}))$

Every job starts with a base score of 10. Then each active factor adds its weight. The total is capped at 100.

The action card's **urgency** (Low / Normal / High / Critical) is derived directly from this same priorityScore — not from a separate calculation.

Priority Factors

Factor	Default Weight	When It Applies	Category
Promise Overdue	30	Promised date has passed and job is not Booked/Ready/Closed	Promise Risk
Promise Due $\leq$ 2h	20	Promised date is within 2 hours	Promise Risk
Promise Due $\leq$ 6h	10	Promised date is within 6 hours	Promise Risk
No Promised Date	5	Active job (not booked/closed) has no promised date	Promise Risk
Customer Waiting	22	Customer is marked as waiting at the workshop	Customer
Customer Angry	18	Customer sensitivity set to "Angry"	Customer
Customer VIP	16	Customer sensitivity set to "VIP"	Customer
Customer Comeback	14	Customer sensitivity set to "Comeback"	Customer
Waiting Customer Decision	20	Job is in "Estimate Sent" status	Approval
Parts Backorder	22	Parts status is "Backorder"	Parts Risk
Parts Waiting Warehouse	16	Parts status is "Waiting Warehouse"	Parts Risk
Parts Need Order	12	Parts status is "Order Parts" or job is "Waiting Parts"	Parts Risk
Idle 24h+	20	Job hasn't been updated in 24+ hours (excludes Booked/Ready/Closed)	Idle Risk
Idle 12h+	12	Job hasn't been updated in 12+ hours (excludes Booked/Ready/Closed)	Idle Risk
Idle 6h+	6	Job hasn't been updated in 6+ hours (excludes Booked/Ready/Closed)	Idle Risk
Stage: Checking/ Diagnosis	10	Job is in "Checking" status	Stage Urgency

Factor	Default Weight	When It Applies	Category
Stage: QC / Near Delivery	10	Job is in "Quality Check" status	Stage Urgency
Ready to Inform	20	Job is "Ready" but customer not yet informed	Delivery
High Estimate Value	8	Estimate total $\geq$ 10,000	Value
Medium Estimate Value	4	Estimate total $\geq$ 5,000	Value

Weight Scale Guide

Range	Intent	Examples
4-8	Mild nudge — nice to address	Medium estimate, idle 6h
10-16	Moderate — should act soon	Parts waiting, VIP customer, QC stage
18-22	Strong — act now	Customer waiting, backorder, ready to inform, idle 24h
30	Maximum — critical alert	Promise overdue

Status Exclusions

Certain statuses are excluded from specific risk factors because they represent terminal or pre-start states, not active delays:

Status	Excluded From	Why
Booked	Idle risk (6h/12h/24h), Promise overdue	Appointment waiting for its slot — not a stuck job
Ready	Idle risk (6h/12h/24h), Promise overdue	Car is done — idle time here is normal collection wait
Closed	Idle risk (6h/12h/24h), Promise overdue	Job is finished — no action needed

What Gets Zeroed by "Customer Informed"

When a job is Ready and you click "Customer Informed," the priority score drops significantly because the main urgency factors are resolved:

Zeroed (urgency factors): - Promise risk (overdue, due soon, due today) - No promised date penalty - Customer waiting - Waiting customer decision - Parts risk - Idle risk - Stage urgency (checking, QC) - Ready to inform

Kept (permanent facts): - Customer sensitivity (angry, VIP, comeback) - Estimate value (high, medium)

The Next Best Action also changes from "Notify customer for collection" → "Arrange collection with customer" (Low urgency).

Example Priority Calculations

Job 1: Mercedes C-Class, RO-49126 (Ready, customer not informed)

Factor	Weight
Base	10
Promise Due $\leq$ 2h	20
Customer Waiting	22
Customer VIP	16
Total	68 → Critical

Job 2: Toyota Camry, RO-50106 (Ready, customer informed)

Factor	Weight
Base	10
Customer VIP	16
High Estimate Value	8
Total	34 → Normal

Job 3: BMW X5, RO-53903 (In Progress, idle 12h, angry customer)

Factor	Weight
Base	10
Idle 12h+	12
Customer Angry	18
Total	40 → High

Job 4: Booking, RO-49715 (Booked, idle 24h)

Factor	Weight
Base	10
(idle excluded — booked)	0
Total	10 → Low

Priority Score in the Next Best Action

The action card shows the job's priorityScore and derives its urgency badge from the same thresholds:

Score Range	Urgency	Badge Color
0-21	Low	Grey
22-39	Normal	Blue
40-59	High	Amber

Score Range	Urgency	Badge Color
≥ 60	Critical	Red

This is why a score of 27 always shows "Normal" everywhere — on the card, on the badge, on the stats. One number, one label.

7. Next Best Actions

Every active job has a **Next Best Action** — the system tells the responsible person exactly what to do. This eliminates the "walk the floor and ask" approach and gives management confidence that nothing falls through the cracks.

How It Works

The action is determined by the job's current status and phase. The action card displays: - **Title** — what to do - **Urgency badge** — derived from the job's priorityScore (same single-score system) - **Owner** — who should act (Advisor / Workshop / Parts) - **Reason** — why it matters, including risk signals - **Score** — the job's priorityScore

Actions by Status

Job Status	Next Best Action	Owner	Typical Score Range
Booked	Receive vehicle and start check-in	Advisor	10-16 (Low)
Checking	Complete diagnosis and prepare estimate	Advisor	24-38 (Normal)
Estimate Sent	Follow up customer decision	Advisor	30-50 (Normal-High)
Approved	Print job card and release to workshop	Advisor	26-38 (Normal)
Waiting Parts	Check parts ETA and update plan	Parts	28-50 (Normal-High)
In Progress (no technician)	Assign technician and start work	Workshop	26-42 (Normal-High)
In Progress (approval blocker)	Resolve advisor/approval blocker	Advisor	30-60+ (Normal-Critical)
In Progress (parts blocking)	Check parts ETA and unblock technician	Parts	30-60+ (Normal-Critical)
In Progress (normal)	Check technician progress	Workshop	22-38 (Normal)
Quality Check	Complete QC and prepare delivery	Workshop	28-50 (Normal-High)
Ready (customer not informed)	Notify customer for collection	Advisor	24-44 (Normal-High)

Job Status	Next Best Action	Owner	Typical Score Range
Ready (customer informed)	Arrange collection with customer	Advisor	10-34 (Low-Normal)

Customer Informed Impact on Actions

When a "Ready" job has the **Customer Informed** flag set:

Before Inform

Action: "Notify customer for collection"

Risk signals show idle, promise, etc.

Urgency: Normal-High

Score: 24-44+

After Inform

Action: "Arrange collection with customer"

Risk signals suppressed — only "customer informed" and "ready for delivery"

Urgency: Low

Score: 10-34

This prevents the common false alarm where a ready, informed car still shows high risk signals.

Risk Signals

Each action shows the risk signals that make it urgent (only for non-excluded statuses):

- **Promise overdue** — promised date has passed (excluded for Booked/Ready/Closed)
- **Promise due within 2h** — delivery promised very soon
- **Promise due within 6h** — delivery promised today
- **Customer waiting** — customer is at the workshop
- **Angry/VIP/Comeback customer** — sensitive customer relationship
- **Idle 6h+/12h+/24h+** — job hasn't progressed in too long (excluded for Booked/Ready/Closed)
- **Parts: backorder/waiting/order** — parts are blocking progress
- **High/medium estimate value** — significant financial value at stake

Promise Delivery Risk Widget

The "Promised delivery risk" sidebar widget shows jobs where: - Promise is overdue, OR promise is within 6 hours - **AND** job is NOT in Ready+Customer Informed status

Ready + informed jobs are excluded because the car is done and the customer knows — it's not a delivery risk, just a collection pickup.

8. Workshop Stages

Workshop stages track the **physical progress** of the vehicle inside the workshop. They are separate from the overall job status.

Workshop Stage Flow

Waiting to Start → Diagnosis → Estimate Prep → Advisor/Approval → WIP → Fi

Workshop Stages Detail

Stage	Label	What It Means
waiting_technician	Waiting to Start	Vehicle received, waiting for a technician or bay
diagnosis	Diagnosis	Technician is inspecting and diagnosing the vehicle
estimate_prep	Estimate Prep	Technician or advisor is preparing the quote
customer_approval	Advisor / Approval	Waiting for advisor follow-up or customer decision
work_in_progress	WIP	Technician is actively performing the repair
final_test	Final Test	Road test or final functional test
quality_check	QC	Quality control check in progress
ready_handover	Ready Handover	Vehicle is ready for customer delivery

Workshop ↔ Overall Auto-Sync

When you change the Workshop Stage, the overall job status updates automatically:

Workshop Stage Change Overall Status Auto-Set To

- WIP In Progress
- Quality Check Quality Check
- Ready Handover Ready

And when overall status changes:

Overall Status Change Parts Status Auto-Set To

- Waiting Parts Order Parts

Parts Status Change Workshop Stage Auto-Set To

- Parts Ready Waiting to Start

When Workshop Stage Is Disabled

The Workshop Stage dropdown is disabled (greyed out) when the vehicle is not in the workshop:

Overall Status	Workshop Stage	Parts Status
	☐ Disabled	☐ Disabled

Overall Status	Workshop Stage	Parts Status
Booked, Checking, Estimate Sent, Approved		
Waiting Parts	☐ Disabled	☐ Active
In Progress, Quality Check, Ready	☐ Active	☐ Active

When disabled, the Operational Snapshot shows "—" instead of a misleading stage name.

9. Parts Status Flow

Parts status tracks the supply chain state for parts needed by the job.

Parts Statuses

Status	Label	What It Means
no_parts	No Parts	No parts needed for this job
order_parts	Order Parts	Parts need to be ordered
waiting_warehouse	Waiting Warehouse	Parts ordered, waiting at warehouse
backorder	Backorder	Parts are on backorder — delayed supply
parts_ready	Parts Ready	All parts received and available

Auto-Sync Behaviors

- Overall status → **Waiting Parts**: Parts status auto-sets to **Order Parts**
- Parts status → **Parts Ready**: Workshop stage auto-sets to **Waiting to Start**

Parts Status and Priority

Parts status directly affects the priority score:

Parts Status	Priority Impact
Backorder	+22 (strong — supply chain is stuck)
Waiting Warehouse	+16 (moderate — parts on the way)
Order Parts	+12 (mild — needs action but not blocked yet)
No Parts / Parts Ready	+0

10. Customer Informed System

When a vehicle is ready for delivery, the most important action is informing the customer. The Customer Informed system makes this a one-click operation with smart priority adjustment.

When the Button Appears

The "**Customer Informed**" button appears: - On the job detail page (in the status section) - On the job board cards - **Only when** the job status is **Ready** - **Only when** customer_informed is false

What Happens When You Click It

1. customer_informed is set to true
2. is_customer_waiting is auto-cleared (customer was waiting, now they know)
3. Urgency factors are zeroed from the priority score
4. Button changes to ✓ **Informed** (disabled, cannot be unclicked)
5. Toast notification confirms: "Customer informed — urgency factors cleared from priority"

Priority Before and After — Example

Before clicking "Customer Informed":

Factor	Weight
Base	10
Ready to Inform	20
Customer Waiting	22
Promise Due $\leq$ 2h	20
Total	72 → High

After clicking "Customer Informed":

Factor	Weight
Base	10
(urgency factors zeroed)	0
Customer VIP (permanent)	16
High Estimate Value (permanent)	8
Total	34 → Low

The priority drops because the car is handled and the customer knows. But permanent facts (VIP, value) keep a small baseline — you still treat VIP customers well.

11. The Job Board

The Job Board is the main screen — a Kanban-style view of all active jobs across the entire service center, organized by status. **This is management's real-time visibility tool:** see the whole operation at a glance, identify bottlenecks, and know exactly where attention is needed.

Board Layout

The board is divided into **three phases**, each with its own color:

Phase	Color	Columns
Reception / Advisor	Blue	Booked, Checking, Estimate Sent, Approved
Workshop	Orange	In Progress, Waiting Parts, Quality Check
Delivery	Green	Ready, Closed

What Each Card Shows

- **Job number** and current status badge
- **Customer name** and **vehicle** (make, model, plate)
- **Priority score** (color-coded badge)
- **Priority reasons** (expandable on hover/click)
- **Parts status** badge (if applicable)
- **Customer sensitivity** badge (VIP, Angry, Comeback)
- **Promised date** with overdue/due-soon indicators
- **Customer Informed** button (when Ready and not yet informed)

Priority Sidebar

The sidebar shows:

1. **Priority Snapshot** — Top 6 most urgent jobs with scores and next actions
2. **Advisor Actions** — Top 8 recommended actions, sorted by priority + action urgency

Drag and Drop

Jobs can be moved between columns by changing status via the dropdown or the "Next →" button. The board updates in real time.

12. Job Detail Page

Clicking a job opens its full detail page with everything about that repair order.

Sections

Operational Snapshot

At-a-glance summary cards:

Card	Shows
Current Status	Overall job status with color badge
Workshop Stage	Current workshop stage (or "—" if not applicable)
Parts Status	Current parts status
Priority Flags	Customer waiting/not waiting + sensitivity level
Advisor	Assigned service advisor
Technician	Assigned technician
Odometer	Vehicle odometer reading (synced from inspection)

Customer & Vehicle Info

- Customer name, phone, email
- Vehicle make, model, year, color, plate, VIN

Status Controls

- **Overall Status dropdown** — shows current status, auto-changes on selection
- **"Next →" button** — advances to the logical next status
- **Workshop Stage dropdown** — disabled when not applicable
- **Parts Status dropdown** — disabled in reception phases
- **Promised Date** picker — setting a promised date removes the +5 "No Promised Date" penalty
- **Customer Informed** button — appears when Ready

Priority Explanation

Shows the full breakdown:

Priority: 72 / High

- Promise risk: due ≤2h +20
- Customer waiting +22
- Customer sensitivity: VIP +16
- Ready to inform customer +20

Estimate / Quote

- Full estimate builder with labour, parts, and sublet lines
- Group by concern area or general/other
- Tax calculation (auto)
- Send approval link to customer
- Track customer decisions

Inspection

- Link to inspection workspace
- Odometer and fuel level readings
- Findings with severity markers
- Photos and media

Media Gallery

- All photos and documents attached to the job
- Upload new media
- View/delete existing media

Job History

- Timestamped log of all status changes
 - Shows who changed what and when
-

13. Inspection System

Overview

Every job can have one inspection. The inspection captures the vehicle's condition when it arrives and documents findings that may become estimate lines.

Inspection Templates

Templates define the structure of an inspection. Each template contains:

- **Sections** — Groups like "Exterior", "Interior", "Engine", "Underbody"
- **Items** — Individual checks within each section

Item Input Types

Type	What It Captures	Example
pass_fail	Green/Red pass or fail	Brake pads — Pass / Fail
yes_no	Yes or No	Tyre rotation needed?
ok_warn_fail	Three-level: OK / Warning / Fail	Belt condition
number	Numeric value	Tyre tread depth (mm)
odometer	Mileage reading (km)	Vehicle odometer
fuel_level	Fuel level	Fuel gauge reading
text	Free-text notes	Additional observations
toggle	On/off switch	AC working?
photo	Photo capture	Damage documentation

Odometer Sync

When a technician enters the odometer reading in the inspection, the value **automatically syncs to the job's odometer field**. No double entry needed.

Inspection Lifecycle

In Progress (editable) → Submitted (locked) → Reviewed → Approved

- **Creating** an inspection auto-moves a Booked job to Checking
- Once submitted, the inspection is locked and cannot be edited
- An advisor can **reopen** a submitted inspection to allow corrections
- Reopen moves the inspection back to In Progress

Urgency Markers

Each inspection response can be marked with urgency:

Urgency Meaning

None	Normal finding
Low	Minor note
Medium	Should be addressed
High	Must be addressed — safety or customer impact
Critical	Immediate attention required

14. Estimate Builder & Authorization

Estimate Builder

The estimate builder creates the quote for the customer. It supports:

- **Labour lines** — Operation code, hours, labour rate, line total
- **Parts lines** — Part number, quantity, unit price, line total
- **Sublet lines** — External work sent to third parties
- **Grouping** — Lines can be grouped by concern area (linked to inspection findings) or as General/Other

All financial totals are calculated on the **backend** — the frontend cannot override prices.

Customer Approval Flow

The customer approval flow is a key differentiator for management: no more verbal approvals, no more "I think they said yes." Every decision is tracked, timestamped, and auditable.

1. Advisor creates the estimate

2. Advisor clicks "**Send Approval**" — system generates a unique approval link
3. Link is sent to the customer (via WhatsApp, SMS, or email)
4. Customer opens the portal and sees:
5. Job and vehicle summary
6. Inspection findings (grouped by severity: red → amber → green)
7. Estimate lines with approve/decline/defer buttons
8. Job photos
9. Customer makes decisions per line
10. System records decisions and:
11. Approved lines → proceed with work
12. Declined/deferred lines → create **Deferred Work** records
13. If all lines approved → job auto-moves to **Approved**
14. Advisor receives notification of customer decision

Approval Links

- Links are hashed (SHA-256) for security — raw tokens are never stored
- Links expire after 7 days by default
- Links are single-use — once the customer submits, the link is invalid
- Links can be revoked manually by the advisor

Estimate Line History

Before any estimate line is modified, the system snapshots the previous version into `estimate_line_history`. This provides a full audit trail of quote changes.

15. Booking Import

Overview

The booking import allows bulk creation of jobs from a DMS export file (XLSX or CSV).

How to Use

1. Go to **Admin → Booking Import**
2. Upload your XLSX or CSV file
3. Map columns to system fields
4. Preview and confirm import

Supported Fields

Column	Maps To
Customer name	Customer first/last name
Contact / Phone	Customer phone
Vehicle Make/Model/Year	Vehicle details

Column	Maps To
Plate number	Vehicle plate
VIN	Vehicle VIN
Appointment date	Job promised date

Smart Features

- **Header row detection** — Rows with "Customer name", "Name", "Contact" etc. are automatically skipped
 - **Duplicate detection** — Existing customers/vehicles are matched and reused
 - **Auto-booking** — Imported jobs start as "Booked" status
 - **Odometer import** — Mileage values from the booking file are stored
-

16. Media & Photo Management

Upload Methods

- **Direct upload** — File uploaded through the browser
- **Presigned URL** — For large files or mobile upload flows

Storage

Files are stored in **MinIO** (S3-compatible object storage). Metadata lives in the database.

Media Organization

- Media is attached to either a **job** or an **inspection response**
- Filenames are normalized to `{job_number}_{timestamp}.{ext}`
- Media is **soft-deleted** — can be recovered if accidentally removed

Customer Portal Access

Customer-facing media (photos, inspection findings) is served through an API proxy — customers never get direct access to internal storage URLs.

17. Deferred Work

What Is Deferred Work?

When a customer declines or defers an estimate line, the system creates a **Deferred Work** record. This is work that was recommended but not approved.

For management, this is captured revenue. Deferred work represents jobs the customer didn't approve today — but might approve next visit, next

month, or when reminded. Without tracking it, this revenue simply disappears.

What You Can Do with Deferred Work

Action	What Happens
Remind	Send the customer a reminder about the deferred item
Book into New Job	Create a new job from the deferred work
Close / Expire	Mark the deferred work as no longer relevant

Why It Matters for Revenue

Deferred work is **revenue you haven't captured yet**. The system keeps it visible so the team can follow up when the timing is right — next service visit, seasonal promotion, etc. Management can track the total deferred value and measure follow-up conversion over time.

18. Notifications

How Notifications Work

1. An event occurs (inspection submitted, approval received, etc.)
2. A notification record is created in the database
3. If a webhook is configured, the notification is queued for delivery
4. Delivery is retried with exponential backoff on failure
5. If no webhook exists, the notification is marked as "sent" (no-op)

Database Is the Source of Truth

All notifications live in the database first. The delivery queue (BullMQ + Redis) is best-effort infrastructure. If Redis goes down, notifications still exist and can be re-queued when the system recovers.

Supported Events

- Inspection submitted
 - Customer decision received
 - Job status changed
 - Approval link generated
 - Deferred work reminder
-

19. Settings & Configuration

Priority Matrix Settings

Customize the weight of every priority factor to match your workshop's priorities.

Access: Settings → Priority Matrix

Each factor has a weight slider (0–30). Changes take effect immediately on the job board.

Settings Groups:

Group	Factors
Promise Risk	Promise Overdue, Promise Due $\leq$ 2h, Promise Due $\leq$ 6h, No Promised Date
Customer	Customer Waiting, Customer Angry, Customer VIP, Customer Comeback
Approval	Waiting Customer Decision
Parts Risk	Parts Backorder, Parts Waiting Warehouse, Parts Need Order
Idle Risk	Idle 12h+, Idle 6h+
Stage Urgency	Stage: Checking/Diagnosis, Stage: QC/Near Delivery
Delivery	Ready to Inform
Value	High Estimate Value, Medium Estimate Value

Labour Rates

Set hourly rates for different operation types. These are used in the estimate builder to calculate labour line totals.

Users

Add, edit, deactivate, and assign roles to users.

Integrations

Configure webhook URLs for notification delivery (WhatsApp, SMS, email, etc.).

20. Workshop Insights Dashboard

The Insights Dashboard gives management a **real-time analytical view** of the entire service center. It is the executive summary — the numbers that matter, the trends that signal problems, and the KPIs that track performance.

Access

- **URL:** /insights
- **Roles:** Admin, Manager, Service Advisor
- **Data source:** GET /api/insights/dashboard

Dashboard Cards

The top of the page shows key metrics at a glance:

Card	What It Shows
Active Jobs	Count of non-archived, non-closed jobs
Customers	Count of active customer records
Vehicles	Total vehicles in the system
Inspections	Total inspections on record
Estimate Lines	Total estimate lines across all jobs
Pending Deferred	Deferred work items still pending follow-up

Charts & Visualizations

Chart	Description	Time Range
Jobs by Status	Bar chart showing distribution of jobs across all statuses	Current snapshot
Jobs Over Time	Line chart — jobs created vs. jobs closed per day	30 days
Arrival / No-Show Trend	Daily arrival and no-show counts	14 days
Advisor Attendance	Per-advisor arrival vs. no-show ratio	30 days
Customer Approval Rate	Overall % of estimates approved by customers	Rolling
Inspection Completion	% of inspections completed vs. pending	Rolling

Revenue Metrics

The dashboard tracks revenue visibility:

- **Total estimate value** across all active jobs
- **Approved revenue** — estimate value on approved/production jobs
- **Pending revenue** — estimate value still awaiting customer decision
- Revenue is broken down by job status

Deferred Work by Status

Shows how many deferred items are in each state (pending, reminded, booked, closed, expired) — this ties directly to the Deferred Work page and helps management track lost revenue recovery.

Management Use Cases

Question	Where to Look
Are we closing jobs fast enough?	Jobs Over Time chart — created vs. closed gap
Are customers approving estimates?	Customer Approval Rate card
Are inspections being completed?	Inspection Completion Rate
Are no-shows a problem?	Arrival / No-Show Trend
How much revenue is at risk?	Revenue metrics + Deferred Work by Status

21. Audit Logs

PrioraFlow logs every significant action in the system. Audit logs provide a **complete, tamper-proof trail** of who did what, when, and to which record.

Access

- **Endpoint:** GET /api/audit-logs
- **Roles:** Admin only
- **Filtering:** By entity type, user, action, and entity ID

What Gets Logged

Category	Examples
Job changes	Status transitions, field updates, archive/unarchive
Estimate changes	Line added, line edited, line removed, authorization decision
Customer changes	Customer created, updated, sensitivity changed
Inspection	Inspection created, responses updated, media attached
Media	Files uploaded, deleted
User management	User created, role changed, password reset
Settings	Priority weights changed, system settings updated
Auth	Login, logout, token refresh, failed login attempt

Log Entry Structure

Field	Description
action	What happened (e.g., status_change, create, update, delete)

Field	Description
entityType	What record was affected (e.g., job, estimate_line, customer)
entityId	UUID of the affected record
userId	UUID of the user who performed the action
timestamp	When the action occurred
oldValue / newValue	Previous and new state (for updates)

Management Use Cases

- **Dispute resolution:** "Who changed this job's status and when?"
- **Compliance:** Full audit trail for regulatory requirements
- **Performance review:** Track how quickly advisors process estimates
- **Security investigation:** Identify unauthorized access or suspicious patterns

22. Priority API Reference

The Priority Engine is the **single source of truth** for all priority scoring. The frontend does not compute scores — it consumes the API.

Endpoints

Endpoint	Method	Auth	Description
/api/priority	GET	Admin, Manager, Service Advisor	Get priority scores for all active jobs
/api/priority/:id	GET	Admin, Manager, Service Advisor	Get priority score for a single job

Query Parameters (Bulk Endpoint)

Parameter	Type	Description
status	string	Filter by status (comma-separated), e.g. in_progress,waiting_parts
advisor_id	UUID	Filter to a specific advisor's jobs
limit	number	Max results (default 200)

Response Structure

```
{
  "results": [
    {
      "jobId": "uuid",
      "jobNumber": "PF-0001",
      "score": 52,
```

```

    "level": "high",
    "factors": [
      { "key": "promiseDue2h", "weight": 20, "description": "Promise risk: 2h+" },
      { "key": "customerAngry", "weight": 18, "description": "Customer score: 18+" },
      { "key": "idle12h", "weight": 12, "description": "Idle risk: 12h+" }
    ],
    "idleHours": 14.3,
    "hoursToPromise": 1.5,
    "isOverdue": false,
    "nextAction": {
      "title": "Follow up customer decision",
      "reason": "Estimate has been sent...",
      "urgency": "high",
      "owner": "advisor",
      "actionType": "customer_decision_follow_up",
      "score": 52,
      "signals": ["waiting customer decision"]
    }
  },
  ],
  "computedAt": "2026-05-05T12:00:00.000Z"
}

```

Scoring Exclusions

The Priority Engine applies **smart exclusions** to avoid false risk signals:

Factor	Excluded Statuses	Reason
Promise overdue	Booked, Ready, Closed	Booked hasn't started; Ready/Closed are past delivery
Idle risk	Booked, Ready, Closed	Booked = not started; Ready/Closed = idle is normal
Customer Informed jobs	Ready + Informed	Customer already knows — no risk to signal

When a job is ready **and** `customer_informed = true`, the engine **zeros out** promise, customer-waiting, parts, and stage urgency factors. The only remaining action is "Arrange collection with customer."

Priority Level Thresholds

Score Range	Level	Badge Color
0-21	Low	Gray
22-39	Normal	Blue
40-59	High	Amber
60-100	Critical	Red

Factor Categories

Category	Factors	What They Measure
Promise	promiseOverdue (30), promiseDue2h (20), promiseDue6h (10), noPromiseDate (5)	Delivery deadline risk
Customer	customerWaiting (22), customerAngry (18), customerVip (16), customerComeback (14)	Customer profile risk
Approval	waitingCustomerDecision (20)	Estimate approval delay
Parts	partsBackorder (22), partsWaitingWarehouse (16), partsNeedOrder (12)	Supply chain blockers
Idle	idle24h (20), idle12h (12), idle6h (6)	Time since last update
Stage	stageCheckingDiagnosis (10), stageQcNearDelivery (10)	Phase-specific urgency
Delivery	readyToInform (20)	Ready but customer not informed
Value	highEstimateValue (8), mediumEstimateValue (4)	Revenue at stake

Note: All weights are configurable from Settings → Priority Matrix. The values above are defaults.

Frontend Integration


The frontend **never** computes priority scores. Both the Job Board and Job Detail pages fetch from `/api/priority`:

- **Job Board:** Fetches bulk priority on load, merges scores into each job card
- **Job Detail (Overview tab):** Shows live score, level badge, risk factors, and next action panel
- **Display helpers** (`getPriorityTone`, `getActionUrgencyClass`) in `jobs-data.ts` are **pure UI mapping** — they convert scores/levels to CSS classes, not scoring logic

23. Technical Architecture

System Components



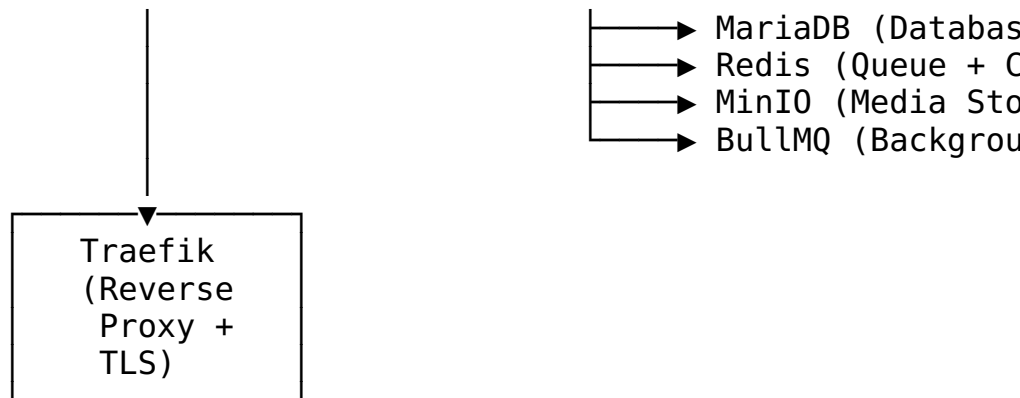

Tech Stack

Component	Technology	Purpose
API	NestJS (Node.js)	Business logic, REST API
Web App	Next.js 16 (React)	Frontend UI
Database	MariaDB (MySQL)	All data storage
ORM	Prisma	Database access layer
Cache	Redis	Session cache, BullMQ backend
Queue	BullMQ	Background job processing
Media	MinIO (S3)	File and photo storage
Proxy	Traefik	Reverse proxy, TLS, routing
Auth	JWT + Refresh Tokens	User authentication

API Structure

- Base URL: /api
- Authentication: JWT Bearer tokens
- Health check: /health (no auth required)
- Customer portal: /api/portal/* (token-based auth, no JWT)
- Swagger docs: Available in non-production environments

Database Schema (Key Tables)

Table	Purpose
users	Staff accounts
roles	Permission roles
customers	Customer records
vehicles	Vehicle records
jobs	Main workshop job records
job_status_history	Audit trail of status changes
inspections	One inspection per job
inspection_items	Template items
inspection_responses	Actual findings
estimate_lines	Quote/estimate items

Table	Purpose
estimate_line_history	Audit trail of estimate changes
approval_tokens	Customer approval links (hashed)
authorisation_decisions	Per-line customer decisions
deferred_work	Declined/deferred estimate items
media_files	Uploaded media metadata
notifications	Queued and sent notifications
settings	System configuration
labour_rates	Hourly rates
audit_logs	Operational audit trail
refresh_tokens	Login sessions

24. Deployment Guide

Requirements

Requirement Minimum

OS	Linux (Ubuntu 20.04+)
CPU	2 cores
RAM	4 GB
Disk	40 GB SSD
Docker	20.10+ with Compose V2
Domain	A registered domain with DNS access

Deployment Steps

1. **Clone the repository** `bash git clone https://github.com/hmelshenawy/superflow-api.git cd superflow-api git checkout dev`
2. **Configure environment** `bash cp .env.example .env.production #`
Edit `.env.production` with your settings
3. **Build and start** `bash docker compose --env-file .env.production up -d`
4. **Set up TLS**
5. Traefik automatically provisions Let's Encrypt certificates
6. Point your domain DNS to the server IP
7. Traefik handles HTTP → HTTPS redirect
8. **Create admin user**
9. First user through the setup flow becomes admin
10. Or seed via database

Environment Variables (Key)

Variable	Purpose
DATABASE_URL	MariaDB connection string
JWT_SECRET	Token signing key
MINIO_ENDPOINT	Media storage endpoint
MINIO_ACCESS_KEY / MINIO_SECRET_KEY	MinIO credentials
CORS_ORIGINS	Allowed frontend origins
APP_DOMAIN	Your domain (e.g., prioraflow.com)

Updating

```
git pull origin dev
docker compose --env-file .env.production build
docker compose --env-file .env.production up -d
```

Backups

- **Database:** Use mysqldump or MariaDB backup tools
 - **Media:** Sync MinIO data directory
 - **Config:** .env.production file should be securely stored
-

25. Security Model

Authentication

- **Staff login:** JWT access tokens (short-lived) + Refresh tokens (long-lived)
- **Refresh tokens:** Stored as SHA-256 hashes, rotated on each use
- **Rate limiting:** Login (5/min), Refresh (10/min)
- **Session management:** View active sessions, revoke individually or all

Customer Portal

- **Token-based access:** Unique hashed token per approval link
- **No JWT required:** Customer accesses via secure link only
- **Token expiry:** 7 days default
- **Single use:** Token invalidated after decision submission
- **Media proxy:** Customer never accesses internal storage directly

Data Protection

- **Soft deletes:** Media and some records use soft deletion (recoverable)
- **Audit logging:** All significant actions are logged
- **Input validation:** Strict DTO validation rejects unknown fields

- **CORS:** Configured origins only
 - **Helmet:** Security headers enabled
 - **Throttling:** Global rate limiting on all API routes
-

26. Glossary

Term	Definition
Job / RO	A repair order — the main unit of work in PrioraFlow
Priority Score	0-100 number indicating how urgently a job needs attention
Priority Level	Low / Normal / High / Critical — derived from the score
Workshop Stage	The physical stage of the vehicle inside the workshop
Parts Status	The supply chain state for parts needed by the job
Customer Informed	Flag indicating the customer has been told their vehicle is ready
Next Best Action	The system's recommendation for what the advisor should do next
Deferred Work	Estimate items the customer didn't approve — tracked for follow-up
Approval Token	A secure, hashed link sent to the customer for estimate approval
Inspection	A structured vehicle check performed by the technician
Estimate	The quote/price breakdown sent to the customer
DMS	Dealer Management System — the workshop's core business system
Promised Date	The date/time the customer was told their vehicle would be ready
Idle Time	How long since the job was last updated
Kanban Board	Visual job board organized by status columns
Traefik	The reverse proxy that handles routing and TLS
MinIO	S3-compatible object storage for media files
BullMQ	Background job queue powered by Redis

PrioraFlow — Know what's urgent. Know what to do next.