

HARDWARE INSTRUCTION

1. Note

When you receive the device, before opening the enclosure, please be careful when separating the top cover and bottom housing. Please do it slowly and gently, as some components, such as the camera, are fixed to the top cover, while the connector is connected to the board mounted in the bottom housing. If not handled carefully, the camera FPC cable may accidentally be damaged or torn.

2. Power



Figure 1: This is the power cable sourced from PoE to supply the system. Please provide a minimum voltage of 30V and a maximum voltage of 57V. The default/normal operating voltage is 48V

3. Peripheral

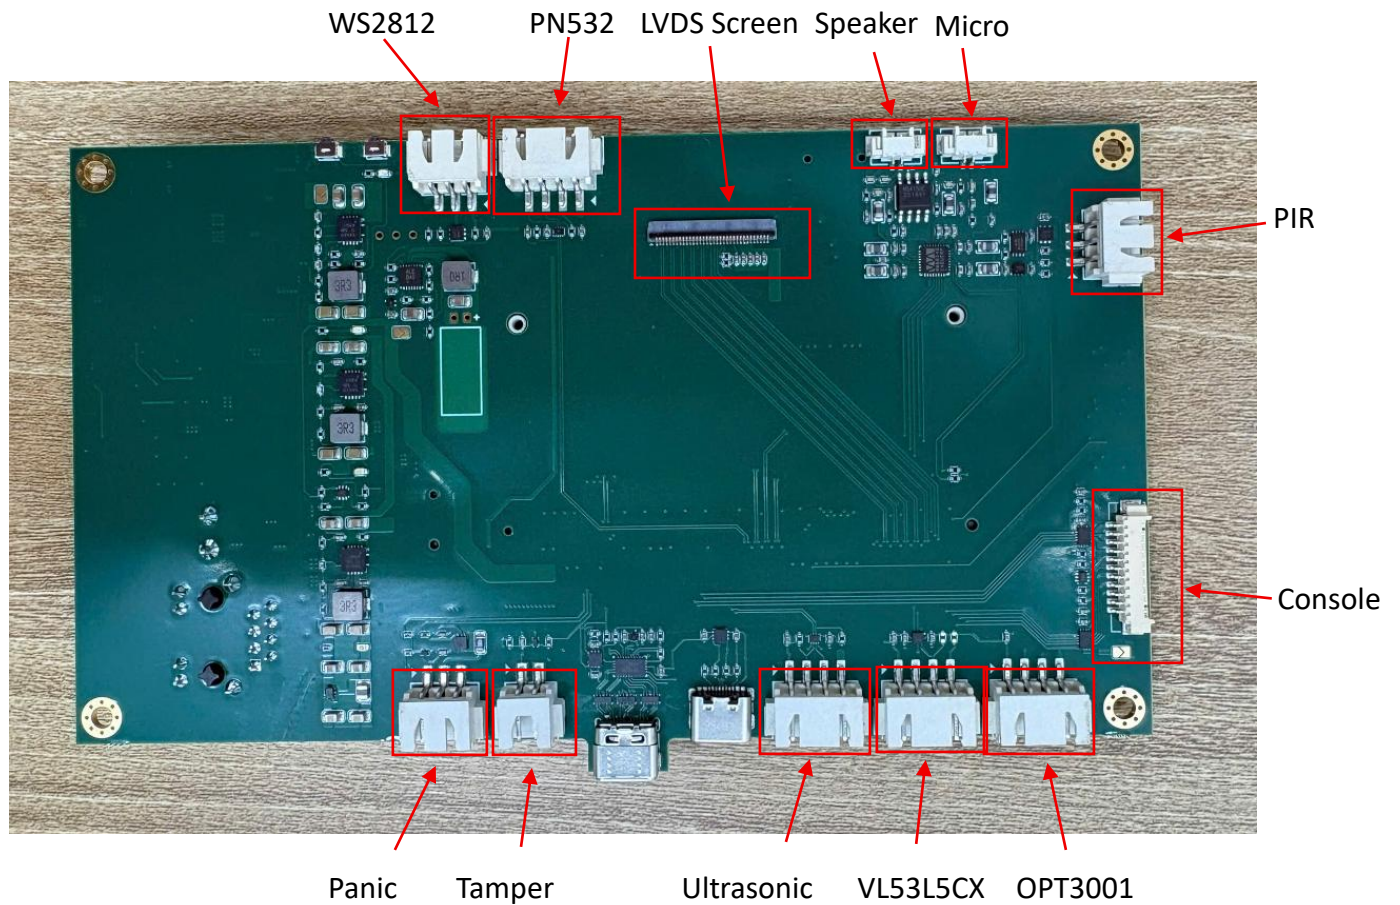


Figure 2: This image illustrates the communication interfaces and peripherals on the board



4. Some assembly images

