




Step 1: Remove the spring


Step 2: Replace the spring assembly with the damper cylinder

Step 3: Install the damper



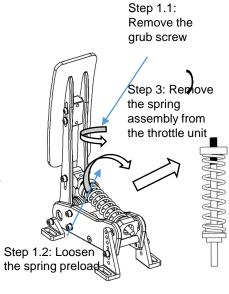

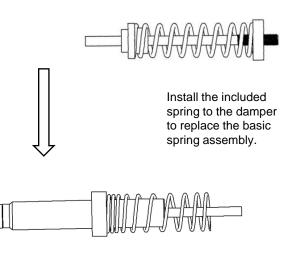


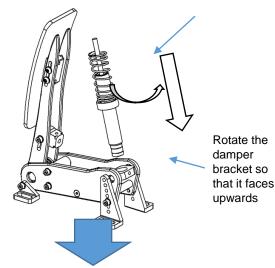


Step 6: Adjust the pedal

M5x4 flat-headed

grub screw

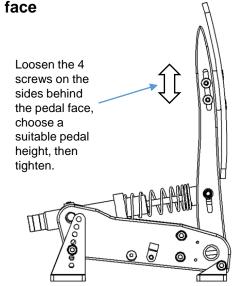

Step 5: Adjust the damper

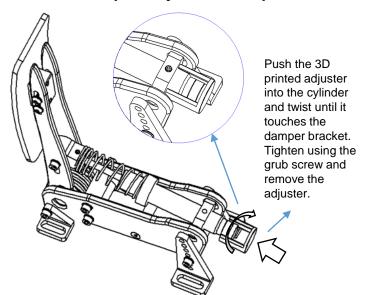

Step 4: Fix the damper rod's end to the pedal arm

