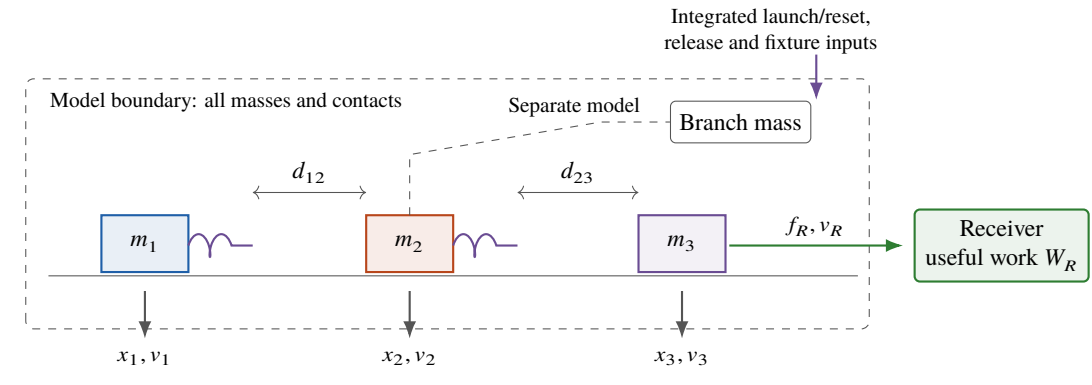
Integrated launch/reset,
release and fixture inputs
Model boundary: all masses and contacts
Separate model
Branch mass
d_{12}
d_{23}
m_1
m_2
m_3
f_R, v_R
Receiver
useful work W_R
x_1, v_1
x_2, v_2
x_3, v_3