

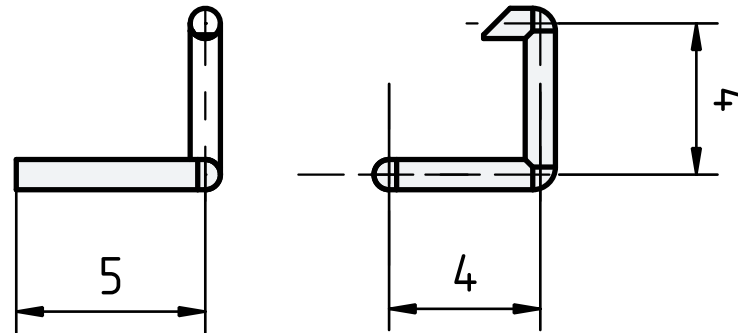


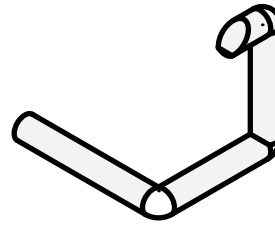

The Film Claw catches the edge of the film through this gap. If the gap is too large, it may grab two sheets instead of one, causing a jam. Clearing the jam usually requires opening the camera and removing the film pack, so it's worth spending a little extra time getting this adjustment right.

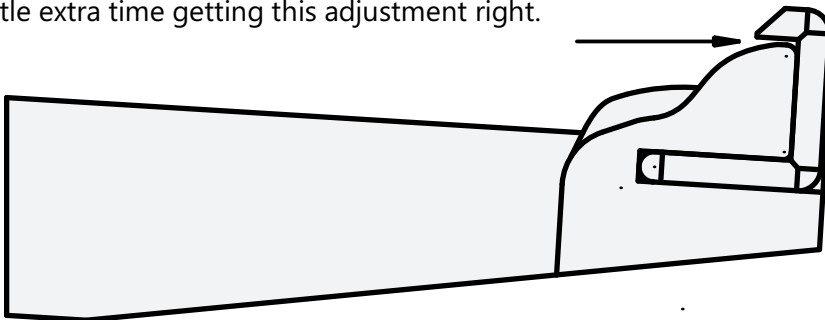

RICOHFLEX instax back

M-02	Film Claw	5:1	
(Stainless) Steel			
This is one of the most delicate and important parts of the mechanism. It plays a key role in advancing the film. The tip is intentionally chamfered, but expect to fine-tune it during assembly. Aim for approximately 0.2 mm of clearance between the tip of the Film Claw and the Film Claw Arm.			
Ver.1.0	2026/07/20	HOCKE Morikawa	