




~How to use~

Install the Kit

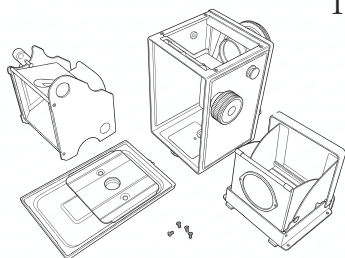


1. Remove the film gate, back cover, and waist-level finder from your Ricohflex.

To lock the winding knob in the pulled-out position, pull it outward and rotate it counterclockwise.

Removing the four screws that secure the waist-level finder will also release the back cover.


The original film gate and back cover are no longer needed while using this kit. Store them in a safe place for future use.

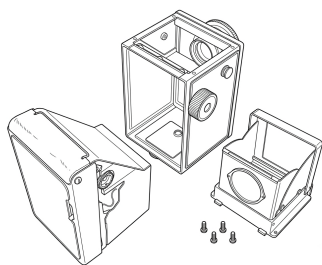


2. Install the RICOHFLEX instax back into the camera. Be careful not to let the gears fall out during installation, as they can easily come loose by design. Once the kit is fully seated, return the winding knob to its original position.

If the knob does not return smoothly, try rotating it while pushing up the rear lever

3. Reinstall the waist-level finder. Make sure the finder hood holds down the upper clip of the RICOHFLEX instax back (see the illustration below). Leaving the finder hood open during installation makes this step easier.

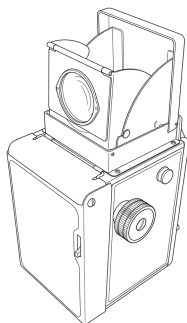

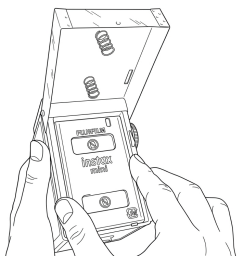


Load the Film

Open the back cover and insert an instax mini film pack.


The film is correctly oriented when the yellow mark is visible in the upper-right corner.

Be careful not to catch the film pack on the spring.


SHOOT.

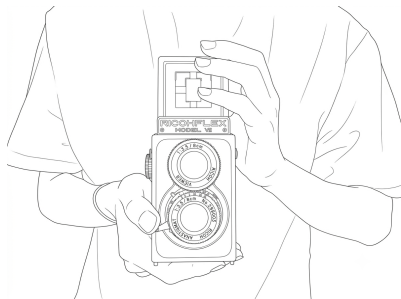

Eject the Film

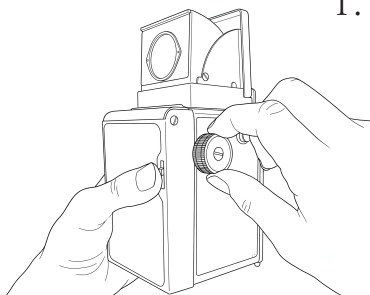

1. Push the rear lever all the way upward.
Do not release the lever during this operation.
While holding the lever up, rotate the winding knob.
If the film is advancing correctly, the knob will suddenly become noticeably heavier.
Continue turning until the knob comes to a complete stop.
This is typically about one-third of a turn.
If you are unsure whether you felt the increase in resistance, simply continue turning until the knob stops before proceeding.

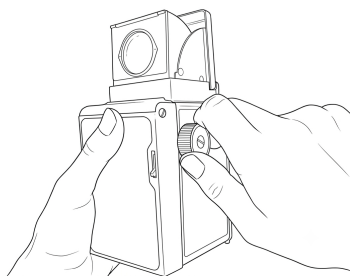

2. Release the lever and continue turning the winding knob until the print is fully ejected.
If the print does not eject, repeat the procedure from Step 1.
Never operate the rear lever while turning the winding knob, as this may cause the film to jam or damage the mechanism.
The print will develop in approximately 90 seconds.