

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

1.0 Purpose

The purpose of this machine instruction is to provide a general overview of Pouch machine HU3.

2.0 Scope

This is an information document and applies to the processes carried out by the pouch machine and the products/raw materials being used by its processes.

3.0 Definitions

MTL	-	Manufactring Team Leader
VS	-	Value Stream
WIP	-	Work-in-Process
SAP	-	Console Data Collection System

4.0 Roles and Responsibilities

Production representative for the pouch machine ensures that the information in this document is current.

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

HU3

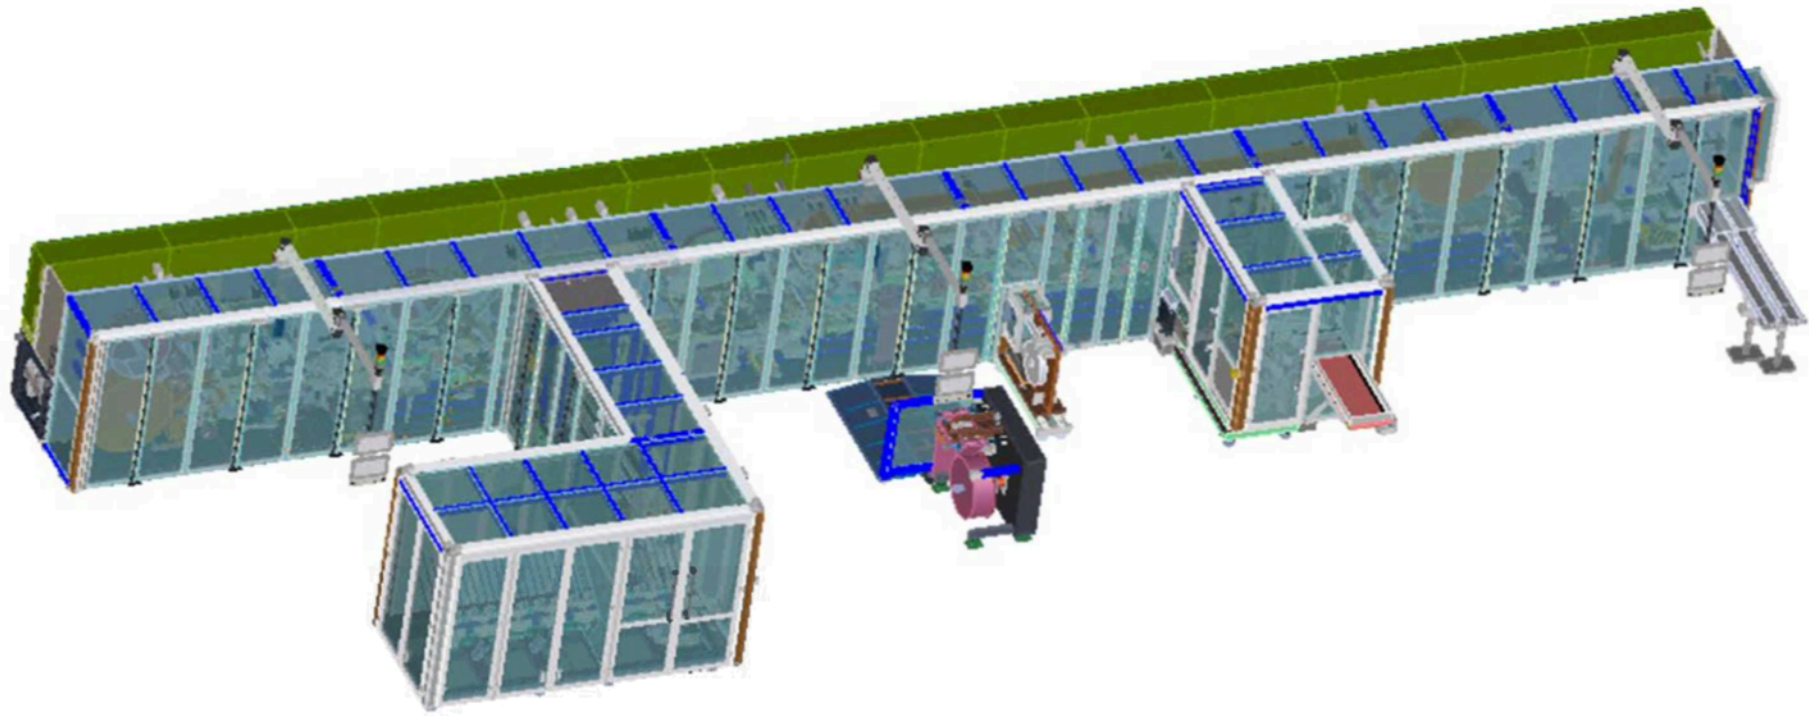


Figure 1 - Pouch Machine HU3

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

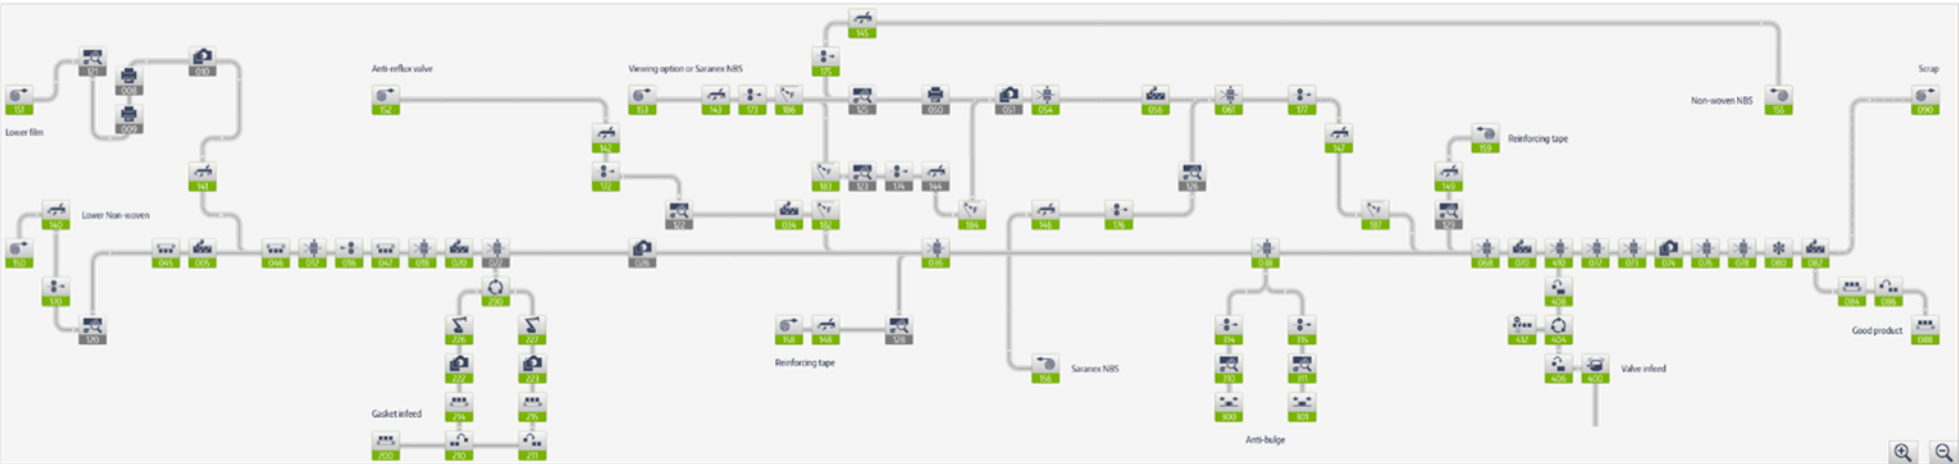


Figure 2 - Station Layout Map

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Contents

Machine/Station Overview..... 5

Status Beacon Overview..... 36

Control Panel Overview..... 37

Pre Start-Up Checks..... 40

Materials for HU3 42

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1016 - Chain Index System

This station is used for transporting of the webs “NW body side” and “film body side” through the machine. The chain index system consists of two chains with clamps at each chain link, which clamp the outer edges of the webs, thereby transporting it through the machine.

Station 1150 - Unwinding NW BS

The station consists of a pneumatically actuated mandrel, which is driven by means of servo motor with hollow shaft gear unit, and a pneumatic splicing table and a dancer. The material is continuously unwound from a reel. The material is unwound from the reel by means of a pneumatic mandrel. Tensioning is performed by means of a pneumatic manual valve.

Splicing table (St. 1150)

At the splicing table, the start of the new web is spliced to the end of the previous web.

Dancer (Station 1150)

A dancer roller controls the unwind based on the position of the dancer roller. The web tension is applied, and the pressure is adjustable via a pressure controller.

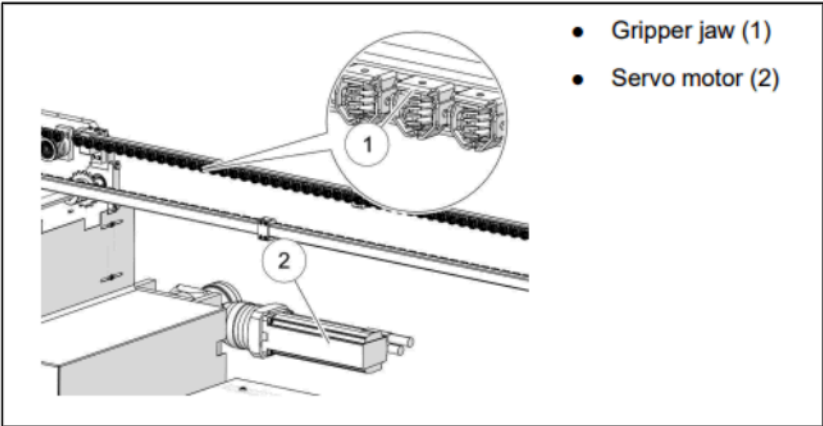


Figure 3 - Station 1016

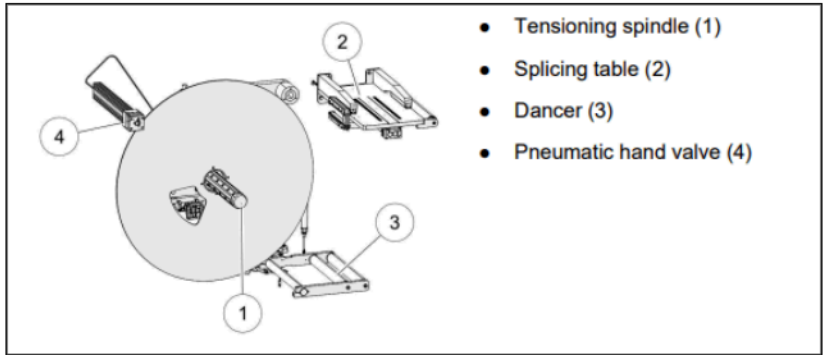


Figure 4 - Station 1150

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1170 - Pull Roller NW BS

The web is pulled through the machine between a non-stick coated steel roller and a rubber-coated pull roller.

Station 1120 - Splice Detection NW BS

A sensor is provided to detect any splices and to mark the wound pad in the shift register for reject.

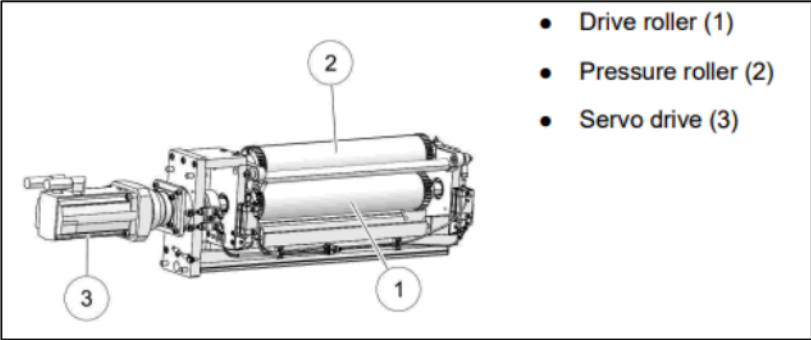


Figure 5 - Station 1170

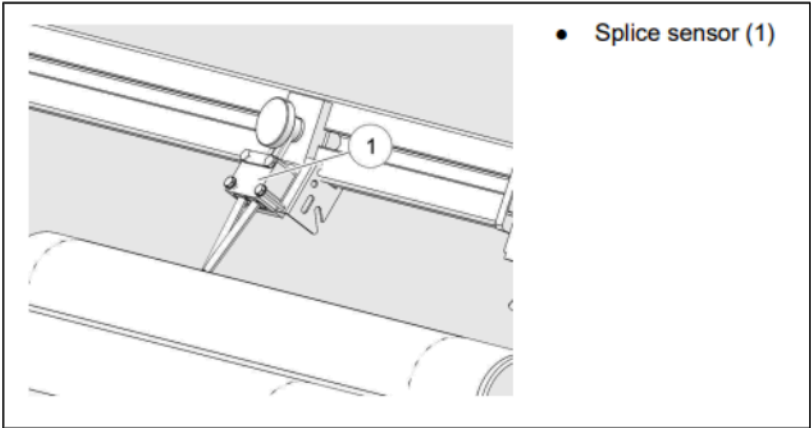


Figure 6 - Station 1120

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1005 - Moon Punch NW BS

In the punching station, a hole is punched into the non-woven body side web. The web is fed between the upper and lower punching tools and punched. The punching station closes in accordance with the pre-set punching time. The resulting waste (punched round) is extracted from the machine and collected outside the machine in a waste container.

Station 1151 - Unwinding Film BS

The material is continuously unwound from a reel.

Splicing table (St. 1151)

At the splicing table, the start of the new web is spliced to the end of the previous web.

Dancer (Station 1151)

A dancer roller with pendulum bearings controls the unwind based on the position of the dancer roller.

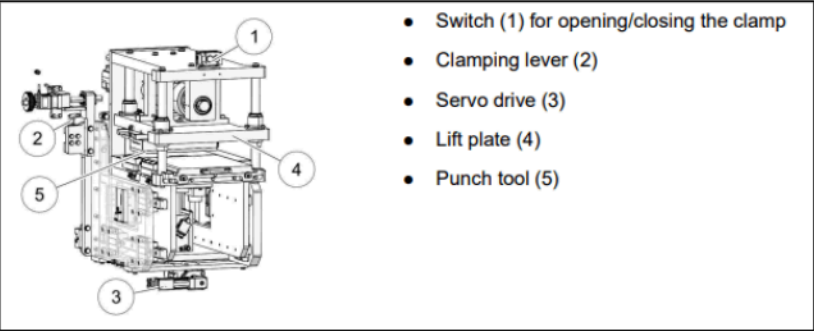


Figure 7 - Station 1005

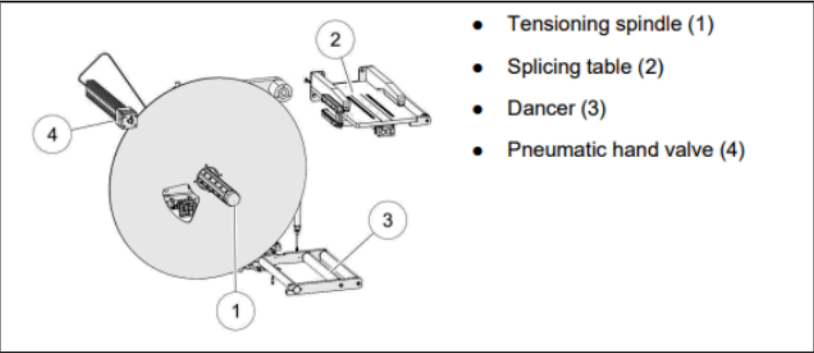


Figure 8 - Station 1151

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1121 - Splice Detection Film BS

A sensor is provided to detect any splices and to mark the wound pad in the shift register for reject.

Station 1008 & 1009 - Printer BS 1 & BS 2

In these stations, variable data is printed onto the Film body side web.

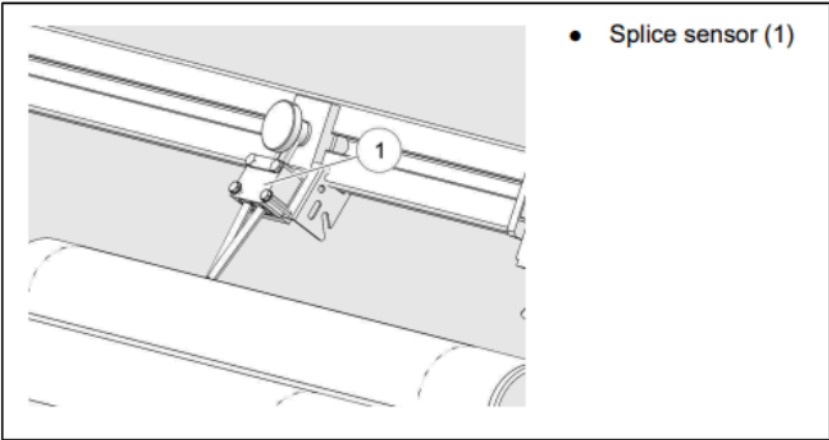


Figure 9 - Station 1121

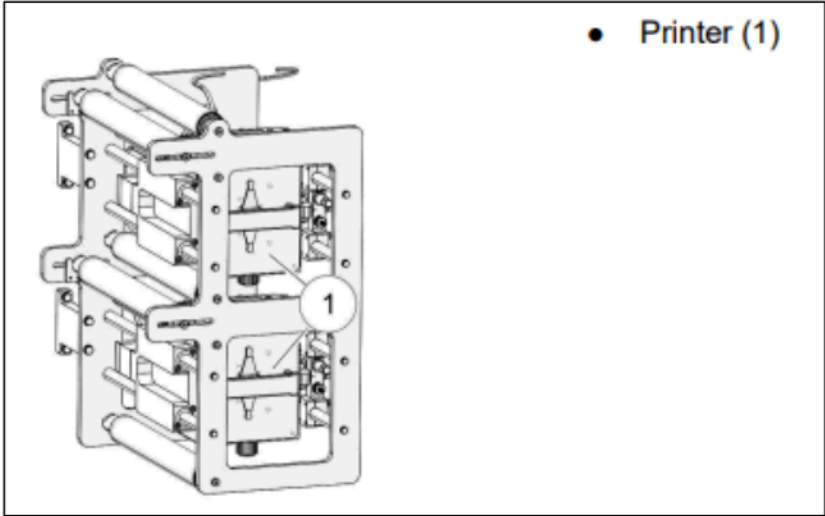


Figure 10 - Station 1008 & 1009

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1010 - Print Presence Check BS

Camera system to verify that the customer-specific product data has been printed in the previous station. The camera vision only verifies the presence of the printed data.

Station 1012 - Tack Sealing BS

In this station, the two films “non-woven body side” and “Film body side” are tack sealed. The two webs are sealed together between the upper and lower sealing tools.

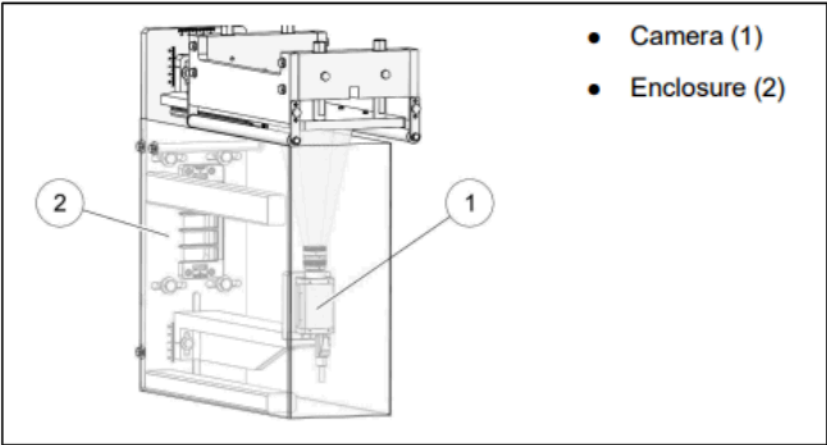


Figure 11 - Station 1010

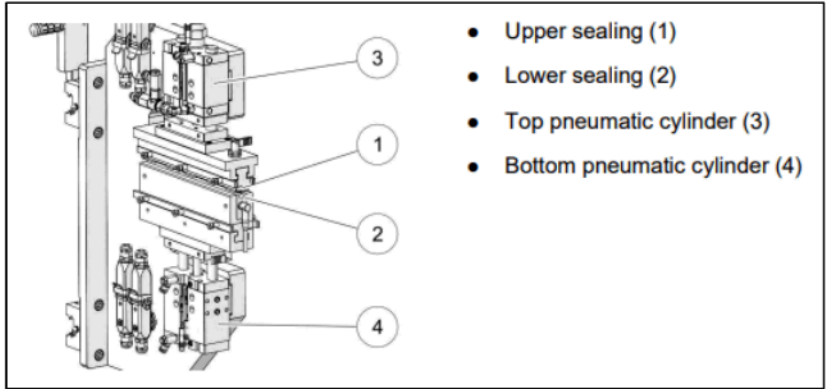


Figure 12 - Station 1012

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1018 - Backing and Tails Smash SEAL BS

In the reciprocating sealing station, a circle is sealed into the non-woven body side film and the Film body side film. The circle joins the two films together and will later be punched out.

Station 1020 - Moon Punch FILM BS

In the punching station, a hole is punched into the Film body side web. The resulting waste (punched round) is extracted from the machine and collected outside the machine in a waste container.

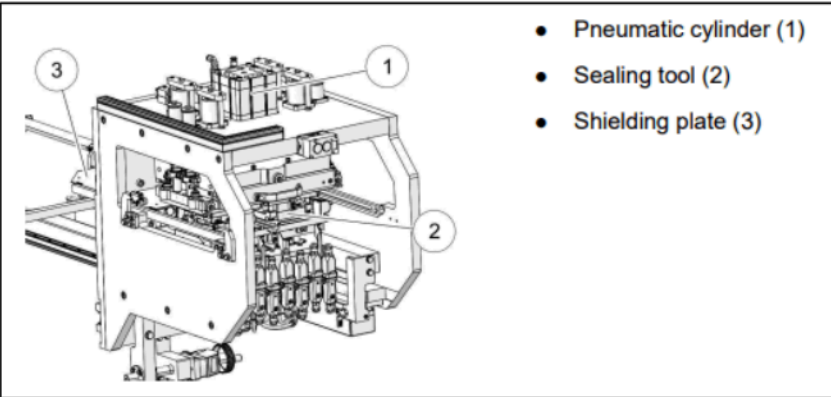


Figure 13 - Station 1018

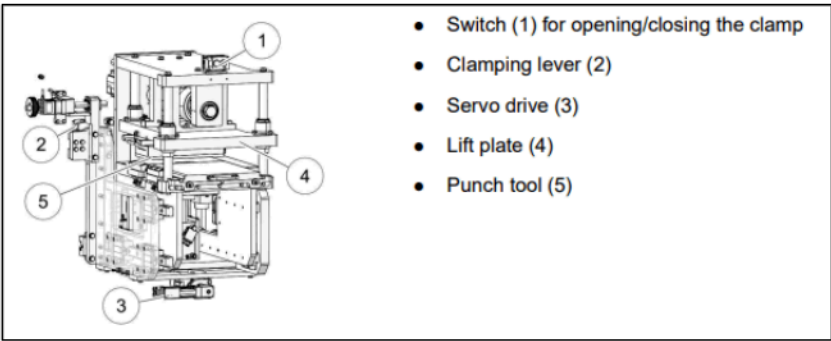


Figure 14 - Station 1020

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1226 & 1227 - Pad Transfer A & B

Two robots withdraw the gaskets / barriers from the conveyor belt and place them on the turntable of the sealing station. Different grippers can be mounted for different gaskets / barriers.

Station 1222 & 1223 - Pad Detection A & B

Cameras check the correct position of the gaskets and barriers. If the products are not in the correct position, they are not withdrawn by the robots and drop into a container.

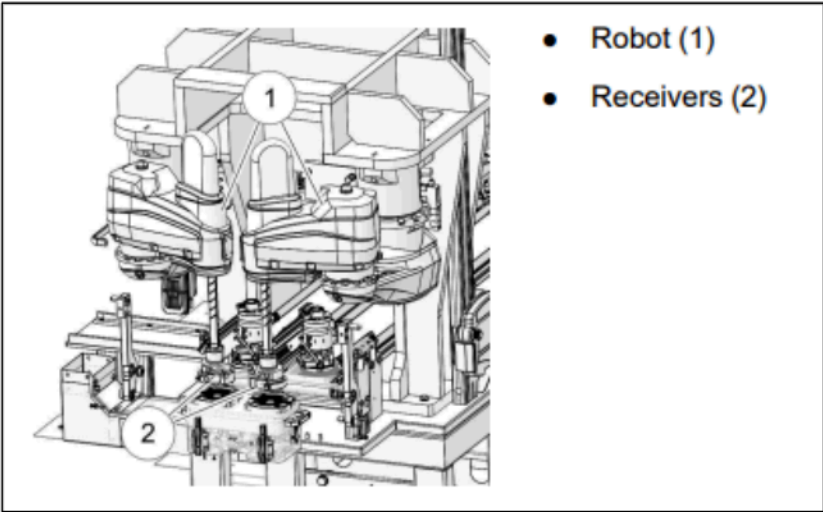


Figure 15 - Station 1226 & 1227

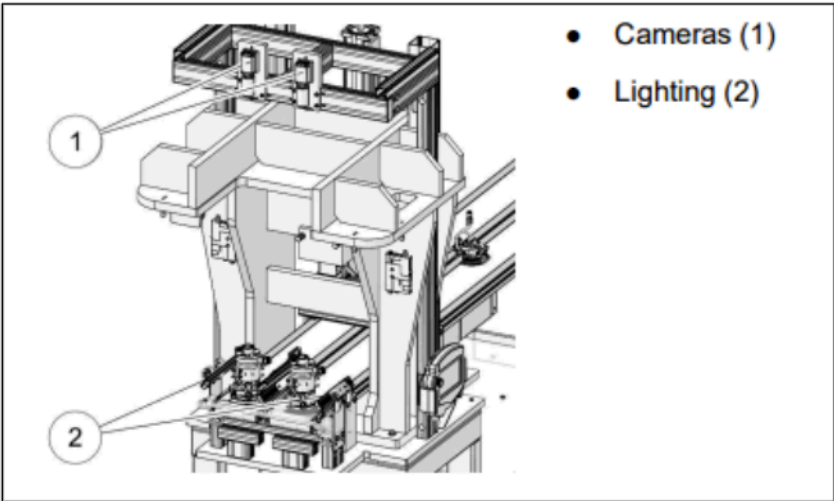


Figure 16 - 1222 & 1223

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1214 & 1215 - Pad Conveyor A & B

Two conveyor belts transport the gaskets to the transfer station.

Station 1210 & 1211 - Gasket Singulation A & B

2 support mandrels are always emptied into both separators and the gaskets are placed on the conveyor belt. Forks on a servo-driven linear system push the gaskets upwards to the grippers of the separator.

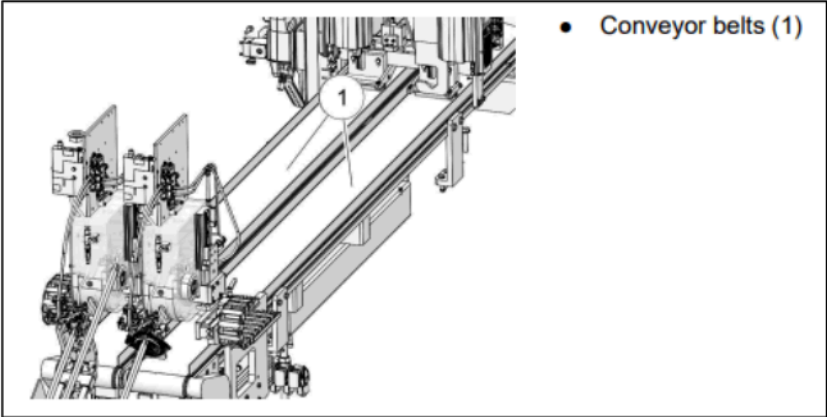


Figure 17 - Station 1214 & 1215

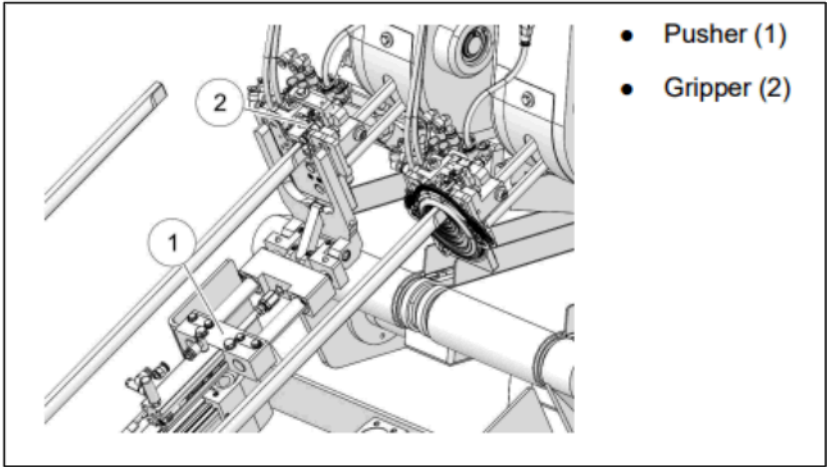


Figure 18 - Station 1210 & 1211

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1200 - Gasket Magazine

The gaskets are pushed on support mandrels into the gasket hopper. The support mandrels transport the gaskets to the withdrawal point of separation. The 32 support mandrels are moved anti-clockwise by the gasket hopper. While 2 support mandrels are emptied, the protective doors of the gasket hopper can be opened to fill empty support mandrels by hand.

Station 1022 - Pad Sealing Station

At this station the barriers or gaskets are sealed onto the web. The upper sealing tools are heated. The tool temperature is monitored by means of temperature sensors. The tool carrier plates are water-cooled. The lower sealing tools consist of two alternating nests to turn the barrier/gaskets into position underneath the sealing station.

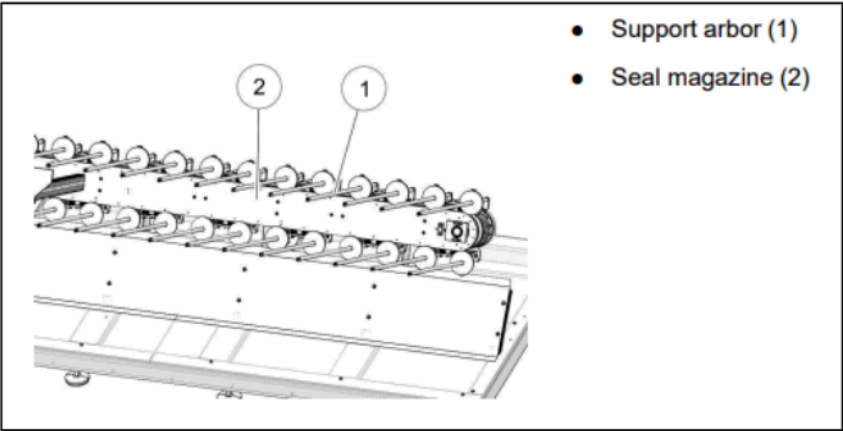


Figure 19 - Station 1200

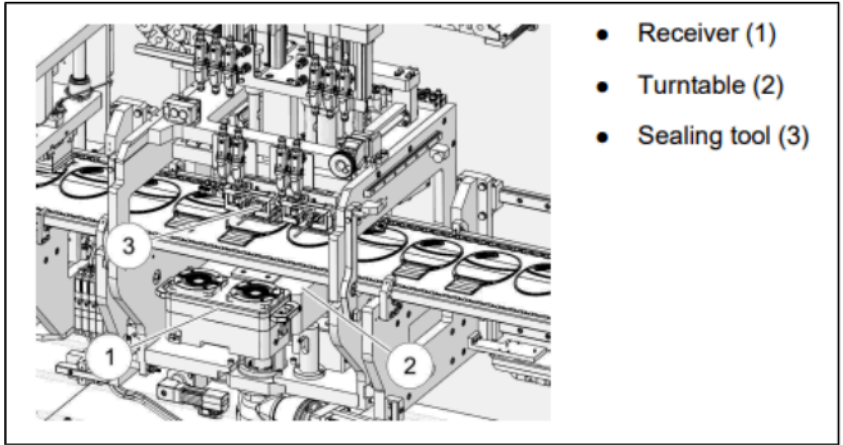


Figure 20 - Station 1022

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1026 - Pad Verification

Vision system to verify the presence of gaskets/barrier on the web.

Station 1153 - Unwinding ARV

The material is continuously unwound from a reel.

Splicing table (St. 1153)

At the splicing table, the start of the new web is spliced to the end of the previous web.

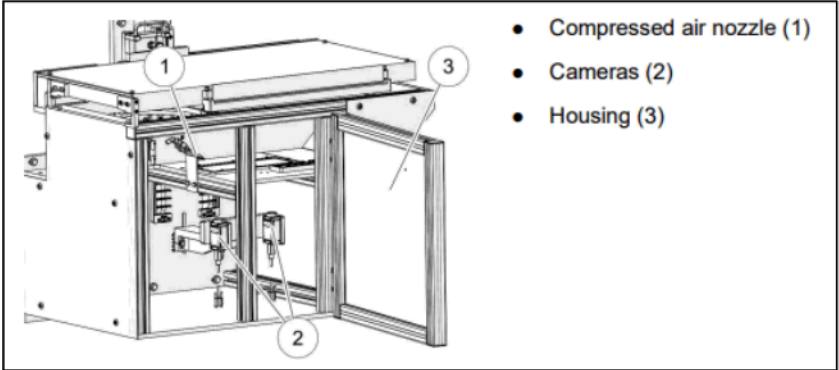


Figure 21 - Station 1026

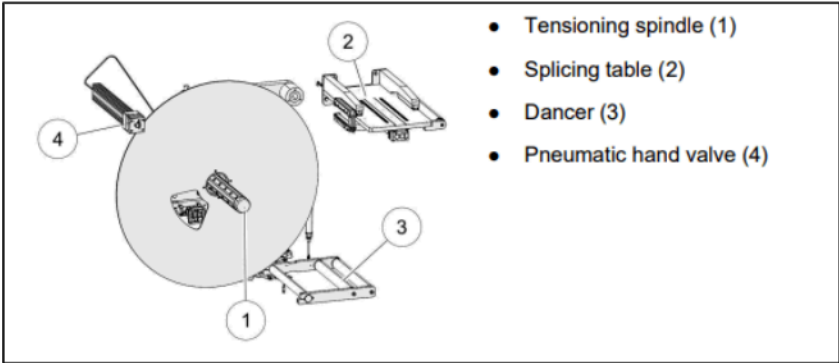


Figure 22 - Station 1153

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1172 - Pull Roller ARV

The web is pulled through the machine between a non-stick coated steel roller and a rubber coated pull roller.

Station 1122 - Splice Detection ARV

A sensor is provided to detect any splices and to mark the wound pad in the shift register for reject.

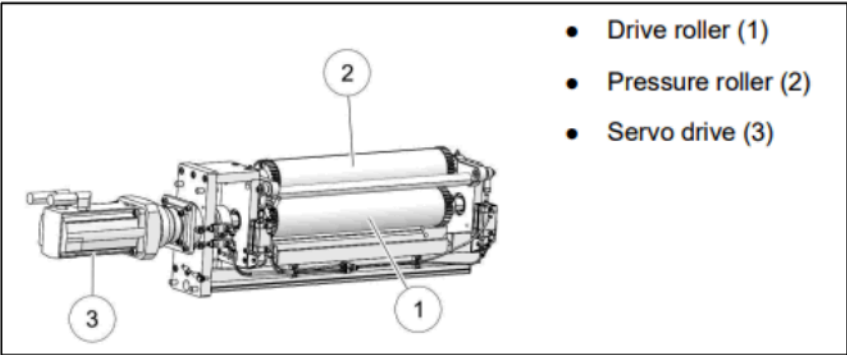


Figure 23 - Station 1172

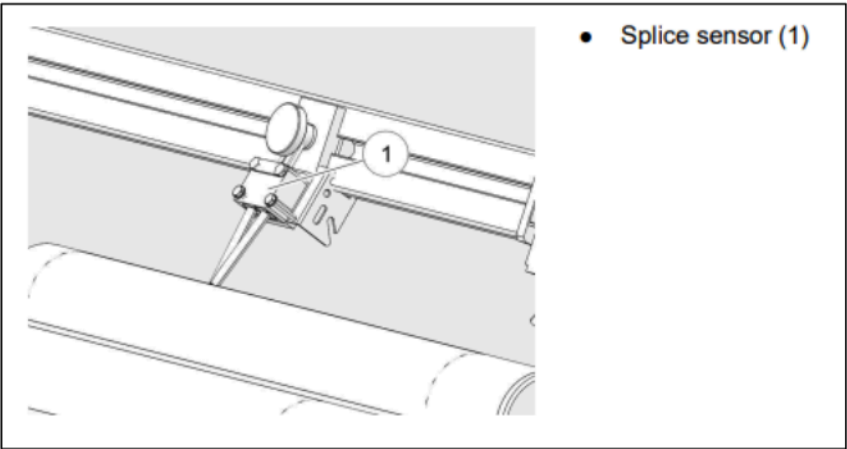


Figure 24 - Station 1122

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1034 - Punching ARV

In the punching station, the flag holes are punched into the Film web. The web is fed between the upper and lower punching tools and punched. The punching station closes, punches, then the punching tools open and the web is indexed by one cycle.

Station 1158 - Unwinding Reinforcement TAPE BS

In this station, an adhesive tape for reinforcement is laminated to the underside of the web. The tape is continuously unwound from a reel. When one tape reel is empty, the next reel is automatically moved to the splicing table and spliced.

Splicing table (Station 1158)

At the splicing table, the material is spliced to the end of the previous reel. The adhesive tape is pulled through the station between a rubber-coated roller and a coated steel roller (mounted at the top).

Dancer (Station 1158)

A dancer roller with pendulum bearings controls the unwind based on the position of the dancer roller.

Laminating roller (Station 1158)

The laminating roller is located underneath the web. The tape fed into the machine is laminated to the web. This is achieved between a rubber-coated laminating roller and a pressure roller.

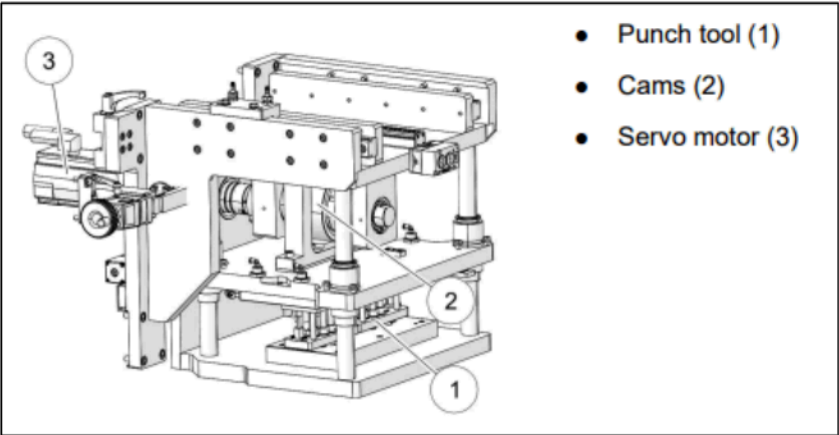


Figure 25 - Station 1034

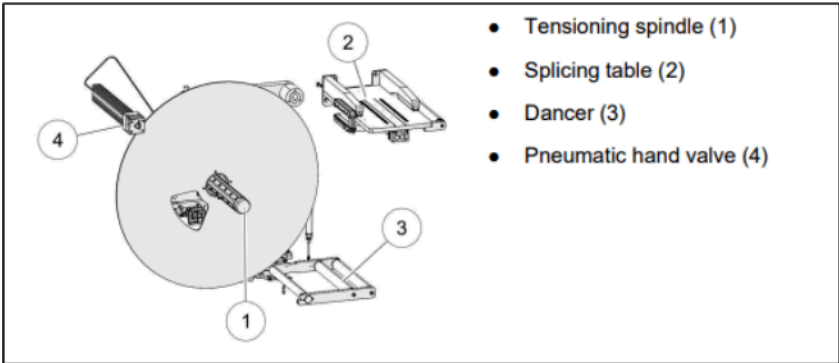


Figure 26 - Station 1158

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1128 - Splice Detection TAPE BS

A sensor is provided to detect any splices and to mark the wound pad in the shift register for reject.

Station 1036 - Sealing ARV – Upper and Lower

In this sealing station, the ARV film is sealed to the web. The sealing tools are moved to the sealing position and the station closes for sealing.

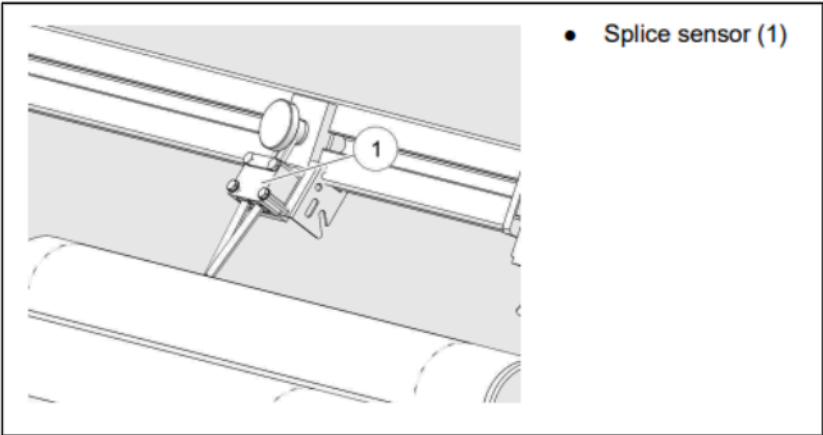


Figure 27 - Station 1128

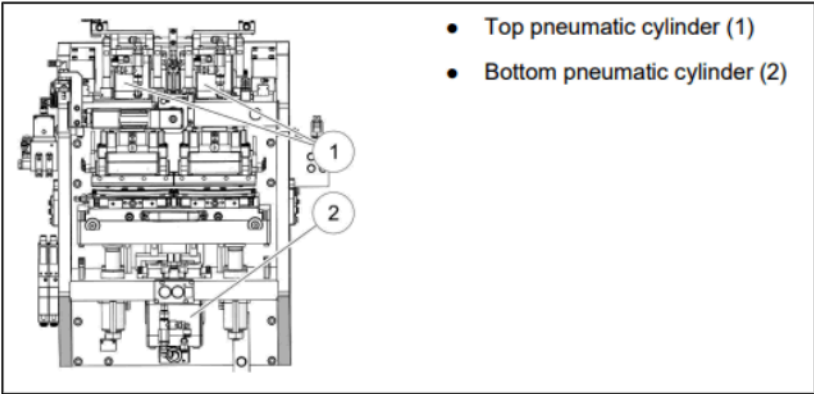


Figure 28 - Station 1036

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1300 & 1301 - Unwinding ANTI BULGE A & B

The station consists of a mandrel and a pneumatic splicing table.

Station 1310 & 1311 - Splice Detection ANTI BULGE A & B

A sensor is provided to detect any splices and to mark the wound pad in the shift register for reject.

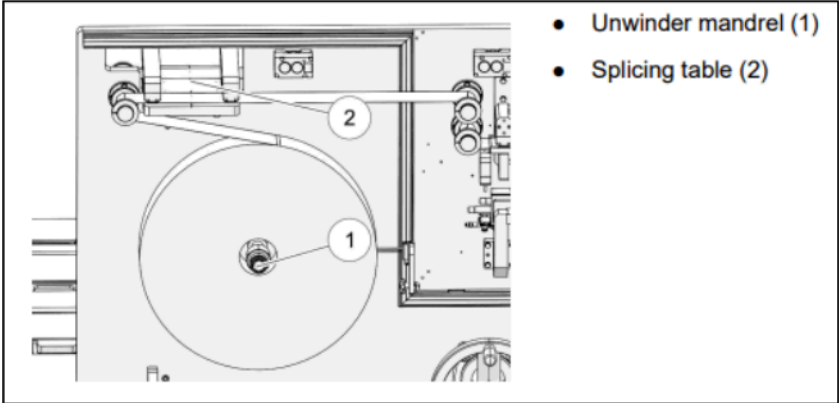


Figure 29 - Station 1300 & 1301

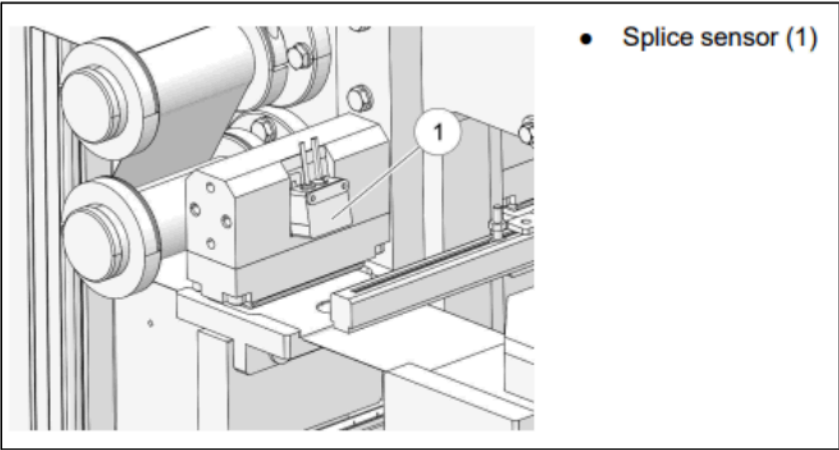


Figure 30 - Station 1310 & 1311

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1038 - Cross Cutting Sealing ANTI BULGE BS

In this sealing station, the anti-bulge films, which are fed into the machine from the side, are sealed to the web. The anti-bulge films are fed into the machine from the side and separated. A pick & place unit picks up the pieces of film and presses them onto the web.

Station 1153 - Unwinding VO BACKING FILM

The station consists of a mandrel and a pneumatic splicing table.

Splicing table (St. 1153)

At the splicing table, the start of the new web is spliced to the end of the previous web.

Dancer (Station 1153)

A dancer roller controls the unwind based on the position of the dancer roller.

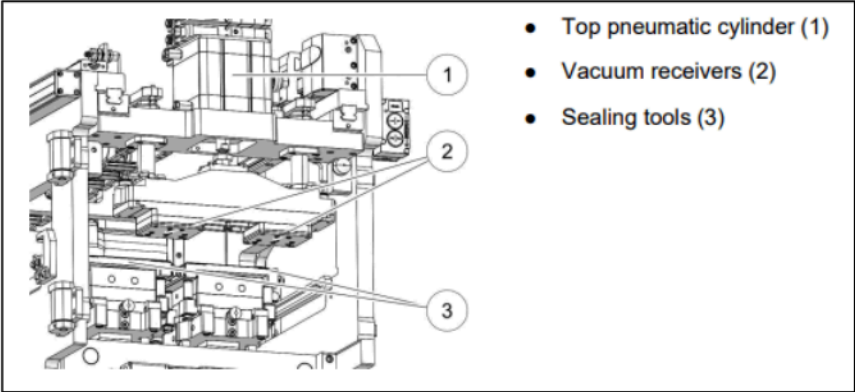


Figure 31 - Station 1038

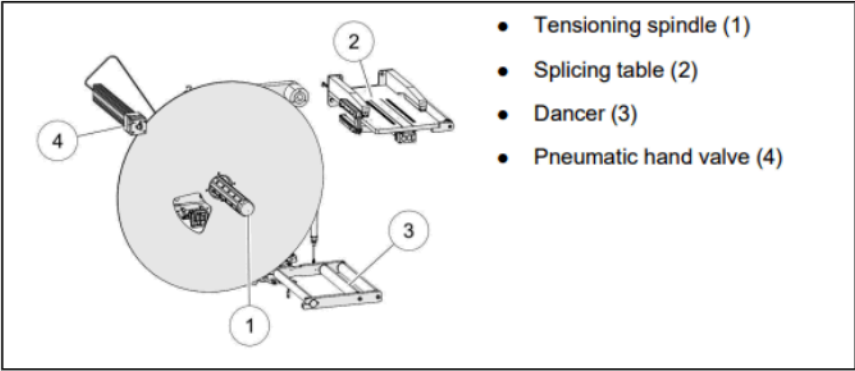


Figure 32 - Station 1153

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1173 - Pull Roller VO BACKING FILM

The web is pulled through the machine between a non-stick coated settle roller and a rubber-coated pull roller.

Station 1123 - Splice Detection VO BACKING FILM

A sensor is provided to detect any splices and to mark the bag in the shift register for reject.

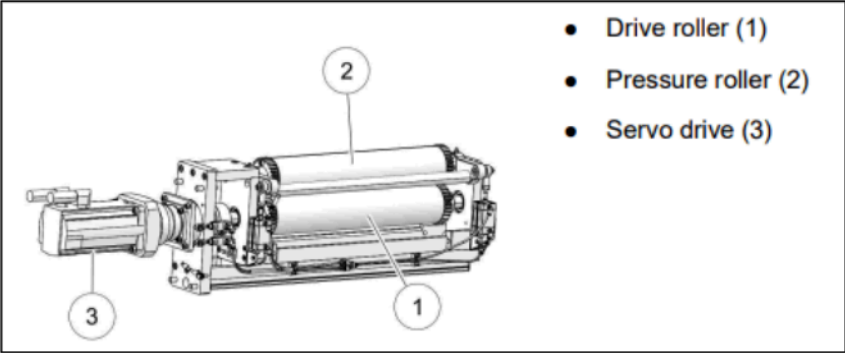


Figure 33 - Station 1173

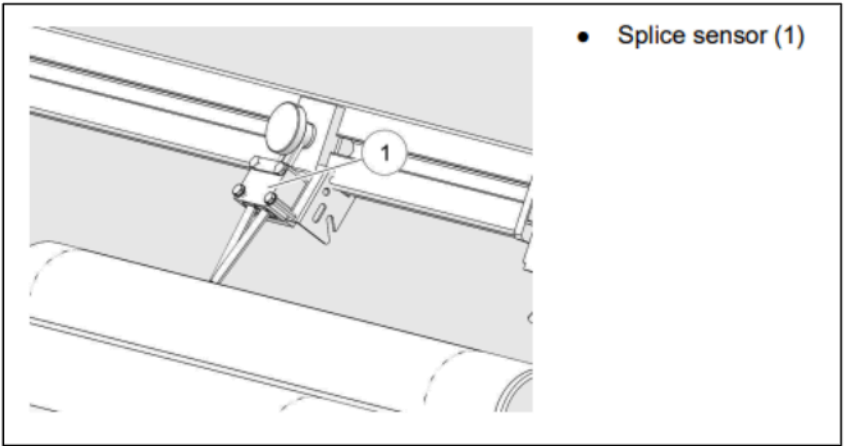


Figure 34 - Station 1123

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1155 - Unwinding NW NBS

The material is unwound from the reel by means of a pneumatic mandrel.

Splicing table (St. 1155)

At the splicing table, the start of the new web is spliced to the end of the previous web.

Dancer (Station 1155)

A dancer roller controls the unwind based on the position of the dancer roller.

Station 1175 - Pull Roller NW NBS

The web is pulled through the machine between a non- stick coated steel roller and a rubber coated pull roller.

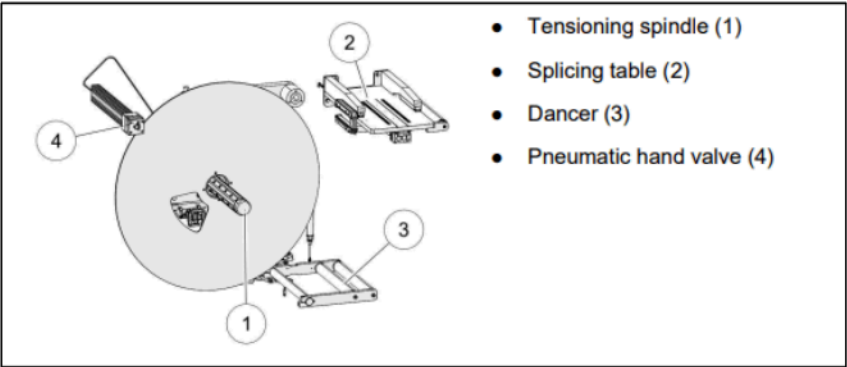


Figure 35 - Station 1155

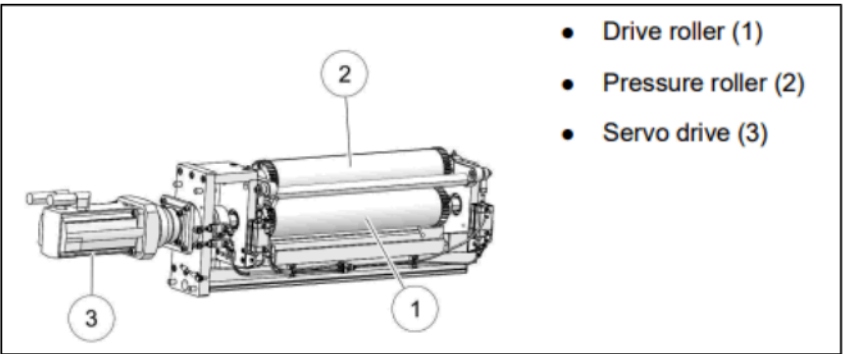


Figure 36 - Station 1175

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1125 - Splice Detection NW NBS

A sensor is provided to detect any splices and to mark the bag in the shift register for reject.

Station 1050 - Printer NBS

In this station, variable data is printed onto the non-body side of the web.

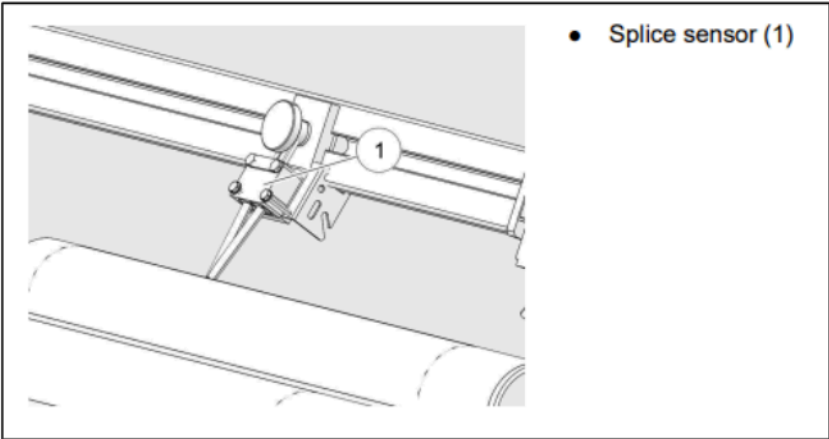


Figure 37 - Station 1125

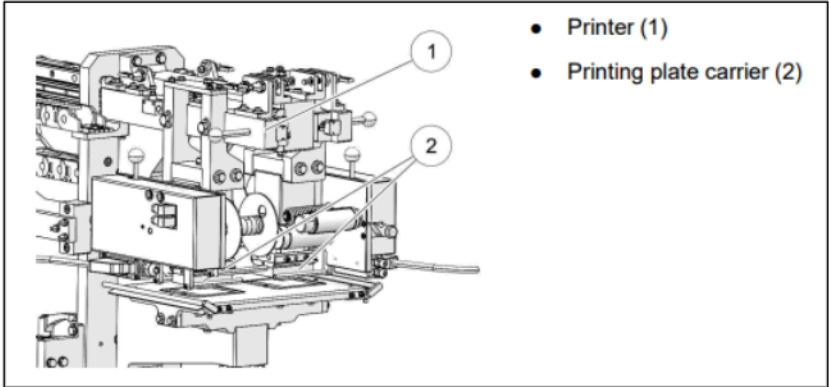


Figure 38 - Station 1050

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1051 - Print Presence Check NBS

Vision system to verify the presence of the printed data on the web.

Station 1174 - Pull Roller VO BACKING FILM 2

The web is pulled through the machine between a non- stick coated steel roller and a rubber coated pull roller.

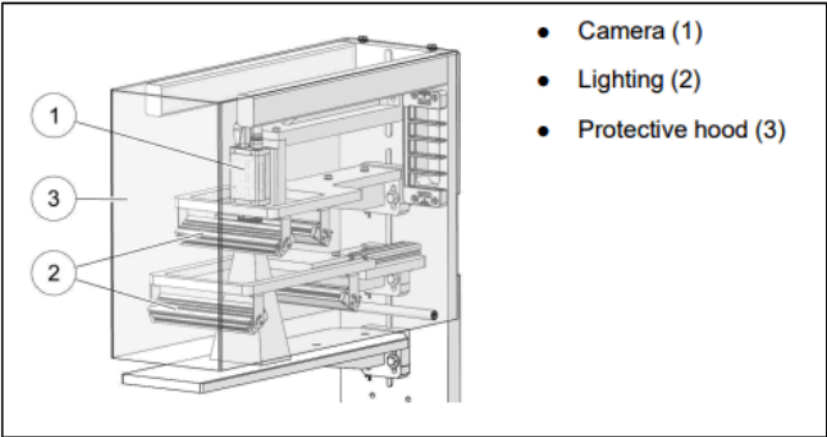


Figure 39 - Station 1051

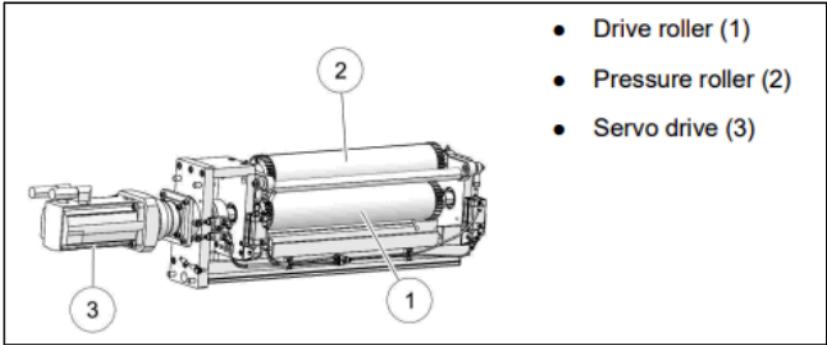


Figure 40 - Station 1174

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1054 - VO Smash Seal

The films are sealed together between the upper and lower sealing plates. The sealing station closes (for sealing) in accordance with the preselected sealing time.

Station 1156 - Unwinding FILM NBS

The material is unwound from the reel by means of a pneumatic mandrel.

Splicing table (St. 1156)

At the splicing table, the start of the new web is spliced to the end of the previous web.

Dancer (Station 1156)

A dancer roller with pendulum bearings controls the unwind based on the position of the dancer roller.

90° deflector (station 1156)

A pipe located at 45° redirects each web by 90° parallel to the direction of machine operation.

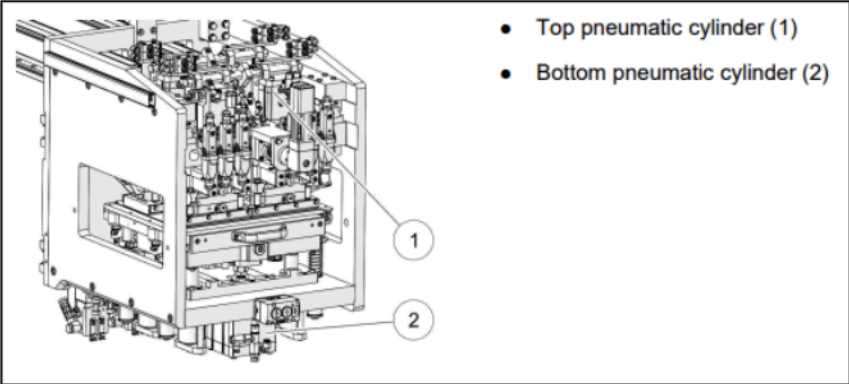


Figure 41 - Station 1054

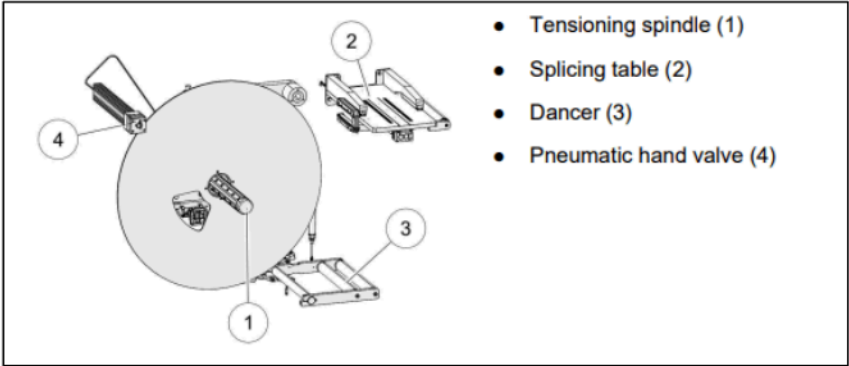


Figure 42 - 1156

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1056 - Pull Roller FILM NBS

The web is pulled through the machine between a non- stick coated steel roller and a rubber coated pull roller.

Dancer (Station 1056)

A dancer roller with pendulum bearings controls the unwind based on the position of the dancer roller.

Station 1126 - Splice Detection FILM NBS VO

A sensor is provided to detect any splices and to mark the bag in the shift register for reject.

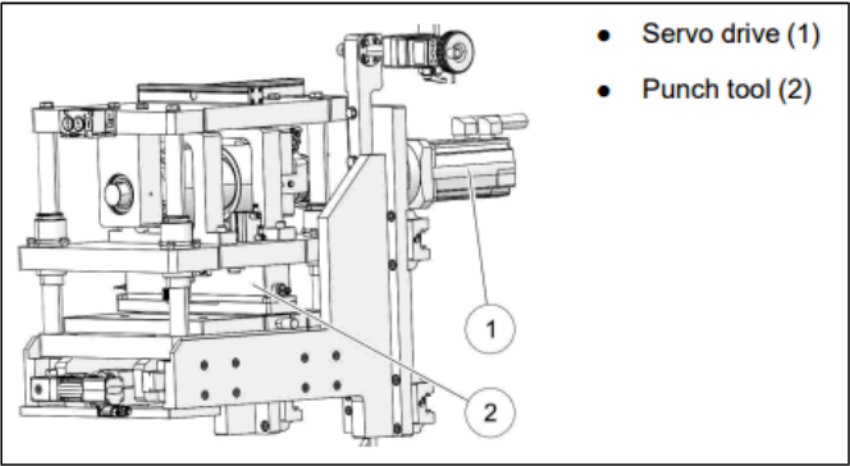


Figure 43 - Station 1056

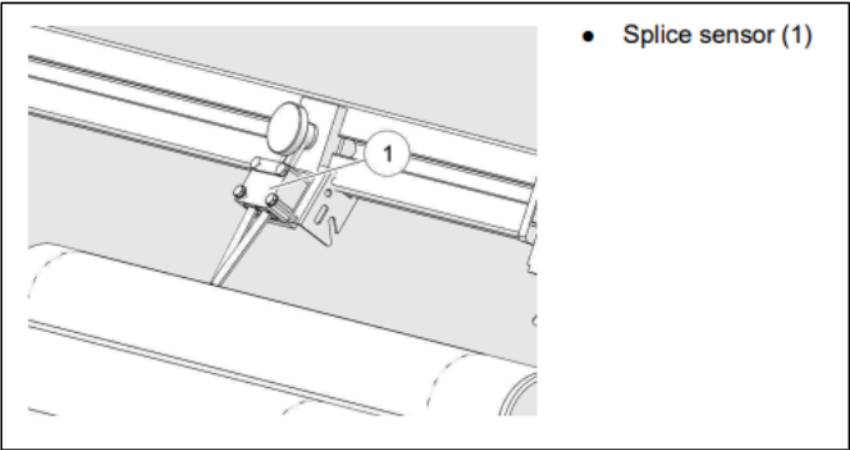


Figure 44 - Station 1126

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1159 - Unwinding Reinforcement TAPE NBS

In this station, an adhesive tape for reinforcement is laminated to the topside of the web. The tape is continuously unwound from a reel. When one tape reel is empty, the next reel is automatically moved to the splicing table and spliced.

Splicing table (St. 1159)

At the splicing table, the material is spliced to the end of the previous reel. A cylinder presses the start of the new material onto the splicing table over the end of the previous web. The adhesive tape is pulled through the station between a rubber-coated roller and a coated steel roller (mounted at the top).

Dancer (Station 1159)

A dancer roller controls the unwind based on the position of the dancer roller.

Laminating (Station 1159)

Here the web that is fed into the machine is laminated to the foil web between a rubber roller and a pressure roller.

Station 1177 - Pull Roller NBS FILMS

The purpose of this station is to transport the web. The web is pulled through the machine between a non-stick coated steel roller and a rubber-coated pull roller.

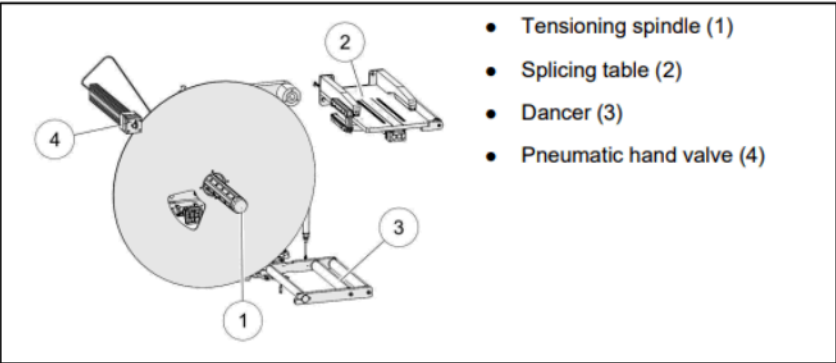


Figure 45 - Station 1159

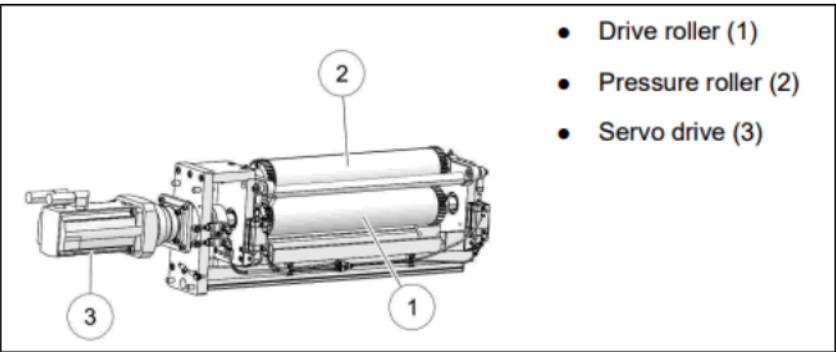


Figure 46 - Station 1177

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1068 - Tack Sealing BS NBS FILMS

In this station, the two films “body side” and “non-body side” are tack-sealed in a short sealing operation. The two webs are sealed together between the upper and lower sealing tools.

Station 1070 - Valve Window Punch

In the punching station, a window for the valve is punched into the webs. The web is fed between the upper and lower punching tools and punched.

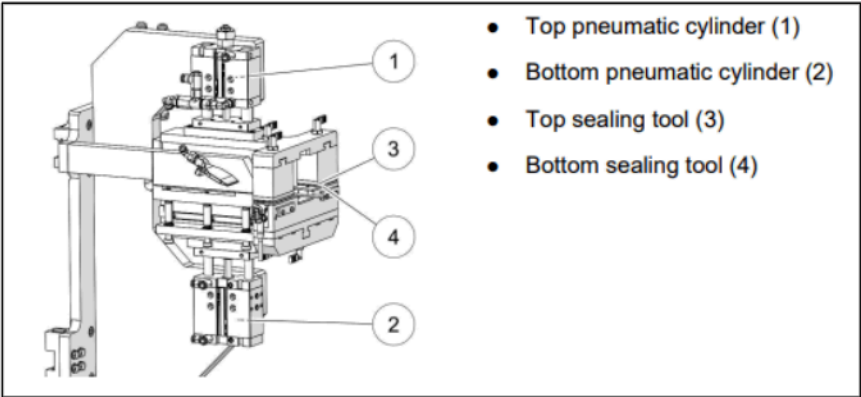


Figure 47 - Station 1068

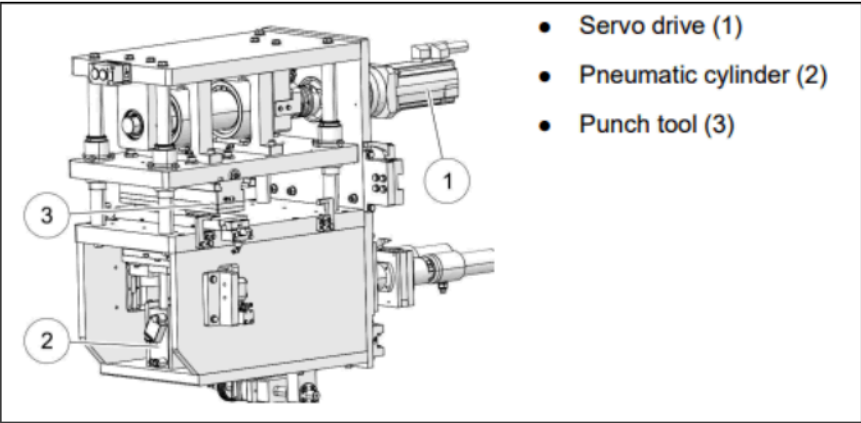


Figure 48 - Station 1070

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1400 - Feeding Valve

The valves are fed into the machine from a belt bunker, which is filled manually. The valves are fed via sorting hopper, linear feeder, and rotary table. When the minimum filling level in the belt bunker is reached, a filling-level sensor in the belt bunker triggers the request to fill in valves. When the minimum filling level in the sorting hopper is reached, valves are automatically fed to the sorting hopper from the belt bunker. The sorting hopper feeds the valves upwards on a spiral, where they leave the sorting hopper correctly oriented and in two lanes. The valves are transferred to the linear feed in two lanes. The linear feeder transports them by means of vibration towards the rotary table. A pick & place unit transfers the valves into the rotary table. When the minimum/maximum jam on the linear feeder is reached, the linear feeder starts/stops the operation of the sorting hopper. When the minimum level has been reached, the machine stops.

Station 1406 - Transfer Valve

The rotary table with 4x2 nests transports the valves through the preparation station (St.1404) to machine, where they will be sealed to the bag web (St. 1410). Valves which are not processed are rejected into a waste container at Station 1412.

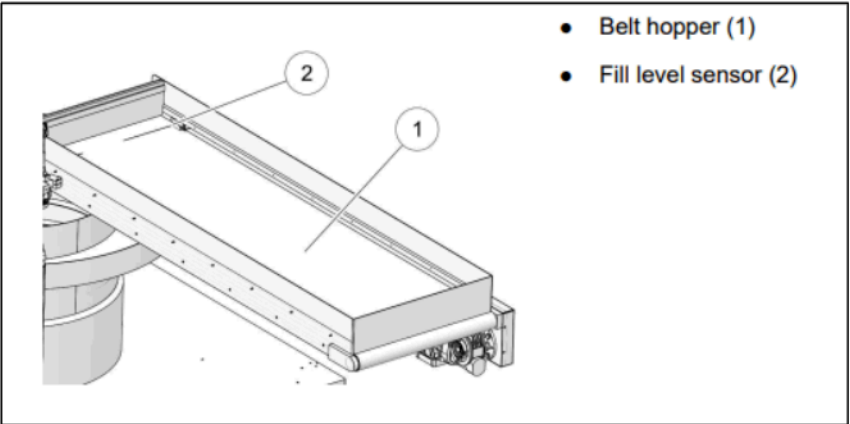


Figure 49 - Station 1400

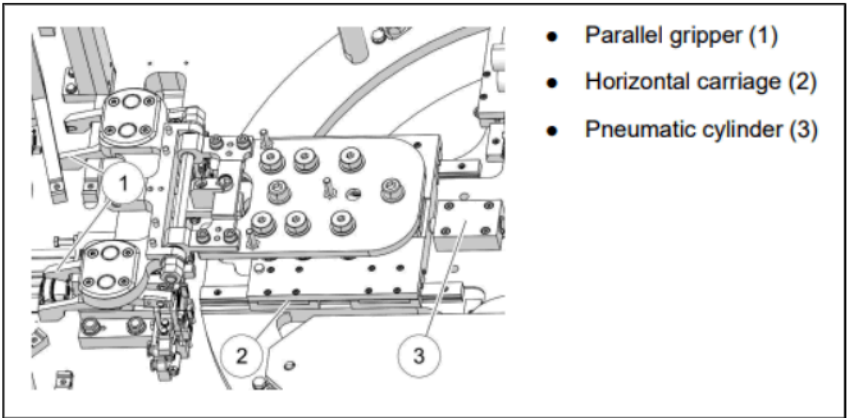


Figure 50 – Station 1406

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1412 - Reject Valve

Valves which are not processed are ejected into a waste container by means of an air blast.

Station 1410 - Sealing Valve

The rotary table indexes the valves into position between 4 sealing tools, where 2 valves are sealed to the web.

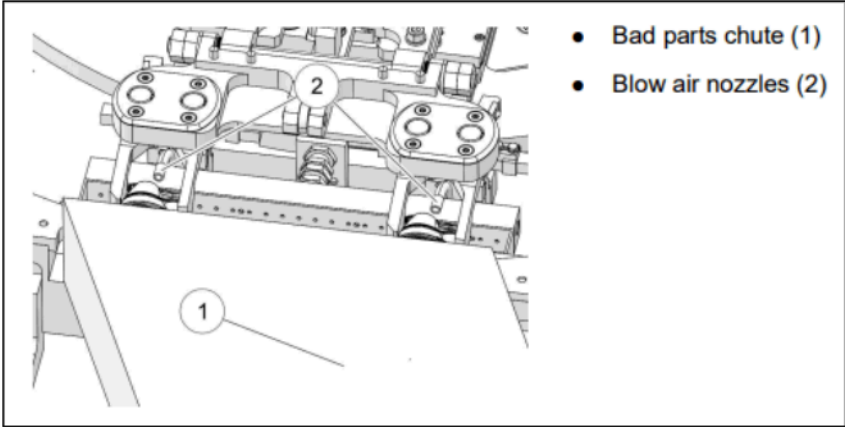


Figure 51 - Station 1412

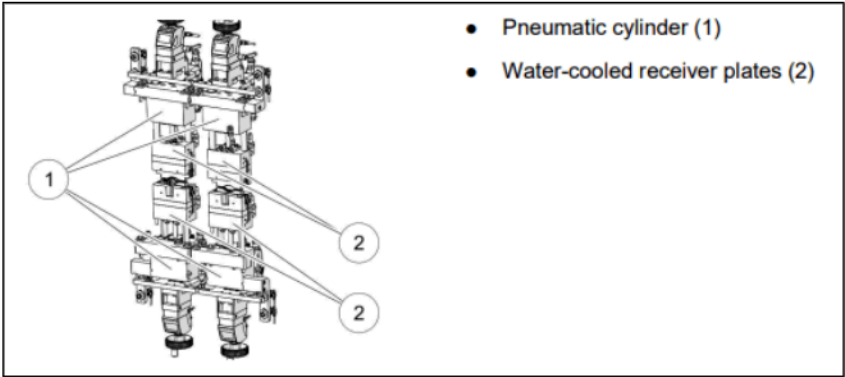


Figure 52 - Station 1410

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1072 - Tack Sealing Release Cut

In this station, the two films „body side” and „non-body side” are tack-sealed in a short sealing operation.

Station 1073 – Posture Seal

In this sealing station, the posture seal of the bags is sealed, i.e., the two webs ‘Body Side’ and ‘Non-Body Side’ are sealed together via the two posture “dots”. POSTURE SEALS ARE ONLY USED ON DANSAC PRODUCTS.

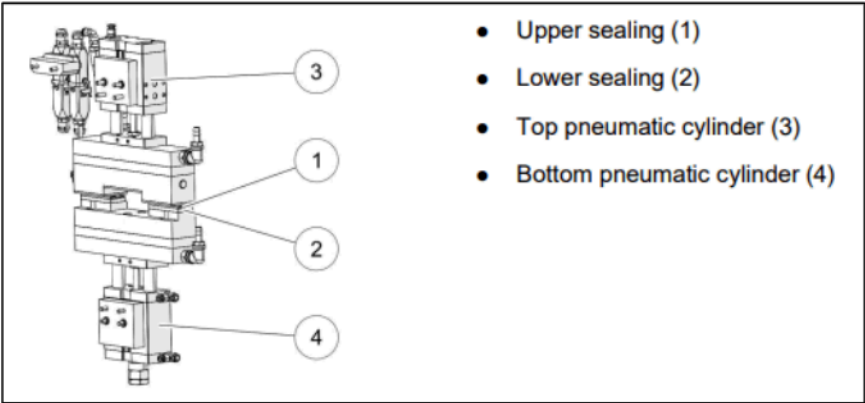


Figure 53 - Station 1072

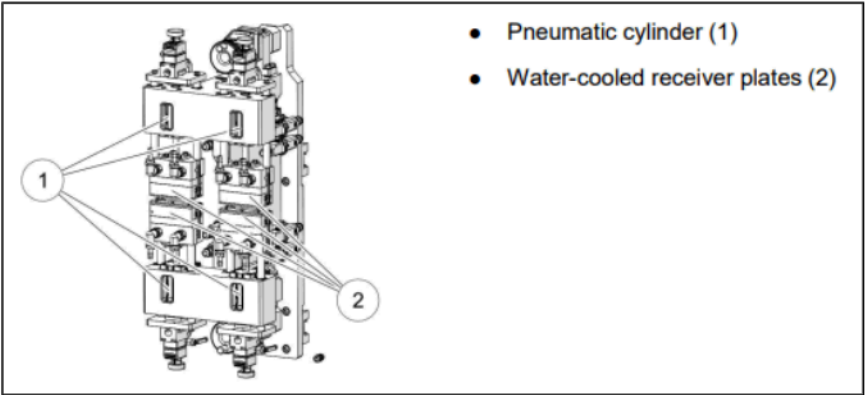


Figure 54 - Station 1073

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1074 - Valve Verification

Vision system to verify the presence and position of the valves on the web.

Station 1076 - Periphery Seal

In this sealing station, the circumference of the bags is sealed, i.e., the two webs 'Body Side' and 'Non-Body Side' are sealed together.

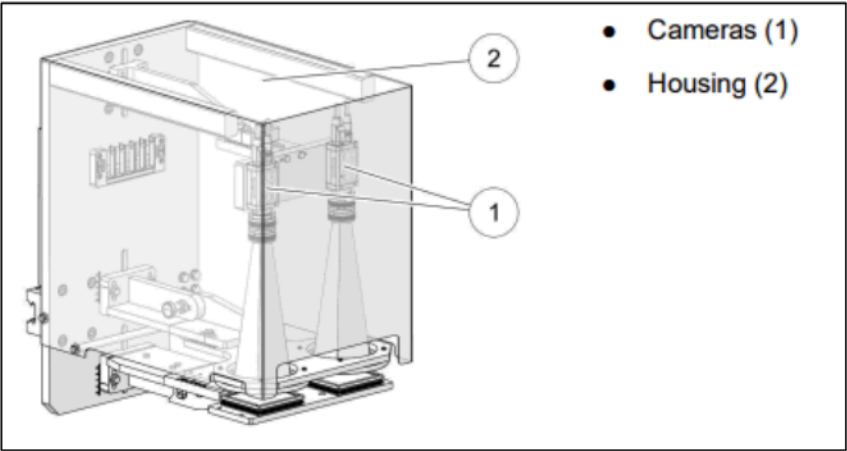


Figure 55 - Station 1074

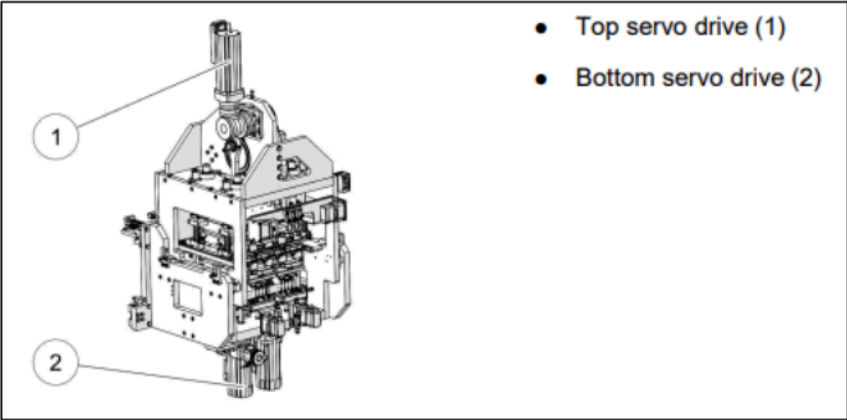


Figure 56 - Station 1076

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1078 - Anti Bulge Seal NBS

In this sealing station, the anti-bulge films are sealed to the non-body side web.

Station 1080 - Periphery Cooling

The web, which has been warmed through several sealing operations, is cooled down by ventilation fans.

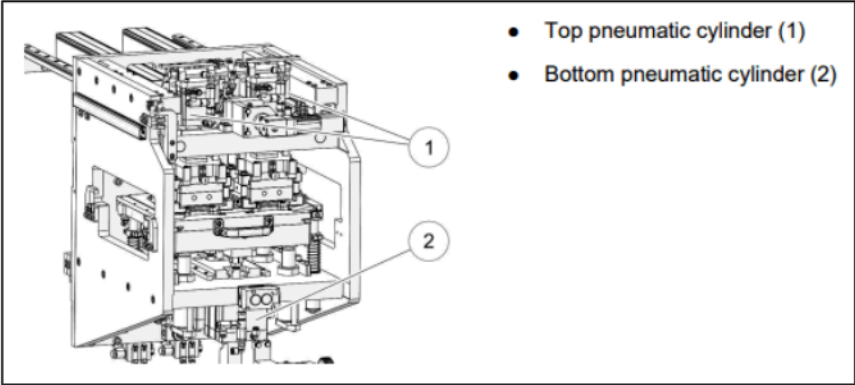


Figure 57 - Station 1078

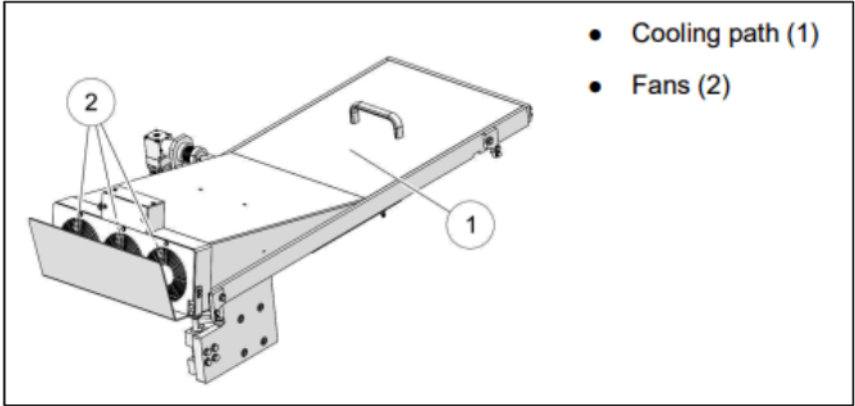


Figure 58 - Station 1080

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1082 - Periphery Punch

In this punching station, two bags are simultaneously punched out of the web. The web is fed between the upper and lower punching tools. The punching station closes, punches, then the punching tools lower the punched-out bags onto the transport conveyor.

Station 1084 - Discharge Belt BAGS

The punched bags are transported via the bag discharge conveyor to the bag transfer.

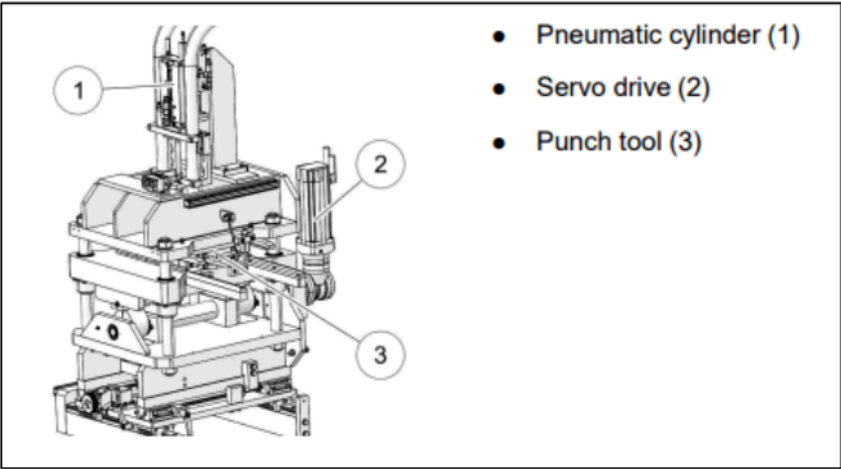


Figure 59 - Station 1082

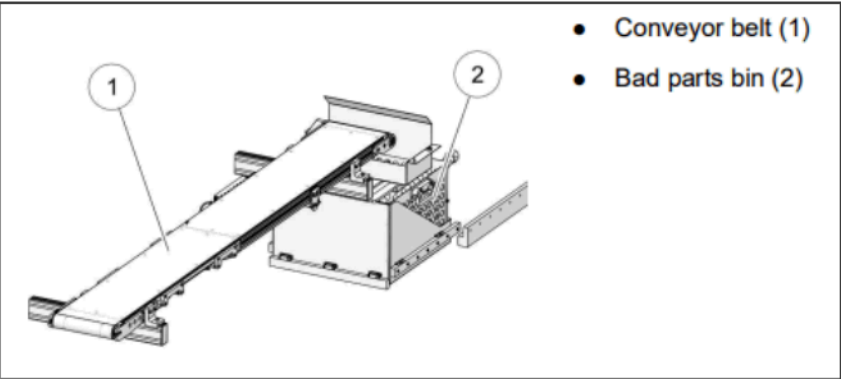


Figure 60 - Station 1084

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1086 - Pick & Place BAGS

The good products are picked up from the transport conveyor by a pick & place unit and lifted onto the discharge conveyor. The bad products are left on the conveyor which transports them to the end of the conveyor where they drop into a reject bin.

Station 1088 - Discharge Belt GOOD BAGS

The good bags are transported out of the machine on a transport conveyor and are taken off by hand.

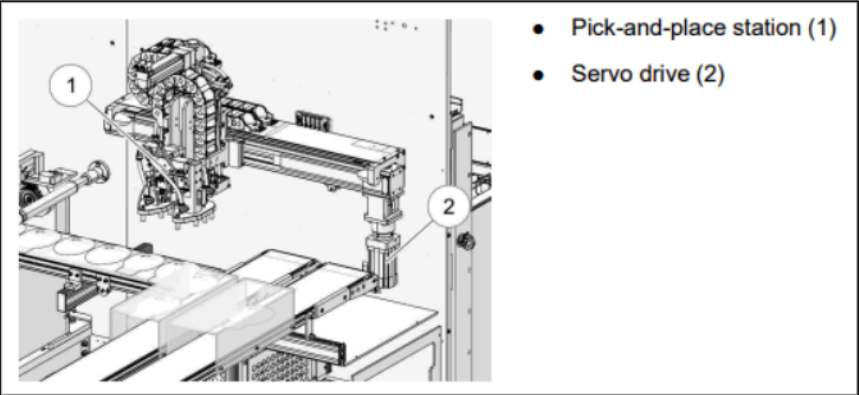


Figure 61 - Station 1086

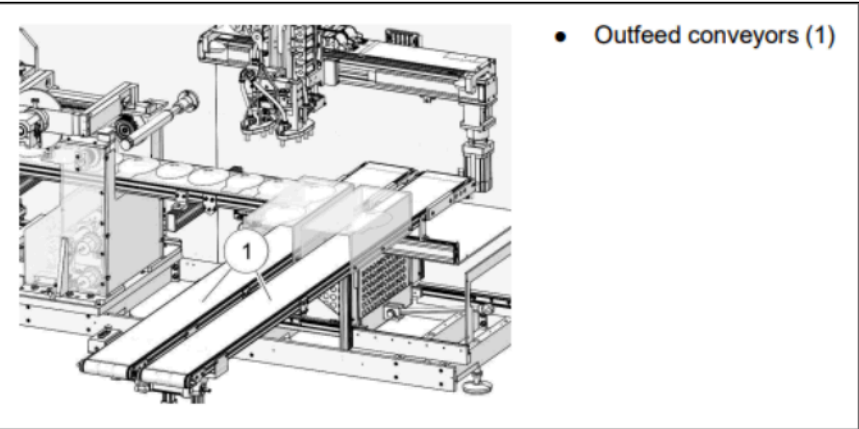


Figure 62 - Station 1088

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Machine/Station Overview

Station 1090 - Waste GRID REMOVAL

The waste grid is pulled out of the machine via a dancer and fed into a waste container.

Dancer (Station 1090)

A dancer roller with pendulum bearing generates the web tension of the waste grid.

Web guiding system (Station 1090)

The web guiding system corrects the tracking of the web. Sensors detect the web edge and give signals for correction of the tracking.

Web tension verification (Station 1090)

Load cells on a deflection roller measure the web tension, which is then regulated by the respective advance rollers.

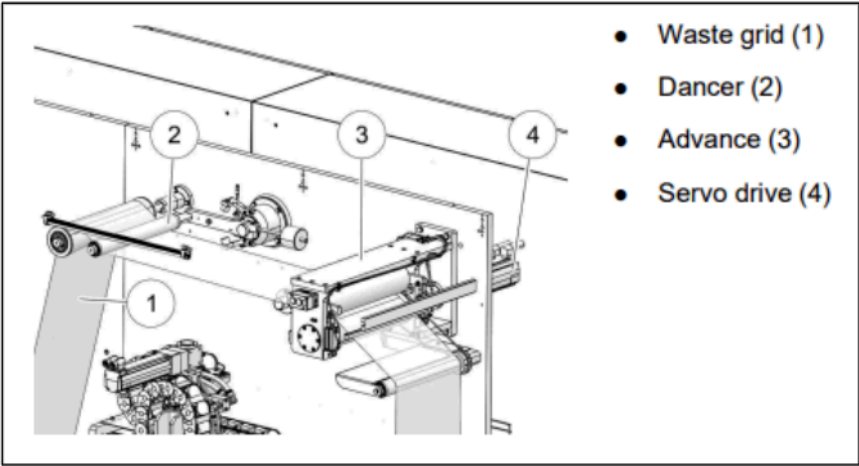


Figure 63 - Station 1090

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Status Beacon Overview

- 1. Alarm/Horn Sounds = Start Signal
- 2. Red Flashing = General Error
- 3. Orange Flashing = General Level
- 4. Green Flashing = Machine is Ready
- 5. Permanently Green = Machine is running



Figure 64 – Light Stack

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Control Panel Overview

The image shows an overview of the control panel and the buttons on control bar. The machine control screens (5) are all touch sensitive. Operators can select a station or icon by touching it, Screen will pull up detail for that station or machine area.

- 1. **Emergency Stop** – Stops the entire machine.
- 2. **Reset button** – Acknowledges information or error message.
- 3. **Start button** – Starts the machine and flashers in the start and stop phase.
- 4. **Stop button** – Stops the machine.
- 5. **Touch screen** – Functions of machine can be selected.

Do not use sharp or solid objects to select items on touch screen as you will damage the surface. Only use your finger.



Figure 65

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Control Panel Overview

The HMI panels, which are located along the side of the machine, are operated by touch. They have a main image of the machine that shows status etc. From the main image, various sub-images can be accessed. These show images of the individual stations, alarms, statistics, settings, and operation. There are emergency stops on all HMI screens.

The machine can only be run in automatic operation.

When in automatic operation, the machine will run automatically once the product has been chosen, materials have been added, doors have been closed, emergency stop has been reset, and [start] has been pressed.

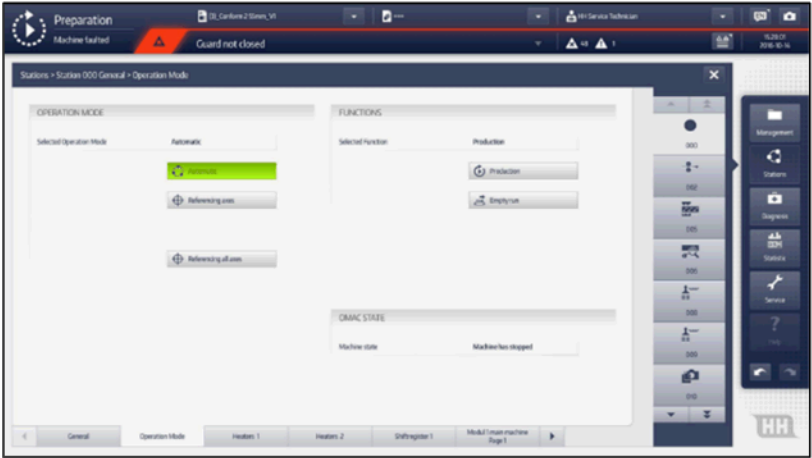


Figure 66

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Control Panel Overview

- 1. Top bar
- 2. Production Mode and Tasks
- 3. Dashboard button
- 4. Machine overview button
- 5. Display area (here with widgets)
- 6. Main menu



Figure 67

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Pre Start-Up Checks

The operator must check for continuation or changeover of the product number. The relevant work order is supplied by the Cell Leader. The Cell Leader will also advise the operator when a changeover is required.

The Work Order sheet will notify the operator as to what product number is being run on the machine. The operator must ensure to check the open quantity which is displayed on the Hand Held Terminal (HHT) Screen (when the work order number has been scanned at the start of shift) (See How to start a work order – SAP Training Guide for Production Operators 75GEN00060_Attach 6).

The operator must ensure to open the Tar Report at the printer station and key in the product number from the work order. A scheduled list of orders will appear on the screen and the operator must ensure to start at the top of the orders and work their way down in sequence.



Figure 68 – Work Order

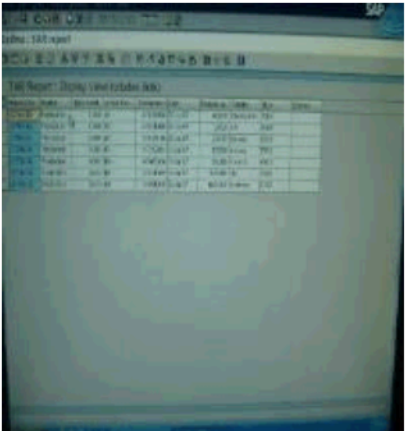


Figure 69 – Tar Report

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Pre Start-Up Checks

WIP Ticket

When producing Work In Progress (WIP) product each tote/box must have a completed WIP (Work In Progress i.e. unfinished product) ticket with the relevant details, in the pouch on the front of each tote box.

Part – Component/Material Number.

Oper 1 – Operators SAP clock number.

Mach – Machine Number e.g. RBU2.

Lot – The relevant lot number e.g. B71871 i.e. B = Ballina, 7 = the year 2007, 187 = 187th day of the year and 1 = 1st shift.

Qty – Total quantity of bags in a tote box.

Box – At the start up of the shift, place the number of each tote box (e.g. 1, 2, 36 and continue for however many boxes are completed on the shift).

Shift – 1, 2 or 3.

Certification Level – The quality certification level of the machine.

At the end of each shift, the operator must dispose of any unused labels.

Part: **29225RB**

Step: 0010 Team:

Oper 1: 5010422 Qty: 400

Oper 2: Box: 3

Mach: **RBU2**

Lot: **B71871**

06.07.2007 Shift: 1 Certification Level 2

Figure 70 – Product Identification Label – WIP Ticket

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Materials for HU3

Non-Woven – The non-woven material is situated on a pallet opposite the machine in the marked area (Figure 69). Each pallet has a white Lot Ticket attached which contains the relevant part number and lot number.

Film –The film material is situated at the end of the machine in the marked area. Each pallet has a white Lot Ticket attached which contains the relevant part number and lot number.

Mo Film – The MO film is situated at the end of the machine in the marked area. Each roll has a white Lot Ticket attached which contains the relevant part number and lot number.



Figure 71



Figure 72



Figure 73



Figure 74



Figure 75

Number (version)	
Title	HU3 Machine Overview
Hierarchy	75Cell100680_Att 4 Version 1.0

Materials for HU3

Hot Stamp Rolls – are in cardboard boxes which are located in the racking at machine 14 storage area. The operator can bring the stainless steel trolley to the storage area and place the hot stamp rolls onto the trolley. Each roll has a white Lot Ticket attached which contains the relevant part number and lot number.

ARV – ARV is situated at the end of the machine in the marked area. Each roll has a white Lot Ticket attached which contains the relevant part number and lot number.

Anti-Bulge Material – The anti-bulge material is located at the end of the machine in the marked area. Each roll has a white LOT ticket attached which contains the relevant part number and lot number.

Valves – Valves are located in cardboard boxes beside the valve feed station. Each roll has a white Lot Ticket attached which contains the relevant part number and lot number.

Gaskets – The gaskets are situated at the end of the machine in the marked area. Each roll has a white Lot Ticket attached which contains the relevant part number and lot number.



Figure 76

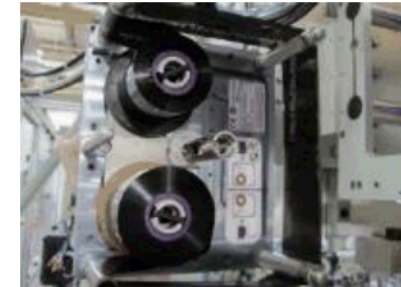


Figure 77



Figure 78