

KIEFEL GMBH
GERMANY

A Member of Brückner Group

Operating Instructions
Inline System KIT 70/20
K9 - Colostomy bags
Ident No.: 413-040 - B 921

Index

	page
User's Opinion.....	IV
1 Notes on Safety	1
2 Safety Instructions	5
2.1 Procedural measures	8
2.2 Safety guards.....	8
2.3 Informal safety measures.....	20
2.4 Staff training.....	20
2.5 Machine control system	20
2.6 Safety measures during normal operation.....	21
2.7 Hazards from electrical energy.....	22
2.8 Particular danger areas.....	22
2.9 Notes on possible hazards.....	23
2.10 Maintenance servicing and repair work	25
2.11 Structural alterations to the unit	25
2.12 Machine cleaning and waste disposal	26
2.13 Copyright	26
2.14 Machine Noise	27
3 Transport and storage.....	28
4 Machine data	31
4.1 Electrical connection details	31
4.2 Performance data	31
4.3 Environmental considerations	34
4.4 Further technical data	34
4.5 Delivery format.....	35
5 Setting up the unit.....	36
5.1 Site of installation and use	37
5.2 Unpacking the unit	38
5.3 Setting up and securing the unit.....	39
5.4 Connecting the Machine to Compressed Air	40
5.5 Connecting the power supply	41
5.6 Cooling platens with drive units.....	42
6 Start-up.....	43
6.1 UWS Abwickelstation	44
6.1.1 Material renewal.....	45
6.1.2 Fitting the roll of material to the tensioning roller	45
6.1.3 Splicing the material.....	47
6.1.4 Pulse generator and sealing bar	49
6.1.5 Calibration function of the U/I amplifiers.....	50
6.1.6 Calibration function of the roll-thickness sensors	51
6.2 FAC Folienspeicher.....	54

6.2.1	Threading in the materials.....	55
6.2.2	Changing from a four-layer to a three-layer article	57
6.2.3	Antistatic devices	58
6.3	INS Zangenvorschubsystem	59
6.3.1	Threading of the materials from the material hopper to the circumference-welding unit.....	67
6.3.2	Material-edge guiding device	68
6.3.3	Stapling clamps.....	70
6.3.4	Checking the toothed belt tension	71
6.3.5	Conveyor belt system.....	72
6.4	FSR / FSL - HP- HP filter-welding station.....	75
6.4.1	Hole punch for filters	77
6.4.2	Positioning the filter-welding station	77
6.4.3	Feed unit.....	78
6.4.4	Splicing the material.....	83
6.4.5	Stamping unit.....	87
6.4.6	Tools.....	92
6.4.7	Checking the tension of the filter material	97
6.5	Welding belt for HP filter-welding station.....	99
6.5.1	Replacing the welding belt	101
6.6	PRI Hot embossing station (printing station)	104
6.6.1	Adjusting the embossing unit	105
6.6.2	Pressure regulator for embossing units.....	105
6.6.3	Adjusting the heat-embossing device.....	106
6.7	INS chain conveyor	107
6.7.1	Tensioning the gripper chain.....	110
6.7.2	Magnetic-strip feed	112
6.7.3	Threading in the strip of material.....	114
6.7.4	Tensioning the magnetic belts.....	114
6.7.5	Adjusting the magnetic belts to each other.....	115
6.8	FHP/FPW flange hole-punch unit.....	116
6.8.1	Positioning the upper hole punches	117
6.8.2	Positioning the lower hole punches	117
6.8.3	Die replacement.....	118
6.8.4	Replacement or rotation of the opposite stamping sheets for the two upper punches.....	120
6.8.5	Replacement or rotation of the opposite stamping sheets for the two lower punches.....	121
6.8.6	Stroke adjustment	122
6.9	BSW - welding station Backing Seal	123
6.9.1	Welding-unit adjustment tasks	125
6.9.2	Die replacement.....	127
6.9.3	Adjusting the welding parameters	129
6.10	FFG feeder turntable, GASKET / BARRIER.....	130
6.10.1	How it works.....	131
6.10.2	Filling the magazine with CONFORM flanges	136
6.10.3	Flange-mounting adjustment tasks	137
6.10.4	Article change CONFORM flanges.....	138
6.10.5	Filling the magazine with MODERMA flanges	147
6.10.6	Article changeover with MODERMA flanges	148
6.10.7	Replacing the centring pins in the magazines	151
6.11	FWC 4S-S Flange-welding and cooling unit.....	154
6.11.1	Welding-unit adjustment tasks	156
6.11.2	Die replacement.....	158

6.11.3	Changing the operating plates	159
6.11.4	Fitting the welding belt for MODERMA flanges	164
6.11.5	Removing the cooling die	168
6.11.6	Stroke position sensor	169
6.11.7	Stroke adjustment at all welding units	170
6.11.8	Checking the stroke adjustment	170
6.12	ABF Binder FLAP stamping/welding unit	171
6.12.1	Positioning of the stamping/welding unit	173
6.12.2	Feed unit	174
6.12.3	Splicing the material	179
6.12.4	Stamping unit	183
6.12.5	Tools	188
6.13	Welding belt for stamping/welding unit	194
6.14	ASB labelling unit, binder	197
6.14.1	Labelling mechanism for the top side	199
6.14.2	Plane-parallelism for the top side	202
6.15	PWC 4S-welding station, circumference	204
6.15.1	Welding-unit adjustment tasks	207
6.15.2	Replacing the welding die	209
6.15.3	Stroke position sensor for welding unit	216
6.15.4	Cooling-unit adjustment tasks	217
6.15.5	Removal and fitting of the cooling plate	218
6.15.6	Adjusting the welding parameters	220
6.16	Welding belt for circumference-welding unit	221
6.16.1	Welding-belt adjustment	222
6.16.2	Replacing the welding belt	224
6.17	ASC labelling unit, re-heating station, testing station	235
6.17.1	Labelling mechanism for the top side	237
6.17.2	Plane-parallelism for the top side	240
6.17.3	Labelling mechanism for the bottom side	241
6.17.4	Plane-parallelism for the bottom side	244
6.17.5	Vertical adjustment of the top opposite platen	245
6.17.6	Re-heating station	246
6.17.7	Testing station	249
6.18	PPS 4S-cutout station, circumference	251
6.18.1	Horizontal adjustment of the tools relative to one another	253
6.18.2	Plane-parallelism	254
6.18.3	Changing the stamping tool	255
6.18.4	Stroke position sensor	262
6.18.5	Stroke adjustment at the punching unit	263
6.18.6	Checking the stroke adjustment	263
6.19	ULS removal point	264
6.19.1	Arbeitsweise	266
6.19.2	Artikelwechsel	267
6.19.3	Ausdrückeinheit	267
6.19.4	Items processed by unit	270
7	Operation	271
7.1	Brief description of electrical system	271
8	Operating elements	272
8.1	Operating Elements on Switch Cabinet	272

8.2	Operating elements on control panel.....	273
8.3	Operating control buttons on the unit	275
8.4	Activating the unit.....	280
9	Maintenance and servicing.....	282
9.1	Cleaning tasks	282
9.2	Maintenance tasks	283
9.3	Consumable materials, lubricants, cleaning products.....	284
10	Hotline after-sales service.....	285
10.1	Spares lists, parts lists, original diagrams	286
10.2	Original instructions of subassemblies/accessories.....	287
11	User Interface	288
	<i>Function menu:</i>	290
	<i>Startup</i>	291
	Description of the Function Keys	295
	<i>Start menu</i>	296
	Home screen.....	296
	Home screen (system overview)	297
	Station overview	298
	Heating system overview.....	299
	Shift register	300
	Operation data	301
	Error Messages.....	302
	<i>CF - General functions</i>	303
	Overview diagnosis	305
	Detailed diagnosis	306
	Operation data	307
	Machine state vs. time.....	308
	Feed steps - main register.....	309
	Shift register	310
	System messages	312
	System setting.....	313
	Password handling	315
	Languages	316
	Lamp test	317
	Operation Data - Reset	318
	Transfer.....	319
	<i>Home screen</i>	320
	UWS unwinding unit.....	320
	UWS foil-edge adjustment.....	321
	INS gripper-feed system.....	322
	FSL - HP filter welding station left	326
	FSR HP filter welding station <i>right</i>	330
	ABF Binder FLAP stamping/welding unit.....	331
	PRI - printing unit	334
	FHP flange hole-punch unit.....	336
	FFG feeder turntable, GASKET.....	337
	FFB feeder turntable, BARRIER.....	339
	FWC flange hole-punch unit.....	342
	PWC - circumference -welding station	344

PWC Belt -welding station.....	350
Position adjustment of welding station and search stroke	354
Function description	354
Calibration	357
Load-cell adjustment	358
Function description	358
ASB labelling unit, binder	362
ASC labelling unit, re-heating station, testing station.....	363
PPS 4S-cutout station, circumference.....	367
ULS removal point.....	368
ES Cleaner.....	370
TPU Tempering unit.....	371
BSW welding unit, BACKING SEAL.....	372
Manuel functions	374
 12 Failure Indications and Corrective Actions	 375

Obligations of the operator

It is the duty of the operator only, to allow other persons to work on the machine who:

- are familiar with the regulations on safety at work and accident prevention and with how to handle the tool
- have read and understood the chapter on safety in these operating instructions, confirmed by their signature

Star safety warnings should be removed on final registration

Warning Star

Obligations of the operating staff

Before starting work, persons who are to work on this machine must:

- understand the questions on safety at work and accident prevention
- read the chapter on safety and working rules in these operating instructions and confirm with a signature that they have done so

4 Machine data

Denomination:	Inline Machine
Type:	KIT 70/20
Functioning principle:	Thermal-contact welding (TK)
Items processed by unit:	colostomy bags
Unit number:	413-040 (see machine switchgear cabinet door)

4.1 Electrical connection details

Electrical connection:	3 x 400 V, N, PE, 50 Hz
1. Compressed air supply:	Dry, oil-free, dew point 2 °C, 6 bar, R 1"
2. Compressed air supply:	Dry, oil-free, dew point 2 °C, 7,5 bar, R 1/2"
Connection rating:	96 kVA
Nominal current:	94 A
Fuse rating:	125 A
Short Circuit Strength	11 kA
Control system voltage:	24 V DC
Control system	Siemens IPC477C Pro with operator panel MP Touch

4.2 Performance data

Production capacity	Approx. 19 cycles/min in 2x configuration, (depending on quality of material, components used, and also on part/tool configuration)
Dimensions	255 mm x 147 mm (2-fach-Nutzen)
Anatomical	294 mm x 67 mm
Symetrical	221 mm x 68 mm
Mini Pouch	10 x 55 mm

UWS unwinding station

	max roll width: 700mm
	max. roll diameter: 600 / 1000 mm
	4 working rolls
	4 reserve rolls
	4 Cutting and welding platforms

FAC foil accumulator

	max roll width: 800mm
	4-x
	2 Foil regulators
	2 Antistatic units

INTO THE CHAIN CONVEYOR

Max. foil-width	670mm
-----------------	-------

INS nippers feeding system

	Steel structure for medical purposes
	Feed: max 200mm
	max. roll width: 700mm

PR1 printing station

	Hot embossing station, 2X
	Embossing surface: 50x80 mm each

FFG feeding turntable GASKET

	magazine 3-x
	Stacking height 740mm
	Feeder, 2x

FFB feeding turntable BARRIER

	Magazine 3-x,
	Stacking height 600 mm
	Feeder, 2 -fach

FWC 4S-4columned welding station flange

	Welding procedure: TK
	Welding force: 2 x 4 kN
	incl. Cooling station

PWC 4S-4columned welding station periphery

	Welding procedure TK
	Servomotor capacity of product 8 kN
	Welding power of welding belt 46 kN

TC welding tool periphery, syme

	Anatomical
	Symetrical
	Mini Pouch
	PTFE tape

PPS 4columnend punching station periphery

	Stamping force: 130KN
--	-----------------------

ULS unloading station

	Usable surface area: max. 650x360 (2 x feed units)
	Horizontal stroke: 1900 mm

ASB ETIKETTIERSTATION

	2x
--	----

ASB ETIKETTIERSTATION

	4x
--	----

BSW welding tool BACKING SEAL

	Welding force max.1 KN
	Max. press stroke, top:20 mm
	Max. press stroke, bottom 0 mm
	Usable surface area max.300x100 mm
	Welding procedure: TK

4.3 Environmental considerations


Machine operating temperature:	0 °C to 220 °C
Ambient temperature:	> 0°C < 40°C
Relative Luftfeuchtigkeit	< 75%
Noise generation	< 80 dB (A) (work-station related emission value, i.e., noise level at the work station without the effect of extraneous noise and feedback from the space)

4.4 Further technical data

- Please refer to the layout diagram for further technical data.
- Refer also to the operating instructions supplied by the manufacturers of certain individual components.

4.5 Delivery format

To permit correct installation of the unit on the user's premises, check the delivery against the contract to ensure that it is complete.

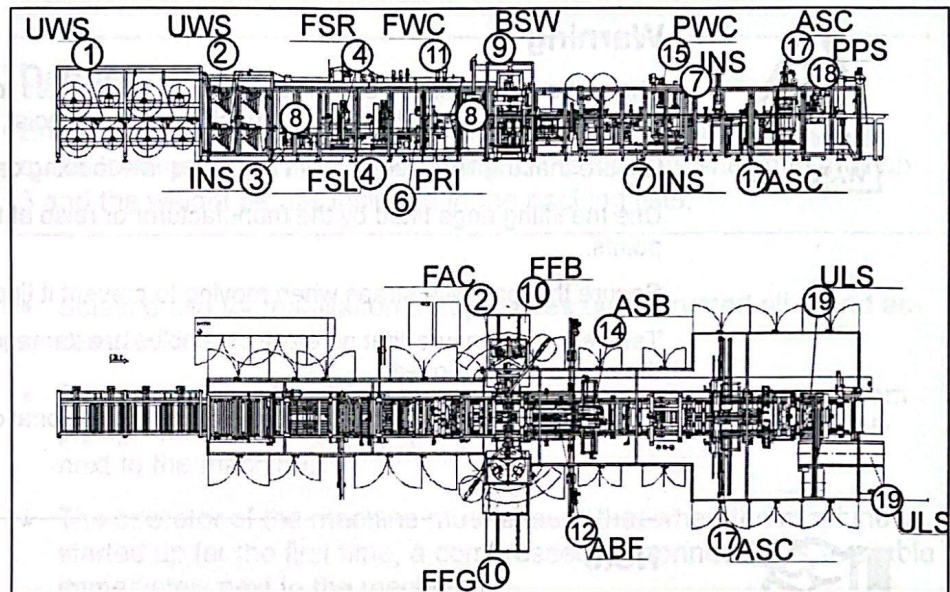

01. UWS unwinding unit
02. FAC roll magazine
03. INS gripper-feed system
04. FSR HP filter welding station
04. FSL HP filter welding station
05. Welding belt for HP filter-welding station
06. PRI printing unit
07. INS chain conveyor
08. FHP/FPW flange hole-punch unit
09. BSW welding unit, BACKING SEAL
10. FFG feeder turntable, GASKET
10. FFB feeder turntable, BARRIER
11. FWC 4S-S welding station, flange
12. ABF Binder FLAP stamping/welding unit
13. Welding belt for stamping/welding unit
14. ASB labelling unit, binder
15. PWC 4S-welding station, circumference
16. Welding belt for circumference welding station
17. ASC labelling unit, re-heating station, testing station
18. PPS 4S-cutout station, circumference
19. ULS removal point

The configuration desired by the customer is determined during the sales order processing. The structural components must be checked for completeness according to the configuration.