

Chassis and Engine Numbers

Vehicle Identification Number

1HG CB8 7 5 0 0 A 000001

Manufacturer Code

1HG : HONDA OF AMERICA
MFG., INC., USA

Vehicle Type

CB8 : ACCORD AERO DECK 2.2 ℓ

Door and Transmission Type

7 : 5-door, 5-speed Manual
8 : 5-door, 4-speed Automatic

Vehicle Grade

5 : LX

Fixed Code

Auxiliary Number

Factory Code

A : Ohia Factory in U.S.A. (Marysville)

Serial Number

Engine Number

F22A7 - 1000001

Engine Type

F22A7 : 2.2 ℓ SOHC Fuel-Injected
with Manual Transmission
F22A8 : 2.2 ℓ SOHC Fuel-Injected
with Automatic Transmission

Serial Number

Transmission Number

H2C4 - 6000001

Transmission Type

H2C4 : Manual
APXA : Automatic


Serial Number

H2C4 : 6000001~
APXA : 1000001~




Identification Number Locations




**Transmission Number
(Automatic)**

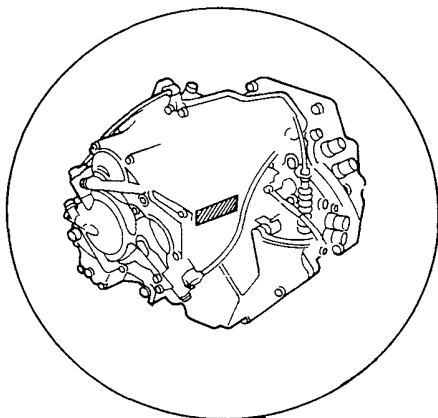


Vehicle Identification Number

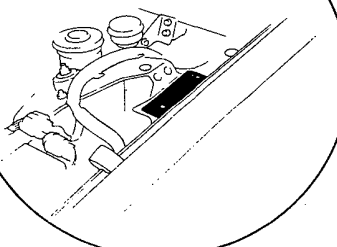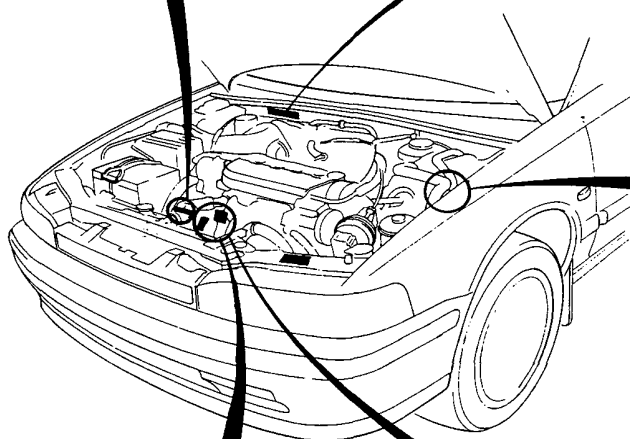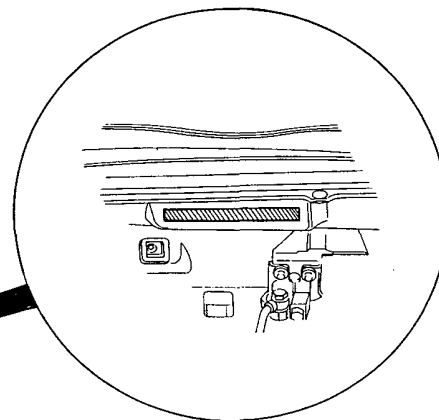

Vehicle Identification Number

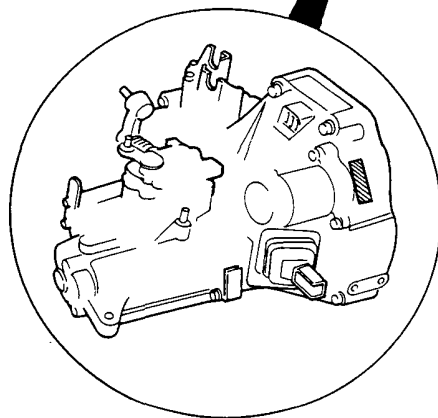


**Transmission Number
(Manual)**

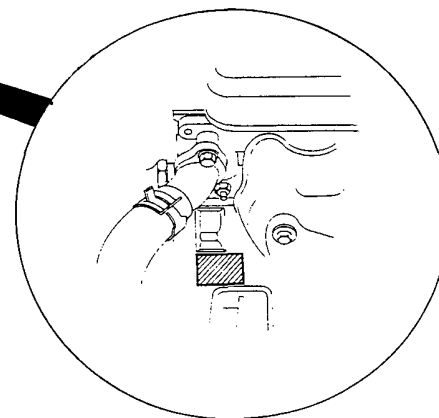

Engine Number

Label Locations

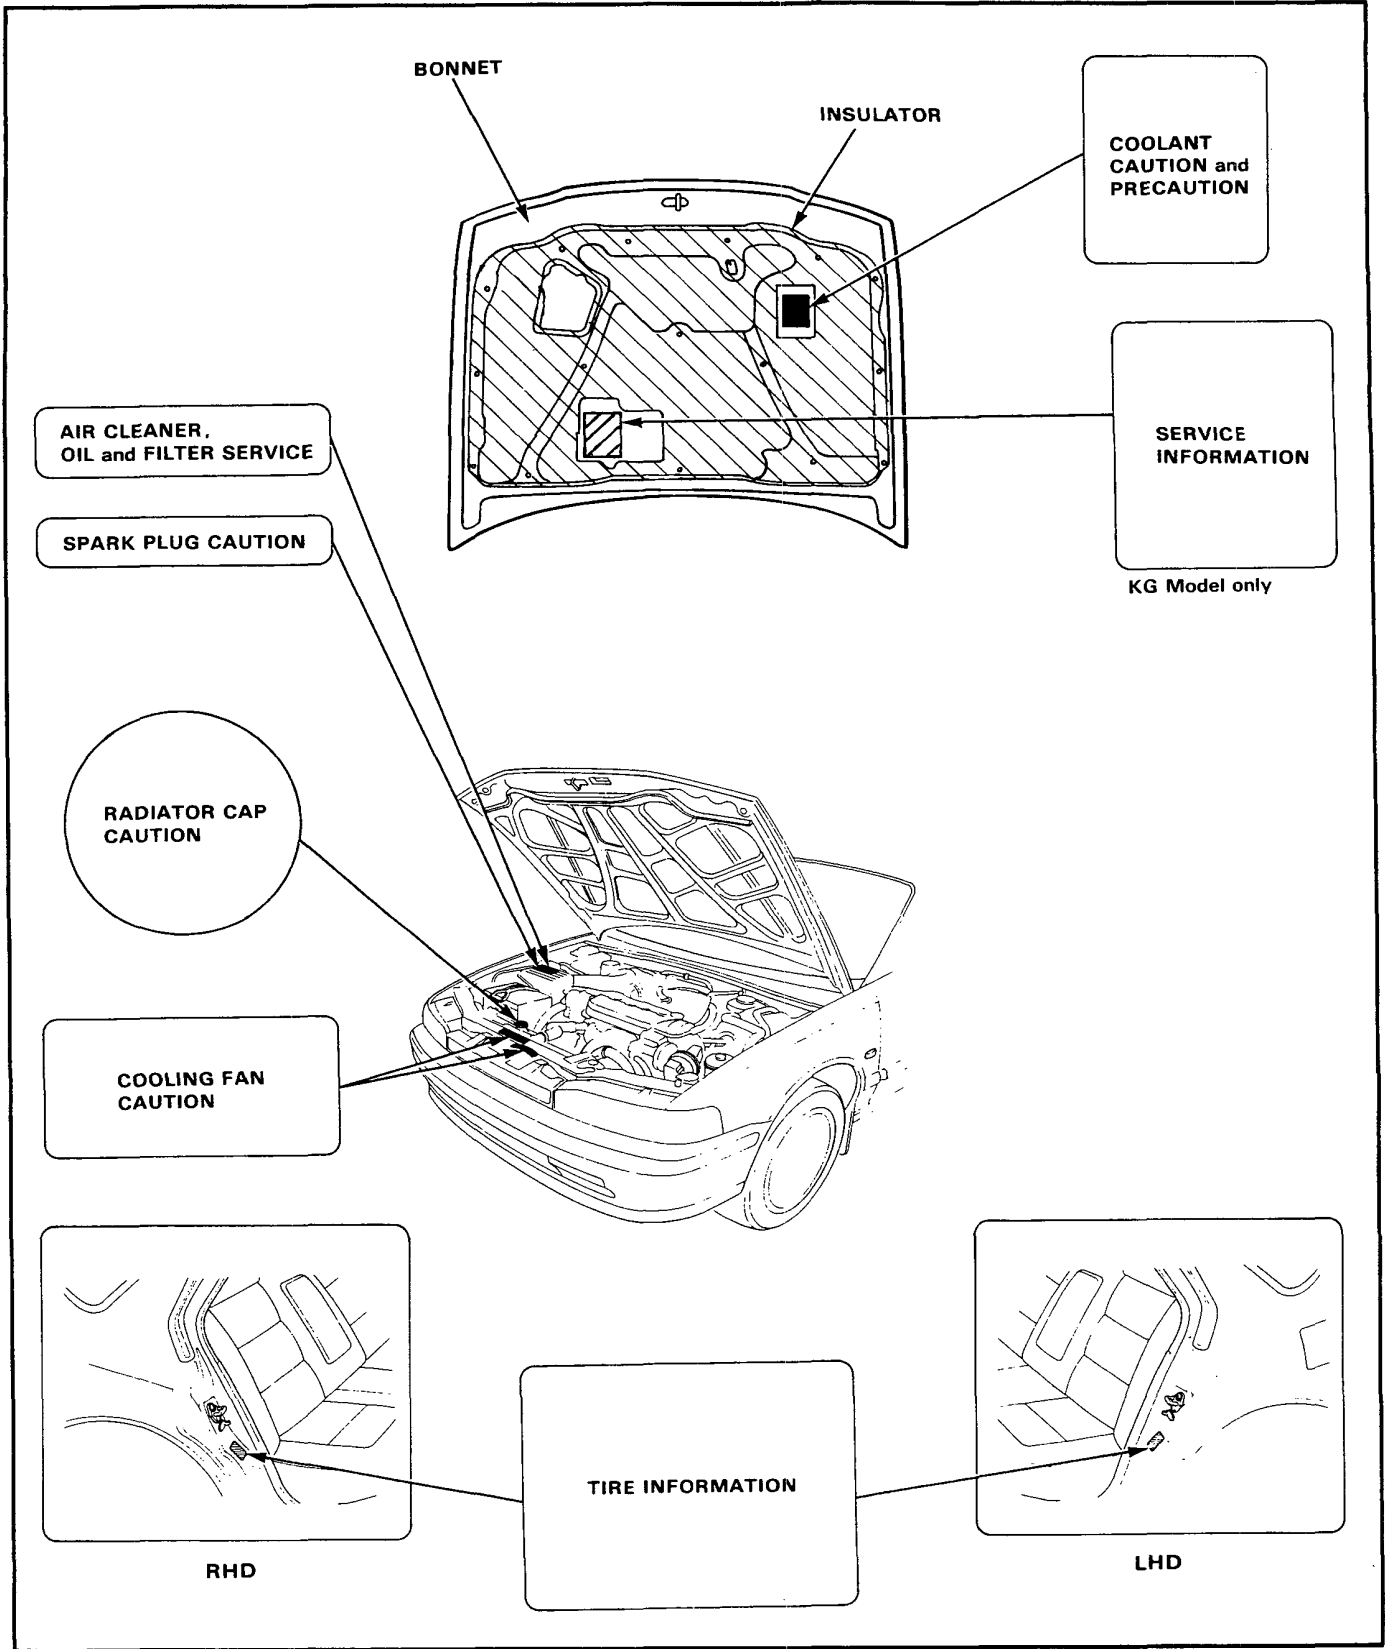

Lift and Support Points




Hoist

1. Place the lift blocks as shown.
2. Raise the hoist a few inches and rock the car to be sure it is firmly supported.
3. Raise the hoist to full height and inspect lift points for solid support.

⚠ WARNING When heavy rear components such as suspension, fuel tank, spare tire and tailgate are to be removed, place additional weight in the trunk before hoisting. When substantial weight is removed from the rear of the car, the center of gravity may change and can cause the car to tip forward on the hoist.

NOTE: Since each tire/wheel assembly weighs approximately 14 kg (30 lbs), placing the front wheels in the trunk will assist with the weight transfer.

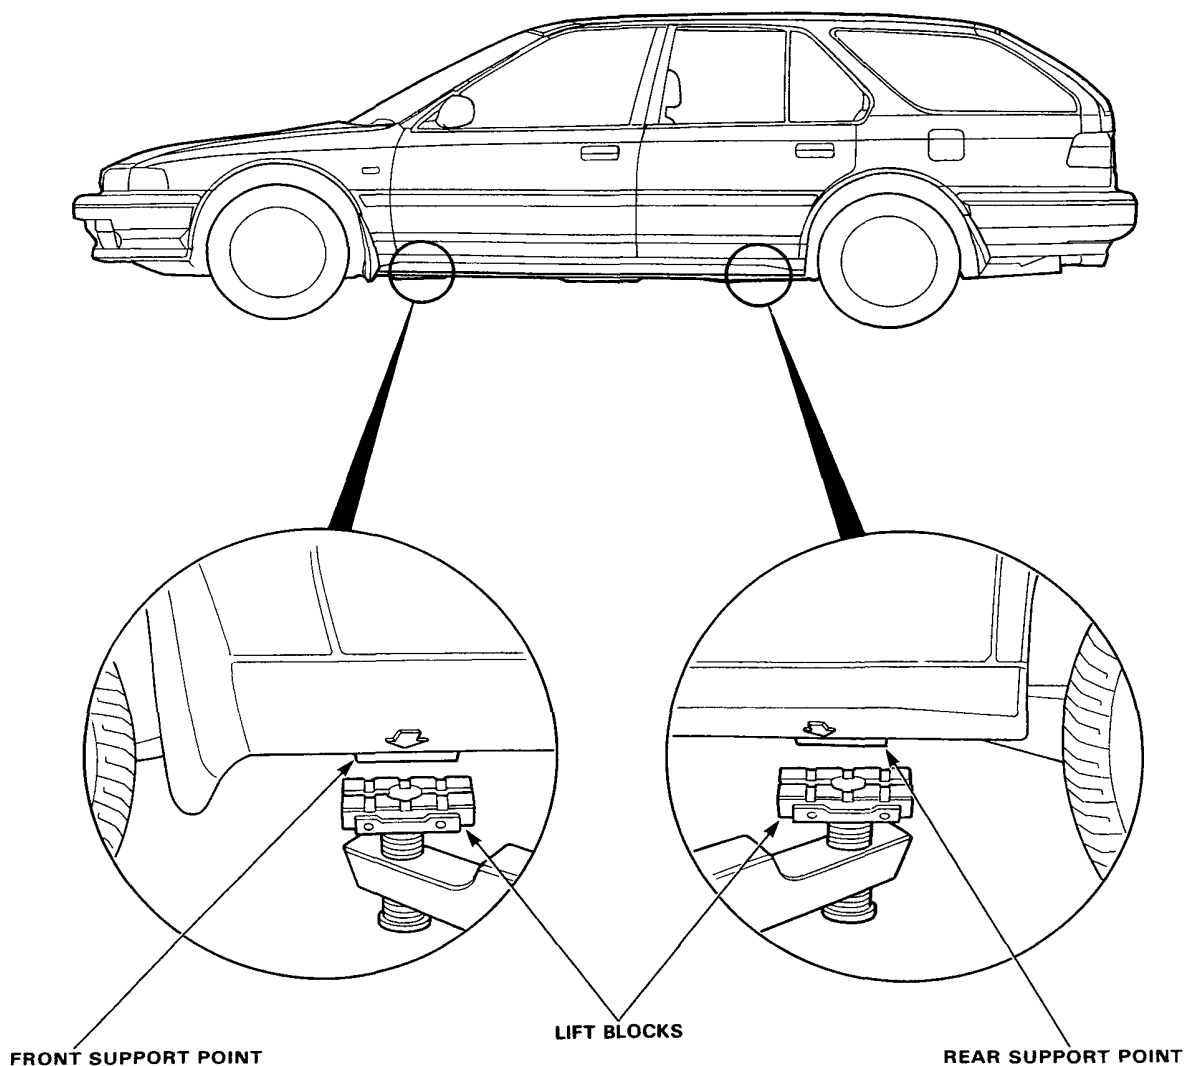

(cont'd)

Lift and Support Points (cont'd)


Floor Jack

1. Set the parking brake and block the wheels that are not being lifted.
2. When lifting the rear of the car, put the gearshift lever in reverse (Automatic in PARK).
3. Raise the car high enough to insert the safety stands.
4. Adjust and place the safety stands as shown on page 1-7 so the car will be approximately level, then lower the car onto the stands.


⚠ WARNING

- Always use safety stands when working on or under any vehicle that is supported by only a jack.
- Never attempt to use a bumper jack for lifting or supporting the car.

Front

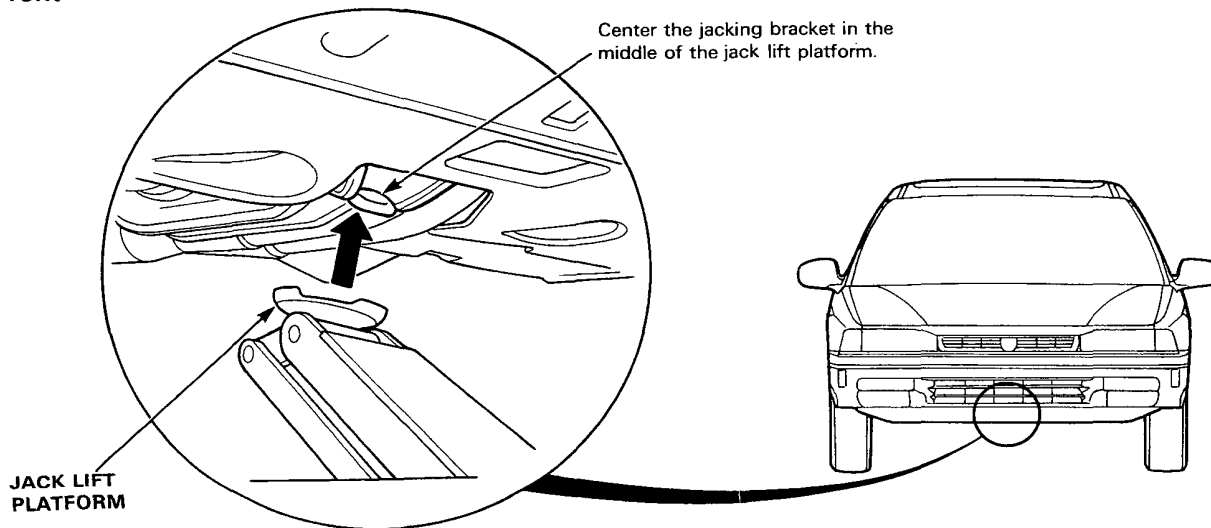




Rear

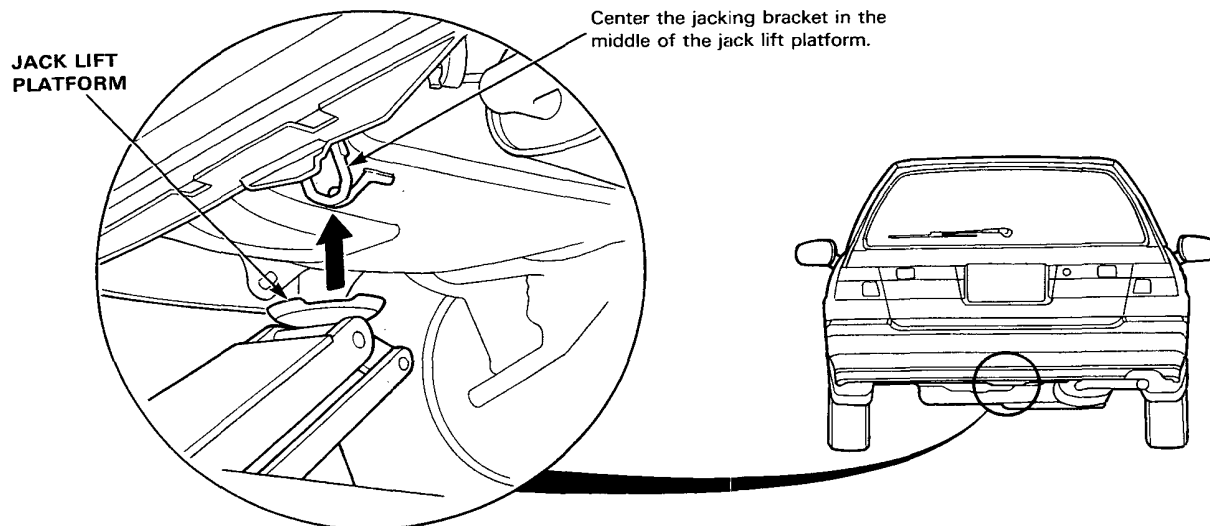

(cont'd)



Safety Stands

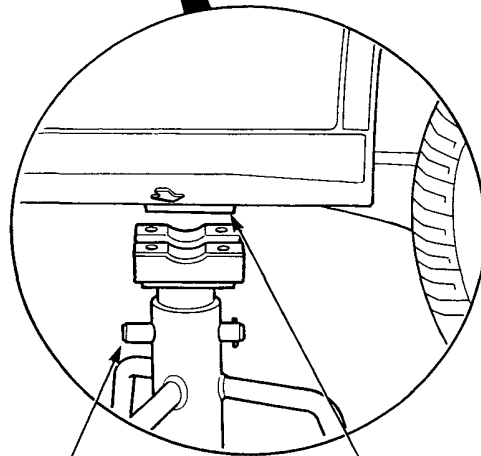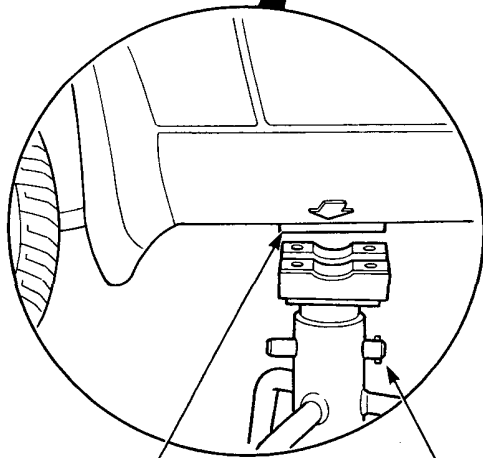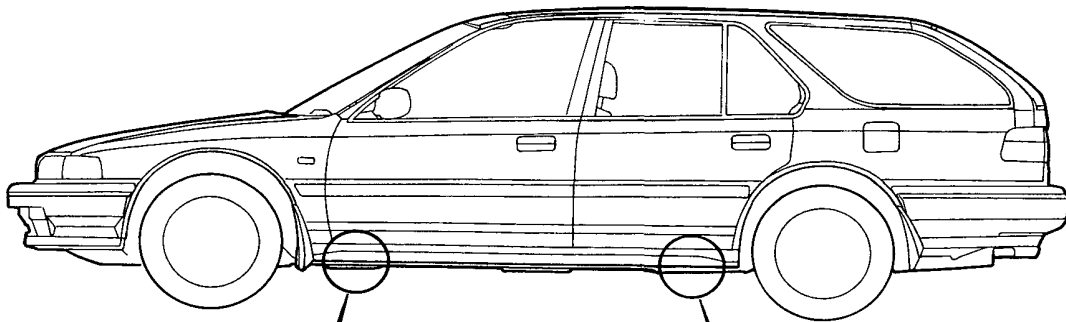

FRONT SUPPORT POINT

SAFETY STANDS

REAR SUPPORT POINT

Towing

If possible, always tow the car with the front wheels off the ground. The tow truck driver should position wood spacer blocks between the car's frame and his chains and lift straps, to avoid damaging the bumper and the body under it.

Do not use the bumpers to lift the car or to support the car's weight while towing. Check local regulations for towing. A chain may be attached to the hook shown in the picture. Do not attach a tow bar to either bumper.

⚠ WARNING

DO NOT push or tow a car to start it. The forward surge when the engine starts could cause a collision. On some types, also, under some conditions, the catalytic converter could be damaged. A car equipped with an automatic transmission cannot be started by pushing or towing.

If the car is to be towed with the front wheels on the ground, observe the following precautions:

Manual Transmission

Shift the transmission to Neutral and turn the ignition key to the "I" position.


Automatic Transmission

First, check the automatic transmission fluid level. Start the engine and shift to D₄, then to N. Return the ignition key to the "I" position.

CAUTION:

- Do not tow with front wheels on the ground when the automatic transmission fluid level is low or the transmission cannot be shifted with the engine running.
- Do not exceed 55 km/h (35 mph) or tow for distances of more than 80 km (50 miles).

TIE DOWN BRACKETS

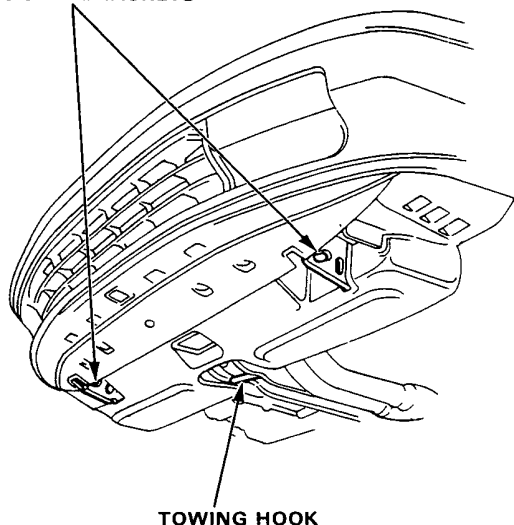


Preparation of Work




Special Caution Item For This Car

● Fuel Line Servicing


- Relieve fuel pressure by loosening the service bolt provided on the top of the fuel filter before disconnecting a fuel hose or a fuel pipe.

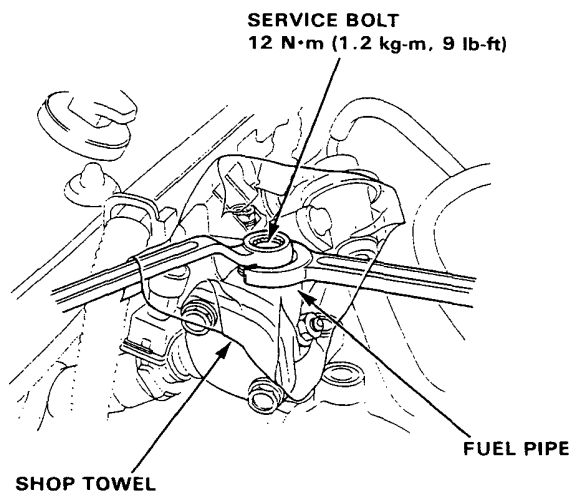

- Be sure to replace washers, O-rings, and rubber seals with new ones when servicing fuel line parts.
- Always apply oil to the surfaces of O-rings and seal rings before installation. Never use brake fluid, radiator fluid, vegetable oils or alcohol-based oils.

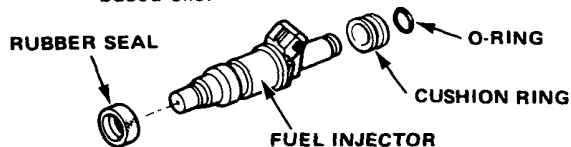

- When assembling the flare joint of the high-pressure fuel line, clean the joint and coat with new engine oil.
- When installing an injector, check the angle of the coupler. The center line of the coupler should align with the setting mark on the injector holder.

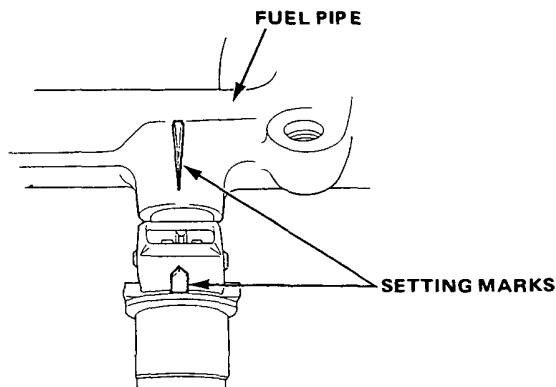

● Inspection for fuel leakage

- After assembling fuel line parts, turn ON the ignition switch (do not operate the starter) so that the fuel pump is operated for approximately two seconds and the fuel is pressurized. Repeat this operation two or three times and check whether any fuel leakage has occurred in any of the various points in the fuel line.

● Installation of an amateur radio for cars equipped with PGM-FI.

Care has been taken for the Fuel-Injection, A/T, and Cruise control control units and its wiring to prevent erroneous operation from external interference, but erroneous operation of the control units may be caused by entry of extremely strong radio waves. Attention must be paid to the following items to prevent erroneous operation of the control units.

- The antenna and the body of the radio must be at least 200 mm (7.9 in.) away from the control units.

The control unit locations:

- Fuel-Injection, A/T: Passenger's side front floor panel.
- Cruise control: Under dash panel of driver's side.
- Do not lead the antenna feeder and the coaxial cable over a long distance parallel to the car's wiring.
When crossing the wiring is required, execute crossing at a right angle.
- Do not install a radio with a large output (max. 10 W).


● Apply liquid gasket to the transmission, oil pump cover, right side cover and water outlet. Use HONDA genuine liquid gasket part No. OY740-99986.

- Check that the mating surfaces are clean and dry before applying liquid gasket. Degrease the mating surfaces if necessary.
- Apply liquid gasket evenly, being careful to cover all the mating surface.
- To prevent leakage of oil, apply liquid gasket to the inner threads of the bolt holes.
- Do not install the parts if 20 minutes or more have elapsed since applying liquid gasket. Instead, reapply liquid gasket after removing the old residue.
- Wait at least 30 minutes before filling with appropriate liquid (engine oil, coolant and similar fluids).


Preparation of Work

CAUTION: Observe all safety precautions and notes while working.


- Protect all painted surfaces and seats against dirt and scratches with a clean cloth or vinyl cover.

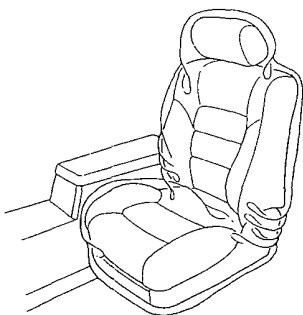


- Work safely and give your work your undivided attention. When either the front or rear wheels are to be raised, block the remaining wheels securely. Communicate at frequently as possible when work involves two or more workers. Do not run the engine unless the shop or working area is well ventilated.

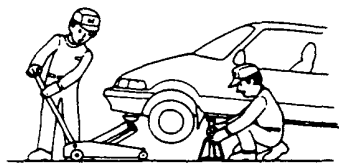


- Prior to removing or disassembling parts, they must be inspected carefully to isolate the cause for which service is necessary. Observe all safety notes and precautions and follow the proper procedures as described in this manual.

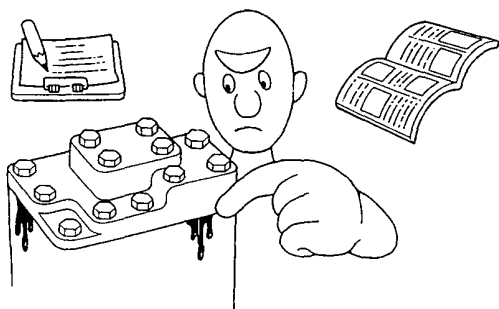


- Mark or place all removed parts in order in a parts rack so they can be reassembled in their original places.

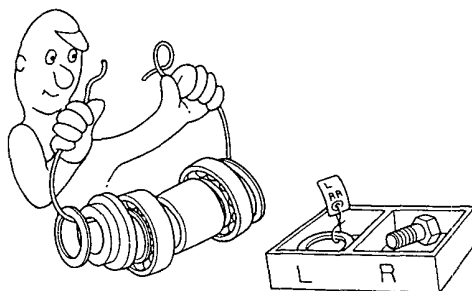


- Use the special tool when use of such a tool is specified.

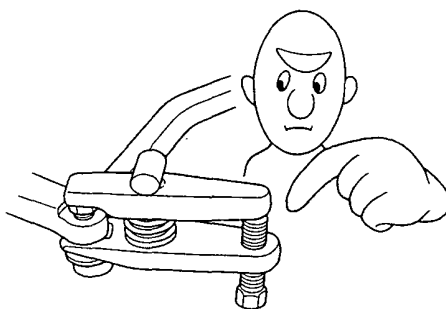


- Parts must be assembled with the proper torque according to the maintenance standards established.
- When tightening a series of bolts or nuts, begin with the center or large diameter bolts and tighten them in crisscross pattern in two or more steps.

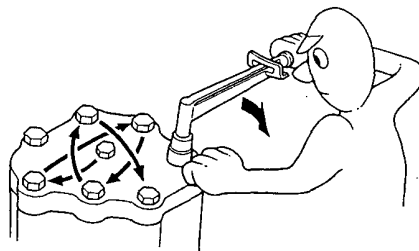


- Use new packings, gaskets, O-rings and cotter pins whenever reassembling.

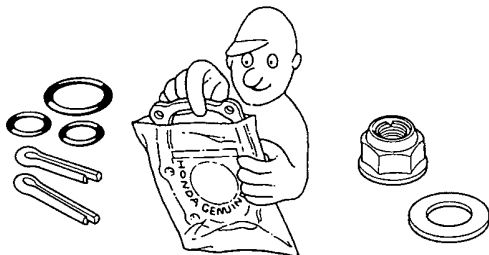

- Use genuine HONDA parts and lubricants or those equivalent. When parts are to be reused, they must be inspected carefully to make sure they are not damaged or deteriorated and are in good usable condition.

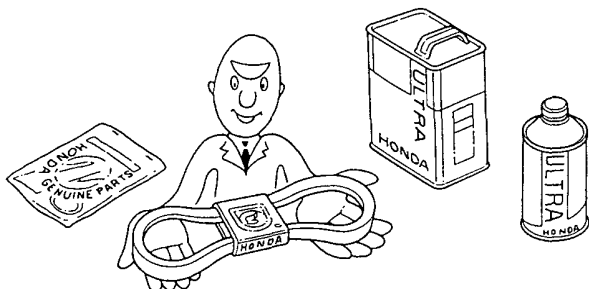


- Coat or fill parts with specified grease as specified (page 4-2). Clean all removed parts with solvent upon disassembly.

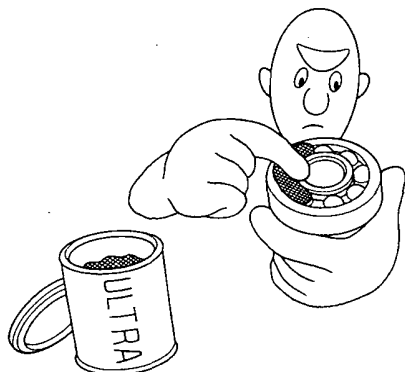

- Brake fluid and hydraulic components


- When replenishing the system, use extreme care to prevent dust and dirt from entering the system.
- Do not mix different brands of fluid as they may not be compatible.
- Do not reuse drained brake fluid.
- Because brake fluid can cause damage to painted and resin surfaces, care should be taken not to spill it on such materials. If spilled accidentally, quickly rinse it with water or warm water from painted or resin surfaces.
- After disconnecting brake hoses or pipes, be sure to plug the openings to prevent loss of brake fluid.
- Clean all disassembled parts only in clean BRAKE FLUID. Blow open all holes and passages with compressed air.

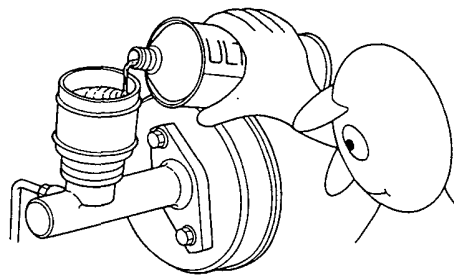

- Keep disassembled parts from air-borne dust and abrasives.
- Check that parts are clean before assembly.

- Avoid oil or grease getting on rubber parts and tubes, unless specified.


- Upon assembling, check every part for proper installation and operation.

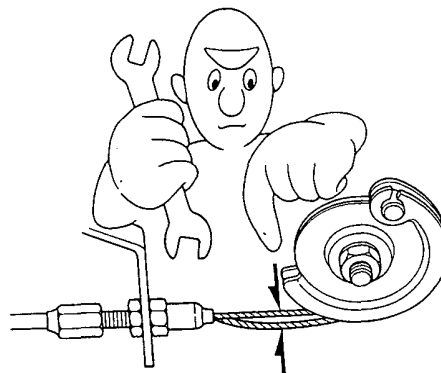


Preparation of Work

Electrical


- Before making any repairs on electric wires or parts, disconnect the battery cables from the battery starting with the negative (-) terminal.

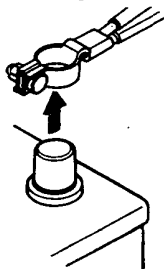


- After making repairs, check each wire or part for proper routing and installation. Also check to see that they are connected properly.
- Always connect the battery positive (+) cable first, then connect the negative (-) cable.

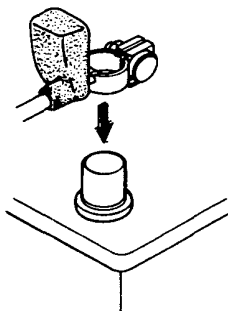

- Coat the terminals with clean grease after connecting the battery cables.
- Don't forget to install the terminal cover over the positive battery terminal after connecting.
- Before installing a new fuse, isolate the cause and take corrective measures, particularly when frequent fuse failure occurs.

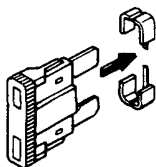


- Be sure to install the terminal cover over the connections after a wire or wire harness has been connected.

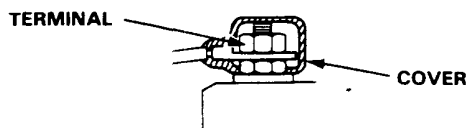


- As to locking connectors, be sure to disengage the lock before disconnecting.
- Conventional connectors may be of two types, those in which the lock is pressed to remove, and those in which the lock is pulled up to remove. Be sure to ascertain the type of locking device before beginning work. The following is a depiction of the means of disconnecting various typical connectors.

Press to disengage:

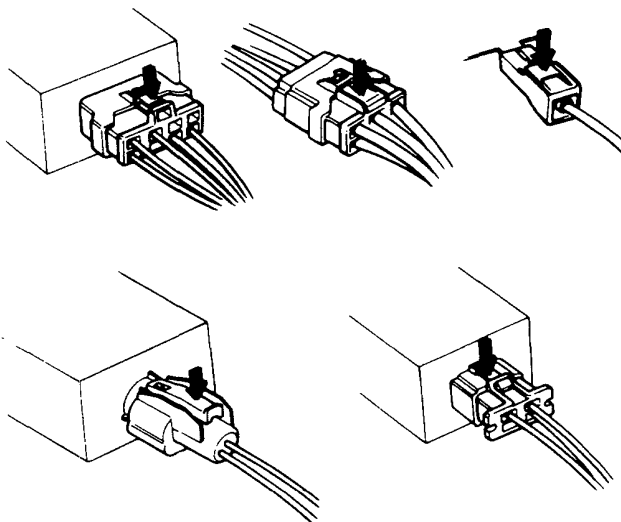


Pull up to disengage:

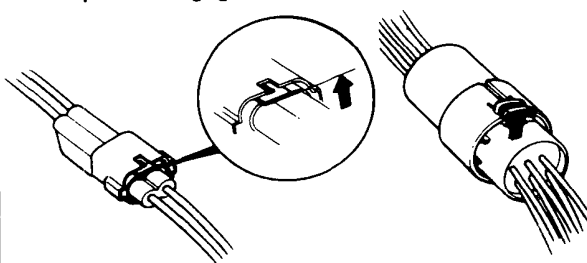




When new type connectors are used, connection and disconnection of them should be done paying attention to the following precautions.

- Because all the connectors except terminal of 1-P are equipped with push-down type locks, unlock them first before disconnecting the connectors.
- On the connectors installed on the bracket a pull type lock is equipped between the bracket and the connector.
Some connectors of this type can not be disconnected unless they are removed from their brackets. When disconnecting, check their shapes.
- On the bracket mounted connector with dual locks, remove the connector from the bracket before disconnecting.

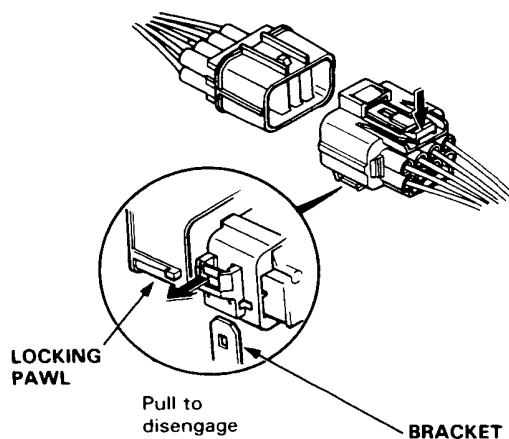

- Push the locking tab to disconnect.

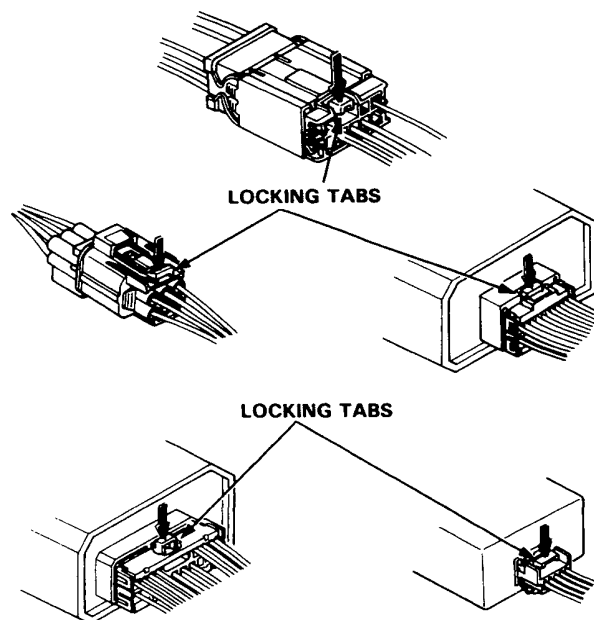


(cont'd)


Preparation of Work

Electrical (cont'd)

- Pull the locking tab to remove the connector from the bracket.

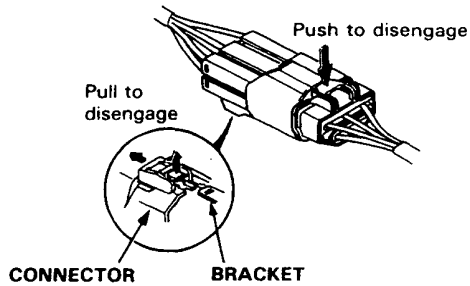


- When disconnecting locks, first press in the connector tightly (to provide clearance to the locking device), then operate the tab fully and remove the connector in the designated manner.

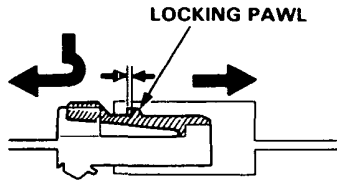


- When disconnecting a connector, pull it off from the mating connector by holding on both connectors.
- Never try to disconnect connectors by pulling on their wires.


Good

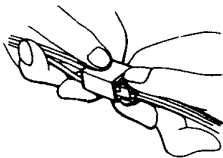

No Good

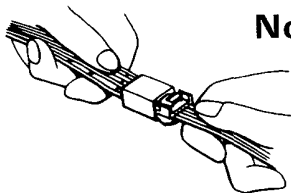


No Good

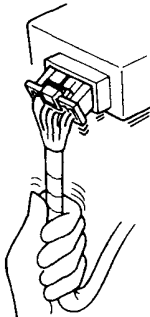


- Place the plastic cover over the mating connector after reconnecting. Also check that the cover is not distorted.

No Good

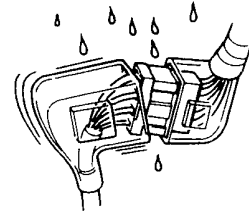


- Before connecting connectors, check to see that the terminals are in place and not bent or distorted.

No Good

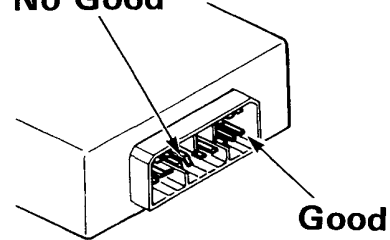


- Check for loose retainer and rubber seals. The illustration shows examples of terminal and seal abnormality.

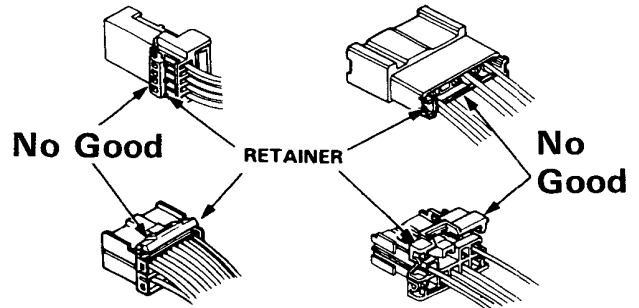


- Example of waterproof connector:

No Good

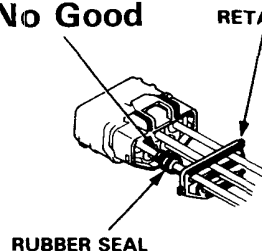


RUBBER SEAL

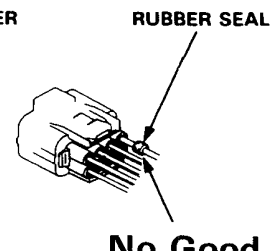


No Good




Good

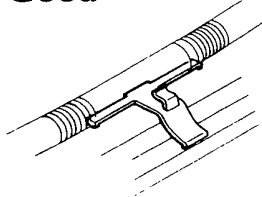


No Good

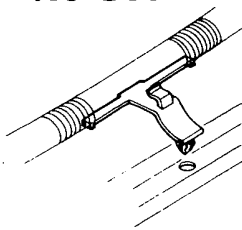


Good

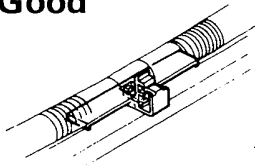


No Good

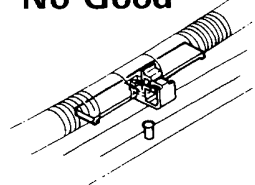


- After clamping, check each harness to be certain that it is not interfering with any moving or sliding parts of the vehicle.
- Keep wire harnesses away from the exhaust pipes and other hot parts.

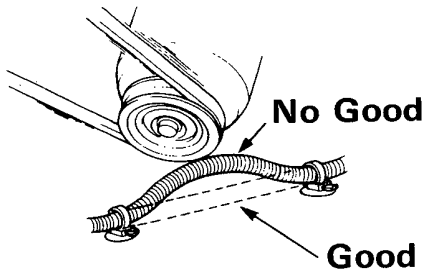


- Always keep a safe distance between wire harnesses and any heated parts.

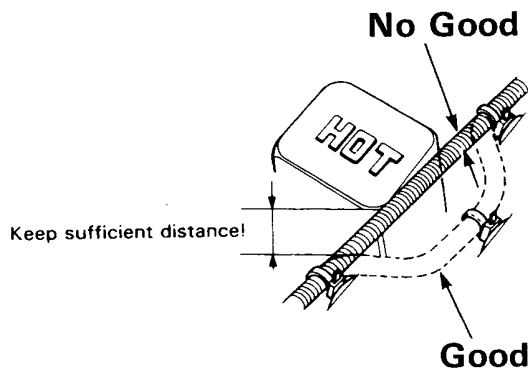

- Do not bring wire harnesses in direct contact with sharp edges or corners.
- Also avoid contact with the projected ends of bolts, screws and other fasteners.

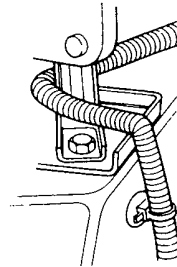


No Good

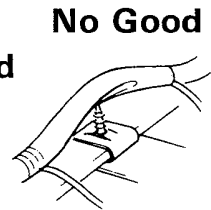


No Good

- Route harnesses so they are not pulled taut or slackened excessively.

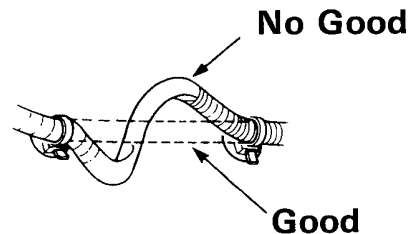


- Protect wires and harnesses with a tape or a tube if they are in contact with a sharp edge or corner.

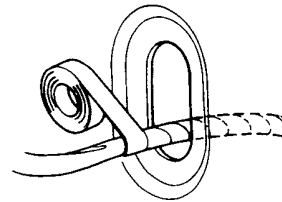

- Clean the attaching surface thoroughly if an adhesive is used. First, wipe with solvent or alcohol if necessary.

Good




No Good

(cont'd)

Preparation of Work

Electrical (cont'd)

- For the connector which uses insulation grease, clean the connector then apply grease if the grease is insufficient or contaminated.

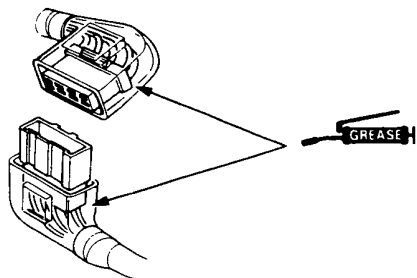


- Insert the connector tightly and make sure it is securely locked.
- Check all the wire harnesses are connected.
- There are two types of locking tab: one that you have to push and the other you should not touch when connecting the connector. Check the shape of the locking tab before connecting.
- The locking tab having a taper end should not be touched when connecting.




- The locking tab with an angle end should be pushed when connecting.




- Insert connectors fully until they will no longer go.
- The connectors must be aligned and engaged securely.
- Do not use wire harnesses with a loose wire or connector.

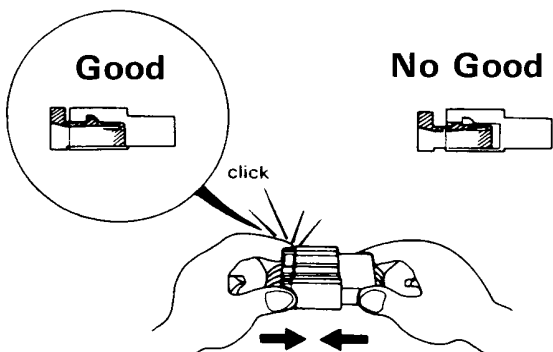


- Before connecting, check each connector cover for damage. Also make sure that the female connector is tight and not loosened from the previous use.

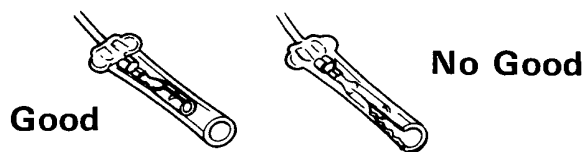

- Insert male connectors into the female connectors fully until they will no longer go.
- Be sure that plastic cover is placed over the connection.
- Position the wires so that the open end of the cover faces down.

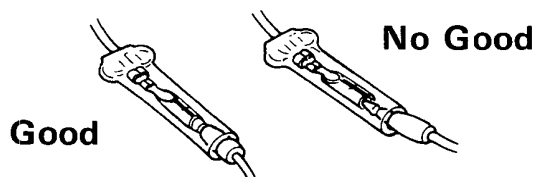


- Secure wires and wire harness to the frame with their respective wire bands at the designated locations. Position the wiring in the bands so that only the insulated surfaces contact the wires or harnesses.
- Remove with care not to damage the lock.

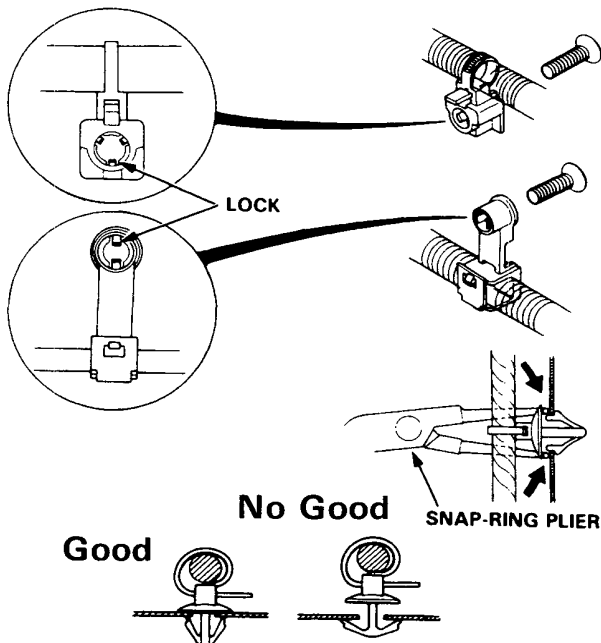


- Seat grommets in their grooves properly.

Good

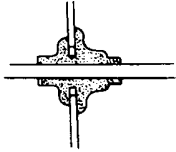

No Good

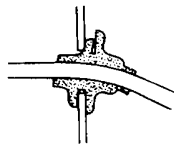

- Do not damage the insulation when connecting a wire.
- Do not use wires or harnesses with a broken insulation. Repair by wrapping with protective tape or replace with new ones if necessary.

No Good




Good




- After installing parts, make sure that wire harnesses are not pinched.

No Good

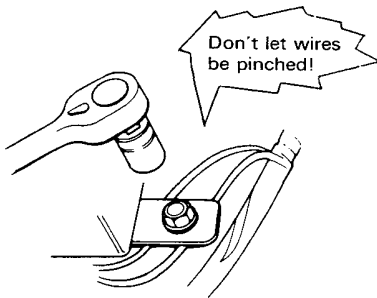


- After routing, check that the wire harnesses are not twisted or kinked.
- Wire harnesses should be routed so that they are not pulled taut, slackened excessively, pinched, or interfering with adjacent or surrounding parts in all steering positions.

- When using the Service Tester, follow the manufacturer's instructions and those described in the Shop Manual.

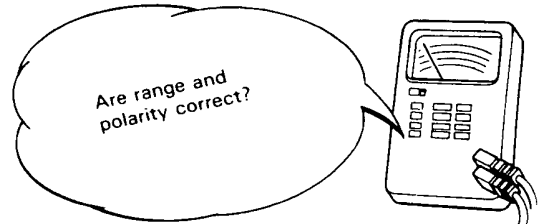


- Always insert the probe of the tester from the wire harness side (except waterproof connector).

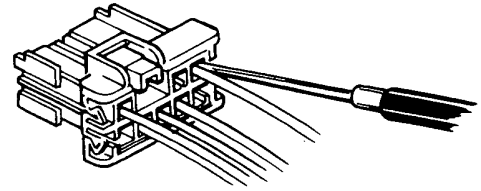


- Make sure to use the probe with a tapered tip.

Good




No Good



- Do not drop parts.

No Good

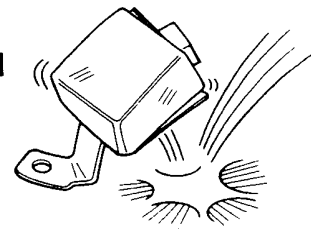

Symbol Marks

Abbreviation

The following symbols stand for:

-  :Apply engine oil.
-  :Apply brake fluid.
-  :Apply grease.
-  :Apply Automatic Transmission Fluid.
-  : Apply Power Steering Fluid.
-  :Apply or check vacuum.
- ①, ②, ③, :Sequence for removal or installation.

①, ②, ③, :Sequence for removal or installation.

A/C	Air Conditioner
A/T	Automatic Transmission
ATF	Automatic Transmission Fluid
B or BAT	Battery
CATA	Catalytic Converter
EACV	Electronic Air Control Valve
ECU	PGM-FI Electronic Control Unit
EGR	Exhaust Gas Recirculation
EX	Exhaust
GND	Ground
IG	Ignition
IN	Intake
INT	Intermittent
L	Left
LHD	Left Hand Drive
M/T	Manual Transmission
RCV	Poaitive Crankcase Ventilation
PGM-FI	Programmed Fuel-Injection
P/S	Power Steering
R.	Right
RHD	Right Hand Drive
SW	Switch
SOL. V	Solenoid Valve
TDC	Top Dead Center
P	Parking
R	Reverse
N	Neutral
D ₄	Drive Position (1st~4th)
D ₃	Drive Position (1st~3rd)
2	Fixed 2nd speed
1	Fixed 1st speed
S	S signal/S Switch

Special Tools

5. Engine

Number	Tool Number	Description	Qty	Remarks
①	07GAF-PH60300	Piston Pin Base Insert	1	07973-PE00400 may also be used
②	07GAF-PH70100	Pilot Collar	1	
③	07HAD-PJ70200	Valve Guide Seal Installer	1	
④	07HAF-PL20102	Piston Base Head	1	
⑤	07HAH-PJ70100	Valve Guide Reamer 5.5 mm	1	
⑥	07JAB-0010000	Crank Pulley Holder Set	1	Component Tools for Crankshaft for Balancer Shaft
⑥-1	07JAA-0010200	Socket Wrench 19 mm	(1)	
⑥-2	07JAB-0010200	Handle	(1)	
⑦	07JAB-0010400	Pulley Holder Attachment HEX 50 mm	1	
⑧	07JAZ-SH20100	R. P. M. Connecting Adaptor	1	
⑨	07JGG-0010100	Belt Tension Gauge	1	
⑩	07KAK-SJ40100	Engine Tilt Hanger Set	1	
⑪	07LAF-PT20100	Bearing Replacement Tool Set	1	
⑫	07LAG-PT20100	Balancer Shaft Lock Pin	1	
⑬	07LAZ-PT30100	R. P. M. Connecting Adaptor	1	
⑭	07LAZ-PT30110	R. P. M. Connecting Adaptor (A)	1	
⑮	07LAZ-PT30120	R. P. M. Connecting Adaptor (B)	1	
⑯	07406-0030000	Oil Pressure Gauge Adaptor	1	
⑰	07742-0010100	Valve Guide Remover 5.5 mm	1	
⑱	07746-0010300	Driver Attachment 42 x 47 mm	1	
⑲	07746-0010400	Driver Attachment 52 x 55 mm	1	
⑳	07749-0010000	Driver	1	
㉑	07757-0010000	Valve Spring Compressor	1	
㉒	07912-6110001	Oil Filter Socket	1	
㉓	07924-PD20003 or 07924-PD20002	Ring Gear Holder	1	
㉔	07942-8920000	Valve Guide Driver 5.5 mm	1	
㉕	07948-SB00101	Driver Attachment	1	
㉖	07973-PE00310	Piston Pin Driver Shaft	1	
㉗	07973-PE00320	Piston Pin Driver Head	1	
㉘	07973-6570500	Piston Base	1	
㉙	07973-6570600	Piston Base Spring	1	

6. Fuel and Emissions

Number	Tool Number	Description	Qty	Remarks
①	07JAZ-SH20100	R. P. M. Connecting Adaptor	1	Component Tools Component Tools
②	07LAA-PT50100	O ₂ Sensor Socket Wrench	1	
③	07LAJ-PT30100	ECU Test Harness	1	
④	07LAJ-PT30200	Test Harness	1	
⑤	07LAZ-PT30100	R. P. M. Connecting Adaptor	1	
⑤-1	07LAZ-PT30110	R. P. M. Connecting Adaptor (A)	(1)	
⑤-2	07LAZ-PT30120	R. P. M. Connecting Adaptor (B)	(1)	
⑥	07406-0040001	Fuel Pressure Gauge Set	1	
⑥-1	07406-0040100	Pressure Gauge	(1)	Component Tools
⑥-2	07406-0040201	Hose Assembly	(1)	
⑦	07411-0020000	Digital Circuit Tester	1	
⑧	07614-0050100	Fuel Line Clamp	1	

7. Clutch

Number	Tool Number	Description	Qty	Remarks
①	07JAF-PM7011A	Clutch Alignment Disc	1	
②	07LAF-PT00110	Clutch Alignment Shaft	1	
③	07924-PD20003 or 07924-PD20002	Ring Gear Holder	1	
④	07936-3710100	Handle	1	



8. Manual Transmission

Number	Tool Number	Description	Qty	Remarks
①	07GAJ—PG20102	Mainshaft Inspection Tool Set	1	—Component Tools
①-1	07GAJ—PG20110	Mainshaft Holder	(1)	
①-2	07GAJ—PG20130	Mainshaft Base	(1)	
②	07HAJ—PK40201	Preload Inspection Tool	1	—Component Tools
③	07JAC—PH80000	Adjusting Bearing Remover Set	1	
③-1	07JAC—PH80100	Bearing Remover Attachment	(1)	
③-2	07JAC—PH80200	Bearing Remover Handle	(1)	
③-3	07741—0010201	Bearing Remover Weight	(1)	07944—6110100 may also be used
④	07JAD—PH80400	Pilot Driver 28 mm	1	
⑤	07JAD—SH30100	Oil Seal Driver	1	
⑥	07744—0010400	Pin Driver 5.0 mm	1	
⑦	07746—0010300	Attachment 42 x 47 mm	1	
⑧	07746—0010400	Attachment 52 x 55 mm	1	
⑨	07746—0010500	Attachment 62 x 68 mm	1	
⑩	07746—0010600	Attachment 72 x 75 mm	1	
⑪	07746—0030100	Driver	1	
⑫	07746—0030200	Inner Driver 25 mm	1	
⑬	07749—0010000	Driver	1	
⑭	07944—SA00000	Pin Driver 4.0 mm	1	
⑮	07947—6110501	Oil Seal Driver	1	
⑯	07979—PJ40001	Magnet Stand Base	1	

9. Automatic Transmission

Number	Tool Number	Description	Qty	Remarks
①	07GAB—PF50100	Mainshaft Holder	1	—Component Tools
②	07GAD—PG20100	Pin Driver 5.0 mm	1	
③	07GAE—PG40200	Clutch Spring Compressor Set	1	
③-1	07HAE—PL50100	Clutch Spring Compressor Attachment	(1)	
③-2	07GAE—PG40200	Clutch Spring Compressor Bolt Assembly	(1)	—Component Tools
③-3	07960—6120101	Clutch Spring Compressor Attachment	(1)	
④	07GAJ—PG20200	Preload Inspection Tool	1	
⑤	07HAC—PK40101	Housing puller	1	May also be used when combined with 07HAC—PK40100
⑤-1	07HAC—PK40110	Puller Base, Replacement	(1)	
⑥	07JAC—PH80000	Adjusting Bearing Remover Set	1	—Component Tools
⑥-1	07JAC—PH80100	Bearing Remover Attachment	(1)	
⑥-2	07JAC—PH80200	Bearing Handle Assembly	(1)	
⑥-3	07741—0010201	Remover Weight	(1)	
⑦	07JAD—PH80101	Driver Attachment	1	
⑧	07JAD—PH80400	Pilot Driver 28 x 30 mm	1	
⑨	07JAD—PN00100	Driver Attachment	1	
⑩	07LAE—PX40100	Clutch Spring Compressor Attachment	1	
⑪	07LAJ—PT30100	ECU Test Harness	1	
⑫	07406—0020003	Oil Pressure Gauge	1	
⑬	07406—0020201	Oil Pressure Gauge Hose	1	
⑭	07406—0070000	Low Pressure Gauge	1	
⑮	07746—0010400	Attachment 52 x 55 mm	1	
⑯	07746—0010500	Attachment 62 x 68 mm	1	
⑰	07746—0010600	Attachment 72 x 75 mm	1	
⑱	07746—0030100	Driver 40 mm I.D.	1	
⑲	07749—0010000	Driver	1	
⑳	07947—6340500	Driver Attachment E	1	

Special Tools

10. Driveshafts

Number	Tool Number	Description	Qty	Remarks
①	07GAD—PG40100	Seal Driver Attachment	1	
②	07GAF—SD40700	Hub Dis/Assembly Base	2	
③	07LAD—SM40100	Seal Driver Attachment	1	
④	07LAF—SM40300	Support Base Attachment	1	
⑤	07746—0010200	Attachment, 37 x 40 mm	1	
⑥	07746—0010300	Attachment, 42 x 47 mm	1	
⑦	07746—0030100	Driver, 40 mm I.D.	1	
⑧	07749—0010000	Driver	1	
⑨	07947—SD90101	Seal Driver Attachment	1	
⑩	07965—SD90100	Support Base	1	

11. Steering

Number	Tool Number	Description	Qty	Remarks
①	07GAG—SD40300	Cylinder End Seal Slider	1	
②	07HAG—SF10100	Piston Seal Ring Guide	1	
③	07HAG—SF10200	Piston Seal Ring Sizing Tool	1	
④	07HAG—SF10300	Pinion Seal Ring Guide	1	
⑤	07JGG—0010100	Belt Tension Gauge	1	
⑥-1	07LAK—SM40110	P/S Joint Adaptor (Pump)	1	
⑥-2	07LAK—SM40120	P/S Joint Adaptor (Hose)	1	
⑦	07406—0010001	P/S Pressure Gauge Set	1	
⑦-1	07406—0010300	Pressure Control Valve	1	
⑦-2	07406—0010400	Pressure Gauge	1	
⑧	07406—0010101	Bypass Tube Joint (included with 07406—0010001)	1	
⑨	07725—0030000	Universal Holder	1	
⑩	07746—0010300	Attachment 42 x 47 mm	1	
⑪	07749—0010000	Driver	1	
⑫	07916—SA50001	Locknut Wrench 40 mm	1	
⑬	07941—6920003	Ball Joint Remover	1	
⑭	07947—6340300	Driver Attachment	1	
⑮	07974—SA50600	Pinion Seal Guide	1	



12. Suspension

Number	Tool Number	Description	Qty	Remarks
①	07GAE—SE00101	Spring Compressor	1	
②	07GAF—SD40100	Hub Assembly Pin	1	
③	07GAG—SD40700	Ball Joint Clip Installation Guide	1	
④	07HAF—SF10100	Ball Joint Dis/Assembly Tool set	1	
④-1	07HAF—SF10110	Ball Joint Remover Base	1	
④-2	07HAF—SF10120	Ball Joint Installer Base	1	
④-3	07HAF—SF10130	Ball Joint Remover/Installer	1	
⑤	07HGK—0010200	Wheel Alignment Gauge Attachment	1	
⑥	07749—0010000	Driver	1	
⑦	07941—6920003	Ball Joint Remover	1	
⑧	07965—6340301	Hub Dis/assembly Base	2	
⑨	07965—6920201	Hub Dis/Assembly Base	1	

13. Brakes

Number	Tool Number	Description	Qty	Remarks
①	07GAG—SE00100	Pushrod Adjustment Gauge	1	
②	07HAE—SG00100	Brake Spring Compressor	1	
③	07LAF—SM40200	Brake Spring Installer	1	
④	07404—5790300	Pressure Gauge Attachment	1	
⑤	07406—5790200	Pressure Gauges	2	
⑥	07410—5790100	Pressure Gauge Attachment	2	
⑦	07410—5790500	Tube Joint Adaptor	1	
⑧	07510—6340100	Pressure Gauge Joint Pipe	2	
⑨	07510—6340300	Vacuum Joint Tube A	1	
⑩	07914—SA50001	Snap Ring Pliers	1	
⑪	07921—0010001	Flare Nut Wrench	1	
⑫	07973—SA50000	Rear Caliper Guide	1	

15. Heater and Air Conditioner

Number	Tool Number	Description	Qty	Remarks
①	07JGG—0010100	Belt Tension Gauge	1	
②	07LAB—SK70100	A/C Clutch Holder	1	
③	07LAJ—PT30100	ECU Test Harness	1	

16. Electrical

Number	Tool Number	Description	Qty	Remarks
①	07GAC—SE00200	Fuel Sender Wrench	1	
②	07JGG—0010100	Belt Tension Gauge	1	

Standards and Service Limits

5. Engine/Cylinder Head, Valve Train

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Compression	250 min ⁻¹ (rpm) and wide-open throttle	Nominal Minimum Maximum variation	1226 kPa (12.5 kg/cm ² , 178 psi) 931 kPa (9.5 kg/cm ² , 135 psi) 196 kPa (2 kg/cm ² , 28 psi)
Cylinder head	Warpage Height	— 99.95–100.05 (3.935–3.938)	0.05 (0.002) —
Camshaft	End play Oil clearance Runout Cam lobe height	0.05–0.15 (0.002–0.006) 0.05–0.089 (0.002–0.0035) 0.015 (0.0006) 38.526 (1.5167) 38.972 (1.5343)	0.50 (0.020) 0.150 (0.006) 0.030 (0.001) — —
Valve	Valve clearance Valve stem O.D. Stem-to-guide clearance	IN EX IN EX IN EX 0.24–0.28 (0.0094–0.0110) 0.28–0.32 (0.0110–0.1259) 5.480–5.490 (0.2157–0.2161) 5.450–5.460 (0.2145–0.2149) 0.025–0.050 (0.0009–0.0019) 0.055–0.080 (0.0021–0.0031)	— — 5.450 (0.2145) 5.420 (0.2133) 0.08 (0.0031) 0.12 (0.0047)
Valve seat	Width Valve stem installed height	IN and EX IN EX 1.25–1.55 (0.049–0.061) 48.245–48.715 (1.8994–1.9179) 50.315–50.785 (1.9809–1.994)	2.00 (0.0787) — —
Valve spring	Free length	IN (NH) (CH) EX (NH) (CH) 53.15 (2.0925) 53.16 (2.0929) 55.78 (2.196) 55.80 (2.1968)	— — — —
Valve guide	I.D. Valve guide installed height	IN and EX IN EX 5.515–5.530 (0.2171–0.2177) 23.75–24.25 (0.9148–0.9547) 15.05–15.55 (0.5925–0.6122)	5.53 (0.2177) — —
Rocker arm	Arm-to-shaft clearance	IN EX 0.017–0.050 (0.0007–0.0020) 0.018–0.054 (0.0007–0.0021)	0.080 (0.0031) 0.080 (0.0031)

NH: NIHON HATSUJO
CH: CHUO HATSUJO

5. Engine/Engine Block

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Cylinder block	Warpage of deck surface Bore diameter Bore taper Reboring limit	0.07 (0.003) max. 85.00–85.02 (3.3464–3.3472) — —	0.10 (0.004) 85.07 (3.3492) 0.05 (0.002) 0.5 (0.02)
Piston	Skirt O.D. (At 21 mm (0.83 in) from bottom of skirt) Clearance in cylinder	A B 84.98–84.99 (3.3456–3.4605) 84.97–84.98 (3.3452–3.3456) 0.02–0.04 (0.0008–0.0016)	84.97 (3.3452) 84.96 (3.3448) 0.05 (0.0020)
Piston ring	Piston-to-ring clearance Ring end gap	Top Second Top Second Oil 0.035–0.060 (0.0014–0.0024) 0.030–0.055 (0.0011–0.0022) 0.20–0.35 (0.0079–0.0138) 0.40–0.55 (0.0157–0.0217) 0.20–0.70 (0.0079–0.0276)	0.130 (0.0051) 0.130 (0.0051) 0.60 (0.0236) 0.70 (0.0276) 0.80 (0.0315)
Connecting rod	Pin-to rod interference Small end bore diameter Large end bore diameter End play installed on crankshaft	0.013–0.032 (0.0005–0.0013) 21.968–21.981 (0.8649–0.8654) Nominal 51 (2.008) 0.15–0.30 (0.006–0.012)	— — — 0.40 (0.016)
Crankshaft	Main journal diameter Rod journal diameter Taper/out-of-round, main journal Taper/out-of-round, rod journal End play Runout	No. 1, 2 Journals No. 3 Journal No. 4, 5 Journals 0.005 (0.0002) max. 49.976–50.000 (1.9676–1.9685) 49.972–49.996 (1.9674–1.9683) 49.984–50.008 (1.9679–1.9688) 0.005 (0.0002) max. 47.976–48.000 (1.8888–1.8898) 0.005 (0.0002) max. 0.10–0.35 (0.004–0.014) 0.015 max (0.0006)	— — — 0.010 (0.0004) — 0.010 (0.0004) 0.45 (0.018) 0.020 (0.0008)
Bearings	Main bearing-to journal oil clearance Rod bearing-to journal oil clearance	No. 1, 2 Journals No. 3 Journal No. 4, 5 Journals 0.021–0.045 (0.0009–0.0018) 0.025–0.049 (0.0001–0.0019) 0.013–0.037 (0.0005–0.0015) 0.021–0.049 (0.0008–0.0019)	0.05 (0.002) 0.054 (0.0021) 0.05 (0.002) 0.05 (0.002)

Unit of length: mm (in.)

5. Engine/Engine Block (cont'd)

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Balancer Shaft	Journal diameter	No. 1 journal (Front)	42.722–42.734 (1.6820–1.6824)	—
		(Rear)	20.938–20.950 (0.8243–0.8248)	—
		No. 2 journal	38.712–38.724 (1.5241–1.5246)	—
	Journal taper	No. 3 journal	34.722–34.734 (1.3670–1.3674)	—
			0.005 (0.0002)	—
	End play	(Front)	0.100–0.350 (0.0040–0.0138)	—
		(Rear)	0.060–0.180 (0.0024–0.0070)	—
	Runout		0.020 (0.0008)	—
Balancer Shaft Bearing	I.D.	No. 1 journal (Rear)	0.050–0.075 (0.0020–0.0030)	—
		No. 1(Front), 3 journal	0.066–0.118 (0.0026–0.0046)	—
		No. 2, journal	0.076–0.128 (0.0030–0.0050)	—
			42.800–42.820 (1.6850–1.6858)	—
			21.000–21.013 (0.8268–0.8273)	—
			38.800–38.820 (1.5276–1.5283)	—
			34.800–34.820 (1.3701–1.3710)	—

5. Engine/Engine Lubrication

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Engine oil	Capacity (US. qt., Imp. qt.)		4.9 (5.2, 4.3) After engine disassembly 3.8 (4.0, 3.3) After oil change, including oil filter 3.5 (3.7, 3.1) After oil change, without oil filter	
Oil pump	Displacement		43.9 ℓ (11.6 US. gal., 9.7 Imp. gal.)/6,000 min ⁻¹ (rpm)	
	Inner-to-outer rotor radial clearance		0.02–0.16 (0.0008–0.0063)	0.2 (0.008)
	Pump body-to-rotor radial clearance		0.10–0.19 (0.0040–0.0075)	0.21 (0.0083)
	Pump body-to-rotor side clearance		0.02–0.07 (0.001–0.003)	0.12 (0.005)
Relief valve	Pressure setting 80°C (176°F)	Idle	69 kPa (0.7 kg/cm ² , 10 psi) min.	
		3,000 min ⁻¹ (rpm)	3431 kPa (3.5 kg/cm ² , 50 psi)	

5. Engine/Cooling

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Thermostat	Starts to open Full open Valve lift at full open		78°C ± 2 (172°F ± 3) 90°C (194°F) 8 (0.31) max.	86–90°C (187–194°F)
Water pump	Displacement		160 ℓ (42.2 US gal, 35.2 Imp gal)/6,000 min ⁻¹ (rpm)	
Radiator	Capacity (incl. heater) ℓ (US. qt., Imp. qt.) (Includes reservoir tank 0.6 (0.63, 0.53) after overhaul at change pressure cap opening pressure		MT: 6.6 (6.97, 5.81) AT: 7.1 (7.50, 6.23) MT: 3.0 (3.17, 2.64) AT: 3.5 (3.70, 3.08) 93–123 kpa (0.95–1.25 kg/cm ² , 13.5–17.8 psi)	
Cooling fan	"ON" temperature "OFF" temperature "ON" temperature (Fan timer) "OF" temperature (Fan timer)		87°–93°C (189°–199°F) 80°–91°C (176°–196°F) 105°–111°C (221°–231°F) 98°–109°C (208°–228°F)	

Standards and Service Limits

6. Fuel and Emissions

	MEASUREMENT	STANDARD (NEW)
Fuel Pump (PGM-FI)	Delivery pressure	240–279 Pa (2.45–2.85 kg/cm ² , 35–41 lb-ft)
	Displacement (minimum in 10 seconds)	230 cc (7.8 US oz., 8.1 Imp oz.)
	Relief valve opening pressure	441–588 kPa (4.5–6.0 kg/cm ² , 64–85 psi)
Fuel Pump (CARB)	Delivery pressure	9–14 kPa (0.09–0.14 kg/cm ² , 1.3–2.0 psi)
	Displacement (minimum in minute at 12V)	760 cc (25.7 US oz., 26.8 Imp oz.)
Pressure Regulator (PGM-FI)	Pressure with regulator vacuum hose disconnected	240–279 kPa (2.45–2.85 kg/cm ² , 35–41 psi)
Fuel Tank	Capacity	65 ℓ (17.2 US gal., 14.3 Imp gal.)
Engine	Fast idle	1,400 ± 200 min ⁻¹ (rpm)
	Idle speed (with headlights and cooling fan OFF)	770 ± 50 min ⁻¹ (rpm)
		770 ± 50 min ⁻¹ (rpm) in P or N positions
	Idle CO	0.1% maximum



7. Clutch

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Clutch pedal	Pedal height	210 (8.3) to floor	—
	Stroke	142.0 (5.6)	—
	Pedal play	9–15 (0.4–0.6)	—
	Disengagement height	90 (3.5) min. to floor 80 (3.1) min. to carpet	—
Flywheel	Clutch surface runout	0.05 (0.002) max.	0.15 (0.006)
Clutch disc	Rivet head depth	1.3 (0.05) min.	0.2 (0.008)
	Surface runout	0.8 (0.03) max.	1.0 (0.04)
	Thickness	8.5–9.2 (0.33–0.36)	6.1 (0.24)
Clutch cover	Unevenness of diaphragm spring	0.6 (0.02) max.	0.8 (0.03)

8. Manual Transmission

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Transmission oil	Capacity ℓ (U.S. qt., Imp. qt.)	1.9 (2.0, 1.7) at assembly 2.0 (2.1, 1.8) at oil change	
Mainshaft	End play	0.10–0.16 (0.0039–0.0063)	Adjust with a shim.
	Diameter of ball bearing contact area	27.977–27.990 (1.1015–1.1020)	29.93 (1.1783)
	Diameter of third gear contact area	37.984–38.000 (1.4954–1.4961)	37.930 (1.4933)
	Diameter of ball bearing contact area	27.987–28.000 (1.1018–1.1024)	27.940 (1.1000)
	Runout	0.02 (0.008) max.	0.05 (0.002)
Mainshaft third and fourth gears	I.D.	43.009–43.025 (1.6933–1.6939)	43.080 (1.6961)
	End play	0.06–0.21 (0.0024–0.0083)	0.30 (0.012)
	Thickness 3rd gear	32.42–32.47 (1.276–1.278)	32.3 (1.27)
	4th gear	30.92–30.97 (1.217–1.219)	30.8 (1.21)
Mainshaft fifth gear	I.D.	43.009–43.025 (1.6933–1.6939)	43.080 (1.6961)
	End play	0.06–0.21 (0.0024–0.0083)	0.30 (0.012)
	Thickness	30.42–30.47 (1.198–1.200)	30.3 (1.193)
Countershaft	End play	0.05–0.21 (0.0019–0.0083)	0.50 (0.02)
	Diameter of needle bearing contact area	33.000–33.015 (1.2992–1.2998)	32.95 (1.297)
	Diameter of ball bearing needle bearing contact area	24.987–25.000 (0.9837–0.9845)	24.94 (0.982)
	Diameter of low gear contact area	39.984–40.000 (1.5742–1.5748)	39.93 (1.572)
	Runout	0.02 (0.0008) max.	0.05 (0.002)

8. Manual Transmission (cont'd)

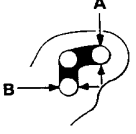	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Countershaft low gear	I.D. End play	46.009–46.025 (1.8114–1.8120) 0.04–0.10 (0.002–0.004)	46.08 (1.814) Adjust with a washer.
Countershaft second gear	I.D. End play Thickness	50.009–50.025 (1.9689–1.9695) 0.04–0.10 (0.002–0.004) 33.92–33.97 (1.335–1.337)	50.08 (1.972) Adjust with a collar. 32.8 (1.2913)
Spacer collar (Countershaft second gear)	I.D. O.D. Length	36.48–36.49 (1.4362–1.4366) 43.989–44.000 (1.7318–1.7323) 29.03–29.05 (1.1429–1.1437) 28.98–29.00 (1.1409–1.1417)	36.50 (1.437) 43.94 (1.730) — —
Spacer collar (Mainshaft fourth and fifth gears)	I.D. O.D. Length	31.002–31.012 (1.2205–1.2209) 37.989–38.000 (1.4956–1.4961) 56.45–56.55 (2.222–2.226) 26.03–26.08 (1.0248–1.0268)	31.06 (1.223) 37.94 (1.494) — 26.01 (1.024)
		A B	
Reverse idler gear	I.D. Gear-to-reverse gear shaft clearance	20.016–20.043 (0.7880–0.7891) 0.036–0.084 (0.0014–0.0033)	20.09 (0.7909) 0.160 (0.006)
Synchronizer ring	Ring-to-gear clearance (ring pushed against gear)	0.85–1.10 (0.0335–0.0433)	0.40 (0.016)
Shift fork	Synchronizer sleeve groove width Fork-to-synchronizer sleeve clearance	6.75–6.85 (0.266–0.270) 0.35–0.65 (0.014–0.026)	— 1.0 (0.039)
Reverse shift fork	Pawl groove width Fork-to-reverse idle gear clearance Groove width Fork-to fifth/reverse shift Shaft clearance	13.0–13.3 (0.51–0.52) 0.5–1.1 (0.02–0.43) 7.05–7.25 (0.278–0.2854) 7.4–7.7 (0.29–0.30) 0.05–0.35 (0.002–0.014) 0.4–0.8 (0.02–0.03)	1.8 (0.07) — — 0.5 (0.02) 1.0 (0.04)
		at A at B at A at B	
Shift arm	I.D. Shift arm-to-shaft clearance Shift fork diameter at contact area Shift-arm-to-shift fork shaft clearance	15.973–16.000 (0.6289–0.6299) 0.005–0.059 (0.0002–0.0023) 12.9–13.0 (0.508–0.512) 0.2–0.5 (0.01–0.02)	— — — 0.6 (0.02)
Select lever	Pin size of contact area Shaft outer diameter Shift arm cover clearance	7.9–8.0 (0.311–0.315) 15.41–15.68 (0.607–0.617) 0.032–0.102 (0.0013–0.0040)	— — —
Shift arm lever	O.D. Transmission housing clearance	15.941–15.968 (0.6276–0.6287) 0.027–0.139 (0.0011–0.0055)	— —
Inter lock	Bore diameter Shift arm lever clearance	16.00–16.05 (0.630–0.632) 0.032–0.109 (0.0013–0.0043)	— —
Ring gear	Backlash	0.085–0.142 (0.0033–0.0056)	0.200 (0.0079)
Differential carrier	Pinion shaft bore diameter Carrier-to-pinion shaft clearance Driveshaft bore diameter Carrier-to-driveshaft clearance	18.000–18.018 (0.7087–0.7094) 0.017–0.047 (0.0007–0.0019) 28.005–28.025 (1.1026–1.1033) 0.020–0.062 (0.0008–0.0024) 0.055–0.091 (0.0022–0.0036)	— 0.100 (0.0039) — 0.120 0.150
	R L		
Differential pinion gear	Backlash Pinion gear bore diameter Pinion gear-to-pinion shaft clearance	0.05–0.15 (0.002–0.006) 18.042–18.066 (0.7103–0.7113) 0.059–0.095 (0.0023–0.0037)	Selection with 7 types of washers. — 0.150 (0.0059)
Differential taper roller bearing	Preload	1.4–2.6 N·m (14–26 kg-cm, 1.0–1.9 lb-ft)	Selection with 20 types of shims.

Standards and Service Limits

9. Automatic Transmission

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Transmission oil	Capacity ^ℓ (U.S. qt., Imp. qt.)	2.4 (2.5, 2.1) at oil change 6.0 (6.4, 5.2) at assembly	
Hydraulic pressure	Line pressure at 2,000 min ⁻¹ (rpm)	784 kPa (8.0 kg/cm ² , 113 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open
	4th clutch pressure at 2,000 min ⁻¹ (rpm)	490 kPa (5.0 kg/cm ² , 74 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	460 kPa (4.7 kg/cm ² , 66 psi) Throttle valve full-closed 735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open
	3rd clutch pressure at 2,000 min ⁻¹ (rpm)	490 kPa (5.0 kg/cm ² , 71 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 71 psi) Throttle valve more than 2/8 open	441 kPa (4.5 kg/cm ² , 64 psi) Throttle valve full-closed 735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open
	2nd clutch pressure at 2,000 min ⁻¹ (rpm)	490 kPa (5.0 kg/cm ² , 71 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	441 kPa (4.5 kg/cm ² , 64 psi) Throttle valve full-closed 735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open
	1st clutch pressure at 2,000 min ⁻¹ (rpm)	784–833 kPa (8.0–8.5 kg/cm ² , 113–120 psi)	735 kPa (7.5 kg/cm ² , 106 psi)
	Throttle B pressure	closed 0 open 784–833 kPa (8.0–8.5 kg/cm ² , 113–120 psi)	— 735 kPa (7.5 kg/cm ² , 106 psi)
Stall speed	Check with car on level ground	2,350–2,650 min ⁻¹ (rpm)	
Clutch	Clutch initial clearance	1st hold 0.8–1.0 (0.031–0.039) 1st, 2nd 0.65–0.85 (0.026–0.033) 3rd, 4th 0.4–0.6 (0.016–0.024)	— — —
	Clutch return spring free length	1st, 2nd, 3rd, 4th, 33.5 (1.318)	31.5 (1.240)
	Clutch disc thickness	1.88–2.0 (0.074–0.0807)	Until grooves worn out
	Clutch plate thickness	1st, 1.95–2.05 (0.0767–0.0807)	Discoloration ↑ ↓ Discoloration
		2nd, 2.55–2.65 (0.1003–0.1043)	
		3rd, 4th, 2.25–2.35 (0.0885–0.0925)	
	Clutch end plate thickness	Mark 1 2.05–2.10 (0.081–0.083) Mark 2 2.15–2.20 (0.085–0.087) Mark 3 2.25–2.30 (0.089–0.091) Mark 4 2.35–2.40 (0.093–0.094) Mark 5 2.45–2.50 (0.096–0.098) Mark 6 2.55–2.60 (0.100–0.102) Mark 7 2.65–2.70 (0.104–0.106) Mark 8 2.75–2.80 (0.108–0.110) Mark 9 2.85–2.90 (0.112–0.114)	

9. Automatic Transmission (cont'd)

9. Automatic Transmission (cont'd)					
	MEASUREMENT		STANDARD (NEW)		SERVICE LIMIT
Valve body	Stator camshaft needle bearing contact area I.D. (torque converter side)		27.000—27.021 (1.0630—1.0638)		Wear or damage
	Stator camshaft needle bearing contact area I.D. (oil pump side)		29.000—29.013 (1.417—1.1422)		—
	Oil pump driven gear I.D.		14.016—14.034 (0.5518—0.5525)		Wear or damage
	Oil pump shaft O.D.		13.980—13.990 (0.5504—0.5508)		Wear or damage
	Oil pump gear side clearance		0.03—0.05 (0.0012—0.0020)		0.07 (0.0028)
	Oil pump gear-to-body clearance		0.21—0.265 (0.0083—0.0104)		—
	Drive		0.07—0.125 (0.0027—0.0049)		—
Regulator valve body	Sealing ring contact area diameter		35.000—35.025 (1.3780—1.3789)		35.050 (1.3799)
Accumulator body	Sealing ring contact area diameter		32.000—32.025 (1.2598—1.2608)		32.05 (1.2618)
Stator camshaft	Sealing ring contact area diameter		29.000—29.013 (1.1417—1.1422)		29.05 (1.1436)
Shifting device and parking brake control	Reverse shift fork thickness		5.90—6.00 (0.232—0.236)		5.40 (0.213)
	Parking brake ratchet pawl		—		Wear or other defect
	Parking gear		18.5—18.6 (0.7283—0.7322)		Wear or other defect
	Throttle cam stopper		17.0—17.1 (0.6692—0.6732)		—
	Carburetor PGM-FI				—
Servo body	Shif fork Shaft I.D.	A	14.000—14.005 (0.5512—0.5514)		—
		B	14.006—14.010 (0.5514—0.5516)		—
		C	14.011—14.015 (0.5516—0.5518)		—
	Shift fork shaft valve bore I.D.		37.000—37.039 (1.4567—1.4582)		37.045 (1.4585)
Transmission	Diameter of needle bearing contact area		22.984—23.000 (0.9047—0.9055)		Wear or damage
	On mainshaft and stator shaft		31.984—32.000 (1.2592—1.2598)		
	On mainshaft 4th gear collar				↑ <

Standards and Service Limits

9. Automatic Transmission (cont'd)

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Rign gear	Backlash	0.085—0.142 (0.003—0.006)	0.200 (0.008)
Differential carrier	Pinion shaft bore diameter	18.000—18.018 (0.7087—0.7094)	—
	Carrier-to-pinion shaft clearance	0.017—0.047 (0.001—0.002)	0.100 (0.004)
	Driveshaft bore diameter	28.005—28.025 (1.1026—1.1033)	—
	Carrier-to driveshaft clearance	0.025—0.066 (0.001—0.003)	0.120 (0.005)
Differential pinion gear	Backlash	0.08—0.15 (0.03—0.006)	Adjust with a washer
	Pinion gear bore diameter	18.042—18.066 (0.710—0.711)	—
	Pinion gear-to pinion shaft clearance	0.059—0.095 (0.002—0.004)	0.150 (0.006)
Differential taper roller bearing preload	For used bearing	2.5—3.7 N·m (25—37 kg-cm, 22—32 lb-in)	Adjust with a washer
	After replacement of bearing	2.8—4.0 N·m (28—40 kg-cm, 24—35 lb-in)	Adjust with a washer

11. Steering

	MEASUREMENT	STANDARD (NEW)
Steering wheel	Play	10 (0.39) maximum
Gearbox	Pinion starting torque	Below 1.0N·m (10 kg-cm, 0.72 lb-ft)
	Angle of rack guide screw loosend from locked position	35° $\pm \frac{5}{8}$
Pump	Pump pressure with valve closed (oil temperature: 40°C/104°F minimum) Do not run for more than 5 seconds	7,845—8,826 kPa (80—90 kg/cm², 1,138—1,280 psi) at idle
Power steering fluid	Capacity	0.5 ℓ (0.53 US qt., 0.44 Imp qt.)
	Reservoir At change (approx.)	1.8 ℓ 1.90 US qt. 1.58 Imp qt.)
Power steering belt	Deflection between pulleys with 98 N (10 kg, 22 lbs) force	For used belt 13.0—16.0 (0.51—0.62) For new belt 9.5—11.5 (0.37—0.45)
	Belt tension between pulleys (measured with tension gauge)	For used belt 343—490 N (35—50 kg, 77—110 lb) For new belt 686—882 N (70—90 kg, 154—198 lb)

12. Suspension

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Wheel alignment	Total toe	0±2 (0±0.08)	—
	Front	IN 4±2 (0.16±0.08)	—
	Rear	0° 00' ± 1'	—
	Camber	—0° 30' ± 1'	—
	Front	3° 00' ± 1'	—
	Rear		—
Caster	Front		—
			—
Front Wheel turning angle	Inward wheel	39° ± 2'	—
	Outward wheel (reference)	29° 30'	—
Wheel	Rim runout	Steel wheel 0±2 (0±0.08)	2.0 (0.08)
	Axial	Below 1.0 (0.04)	1.5 (0.06)
	Radial	Below 1.0 (0.04)	1.5 (0.06)
	Aluminum wheel	Below 0.7 (0.03)	2.0 (0.08)
Wheel bearing	End play	Front 0—0.05 (0—0.002)	—
	Rear	0—0.05 (0—0.002)	—

13. Brakes

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Parking brake lever	Play in stroke 200 N (20 kg, 44 lbs)		To be locked when pulled 4–8 notches	—
Foot brake pedal	Pedal height (from floor)	MT AT	190 (7.5) 195 (7.7)	—
Master cylinder	Piston-to-push rod clearance		0–0.4 (0–0.016)	—
Disc brake	Disc thickness	Front	23.0 (0.91)	21.0 (0.83)
		Rear	10.0 (0.39)	8.0 (0.32)
	Disc runout	Front	—	0.10 (0.004)
		Rear	—	0.15 (0.006)
	Disc parallelism	Front and rear	—	0.015 (0.0006)
Brake booster	Pad thickness		12.5 (0.49) 9.0 (0.35)	1.6 (0.06) 1.6 (0.06)
	Characteristics at 20 kg (44 lbs) pedal pressure		Line pressure Unit: kPa (kg/cm ² /psi)	
	Vacuum		922 (9.4/134) minimum 5,494 (56/796) minimum 8,535 (87/1,237) minimum	

15. Air Conditioner

	MEASUREMENT		STANDARD (NEW)
Air conditioner system	Lubricant capacity	Condenser Evaporator Line or hose Reservoir	10 cc (0.3 US oz., 0.4 Imp oz.) 25 cc (0.8 US oz., 0.9 Imp oz.) 10 cc (0.3 US oz., 0.4 Imp oz.) 10 cc (0.3 US oz., 0.4 Imp oz.)
Compressor	Lubricant capacity Stator coil resistance at 20°C (68°F) Pulley-to pressure plate clearance		900–950 g (31.7–33.5 oz) 3.4–3.8 Ω 0.35–0.65 (0.014–0.026)
Compressor belt	Deflection between pulleys with 98N (10 kg, 22 lbs) force	For used belt For new belt	10–12 (0.4–0.5) 4.5–7.0 (0.18–0.28)
	Belt tension between pulleys (measured with tension gauge)	For used belt For new belt	441–588 N (45–60 kg, 99–132 lbs) 931–1,127 N (95–115 kg, 209–254 lbs)

Standards and Service Limits

Unit of length: mm (in.)

16. Electrical

			MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Ignition coil	Rated voltage			12 Volts	
	Winding resistance		Primary Secondary	0.6–0.8 Ω 12.9–19.3 kΩ	
Ignition wire	Resistance			25 kΩ maximum	
Spark plug	Type	standard		ZFR6F-11 (NGK) or KJ20CR-L11 (ND)	
	(): Manufacturer	Option		ZFR7F-11 (NGK) or KJ22CR-L11 (ND)	
	Gap			1.0–1.1 (0.039–0.043)	
Ignition timing	At idling			15° ± 2° BTDC	
Battery	Lighting capacity (20-hours ratio)			65Ah	
	Starting capacity (voltage after 5 sec.)			8.4 V minimum/300 ampere draw at –15°C (59°F)	
Alternator	Output			80A	
	Rotor coil resistance			2.8–3.0 Ω	
	Slip ring O.D.			14.4 (0.57)	14.0 (0.55)
	Brush length			10.5 (0.41)	5.5 (0.22)
	Brush spring tension			300–360 g (10.6–12.7 oz)	
Alternator belt	Deflection at midway between pulleys with 98 N (10 kg, 22 lb) force		Model without A/C	Used belt	10–12 (0.39–0.47)
				New belt	8.5–11 (0.33–0.43)
			Model with A/C	Used belt	10–12 (0.39–0.47)
				New belt	4.5–7.0 (0.18–0.28)
	Belt tension between pulleys (measured with tension gauge)		Model without A/C	Used belt	294–441 N (30–45 kg, 66–99 lb)
				New belt	441–637 N (45–65 kg, 99–143 lb)
			Model with A/C	Used belt	441–637 N (45–65 kg, 99–143 lb)
				New belt	931–1,128 N (95–115 kg, 209–154 lb)
Starting motor	Output			1.6 kw	
	Manufacturer: Mitsuba	Mica depth		0.4–0.5 (0.016–0.02)	0.15 (0.006)
		Commutator runout		0–0.02 (0–0.001)	0.05 (0.002)
		Commutator O.D.		28.0–28.1 (1.10–1.11)	27.5 (1.08)
		Brush length		15.8–16.2 (0.62–0.64)	10.0 (0.39)
		Brush spring tension		16–18N (1.6–1.8 kg, 3.5–4.0 lbs)	
	Manufacturer: NIPPONDENSO	Mica depth		0.5–0.8 (0.02–0.03)	0.2 (0.01)
		Commutator runout		0–0.02 (0–0.001)	0.05 (0.002)
		Commutator O.D.		29.9–30.0 (1.18–1.18)	29.0 (1.14)
		Brush length		15.0–15.5 (0.59–0.61)	10.0 (0.39)
		Brush spring tension		19–24N (1.9–2.4 kg, 4.2–5.3 lbs)	

Design Specifications


	ITEMS		METRIC		ENGLISH		NOTES	
DIMENSIONS	Overall length		4,700 mm		185.0 in			
	Overall width		1,695 mm		66.7 in			
	Overall height		1,400 mm		55.1 in			
	Wheel base		2,720 mm		107.1 in			
	Track	Front	1,475 mm		58.1 in			
		Rear	1,480 mm		58.3 in			
	Ground clearance		160 mm		6.3 in			
	Seating capacity			Five				
	Turning circle diameter (at tire center)		10.8 m		35.4 ft			
WEIGHT	Curb weight	MT without A/C	1,405 kg		3,097 lb			
		MT with A/C	1,427 kg		3,146 lb			
		AT without A/C	1,430 kg		3,153 lb			
		AT with A/C	1,452 kg		3,201 lb			
	Max permissible weight		1,920 kg		4,233 lb			
ENGINE	Type		Water-cooled, 4-stroke OHC					
	Cylinder arrangement		In-line, 4-cylinders					
	Bore and stroke		85 x 95 mm		3.35 x 3.74 in			
	Displacement		2,156 cm ³		131.5 cu. in			
	Compression ratio		9.8					
	Valve train		Belt driven, Single Overhead Camshaft					
	Lubrication system		Forced and wet sump					
STARTER	Type		Gear reduction					
	Normal output		1.6 kw					
	Nominal voltage		12 V					
	Hour rating		30 seconds					
	Direction of rotation		Clockwise as viewed from gear end					
	Weight	NIPPONDENSO	4.75 kg		10.5 lb			
		Mitsuba	3.7 kg		8.2 lb			
TRANSMISSION	Clutch	MT	Single plate dry, diaphragm spring					
		AT	Torque converter with lock-up clutch					
	Clutch lining area		217 cm ²		33.6 sq. in			
	Transmission	MT	Synchronized 5-speed forward, 1 reverse					
		AT	Electronically controlled dual range					
			4-speed forward automatic, 1 reverse					
	Primary reduction ratio		1 : 1 (Direct)					
	Gear ratio			Gear	MT	AT		
				1st	3.307	2.705		
				2nd	1.809	1.366		
			3rd	1.230	1.057			
			4th	0.933	0.731			
			5th	0.757				
			Reverse	3.000	2.047			
		Final	4.266	4.285				

Design Specifications

	ITEMS		METRIC	ENGLISH	NOTES
AIR CONDITIONER	Cooling capacity		4,350 kcal/h	17,259 BTU/h	
	-Condition: Compressor speed		1,900 min ⁻¹ (rpm)		
	Outside air temperature		27°C	81°F	
	Outside air humidity		50 %		
	Condenser air temperature		35°C	95°F	
	Condenser air velocity		4.5 m/sec.	14.8 ft/sec.	
	Blower capacity		440 m ³	15,542 cu.ft/h	
	Compressor	Type	Swash-plate		
		No. of cylinders	10		
		Capacity	178 cc/rev.	10.9 cu.in/rev.	
		Maximum speed	8,800 min ⁻¹ (rpm)		
		Lubricant capacity	90—120 cc	3.0—4.0 US oz. 3.2—4.2 Imp oz.	
	Condenser		Corrugated fin type		
	Evaporator		Corrugated fin type		
	Blower	Type	Sirocco fan		
		Motor input	210 W (12 V)		
		Speed control	5-speed		
		Maximum capacity	500 m ³ /h	17,662 cu.ft/h	
	Temperature control	Type	Air-mix type		
			Dry single-plate		
	Clutch	Power consumption	40W (12V) maximum		
			R-12		
	Refrigerant	Quantity	0.90—0.95 kg	2.0—2.1 lb	
STEERING SYSTEM	Type		Rack and pinion		
	Overall ratio		16.1 : 1		
	Turns, lock-to-lock		3.13		
	Steering wheel diameter		375 mm	14.8 in	
	Power steering fluid capacity		1.8 l	1.9 US qt. 1.6 Imp qt.	
	Power steering fluid		Genuine Power Steering Fluid P/N: 08208—99961		
SUSPENSION	Type	Front	Independent double wishbone, coil spring		
		Rear			
	Shock absorber	Front and rear	Independent double wishbone, coil spring		
			Telescopic, hydraulic nitrogen gas-filled		
WHEEL ALIGNMENT	Total toe	Front	0±3 mm	0±0.12 in	
		Rear	IN 2±2 mm	0.08±0.08 in	
	Camber	Front	0° 00' ± 1°		
		Rear	—0° 30' ± 1°		
	Caster	Front	3°00'		
BRAKE SYSTEM	Type	Front	Ventilated disc		
	Pad and lining swept area (total)	Rear	Solid disk		
		Front	370 cm ²	64 sq. in	
		Rear	277 cm ²	44 sq. in	
TIRES	Size		195/60R15 87V		
ELECTRICAL	Fuses In the fuse box		7.5A, 10A, 15A, 20A, 30A		
	In the relay box		7.5A, 10A, 15A, 20A, 30A, 50A, 80A		
	Headlights	High/Low	12V-60/55W		
		Front	12V-21W		
		Rear	12V-21W		
	Turn signal lights	Side	12V-5W		
			12V-5W		
	Position lights		12V-5W		
	License plate light		12V-5W		
	Buck-up lights		12V-21W		
	Stop lights		12V-21W		
	Taillight		12V-5W		
	Rear fog light		12V-21W		
	Dome lights		12V-8W		
	Door courtesy lights		12V-3.4W		
	Rear room light		12V-5W		
	Gauge lights		12V-3.4/1.4W		
	Indicator lights		12V-0.84/0.91/1.12/1.4W		
	Warning lights		12V-1.4/3.4W		
	Glove box light		12V-3.4W		
	Illumination and pilot lights		12V-1.4/1.2W LED: 0.91W, 0.84W		
	Heater illumination lights		12V-1.2/1.4W		

Body Specifications

Unit: mm (in.)

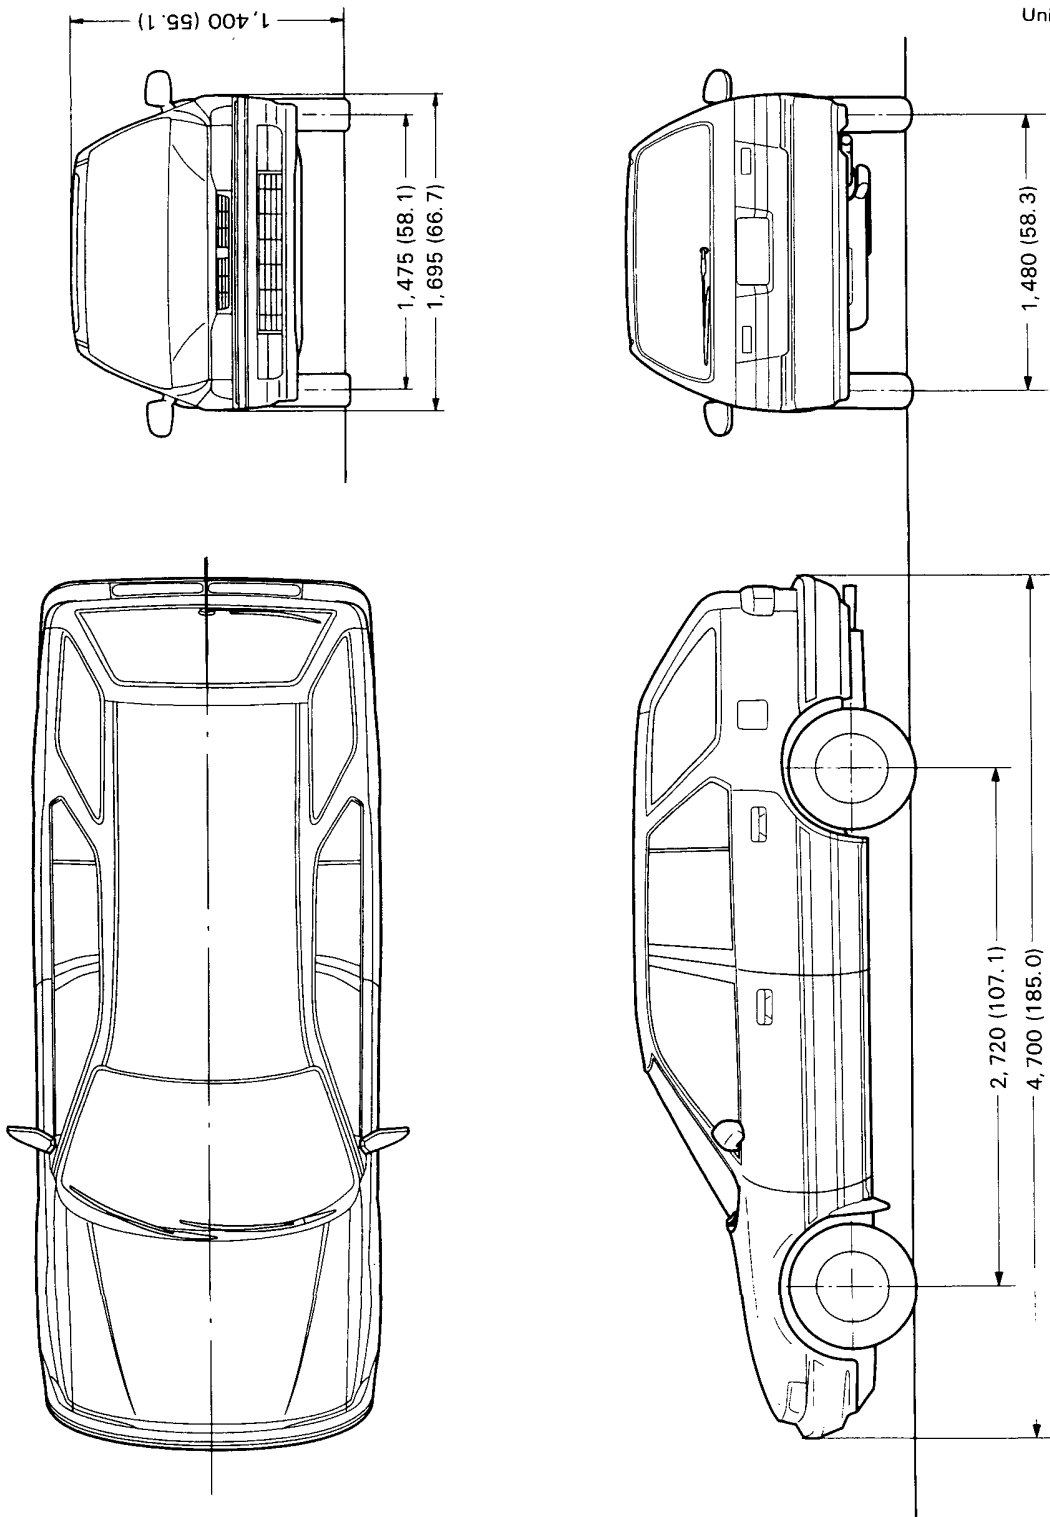

Maintenance



Lubrication Points.....	4-2
Maintenance Schedule	4-4




Lubrication Points

For the details of lubrication points and types of lubricants to be applied, refer to the illustrated index and various work procedures (such as Assembly/Reassembly, Replacement, Overhaul, Installation, etc.) contained in each section.

No.	LUBRICATION POINTS		LUBRICANT
1	Engine		API Service Grade: SF or SG 10 W-30 SAE Viscosity: See chart below
2	Transmission	Manual Automatic	API Service Grade: SE or SF SAE Viscosity: See chart below DEXRON® or DEXRON® II Automatic transmission fluid
3	Brake line		Brake fluid DOT3 or DOT4
4	Clutch line		Brake fluid DOT3
5	Power steering gearbox		Steering grease P/N 08733-B070E
6	Shift lever pivots (Manual)		Silicone grease with molybdenum disulfide
7	Steering ball joints		Multi-purpose grease
8	Suspension ball joints		
9	Steering boots		
10	Steering column bushings		
11	Select lever (Automatic)		
12	Pedal linkage		
13	Intermediate shaft		
14	Brake master cylinder pushrod		
15	Tailgate hinges		
16	Door hinges upper and lower		
17	Door opening detents		
18	Fuel filler lid		
19	Engine hood hinges		
20	Engine hood latch		
21	Tilt lever		
22	Caliper	Piston seal Dust seal Caliper pin Piston	Silicone grease
23	Power steering system		Power steering fluid P/N 08208-99961

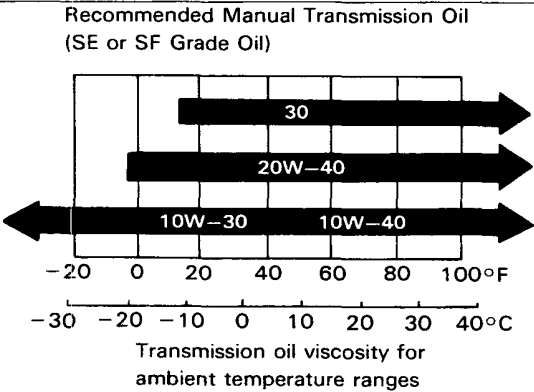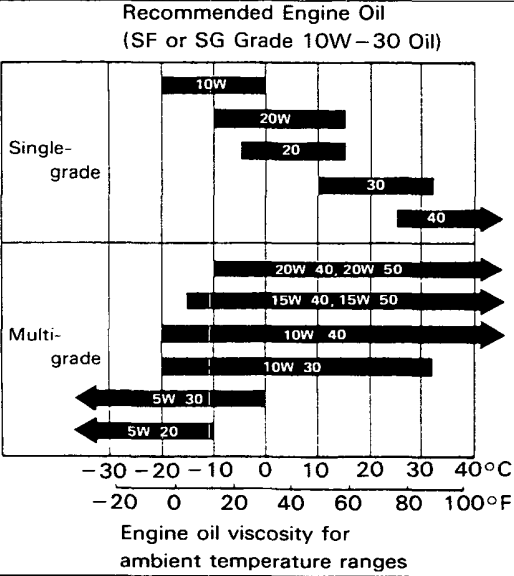

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

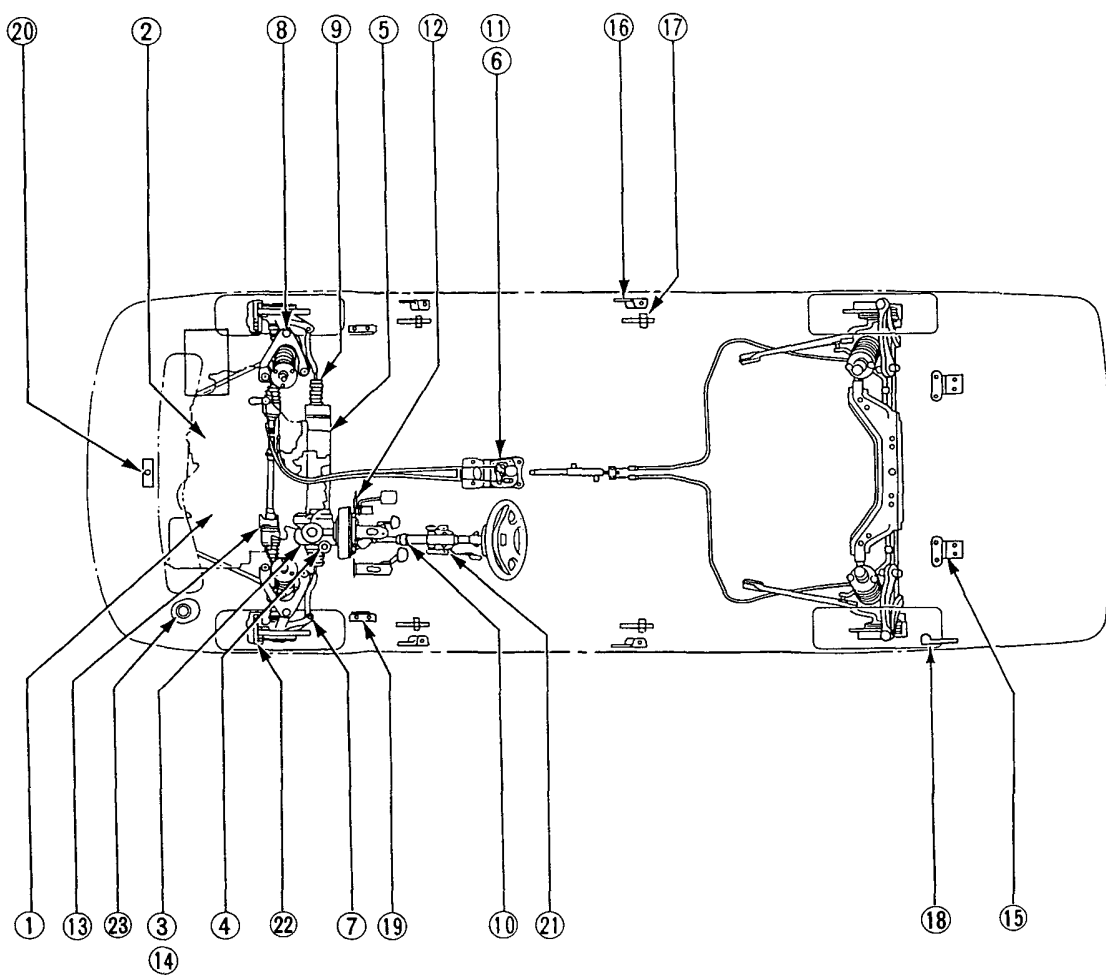

Maintenance Schedule

Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	R—Replace		I—Inspect. After inspection, clean, adjust, repair or replace if necessary.				
ITEM	x 1,000 km x 1,000 miles months	20 12 12	40 24 24	60 36 36	80 48 48	100 60 60	
Idle speed and idle CO		I	I	I	I	I	
Valve clearance		I	I	I	I	I	
Alternator drive belt			I		I		
Timing belt and timing balancer belt							R
Water pump							I
■ Engine oil and oil filter		Replace every 10,000 km (6,000 miles) or 6 months					
■ Transmission oil			R		R		
■ Radiator coolant					R*1		
Cooling system hoses and connections			I		I		
E. G. R. system							I
Secondary air supply system (Standard for some types)							I
Air cleaner element (Viscous type)			R		R		
Fuel filter			R		R		
Tank, fuel line and connections			I		I		
Evaporative emission control system							I
Ignition timing and control system			I		I		
Spark plugs			R		R		
Distributor cap and rotor			I		I		
Ignition wiring			I		I		
Positive crankcase ventilation valve			I		I		
Brake hoses and lines		I	I	I	I	I	
Brake fluid			R		R		
Front brake discs and calipers		I	I	I	I	I	
Front brake pads		Inspect every 10,000 km (6,000 miles) or 6 months					
Rear brake discs, calipers and pads			I		I		
Parking brake		I	I		I		
Exhaust pipe and muffler		I	I	I	I	I	
Suspension mounting bolts		I	I	I	I	I	
Front wheel alignment		I	I	I	I	I	
Steering operation, tie rod ends, steering gear box and boots		I	I		I		
Power steering system		I	I	I	I	I	
Power steering pump belt			I		I		
Catalytic converter heat shield							I

■: These service intervals assume routine checking and replenishment has been done, as needed, by the customer.

*1 Thereafter, replace every 2 years or 40,000 km (24,000 miles), whichever comes first.



CAUTION: The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

Severe driving conditions include:

A : Repeated short distance driving

B : Driving in dusty conditions

C : Driving in severe cold weather

D : Driving in areas using road salt or other corrosive materials

E : Driving on rough and/or muddy roads

F : Towing a trailer

R—Replace.

I—Inspect. After inspection, clean, adjust, repair or replace if necessary.

Condition	Maintenance item	Maintenance operation	Interval
A B . . . F	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 3 months
. F	Transmission oil	R	Every 20,000 km (12,000 miles) or 12 months
A B . D E F	Front brake discs and calipers	I	Every 10,000 km (6,000 miles) or 6 months
A B . D E F	Rear brake discs, calipers and pads	I	Every 20,000 km (12,000 miles) or 12 months
. B C . E .	Power steering system	I	Every 10,000 km (6,000 miles) or 6 months

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

Exhaust Pipe and Muffler

Replacement5-2




Outline of Model Change

ACCORD AERO DECK has been added.


Exhaust Pipe and Muffler Replacement

NOTE: Use new gaskets and self-locking nuts when reassembling.

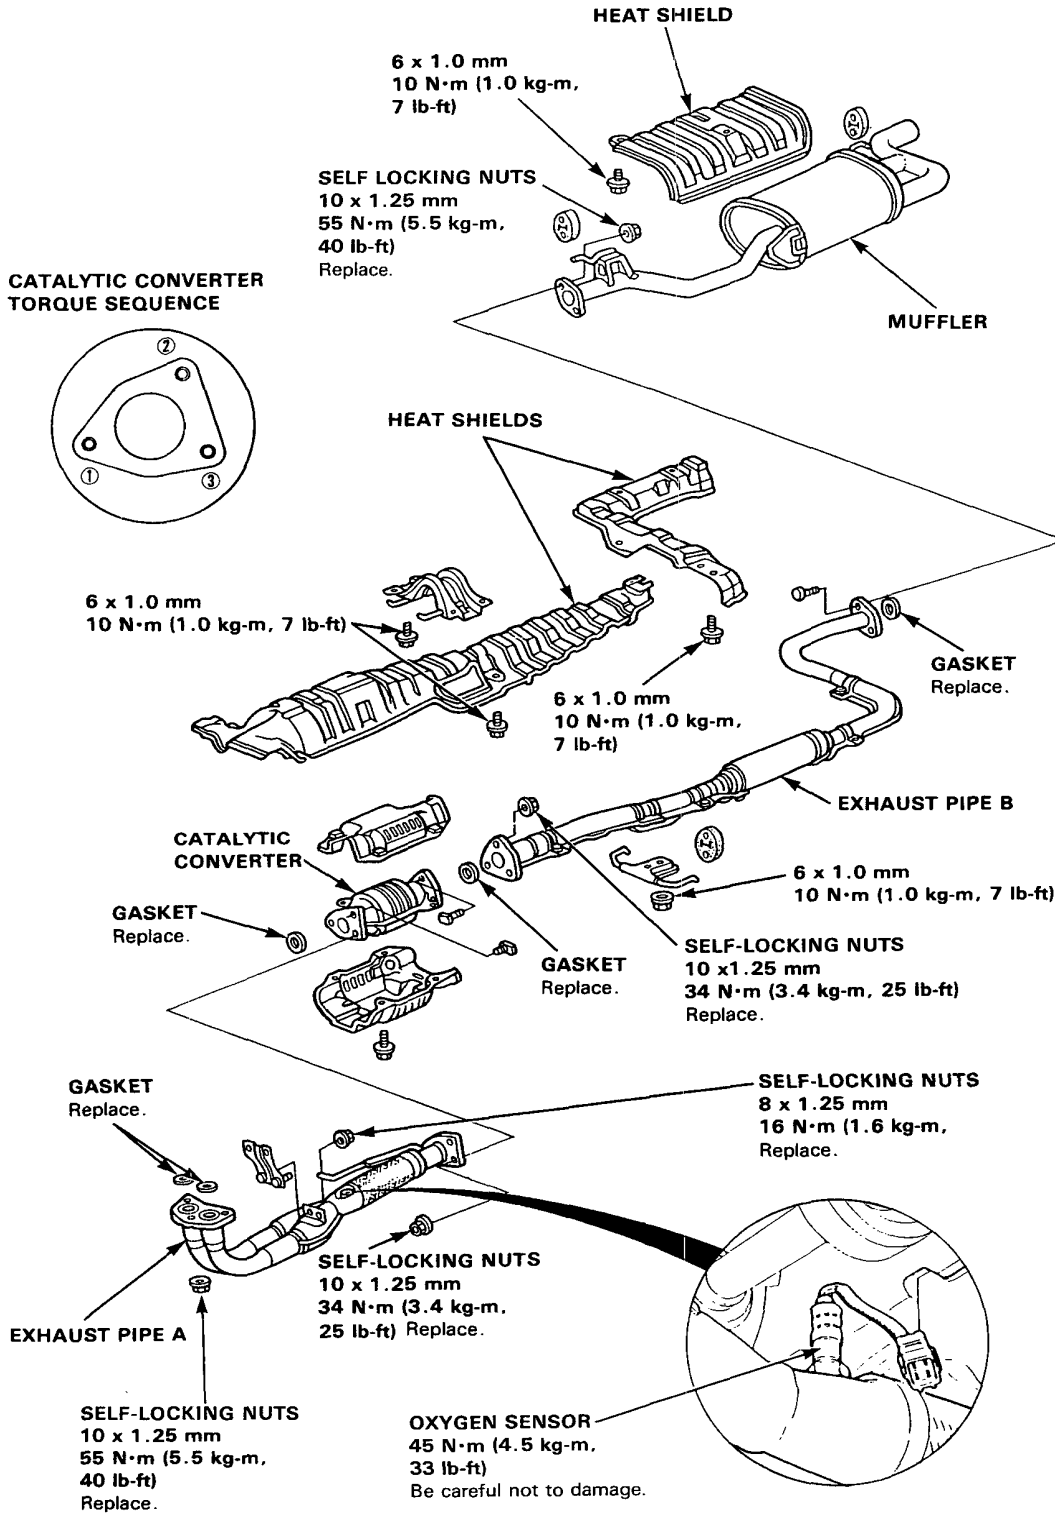

Component Locations

Index

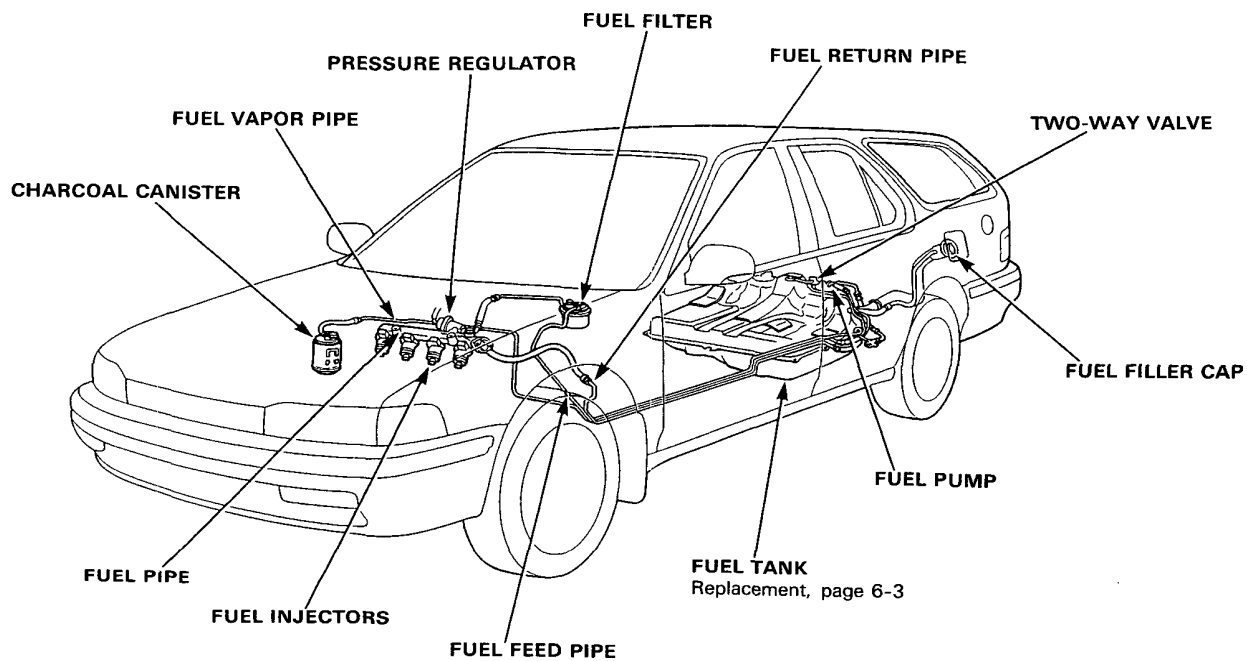



Fuel Supply System

Fuel Tank

Replacement


⚠ WARNING Do not smoke while working on fuel system. Keep open flame away from work area.

1. Relieve the fuel pressure
2. Block front wheels. Jack up the rear of the car and support with jackstands.
3. Remove the drain bolt and drain the fuel into an approved container.
4. Disconnect the 3P connector in the trunk.
5. Remove the fuel hose protector.
6. Disconnect the hoses.

CAUTION:

- When disconnecting the hoses, slide back the clamps, then twist hoses as you pull, to avoid damaging them.
- Clean the flared joint of high pressure hoses thoroughly before reconnecting them.

7. Place a jack, or other support, under the tank.
8. Remove the strap bolts and let the straps fall free.
9. Remove the fuel tank.
NOTE: The tank may stick on the undercoat applied to its mount. To remove, carefully pry it off the mount.
10. Install a new washer on the drain bolt, then install parts in the reverse order of removal.

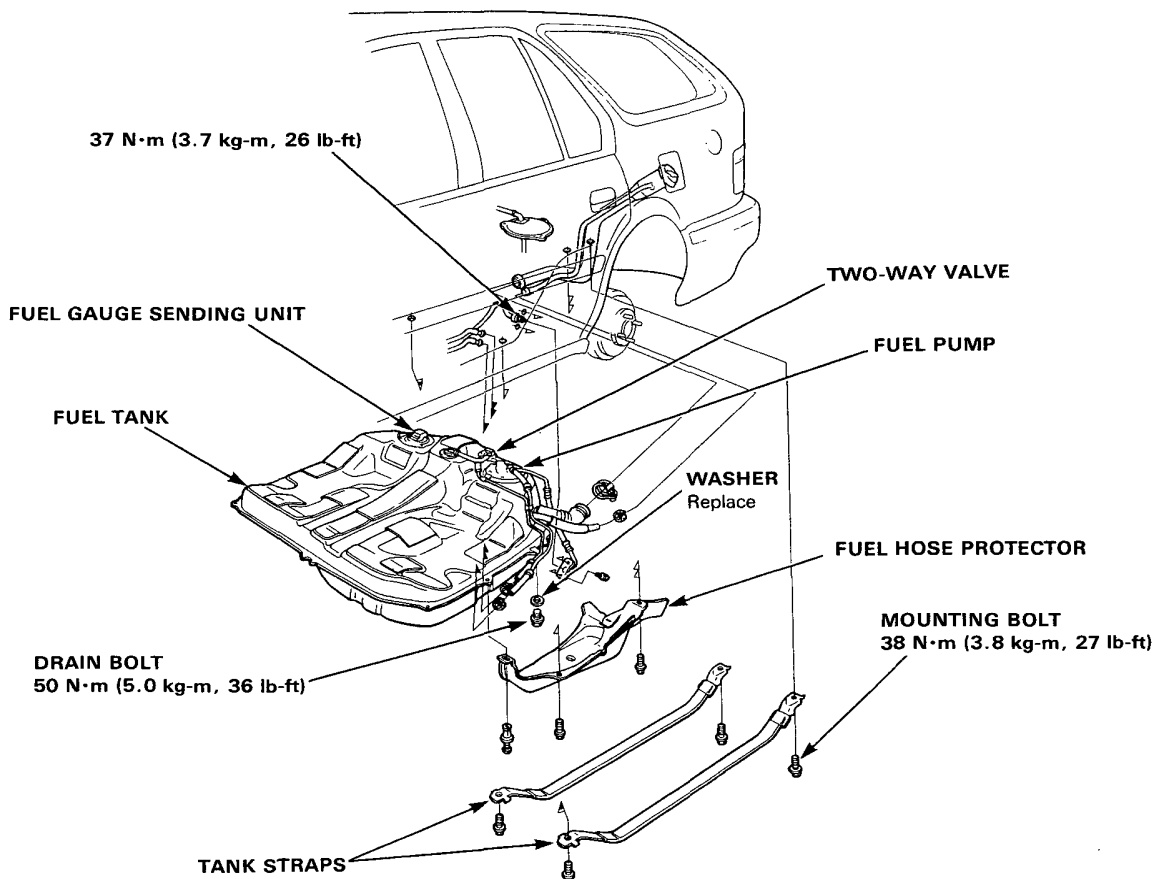

Rear Window Glass, Quarter Glass

Index

REAR WINDOW
Removal, page 14-3
Installation, page 14-3

**RUBBER
DAM**

**REAR WINDOW
FASTENER**
(Self-adhesive-
type)

**QUARTER GLASS
FASTENER**
(Clip-type)

**QUARTER GLASS
FASTENER**
(Self-adhesive-type)

QUARTER GLASS
Removal, page 14-7
Installation, page 14-7

**REAR WINDOW
FASTENER**
(Self-adhesive-type)

REAR WINDOW FASTENER
(Clip-type)



Rear Window


Removal

CAUTION:

- Wear gloves to remove and install the glass.
- Do not damage the defroster grid lines.

1. To remove the rear window glass, first remove the:
 - Tailgate trim panel (page 14-18).
 - Rear wiper (See section 16).
 - Rear window trim (page 14-18).
 - High mount brake light (See section 16).
2. Use a knife to cut through the glass adhesive from inside car, all the way around the glass area.

NOTE: Take care not to scratch or score the glass.

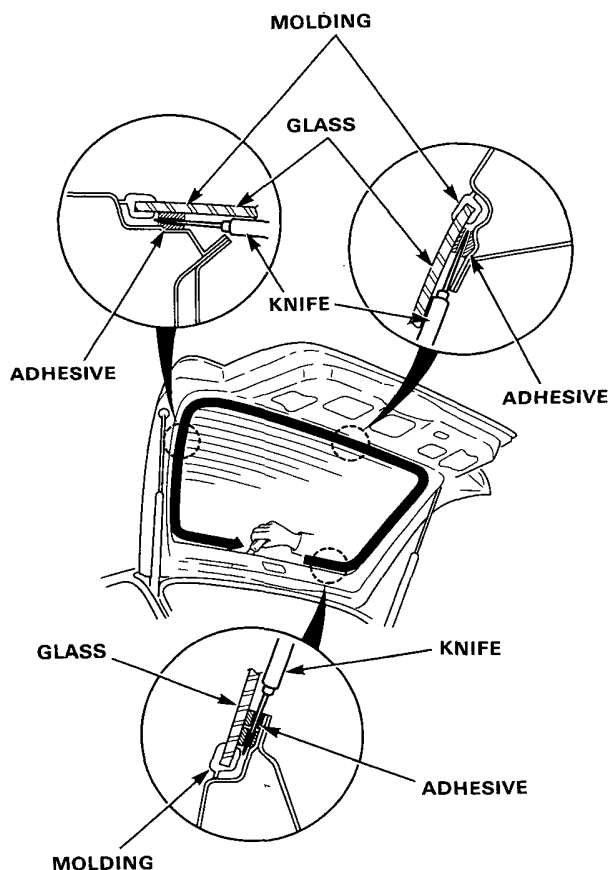

Installation

1. Scrape the old adhesive smooth with a knife, to a thickness of about 2 mm (0.08 in.) on the bonding surface around the entire window glass flange.

NOTE:


- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
- Remove the old window fasteners from the tailgate.
- Mask off surrounding surfaces before applying primer.

2. Clean the body bonding surface with a sponge dampened in alcohol.

NOTE: After cleaning, keep oil, grease or water from getting on the surface.

3. If the glass is to be reinstalled, use a putty knife to scrape off all traces of old adhesive, then clean the glass surface with alcohol where new adhesive is to be applied.

NOTE: Make sure the bonding surface is kept free of water, oil and grease.

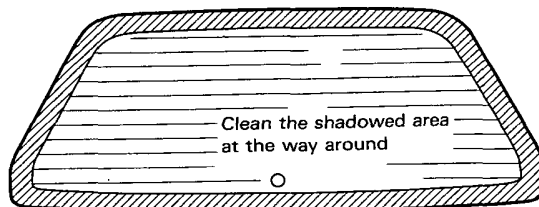


(cont'd)


Rear Window

Installation (cont'd)

4. Install the window fasteners on the tailgate.

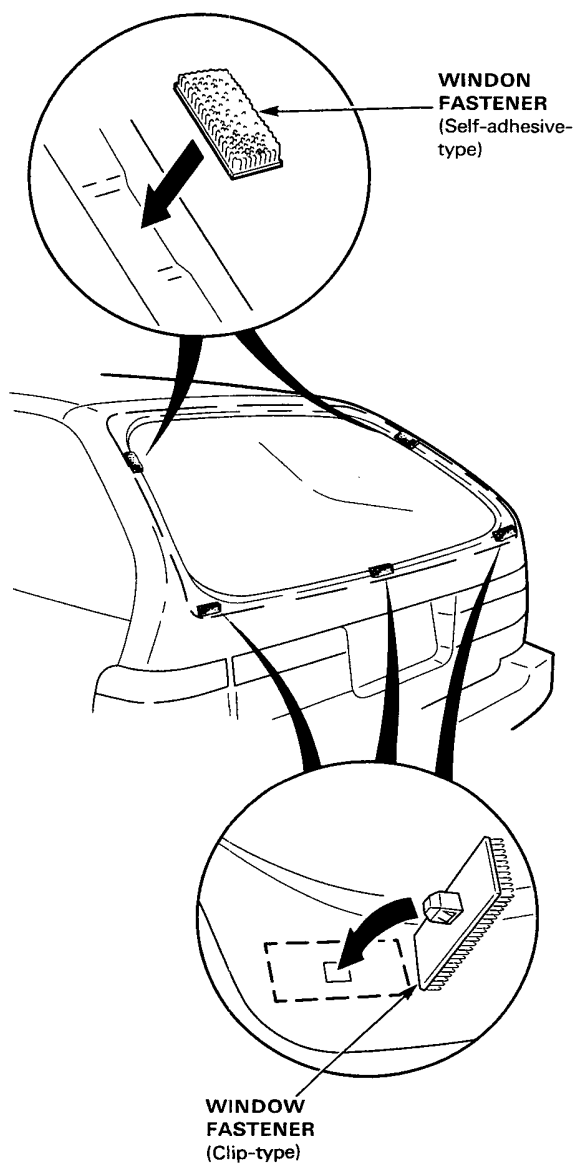


5. Adhere the side and lower window fasteners to the sides and lower edge of the glass as shown.

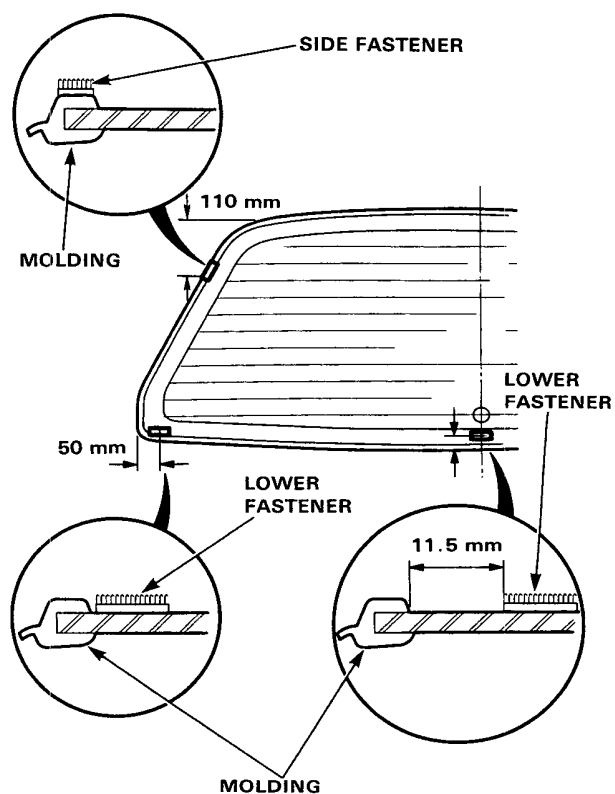



6. Set the glass upright on the tailgate, and center it in the opening. Mark the location by marking lines across the glass and body with a grease pencil at the four points shown.


NOTE: Check that the window fasteners align with each other as shown.

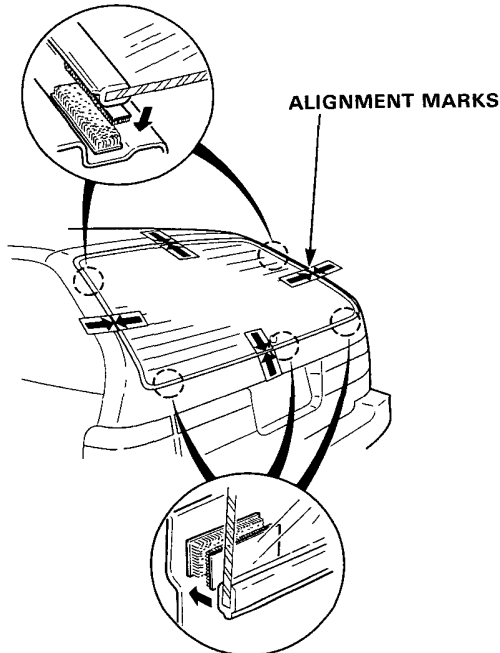

7. Center and glue the rubber dam to the inside face of the glass as shown, to contain the adhesive during installation.

NOTE:


- Be careful not to touch the glass where adhesive will be applied.
- Mask off surrounding surfaces before applying primer.

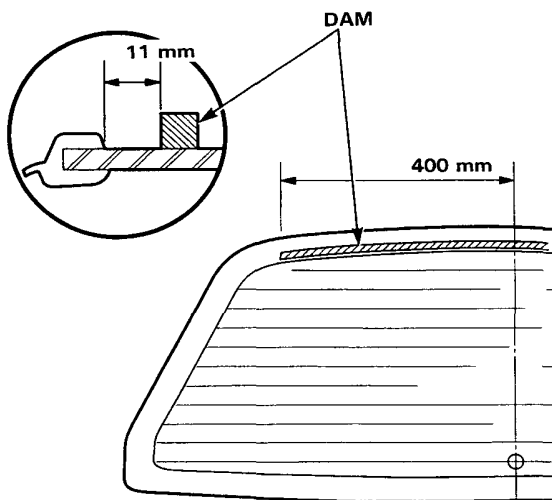

8. With a sponge, apply a light coat of glass primer around the edge of glass as shown, then lightly wipe it off with gauze or cheesecloth.

NOTE:


- Do not apply body primer to the glass, and do not get body and glass primer sponges mixed up.
- Never touch the primed surfaces with your hands. If you do, the adhesive may not bond to the glass properly, causing a leak after the glass is installed.
- Keep water, dust, and abrasive materials away from the primed surface.

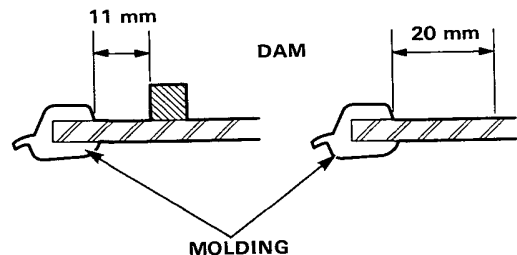

9. With a sponge, apply a light coat of body primer to the original adhesive remaining around the window opening flange.

NOTE:

- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.

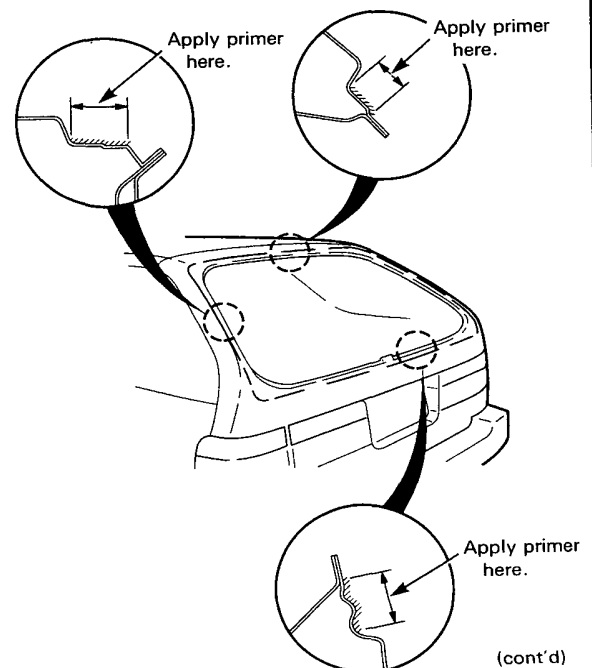

(cont'd)

Rear Window

Installation (cont'd)


10. Thoroughly mix all the adhesive and hardener together on a glass or metal plate with a putty knife.

NOTE:


- Clean the plate with a sponge and alcohol before mixing.
- Follow the instructions that come with the adhesive.

11. Before filling a cartridge, cut off the end of the nozzle at the angle shown.

Cut off nozzle end as shown.

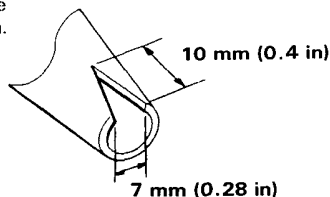


12. Pack adhesive into the cartridge without air pockets, to ensure continuous delivery. Put the cartridge in a caulking gun, and run a bead of adhesive around the edge of the glass as shown.

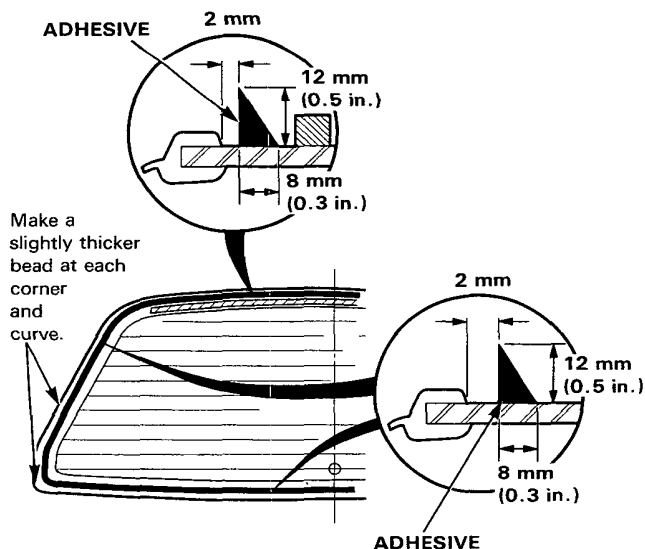

13. Use suction cups to hold the glass over the opening, then set it down on the adhesive. Lightly push on the glass until its edges are fully seated on the adhesive all the way around.

NOTE: Do not open and close the doors until the adhesive is dry.

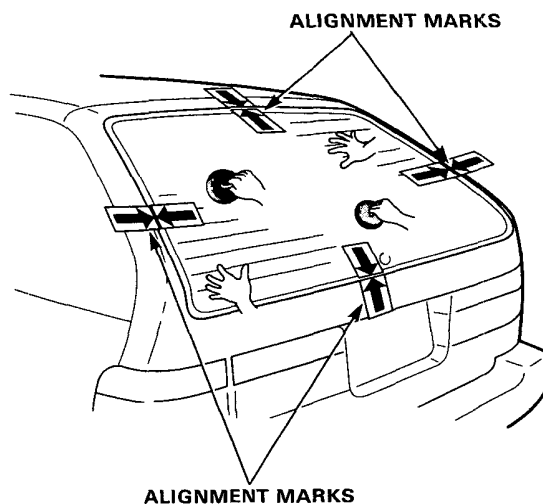

14. Scrape or wipe the excess adhesive off with a putty knife or gauze.

NOTE: Use a soft shop towel dampened with alcohol to remove adhesive from a painted surface or glass.

15. After the adhesive is dry, spray water over the glass and check for leaks. Mark leaking areas and let the glass dry, then seal with sealant.

NOTE: Let the car stand for at least 4 hours after glass installation. If the car has to be used within the first 4 hours, it must be driven slowly.

16. Reinstall all remaining removed parts.




Quarter Glass

Removal

NOTE: To remove the quarter glass, first remove the quarter window trim panel and quarter trim panel (page 14-11).

1. From inside the car, use a knife to cut through the glass adhesive all the way around.

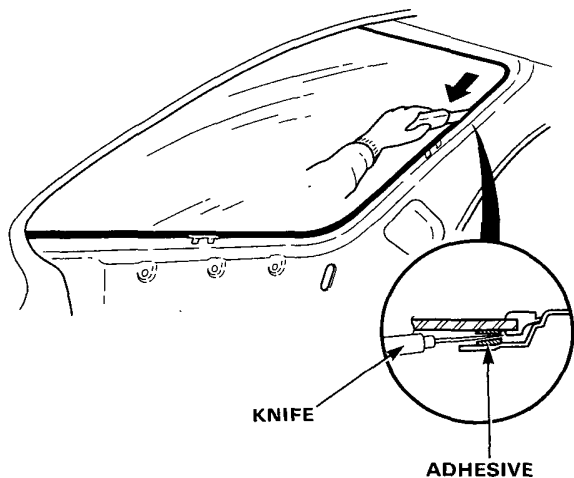

Installation

1. Scrape the old adhesive smooth with a knife, to a thickness of about 2 mm (0.08 in.) on the bonding surface around the entire glass flange.

NOTE:


- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
- Remove all traces of the rubber spacer material from the body.
- Mask off surrounding surfaces before applying primer.

2. Clean the body bonding surface with a sponge dampened in alcohol.

NOTE: After cleaning, keep oil, grease or water from getting on the surface.

3. If the glass is to be reinstalled, use a putty knife to scrape off all traces of old adhesive, then clean the glass surface with alcohol where new adhesive is to be applied.

NOTE: Make sure the bonding surface is kept free of water, oil and grease.

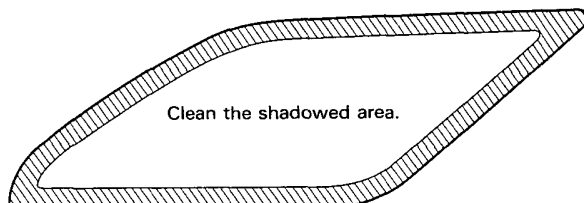


(cont'd)

Quarter Glass

Installation (cont'd)


- Adhere the front quarter glass fasteners to the glass as shown.

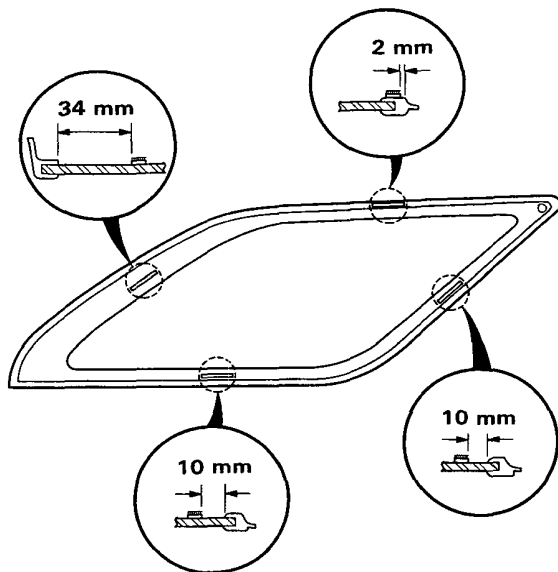

- With a sponge, apply a light coat of body primer to the original adhesive remaining around the window opening flange.

NOTE:


- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.

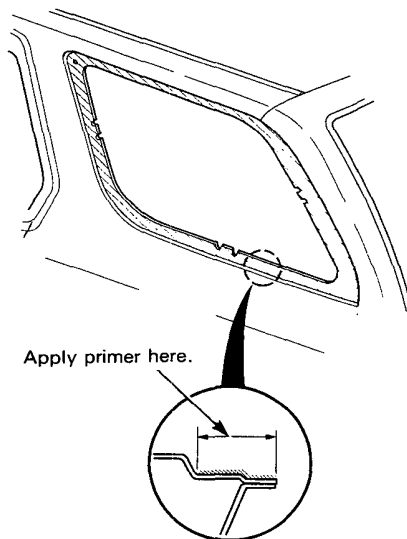

- With a sponge, apply a light coat of glass primer around the edge of the glass as shown, then lightly wipe it off with gauze or cheesecloth.


NOTE:

- Do not apply body primer to the glass, and do not get body and glass primer sponges mixed up.
- Never touch the primed surfaces with your hands. If you do, the adhesive may not bond to the glass properly, causing a leak after the glass is installed.
- Keep water, dust, and abrasive materials away from the primed surface.

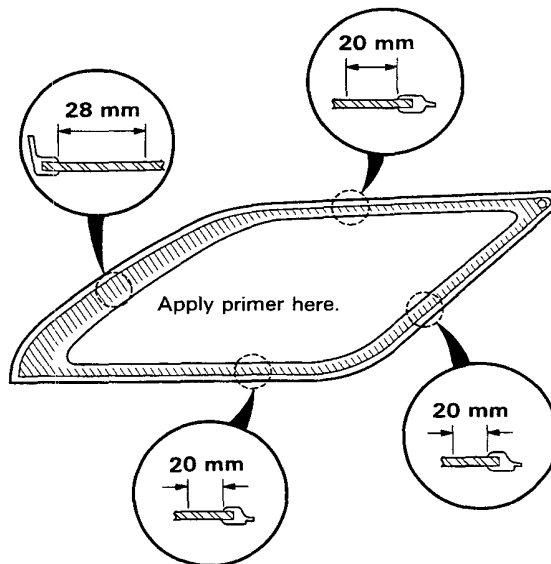



7. Install the quarter glass fasteners on the body as shown.

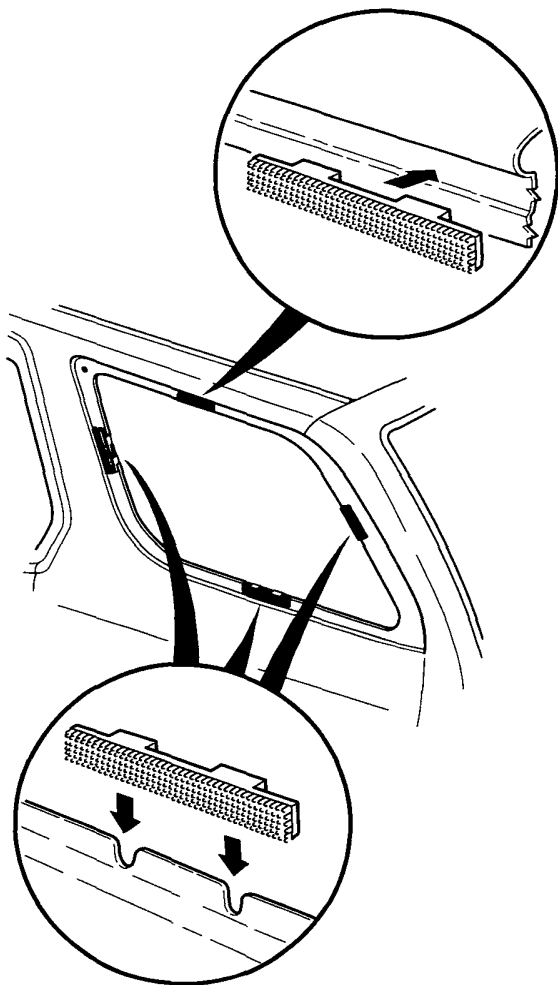


8. Thoroughly mix the adhesive and hardener together on a glass or metal plate with a putty knife.

NOTE:


- Clean the plate with a sponge and alcohol before mixing.
- Follow the instructions that come with the adhesive.

9. Before filling a cartridge, cut off the end of the nozzle at the angle shown.

Cut off nozzle end as shown.

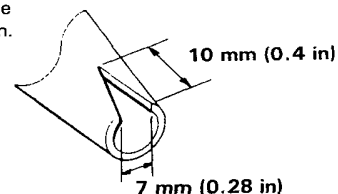

10. Pack adhesive into the cartridge without air pockets, to ensure continuous delivery. Put the cartridge in a caulking gun, and run a bead of adhesive around the edge of the glass as shown.

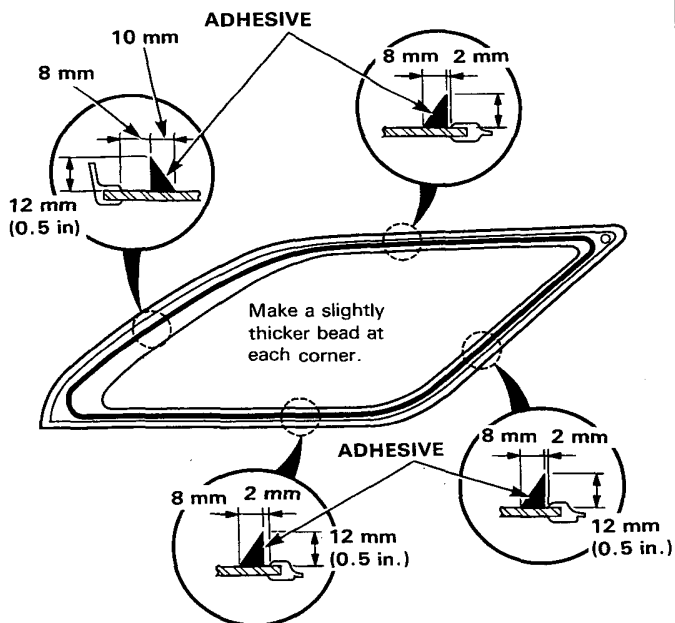


(cont'd)

Quarter Glass

Installation (cont'd)

11. Use suction cups to hold the glass, then set it on the adhesive. Lightly push on the glass until its edges are fully seated on the adhesive all the way around.

NOTE: Do not open or close the doors and tailgate until the adhesive is dry.

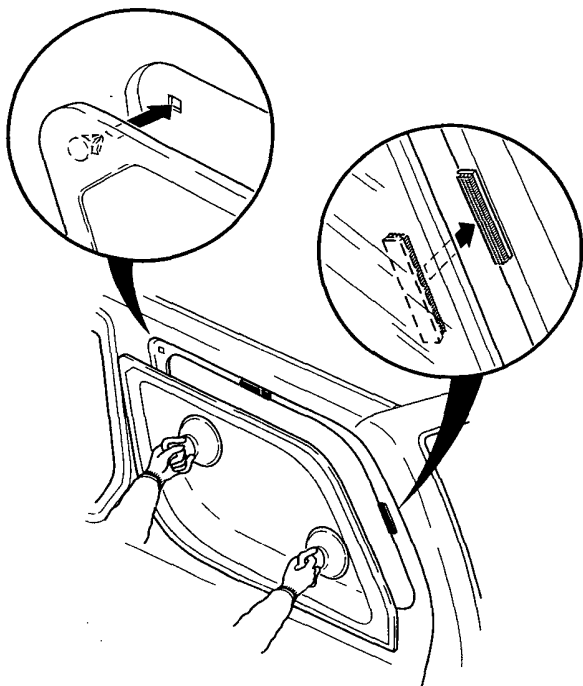

12. Scrape or wipe the excess adhesive off with a putty knife or gauze.

NOTE: Use a shop towel dampened with alcohol or unleaded gasoline to remove adhesive from a painted surface or glass.

13. After the adhesive is dry, spray water over the glass and check for leaks. Mark leaking areas and let the glass dry, then seal with sealant.

NOTE: Let the car stand for at least 4 hours after glass installation. If the car has to be used within the first 4 hours, it must be driven slowly.

14. Reinstall all remaining removed parts.




Interior Trim Replacement

NOTE: Front interior trim is the same as Sedan.

Disassemble in numbered sequence.


○: Clip locations

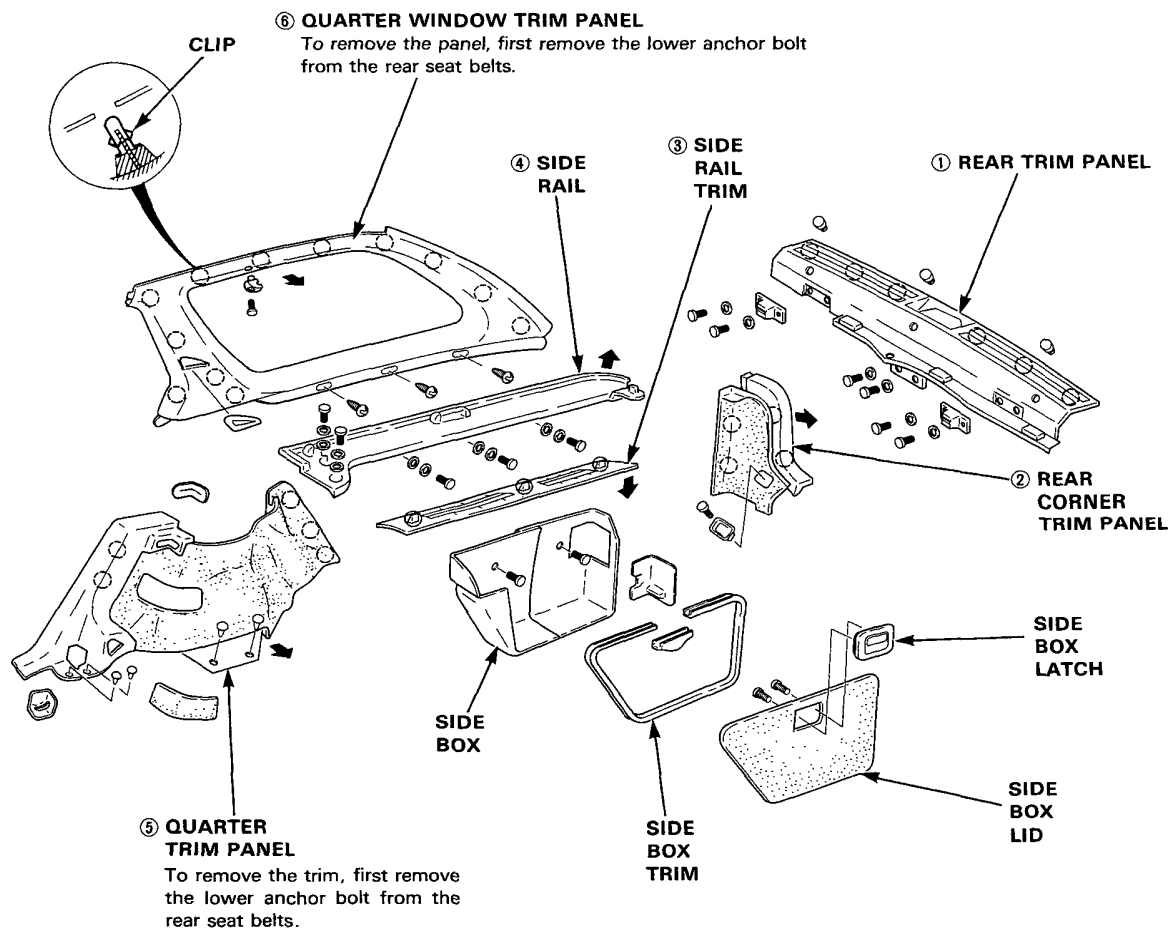

Headliner

Replacement

1. Remove:
 - Sun visors and holders.
 - Rearview mirror assembly.
 - Front pillar trim.
 - Rear roof side trim.
 - Roof trim (sunroof opening).
 - Quarter window trim panel (page 14-11).
 - Dome lights.
 - Speaker covers (Section 16)
 - Grab handles, and coat hook.
2. Remove the clips and rear roof trim, then remove the headliner.

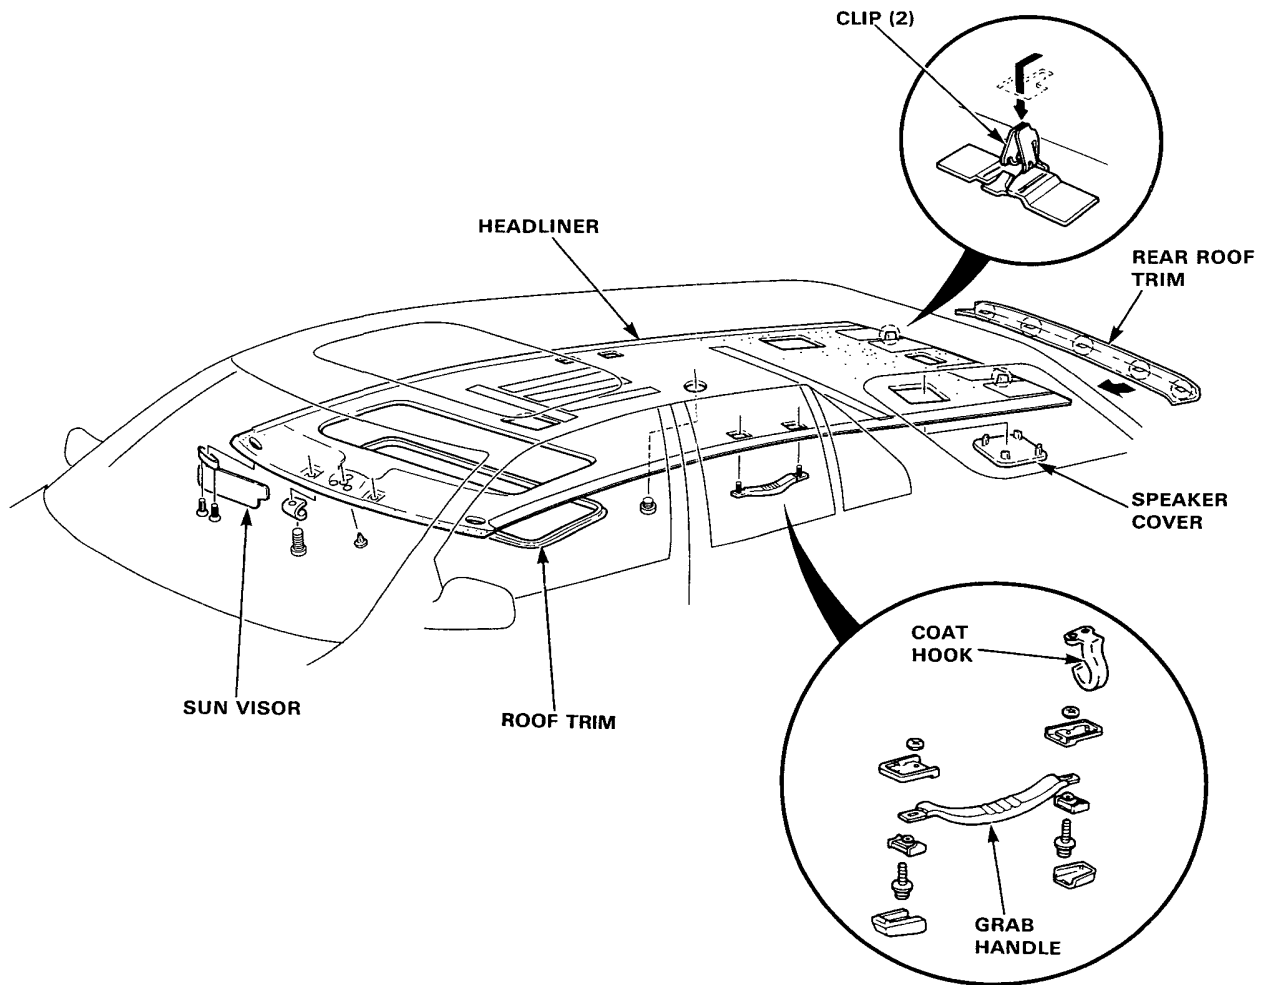

3. Assemble the headliner in the reverse order of disassembly.


NOTE:

- When installing the headliner inside the passenger compartment, be careful not to fold or bend it. Also, be careful not to scratch the body.
- Check that the two sides of the headliner are securely attached to the trim.



Rear Seats Replacement

Disassemble in numbered sequence.

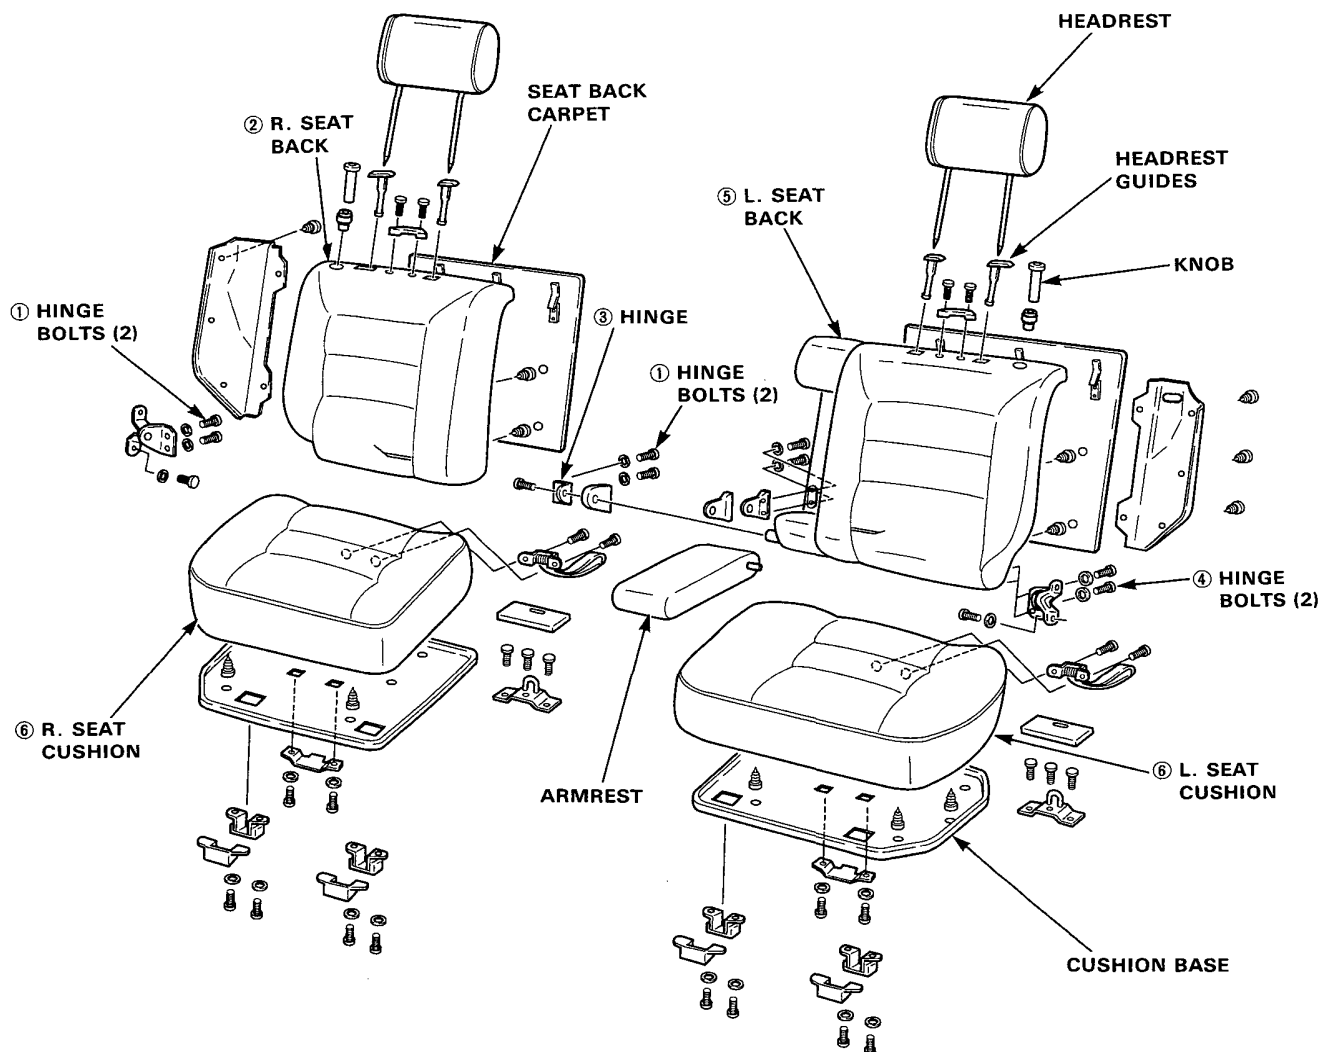


Seat Belts

Rear Replacement

CAUTION: Check the seat belts for damage and replace them if necessary. Be careful not to damage them during removal and installation.

1. Remove:
 - Rear seat back.
 - Side trim panel.
 - Rear side trim.
 - Rear corner trim.
 - Quarter window.
2. Remove the upper anchor bolt, the lower anchor bolt and retractor bolt with a 17 mm socket or box-end wrench.

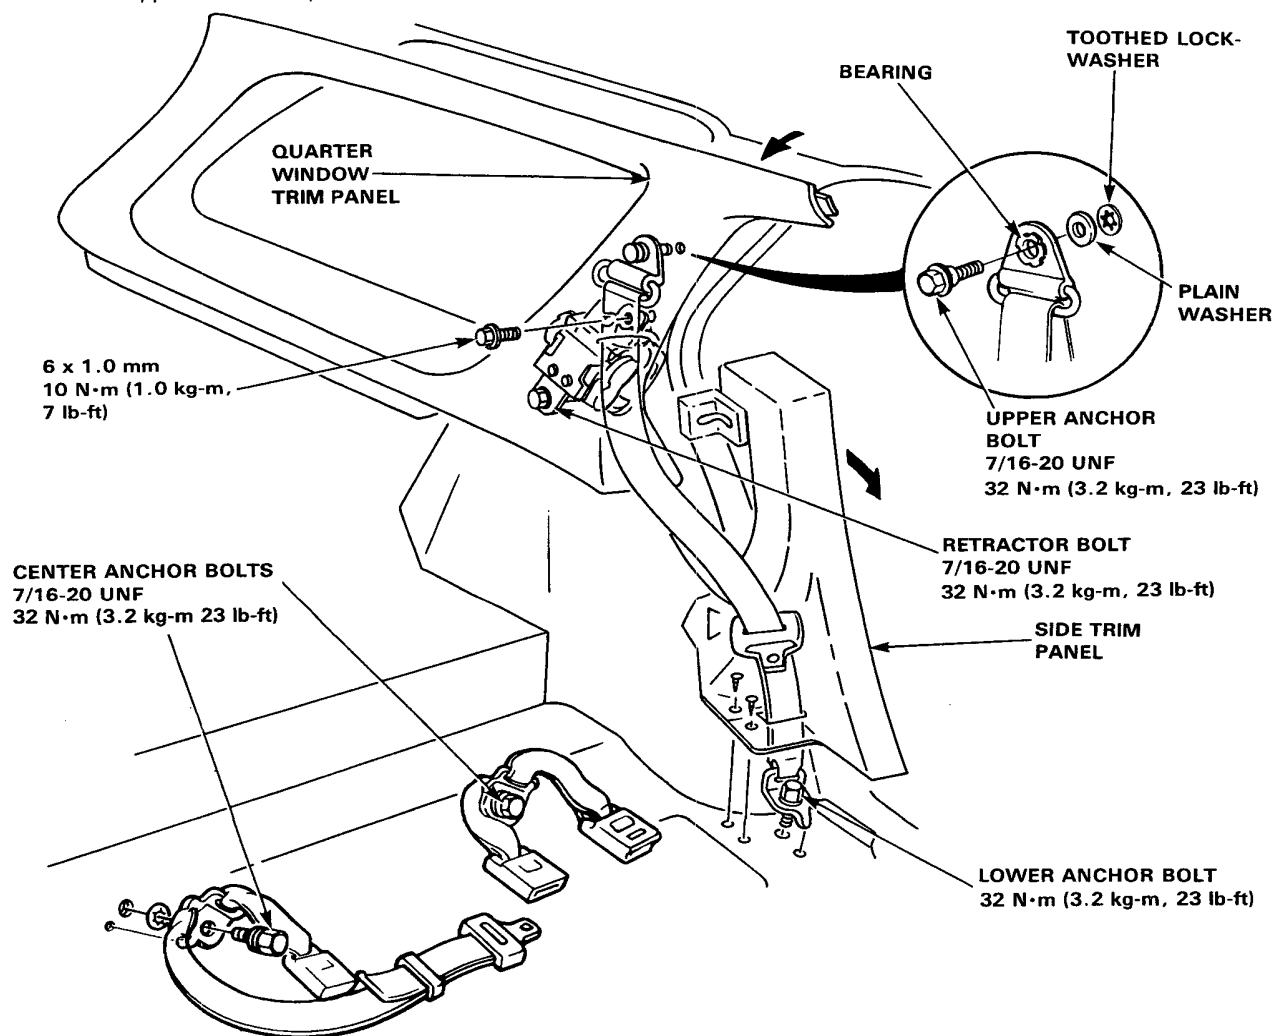

3. Check that the retractor locking mechanism functions properly.
4. Install the seat belt in the reverse order of removal.

NOTE:

- Before attaching the rear pillar trim panel and rear seat, make sure there are no twists in the belt.
- Pass the seat belts through the seat belt guides of the seat cushion.
- * On reassembly, replace the upper anchor bolt and use liquid thread lock.




Inspection

Retractor Inspection

1. With the retractor installed, check that the belt can be pulled out freely.
2. Make sure that the belt does not lock when the retractor is tilted over slowly to 15° from the mounted position. The belt should lock when the retractor is tilted over 40°.

CAUTION: Do not attempt to disassemble the retractor.

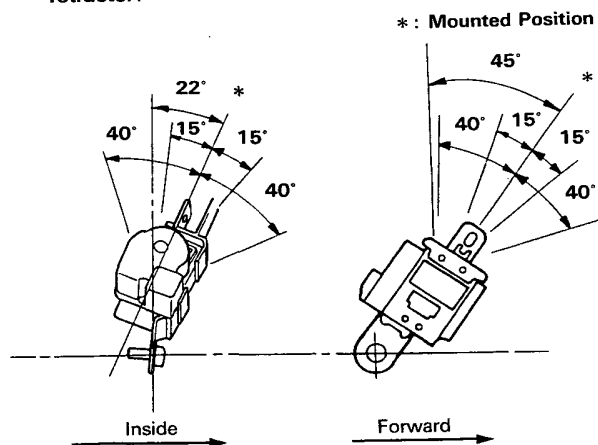

3. Replace the belt with a new one if there is any abnormality.

On the Car Belt Inspection

1. Check that the belt is not twisted or caught on anything.
2. After installing an anchor, check for free movement on its retaining bolt. If necessary, remove the bolt and check that the washers and other parts are not damaged or installed improperly.
3. Check the belts for fouling, damage or discoloration. Clean with a shop towel if fouled.


CAUTION: Use only soap and water to clean.

4. Check that the belt does not lock when pulled out slowly. The belt is designed to lock only during a sudden stop or impact.
5. Make sure that the belt will retract automatically when released.
6. Replace the belt with a new one if there is any abnormality.

Carpet/Spare Tire Lid/Rear Floor Box Replacement

1. Remove:
 - Front seats
 - Rear seat
 - Center console
 - Opener cover and footrest
 - Front seat belt lower anchor and center anchor bolts
 - Center pillar lower trim
 - Kick panels
 - Door sill moldings
2. Pry out the clips in the rear and under the dashboard.
3. Remove the carpet by sliding it rearward.
4. Remove the mounting bolts, then remove the floor box and floor cover.

* : Torx bolt locations
NOTE: Use TORX® T-30.

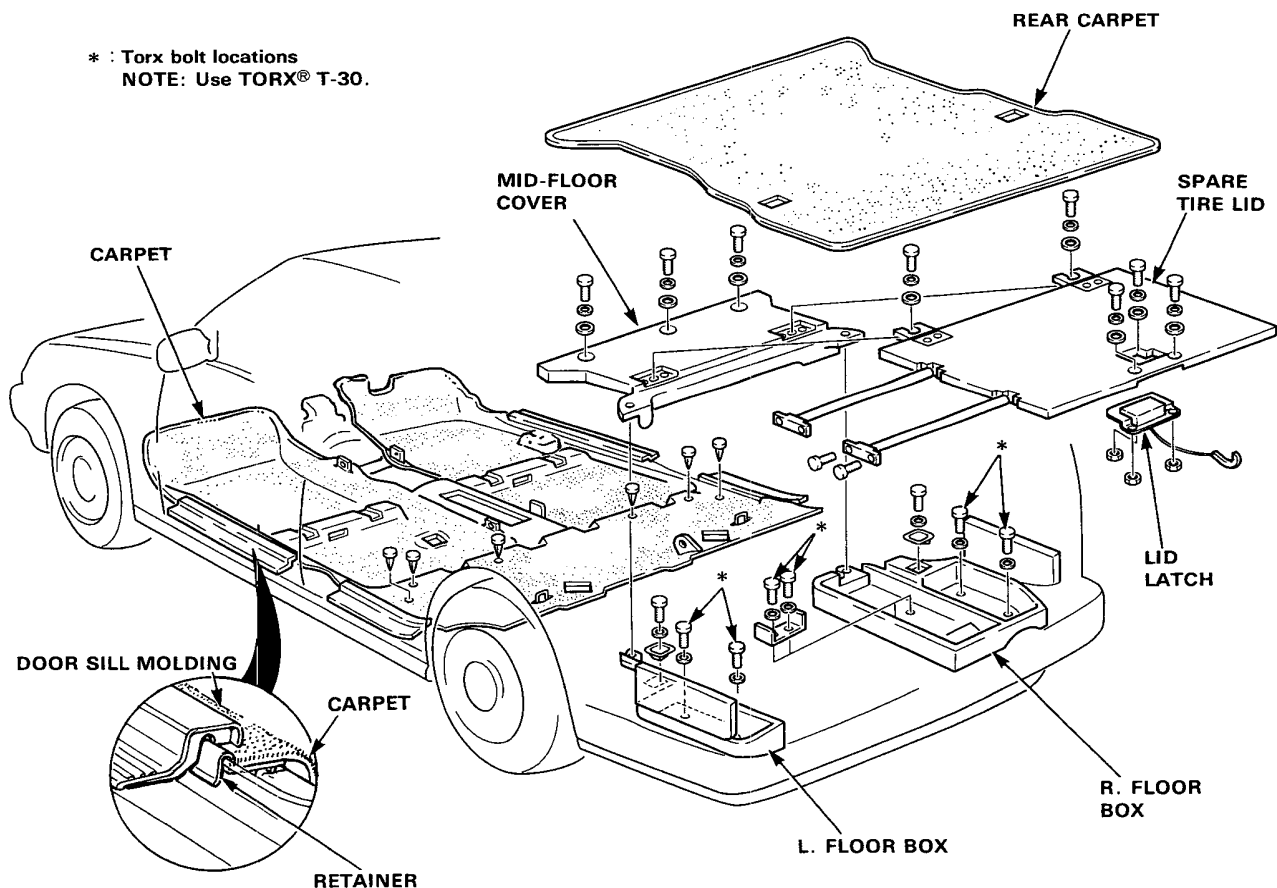

5. Install the carpet in the reverse order of removal.

NOTE:

- Make sure the carpet fits onto the body correctly.
- Take care not to damage the carpet.




Tailgate

Replacement/Adjustment

1. Remove the screws and detach the clips, then remove the tailgate upper and lower trim panels.
2. Pull the wire harness out of the tailgate and disconnect the washer hose.
NOTE: Before pulling out the wire harness, tie a string to the end of it so you can pull it back in when the tailgate is reinstalled.
3. Remove the tailgate support struts.
NOTE: Let an assistant hold the tailgate when removing the struts.
4. Remove the tailgate by removing the tailgate mounting bolts.
NOTE: Take care not to damage the roof panel.

If necessary: Lower the rear of the headliner just enough to gain access to the hinge mounting nuts, then remove the hinge by removing the hinge mounting nuts.

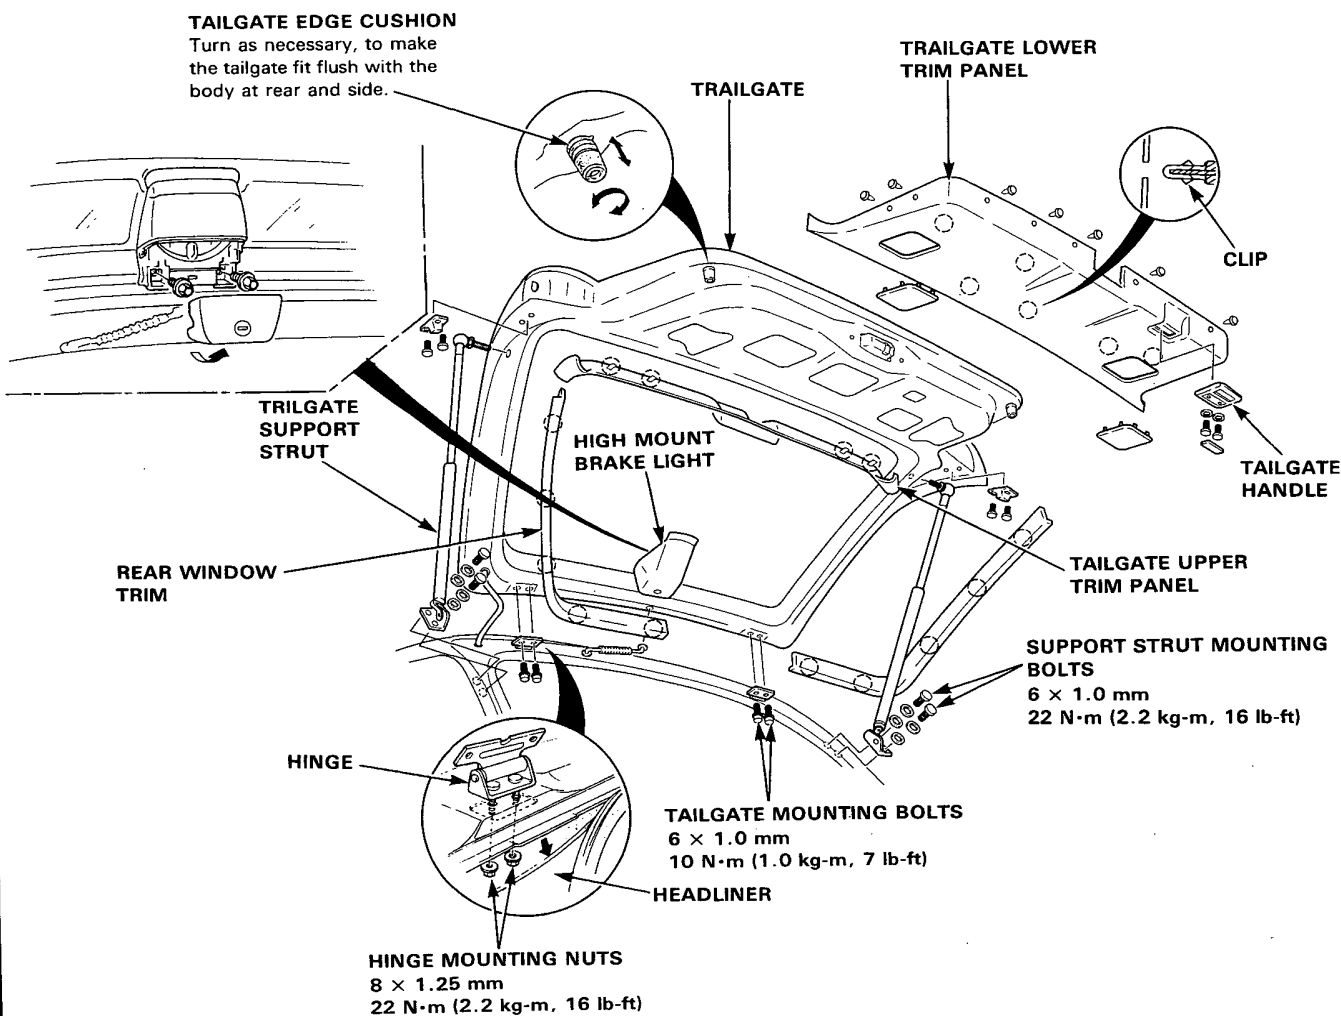

5. installation sequence is essentially the reverse order of removal. However, observe the following:
 - Before tightening the hinge nuts, adjust the tailgate fit and striker.
 - Use care when pulling the wire harness back in to avoid damaging the body.
 - Coat the inside and outside of the grommet with sealant.

Tailgate Latch/Fuel Lid Opener Cable

Tailgate Lock Replacement


1. Remove the tailgate lower trim panel (page 14-17).

2. To remove the outside handle, first remove the:


- License light covers
- Wiper arm (See section 16)
- Wiper motor (See section 16)

3. To remove the tailgate latch assembly, first disconnect the rod and connector.

NOTE: To ease reassembly, note the location **A** of the rod on the joint before disconnecting it.

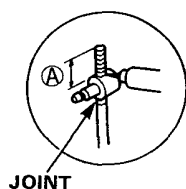

TAILGATE LOCK CYLINDER
Remove the tailgate lock cylinder by turning it right.

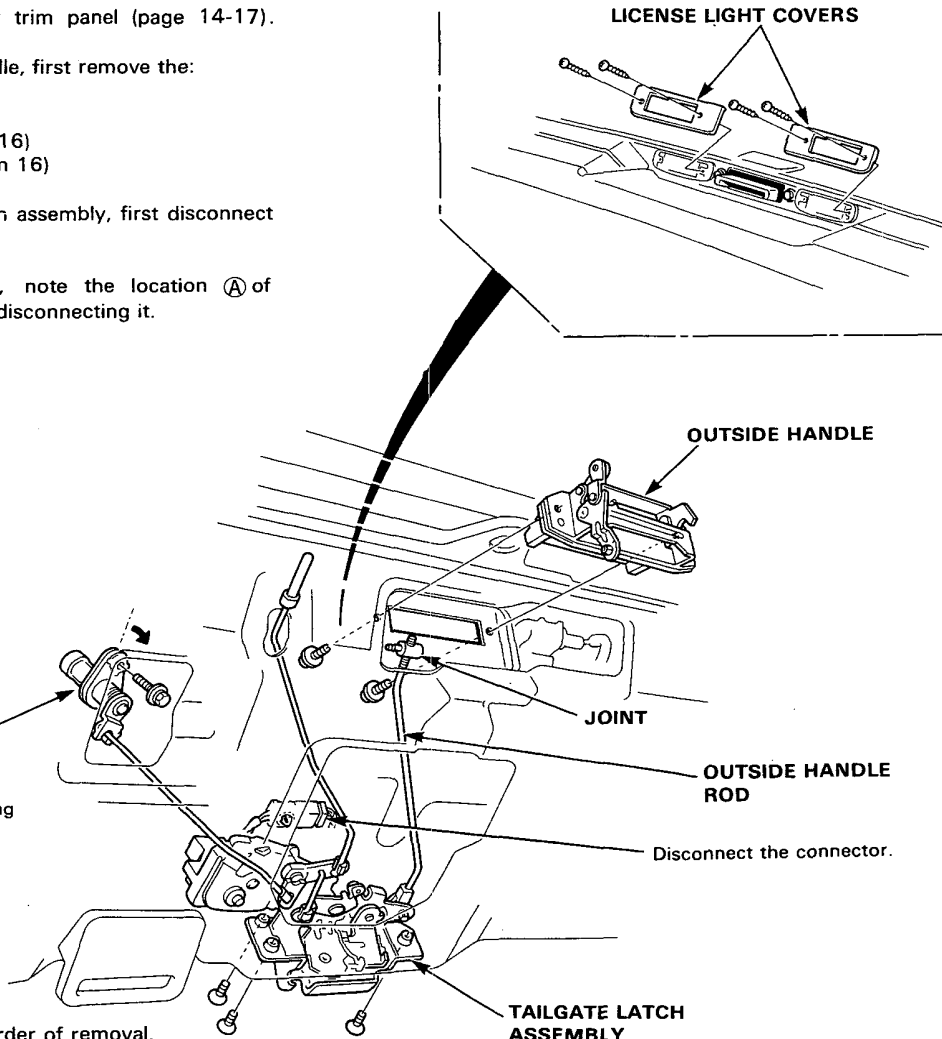

4. Installation is the reverse order of removal.



NOTE: After installing, check that the tailgate latch is operated properly.

Fuel Lid Opener Cable Replacement

Fuel lid opener cable is routed and connected properly as shown.

NOTE: Take care not to bend the cable.

➡: Clip locations

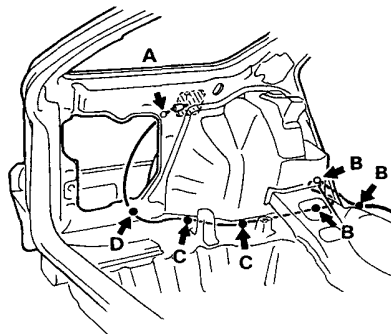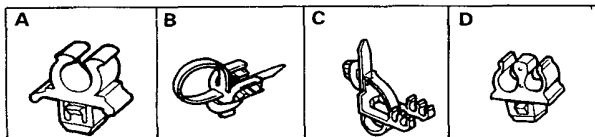

Electrical

Index to Circuits and Systems

Brake Lights

Brake Light Failure Sensor Test..16-9

Circuit Diagram16-8

Ground Distribution

Circuit Identification16-7

Power Door Locks

Circuit Diagram16-17

Component Location Index.....16-16

Control Unit Input Test.....16-19

Control Unit Input Test (cont'd) .16-20

Door Key Cylinder Switch Test ..16-23

Driver's Door Actuator Test16-21

Ignition Key Switch Test.....16-24

Passenger's Door Actuator Test .16-23

Tailgate Actuator Test16-22

Troubleshooting.....16-18

Rear Wiper/Washer

Circuit Diagram16-26

Component Location Index.....16-25

Wiper Motor Replacement16-28

Wiper Motor Test16-28

Washer Motors Test.....16-29

Wiper/Washer Switch Test16-27

Relay and Control Unit Locations

Floor and Door.....16-2

Stereo Sounds System

Circuit Diagram16-13

Component Location Index.....16-12

Power Antenna Motor Test16-14

Rear Speaker Replacement.....16-15

Tailgate Latch Switch

Test/Replacement16-10

Taillights

Replacement16-11

Wire Harness and Ground Locations

Floor.....16-3

Rear.....16-5

Rear Roof.....16-4

Tailgate16-6


Wiring Diagrams16-30



Relays and Control Unit Locations

Floor and Door

NOTE: RHD type is symmetrical to LHD type.

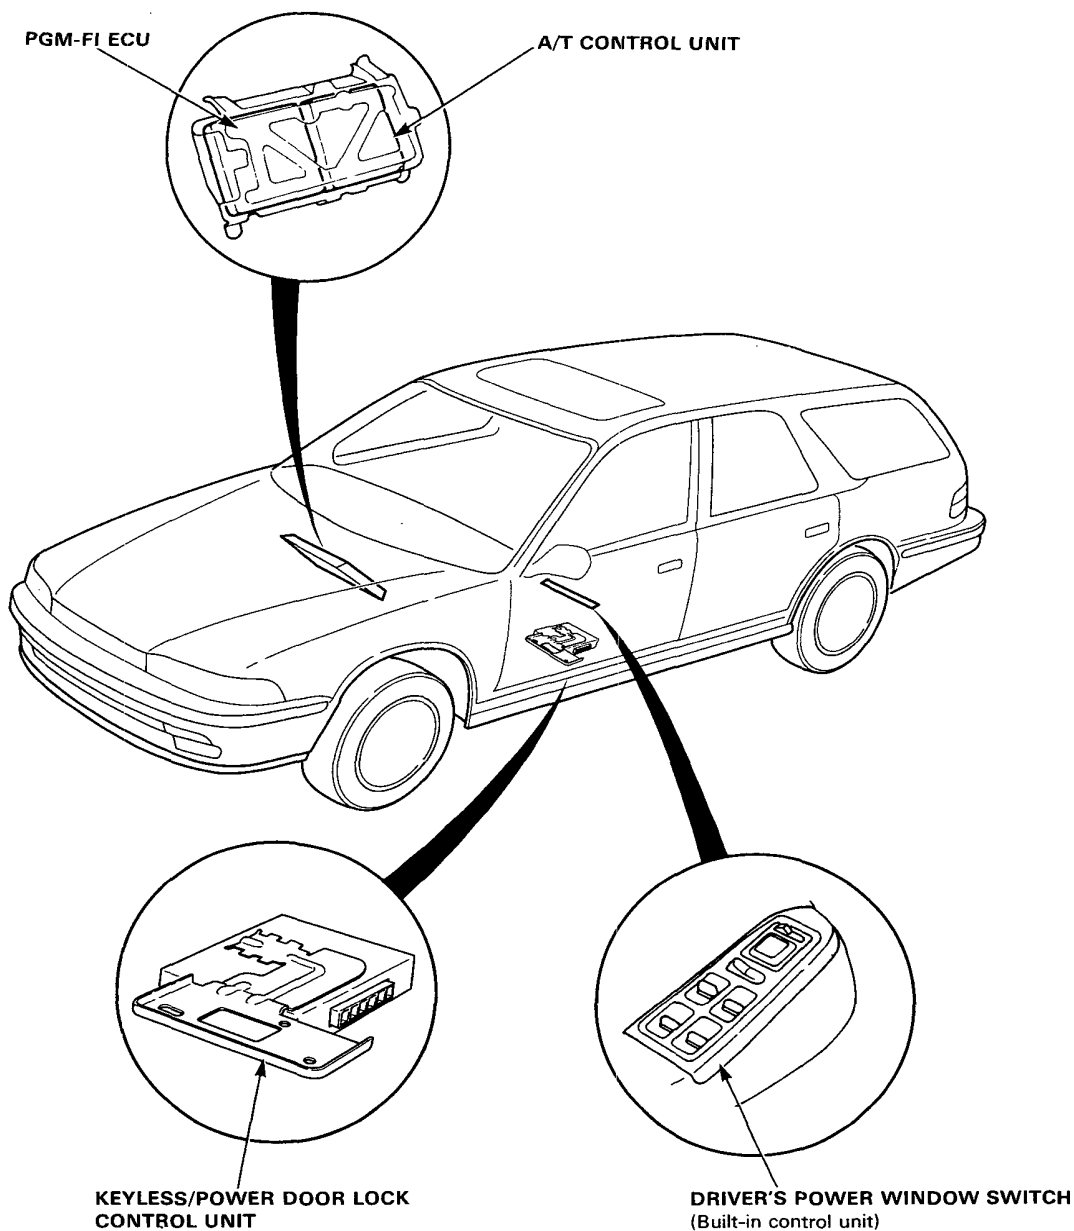


Wire Harness and Ground Locations




Floor

LHD:

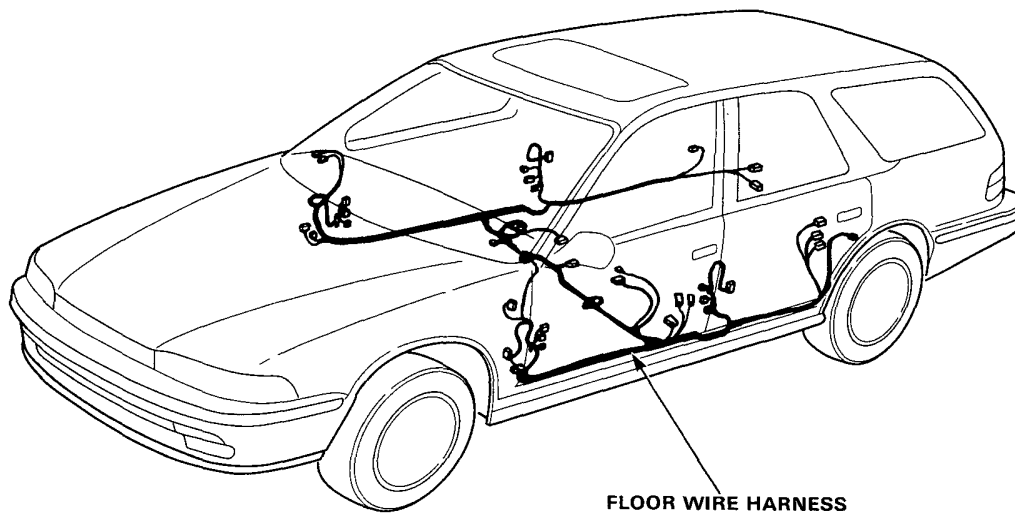


RHD:

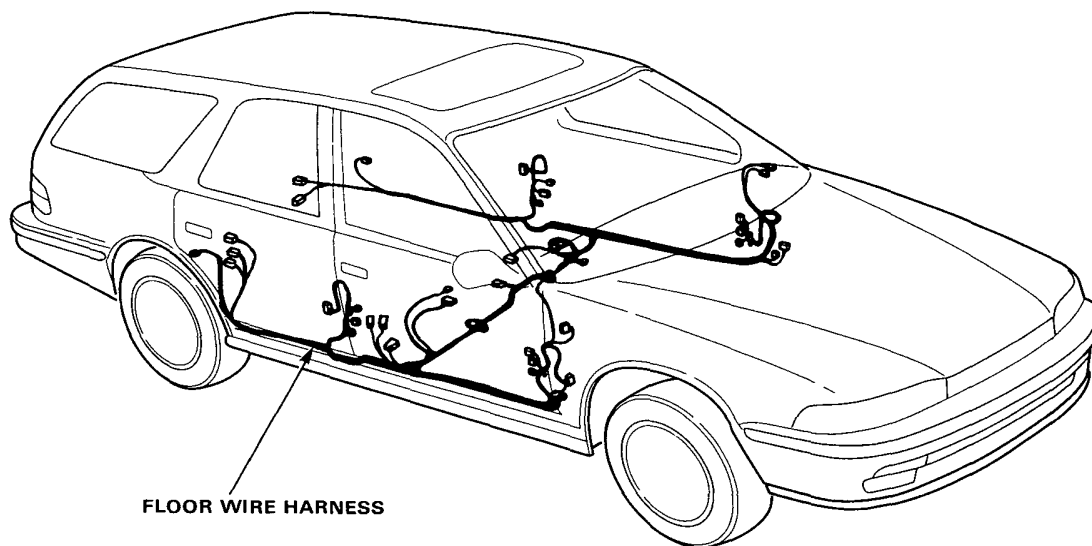


Wire Harness and Ground Locations

Rear Roof

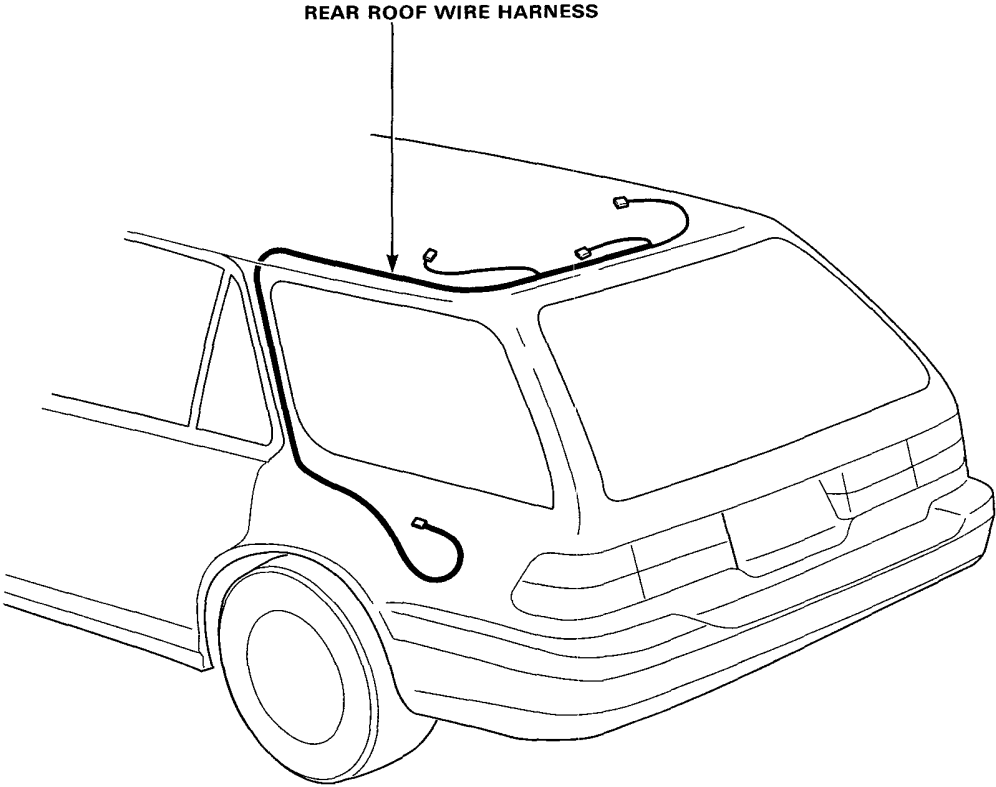




Rear

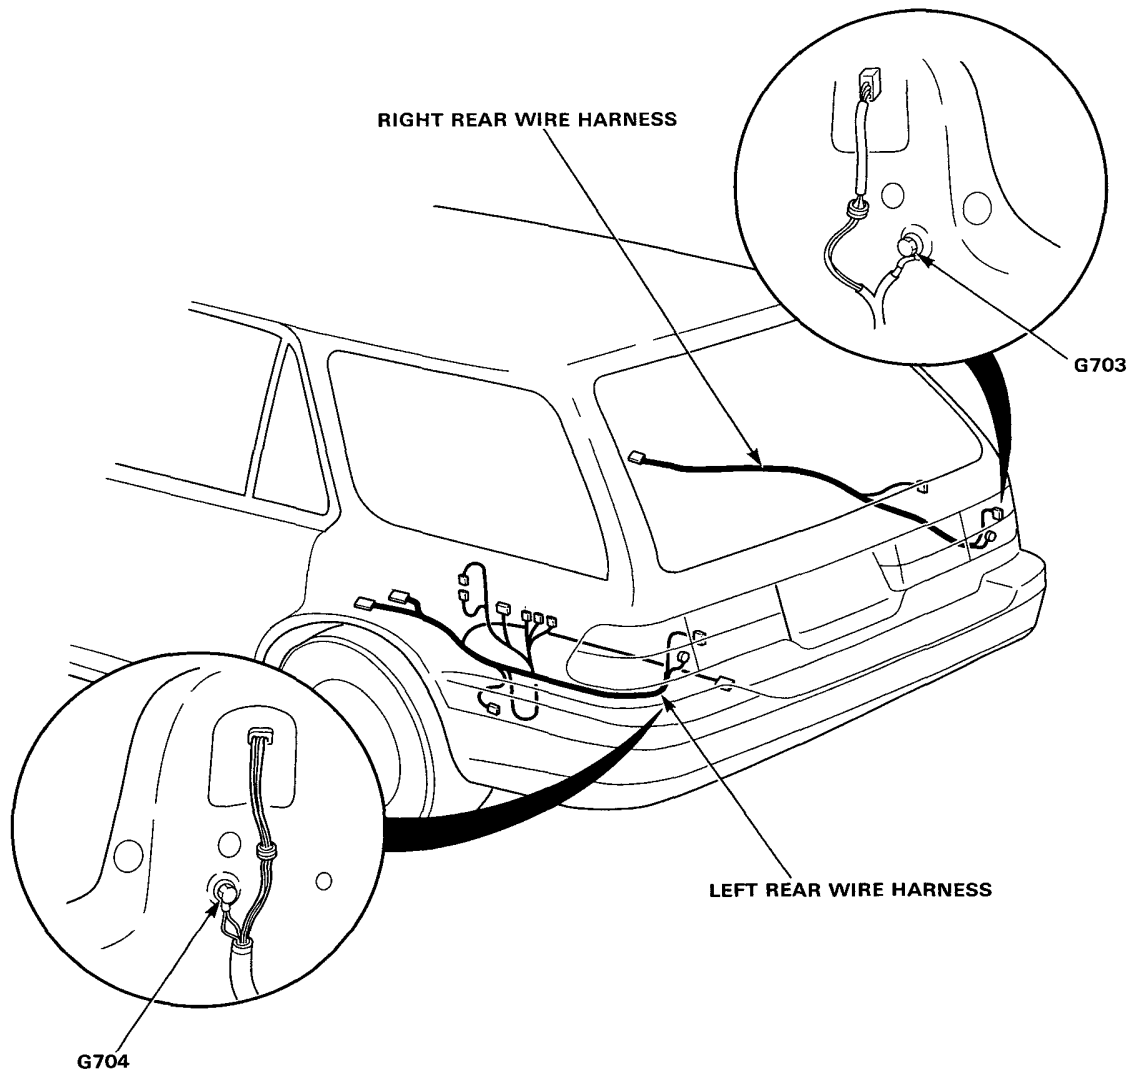

Wire Harness and Ground Locations

Tailgate




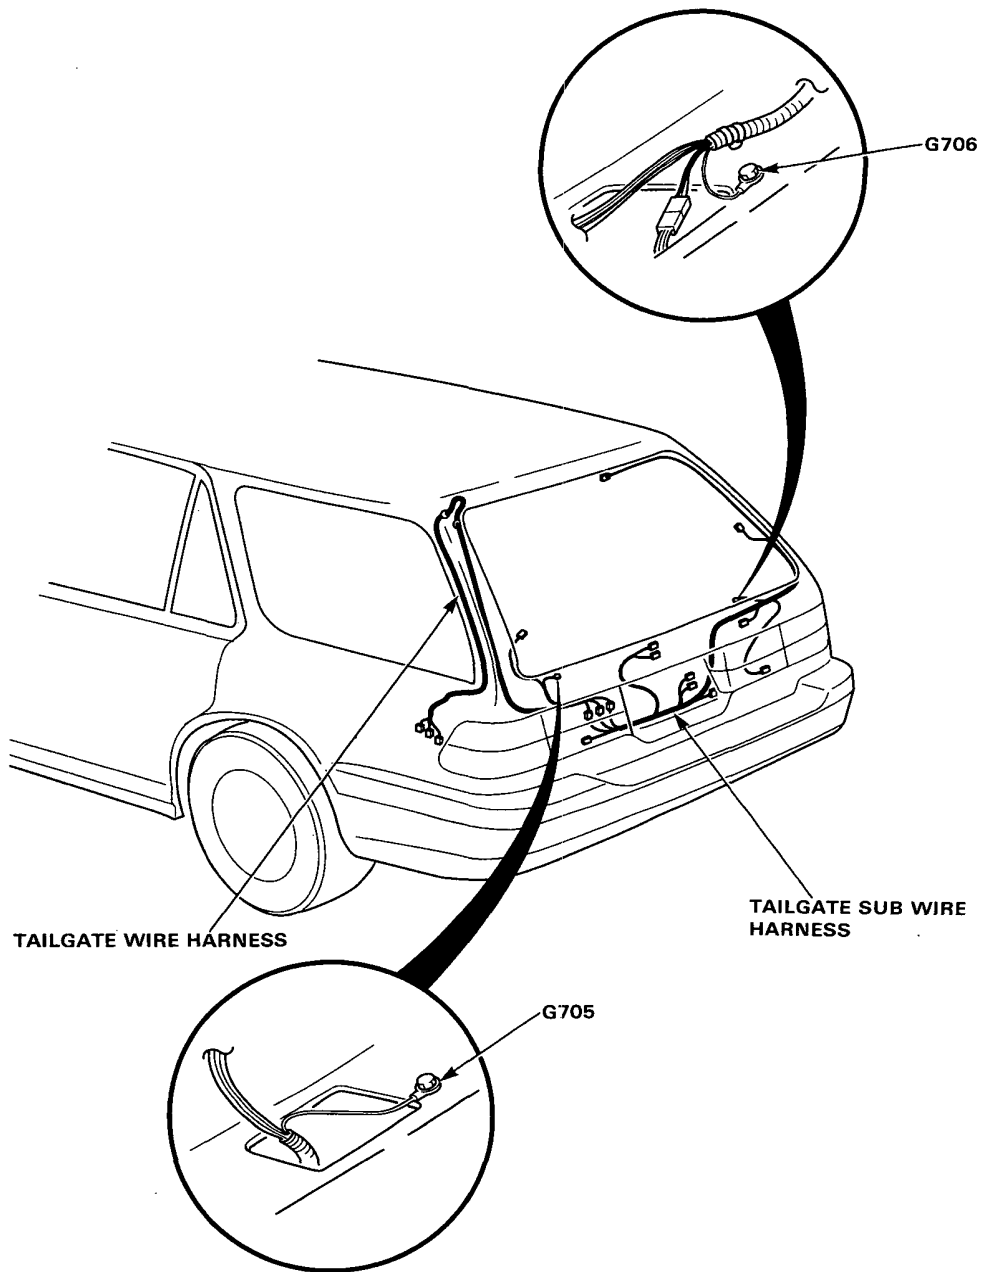


Ground Distribution

Circuit Identification



KG model

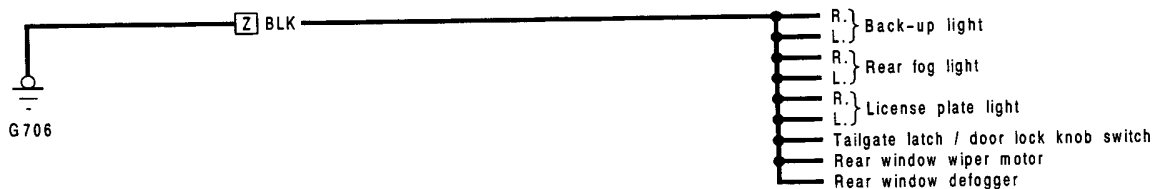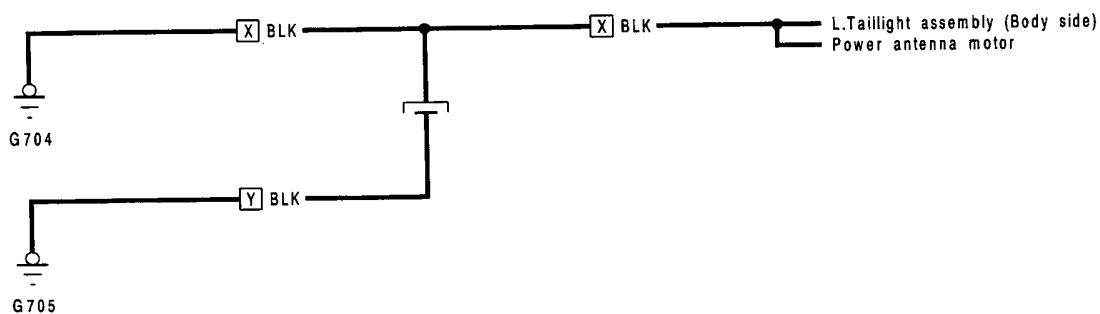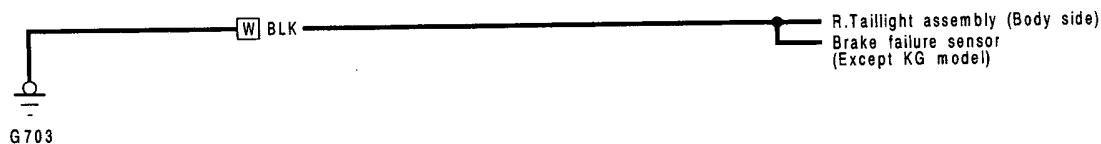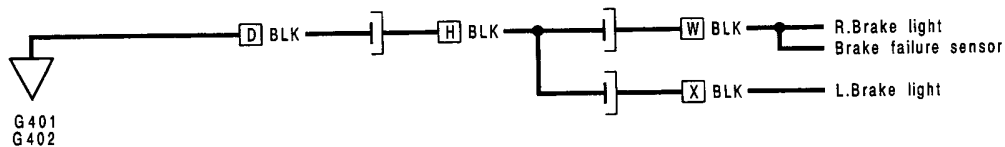


[D] : Main wire harness
[H] : Floor wire harness
[W] : Right rear wire harness

[X] : Left rear wire harness
[Y] : Tailgate wire harness
[Z] : Tailgate sub wire harness

Brake Lights


Circuit Diagram

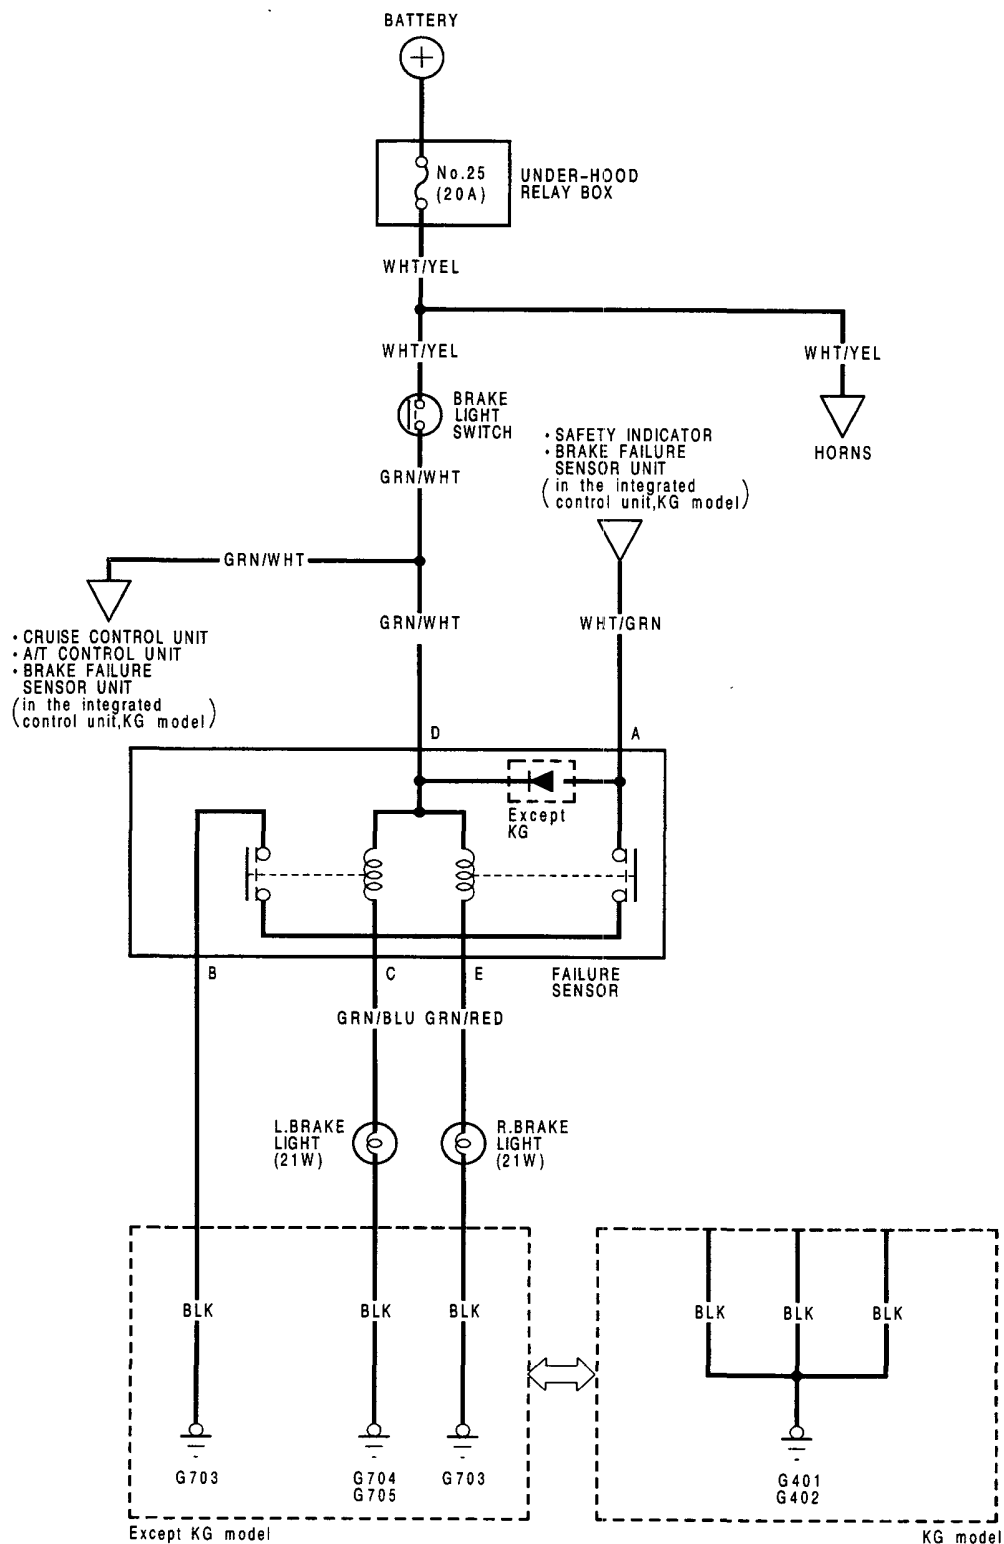



Brake Light Failure Sensor Test

1. First make sure the brake lights come on when the brake pedal is pressed.
 - If none of the brake lights come on, check the brake light circuit.
 - If one of the brake lights does not come on, check whether the bulb is blown. If the bulb is OK, go to step 2.
 - If all the brake lights come on, go to step 2.
2. Open the tailgate and the right rear quarter trim panel. Make sure the **BRAKE LAMP** of the safety indicator does not come on when the A (WHT/GRN) terminal of the 6-P connector is grounded and the ignition switch is turned from OFF to ON.

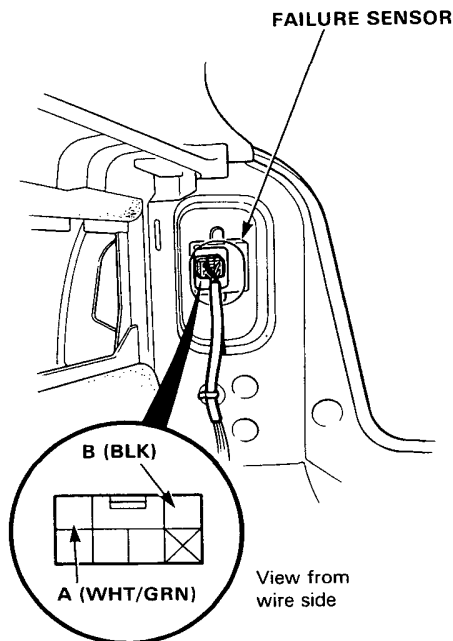



- If the **BRAKE LAMP** comes on, check for an open in the WHT/GRN wire between the safety indicator and the failure sensor and whether the safety indicator circuit (main print panel) has a problem.
- If the **BRAKE LAMP** does not come on, go to step 3.

3. Make sure the **BRAKE LAMP** does not come on when the ignition switch is turned from OFF to ON with the B (BLK) terminal of the 6-P connector grounded and the brake pedal pressed.
 - If the **BRAKE LAMP** comes on, replace the failure sensor.
 - If the **BRAKE LAMP** does not come on, check for an open in the BLK wire, and check whether the G703 (or G401, G402) terminal is poor.


Tailgate Latch Switch

Test/Replacement

1. Open the tailgate and remove the tailgate trim panel.
2. Disconnect the 2-P connector from the tailgate latch.
3. There should be continuity between the two tailgate latch switch connector terminals.

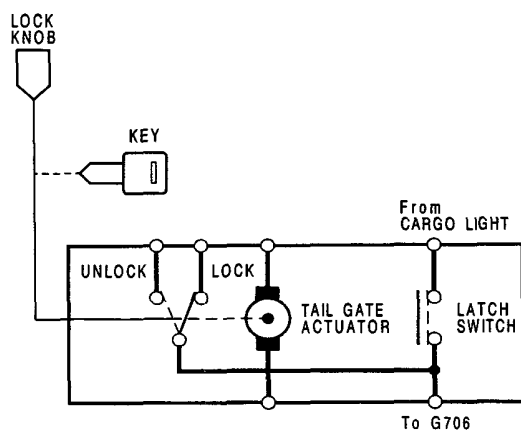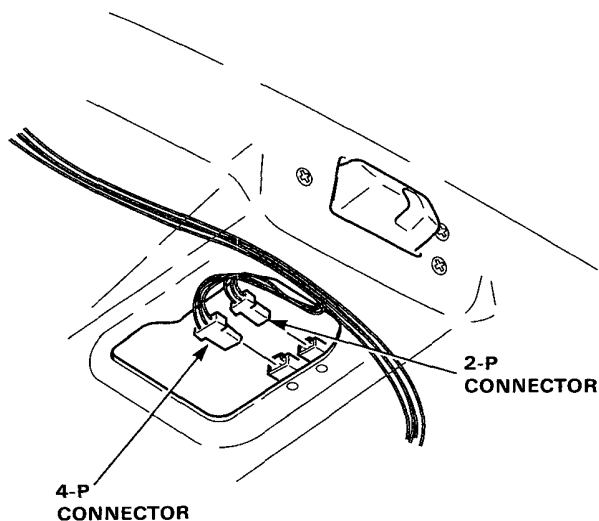

4. If necessary, remove the 3 screws and pull the latch of the tailgate, then disconnect the 4-P connector and rods from the latch.

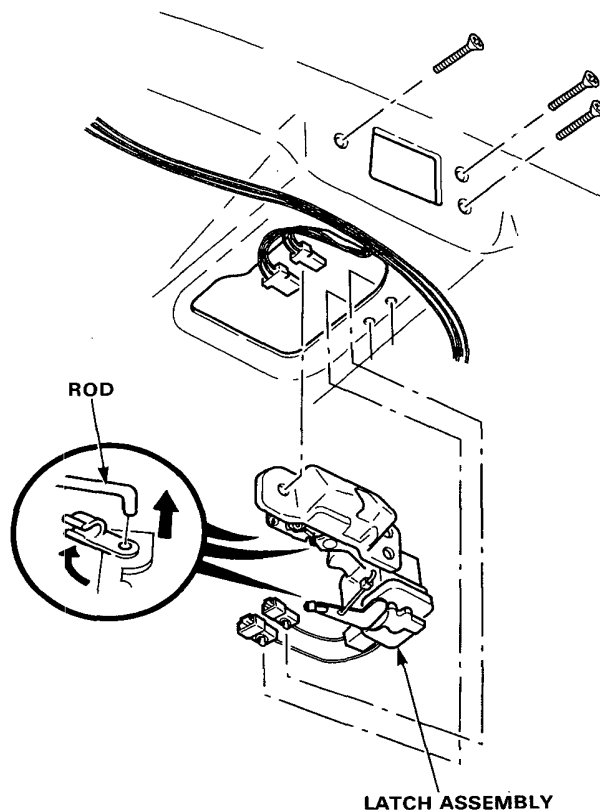




Taillights

Replacement

Body side:


1. Open the tailgate and remove the rear quarter trim panel.
2. Disconnect the 4-P or 6-P connector from the body-side taillight.
3. Remove the 4 mount nuts and the taillight.

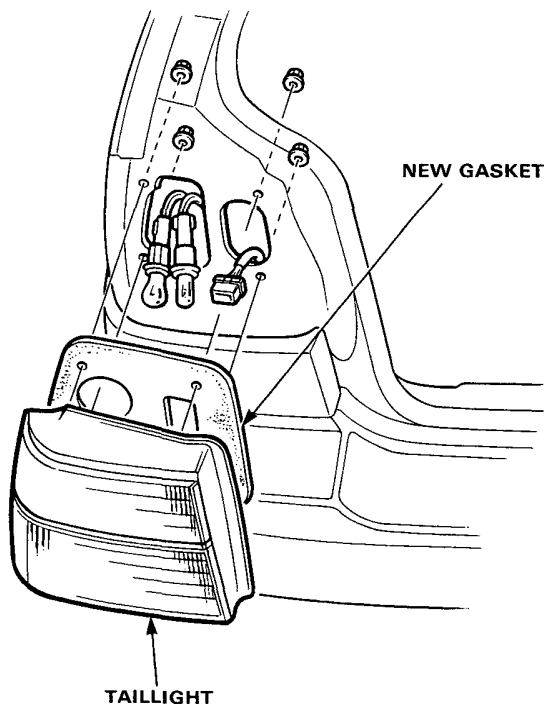

4. Inspect the gasket; replace if it is distorted or overly compressed.
5. Make sure that there is no water leakage in the taillights, after installing the taillights.

Tailgate side:


1. Open the tailgate and remove the tailgate trim panel.
2. Disconnect the 4-P connector from the tailgate-side taillight.
3. Remove the 6 mount nuts and the tailgate-side taillight.

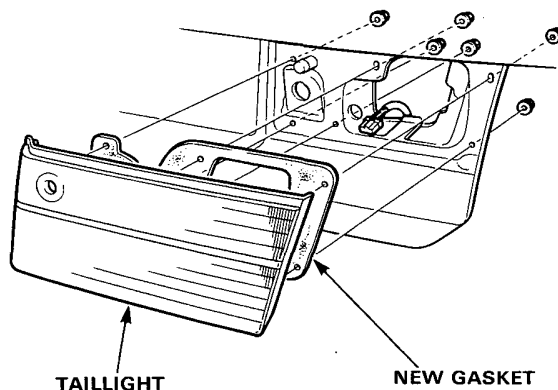

4. Inspect the gasket; replace if it is distorted or overly compressed.
5. Make sure that there is no water leakage in the taillights, after installing the taillights.


Stereo Sound System

Component Location Index

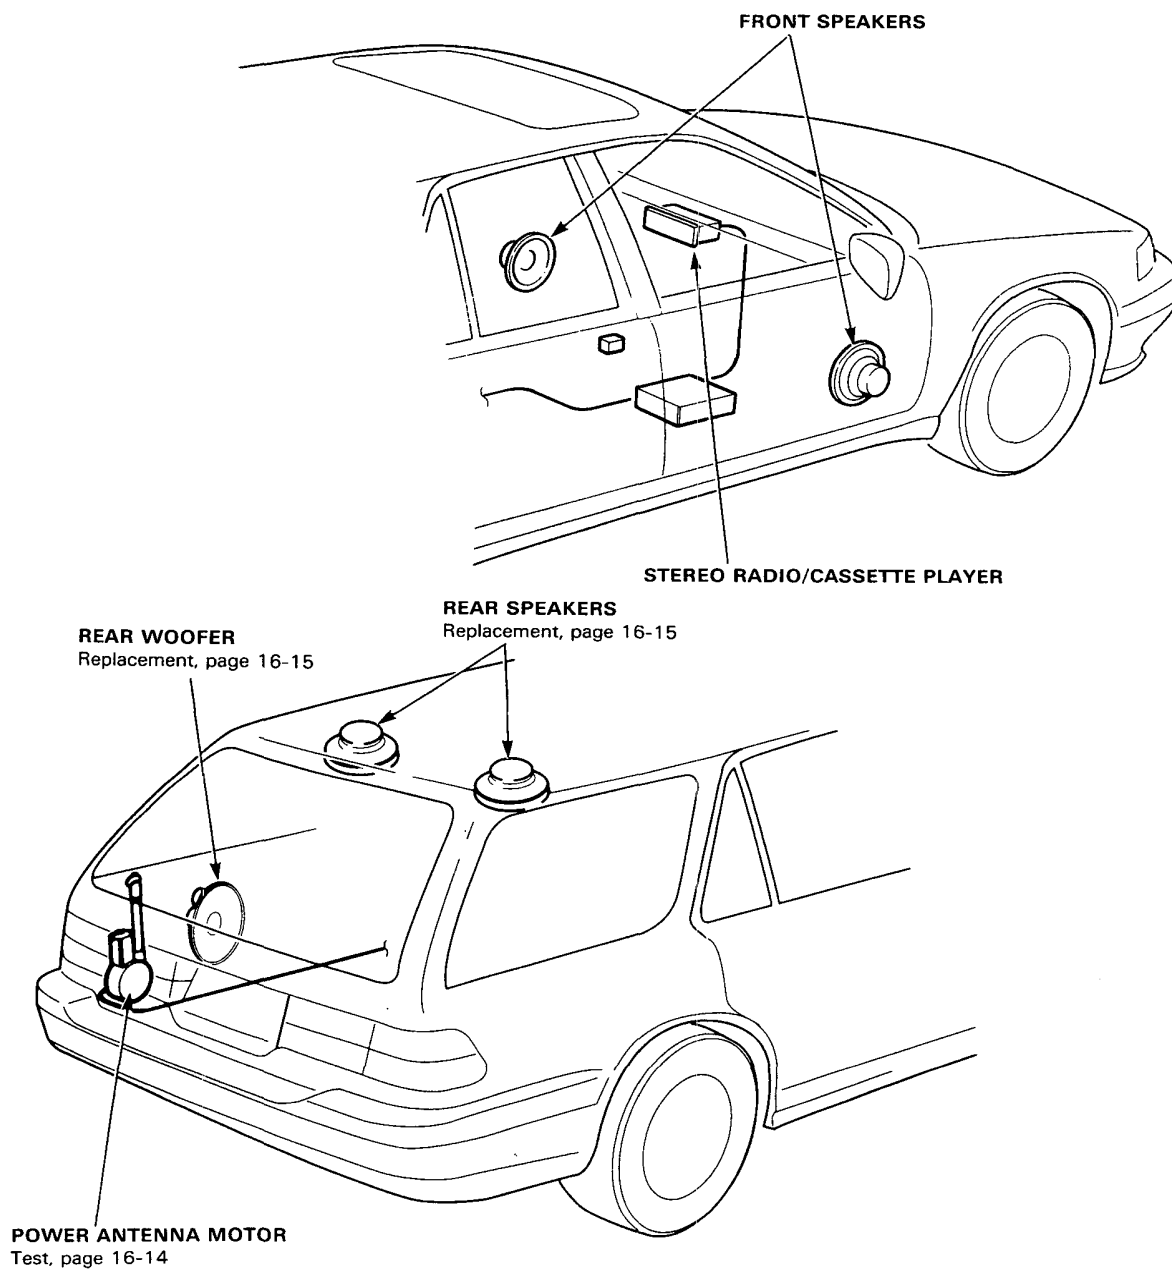



Circuit Diagram

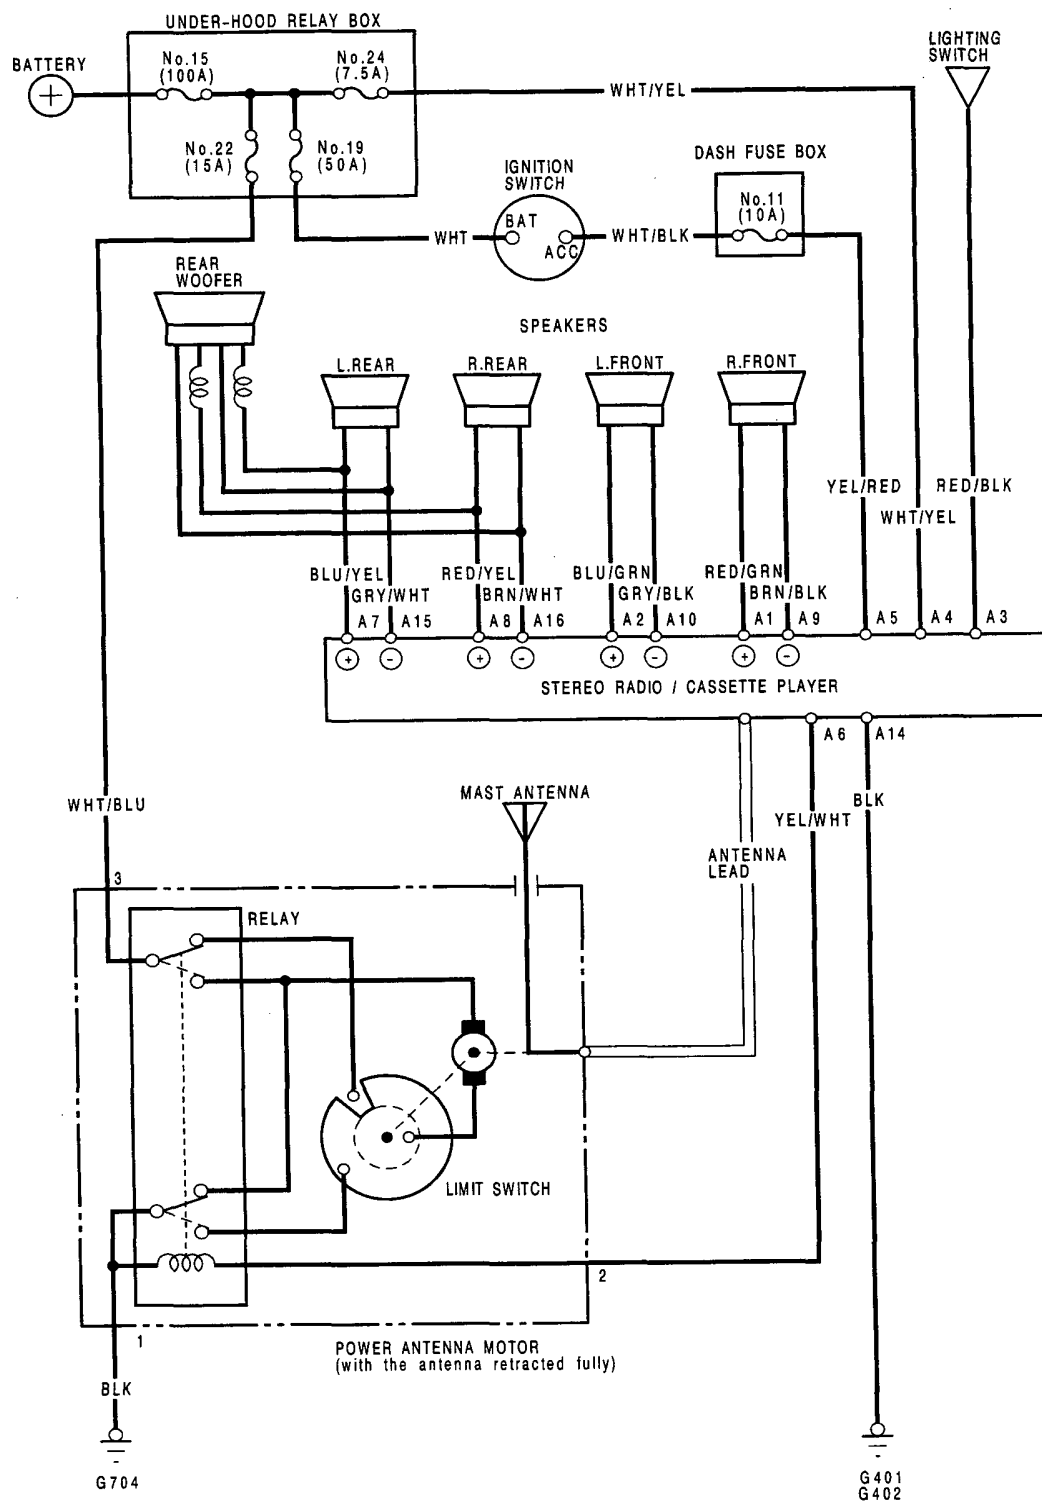

Stereo Sound System


Power Antenna Motor Test

1. Remove the left rear quarter trim panel.
2. Disconnect the 3-P connector from the motor and remove the connector from its clamp.
3. First check power to the motor at the connector terminals. There should be battery voltage between the WHT/BLU (+) and BLK (-) terminals all the time. There should be battery voltage between the YEL/WHT (+) and BLK (-) terminals only with the ignition and radio switched ON.


4. Test motor operation:

FULL EXTEND: Connect battery positive to the No. 3 and No. 2 terminals and negative to the No. 1 terminal.

RETRACTED: Then disconnect battery positive from the No. 2 terminal.

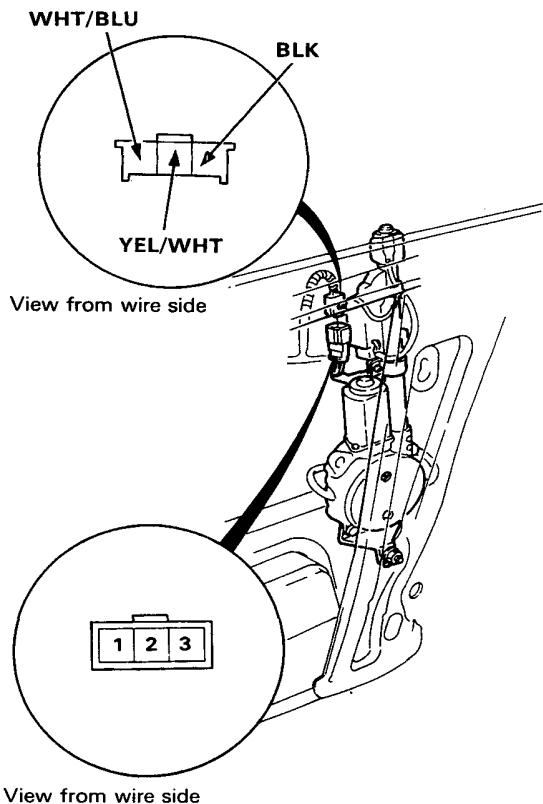

5. If the motor fails to operate properly, replace it.

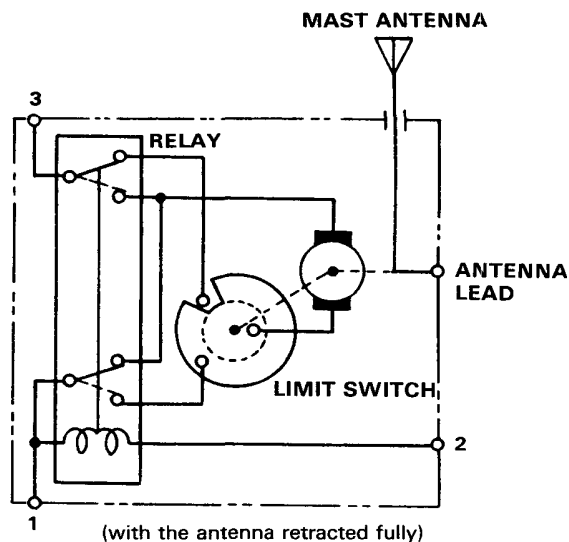





Rear Speaker Replacement

1. Open the tailgate and pry the speaker grille off.
2. Remove the 4 screws and disconnect the connector (S).

Right/Left Speaker:

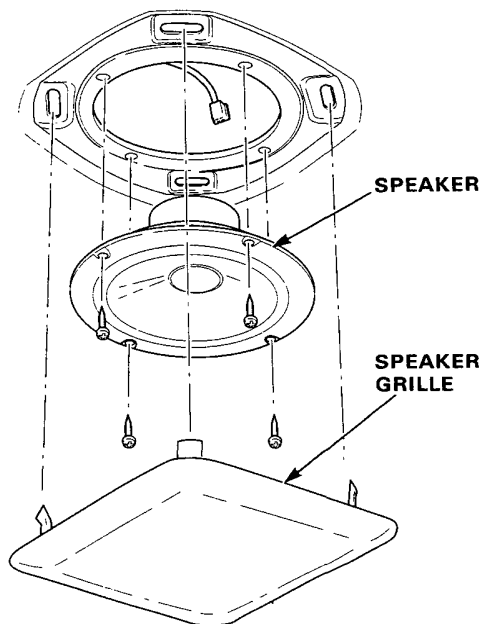

Woofer Speaker:

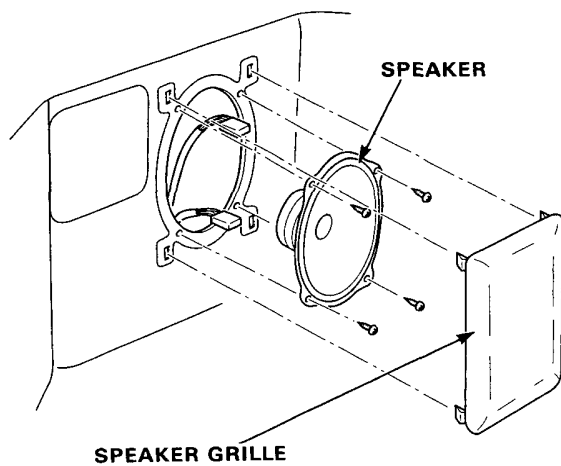


Power Door Locks

Component Location Index


NOTE: RHD type is symmetrical to LHD type.

- FRONT PASSENGER'S DOOR KEY CYLINDER SWITCH
Test, page 16-23
- IGNITION KEY SWITCH
Test, page 16-24

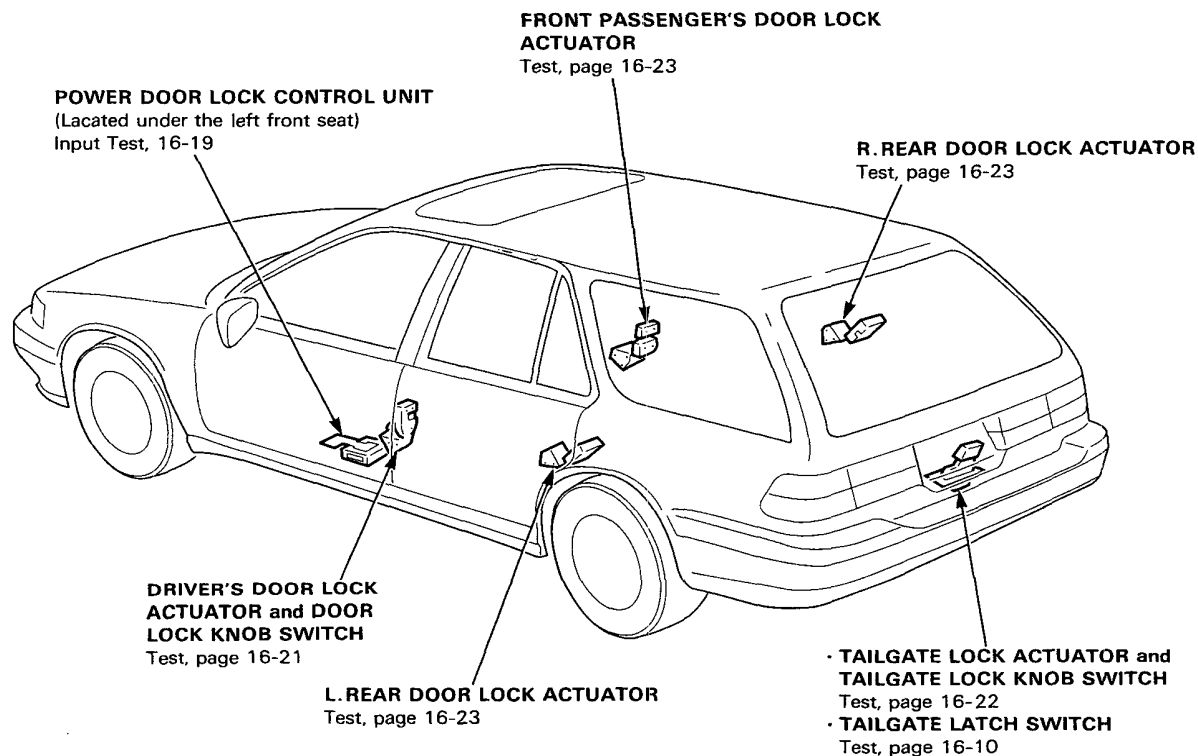



Circuit Diagram

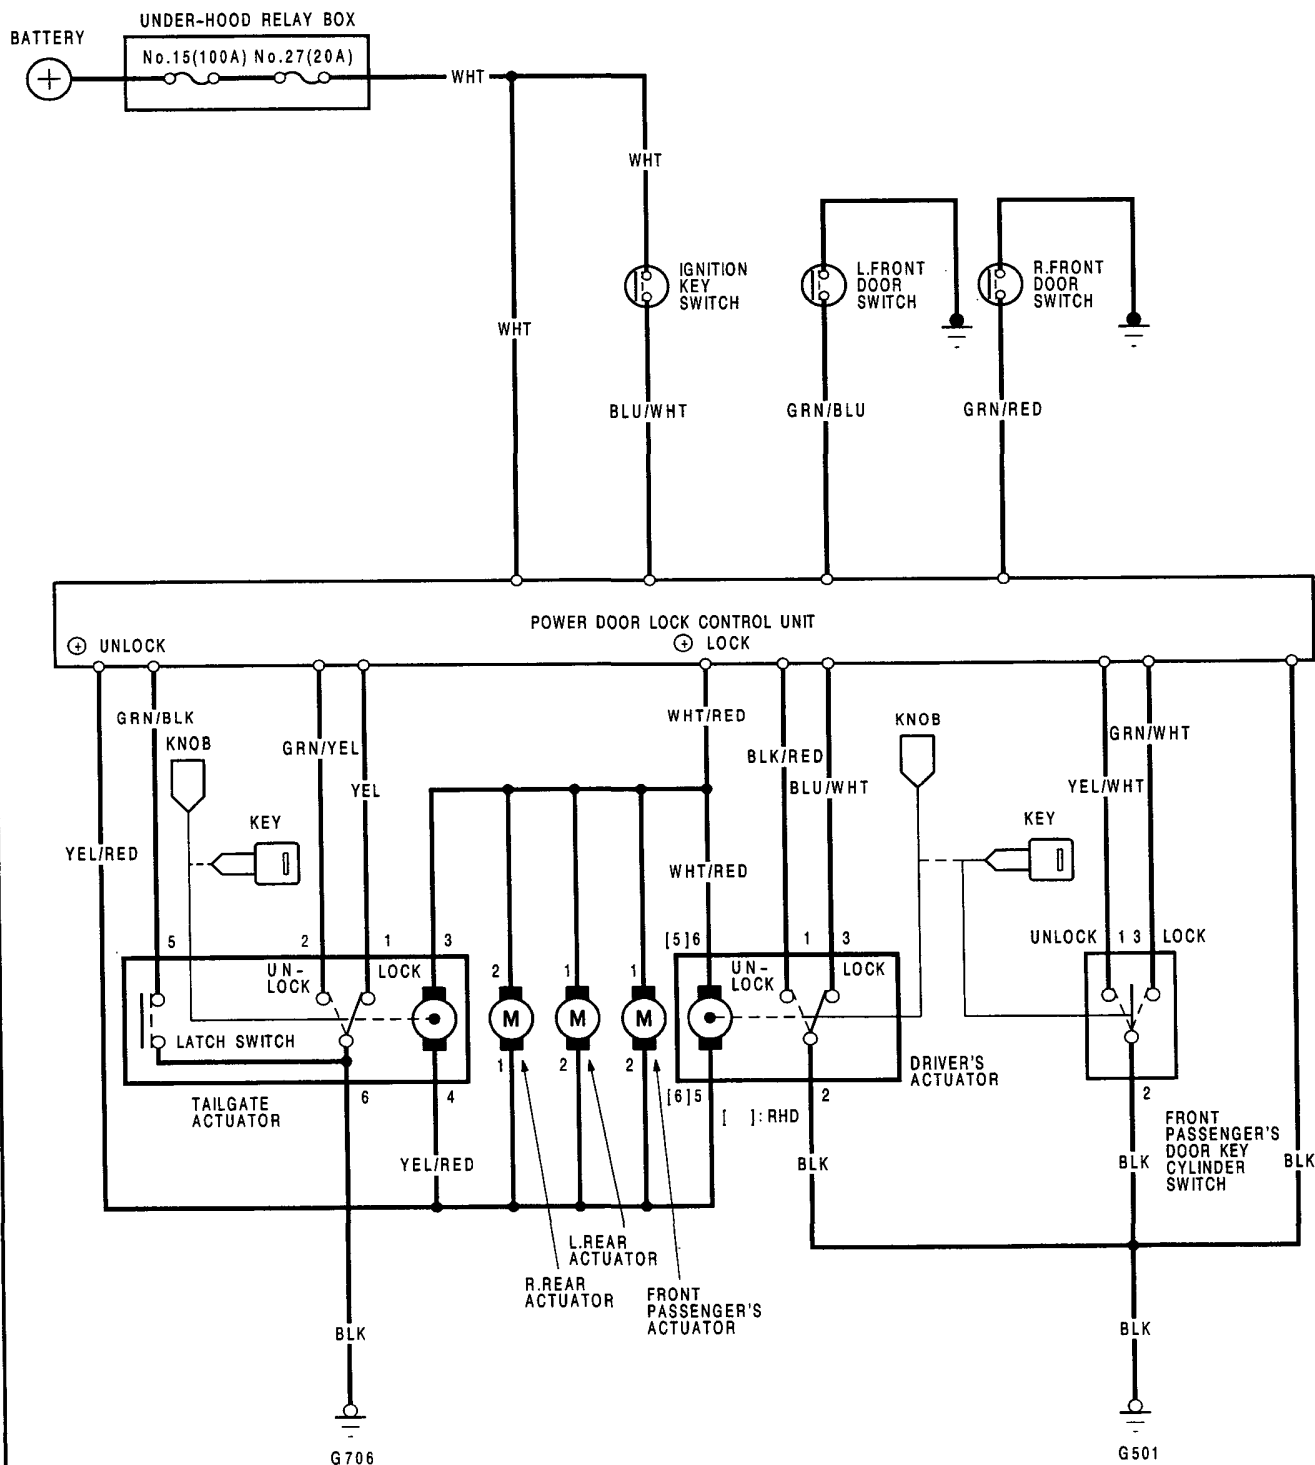

Power Door Locks

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Symptom		Item to be inspected	Blown No. 27 (20 A) fuse (in the under-hood relay box)	Door lock knob switch (in the driver's door lock actuator)	Control unit input	Passenger's door actuators	Disconnected or obstructed door lock rod/linkage	Front passenger's door key cylinder switch.	Tailgate lock knob switch	Poor ground	Open circuit in wires or loose or disconnected terminals
Power door lock system does not operate at all			1		2					G501	WHT
Doors do not lock or unlock with driver's door lock knob switch.	All passenger's doors.			1	3		2			G501	BLU/WHT
	One or more passenger's doors.					1					YEL/RED or WHT/RED
Doors do not lock or unlock with front passen- ger's door key cylinder switch.	All doors.				3		2	1		G501	GRN/WHT or YEL/WHT
	One or more doors.					1					YEL/RED or WHT/RED
Doors do not lock or unlock with tailgate lock knob switch.	All doors.				3		2		1	G706	GRN/ YEL or YEL
	One or more doors.					1					YEL/RED or YEL/WHT


CAUTION: To prevent damage to the motor,
apply battery voltage momentarily.



Control Unit Input Test

Slide the left front seat forward to disconnect the 10-P and 14-P connectors from the control unit.
Make the following input test at the connector terminals.

NOTE: Recheck the connections between the 10-P, 14-P connectors and the control unit, then replace the control unit if all input tests prove OK.

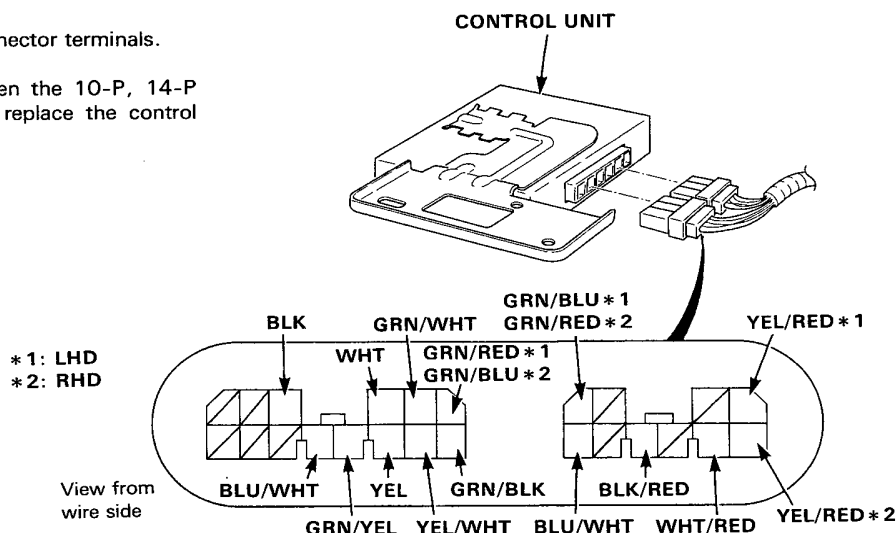


No.	Terminal	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	BLK	Under all conditions.	Check for continuity to ground: should be continuity.	• Poor ground (G501). • An open in the wire.
2	WHT	Under all conditions.	Check for voltage to ground: should be battery voltage.	• Blown No.27 (20 A) fuse. • An open in the wire.
3	BLU/WHT	Driver's door lock knob in LOCK.	Check for continuity to ground: should be continuity.	• Faulty door lock knob switch. • Poor ground (G501). • An open in the wire.
4	BLK/RED	Driver's door lock knob in UNLOCK.		
5	YEL/RED and WHT/RED	Connect the WHT terminal to the WHT/RED terminal, and the YEL/RED terminal to the BLK terminal momentarily.	Check door lock operation: all doors should lock as the battery is connected momentarily.	• Faulty actuators. • An open in the wire.
		Connect the WHT terminal to the YEL/RED terminal, and the WHT/RED terminal to the BLK terminal momentarily.	Check door lock operation: all doors should unlock as the battery is connected momentarily.	

CAUTION: To prevent damage to the motor, apply battery voltage momentarily.

(cont'd)

Power Door Locks

Control Unit Input Test (cont'd)

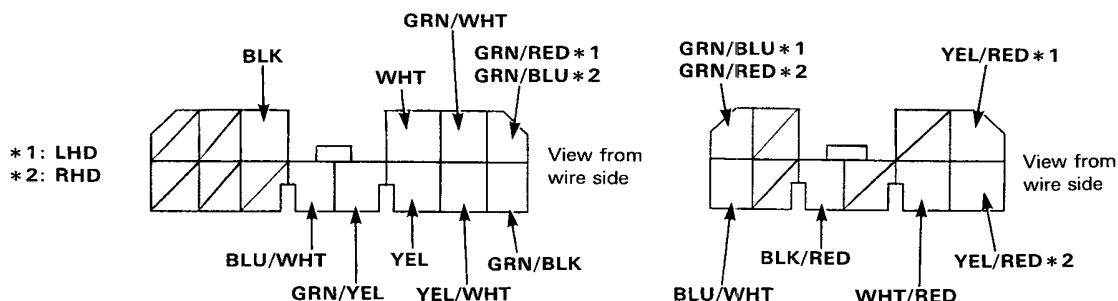

No.	Terminal	Test condition	Test: desired result	Possible cause (if result is not obtained)
6	YEL	Tailgate lock knob in LOCK.	Check for continuity to ground: should be continuity.	- Faulty tailgate lock knob switch. - Poor ground (G706). - An open in the wire.
7	GRN/YEL	Tailgate lock knob in UNLOCK.		
8	GRN/BLK	Tailgate opened.	Check for continuity to ground: should be continuity. NOTE: Before testing, remove the No.22 (15A) fuse.	- Faulty tailgate latch switch. - Poor ground (G706). - An open in the wire.
9	GRN/WHT	Front passenger's door key cylinder in LOCK.	Check for continuity to ground: should be continuity. NOTE: Before testing, remove the No.22 (15A) fuse.	- Faulty passenger's door key cylinder switch. - Poor ground (G501). - An open in the wire.
10	YEL/WHT	Front passenger's door key cylinder in UNLOCK.		
11	GRN/BLU	L. front door opened.	Check for continuity to ground: should be continuity. NOTE: Before testing, remove the No.22 (15A) fuse.	- Faulty door switch. - An open in the wire.
12	GRN/RED	R. front door opened.		
13	BLU/WHT	Ignition key turned from "II" to "O" position.	Check for voltage to ground: should be battery voltage when the ignition key is turned from "II" to "O" position and no voltage when it is removed.	- Blown No.22 (15A) fuse. - Faulty ignition key switch. - An open in the wire.




Driver's Door Actuator Test

1. Remove the door trim panel.
2. Disconnect the connectors from the actuator.
3. Test actuator operation by connecting battery voltage to the No. 5 and No. 6 terminals.
Test the actuator in each direction, by switching the leads from the battery.

CAUTION: To prevent damage to the motor, apply battery voltage momentarily.


NOTE: LHD type is shown; RHD type is similar.

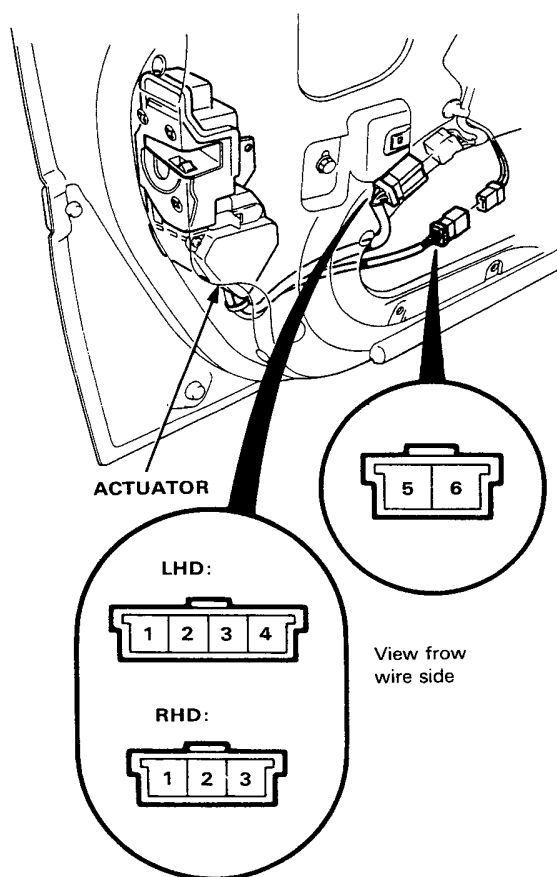

4. If the actuator fails to operate properly, replace it.

5. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	1	2	3
LOCK		○	○
UNLOCK	○	○	

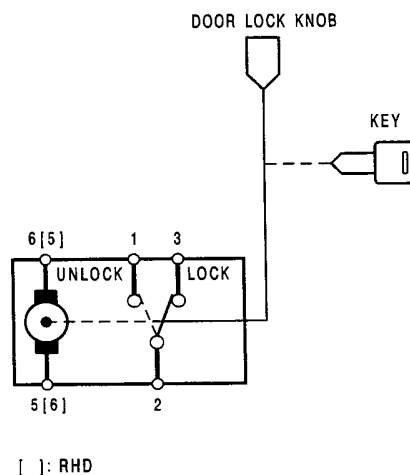


Power Door Locks

Tailgate Actuator Test


1. Open the tailgate and remove the tailgate trim panel.
2. Disconnect the 4-P and 2-P connectors from the actuator.
3. Test actuator operation by connecting battery voltage to the No. 5 and No. 6 terminals. Test the actuator in each direction, by switching the leads from the battery.

CAUTION: To prevent damage to the motor, apply battery voltage momentarily.

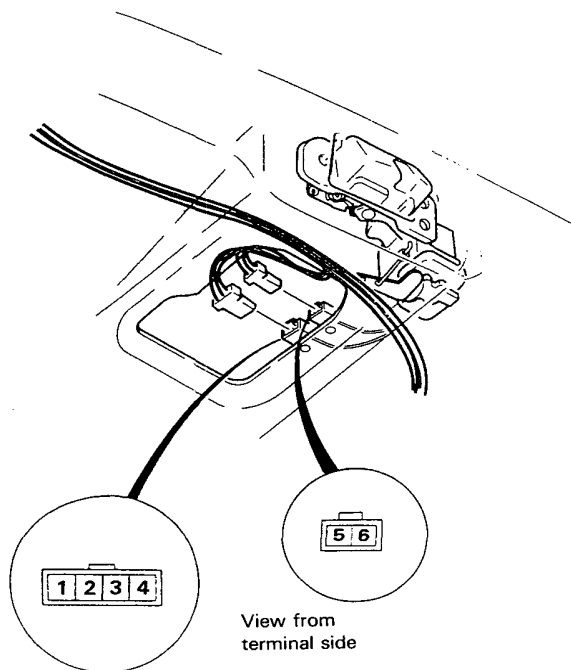

5. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	1	2	6
LOCK	○		○
UNLOCK		○	○

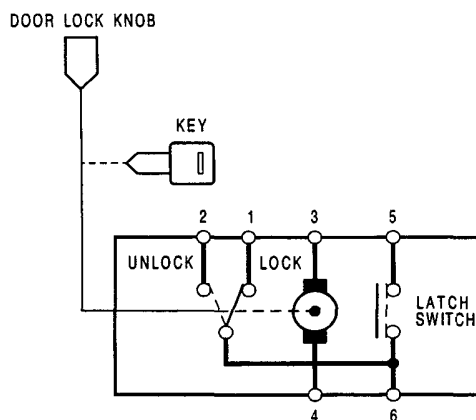

4. If the actuator fails to operate properly, replace it.




Passenger's Door Actuator Test

1. Remove the door trim panel.
2. Disconnect the 2-P connector from the actuator.
3. Test actuator operation by connecting battery voltage to the No. 1 and No. 2 terminals.
Test the actuator in each direction, by switching the leads from the battery.

CAUTION: To prevent damage to the motor, apply battery voltage momentarily.

NOTE: Right front actuator is shown; rear actuators are similar.

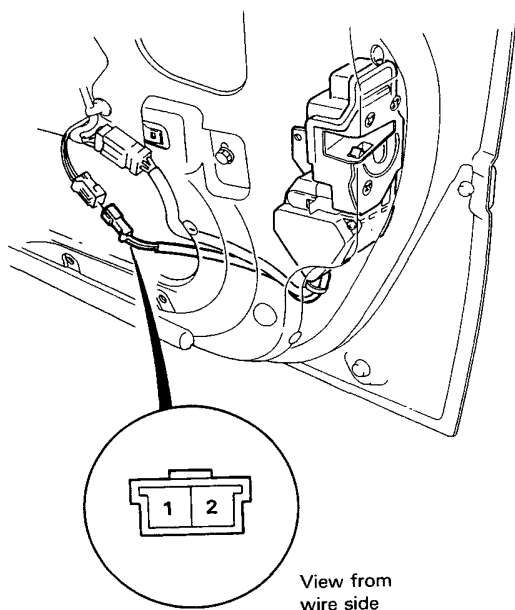


4. If the actuator fails to operate properly, replace it.

Door Key Cylinder Switch Test

1. Remove the front passenger's door trim panel.
2. Disconnect the 3-P connector of the key cylinder switch.
3. Check for continuity between the terminals in each switch position according to the table.



Terminal Position	1	2	3
UNLOCK		○	○
LOCK	○	○	

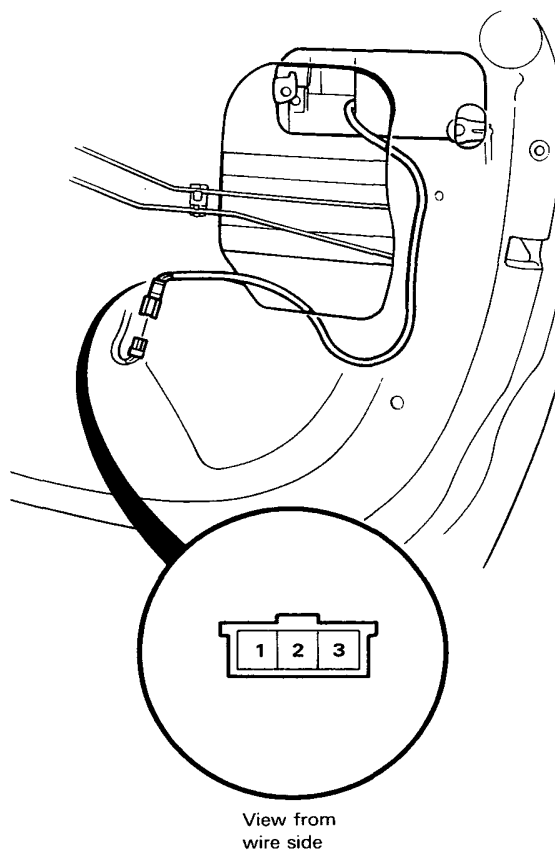

Power Door Locks

Ignition Key Switch Test

1. Remove the instrument lower panel, then disconnect the 6-P connector from the main wire harness.
2. There should be continuity between the A and B terminals when the ignition switch is turned from "II" to "O" position.
There should be no continuity when the ignition key is removed.

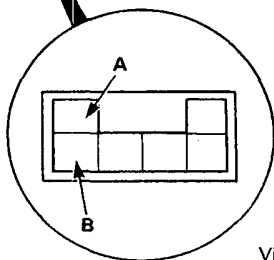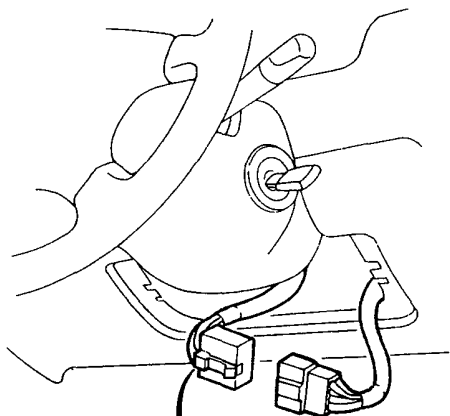


View from
wire side




Rear Wiper/Washer

Component Location Index

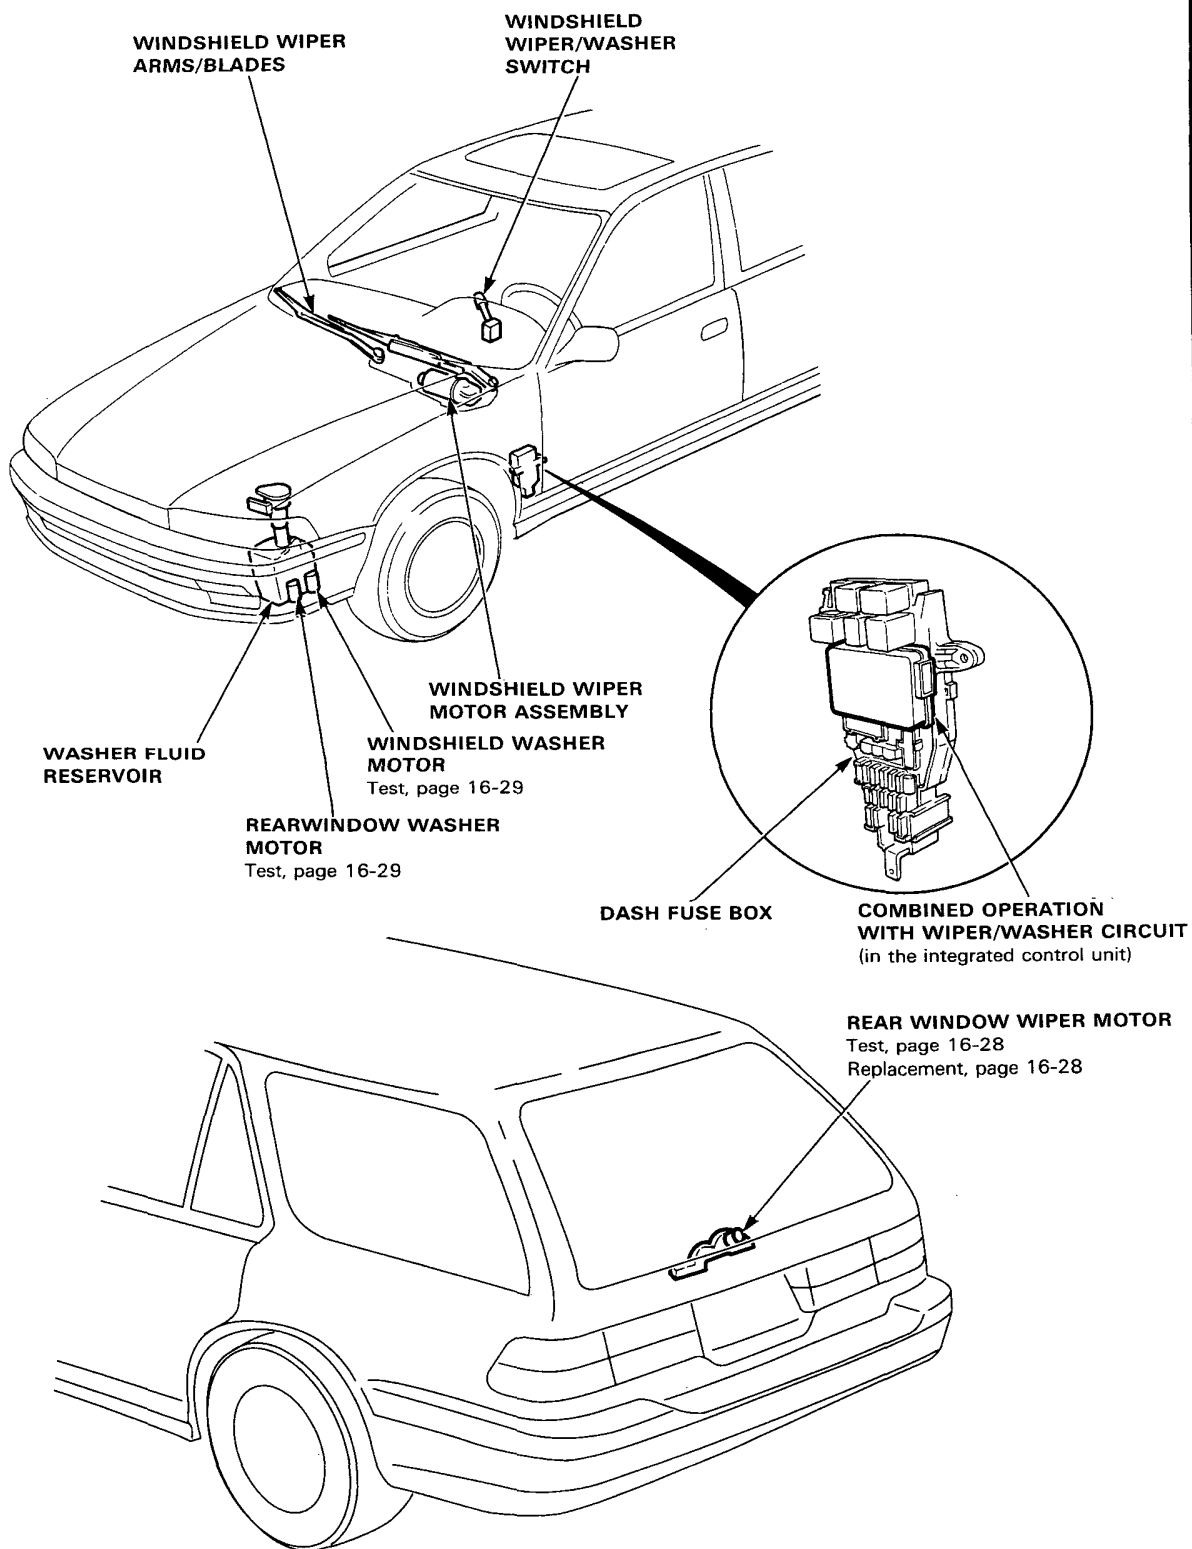


Circuit Diagram





Wiper/Washer Switch Test

1. Remove the dashboard lower panel and knee bolster.
2. Disconnect the 7-P connector from the main wire harness.
3. Check for continuity between the terminals in each switch position according to the table.

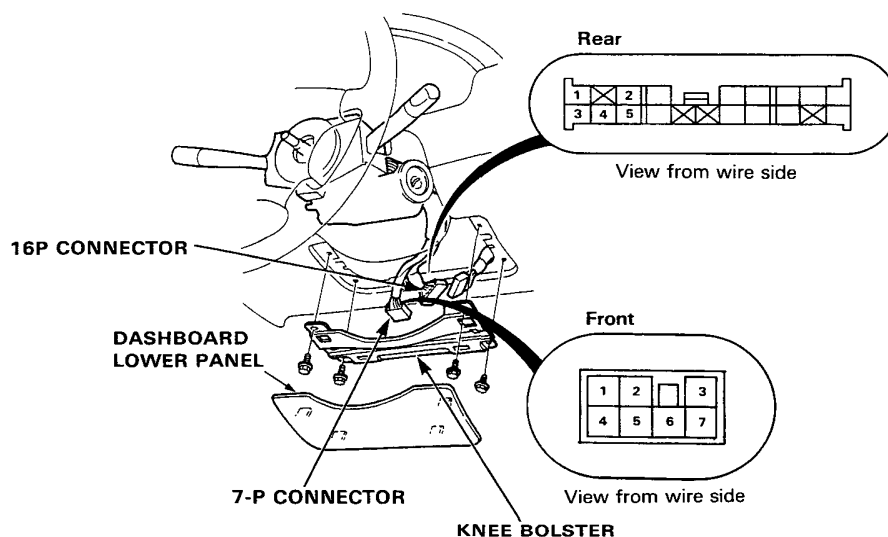

Front

Terminal	1	2	3	4	5	6	7
Position							
OFF					○		○
INT		○	○		○		○
LO	○						○
HI	○			○			
Mist switch "ON"	○			○			
Washer switch "ON"		○				○	

Rear


Terminal	1	2	3	4	5
Position					
Washer Switch "ON"	○	○		○	○
OFF				○	○
ON			○		○
Washer Switch "ON"	○	○	○		○

Rear Wiper/Washer


Wiper Motor Test

1. Remove the tailgate trim panel, then disconnect the 4-P connector.
2. Test wiper motor operation by connecting battery positive wire to No. 1 terminal and battery negative wire to No. 2 terminal. If the motor fails to run smoothly, replace it.
3. While running the motor, check the voltages between the terminals according to the table.

1	4	2	
○	○		voltage should
	○	○	be between 5-10V

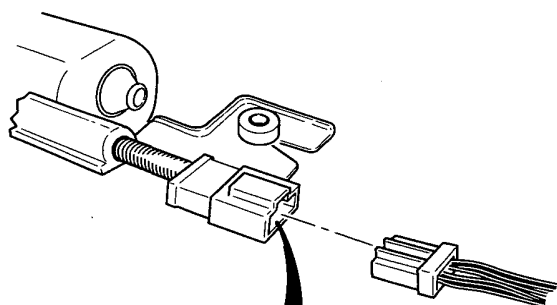


View from
terminal side

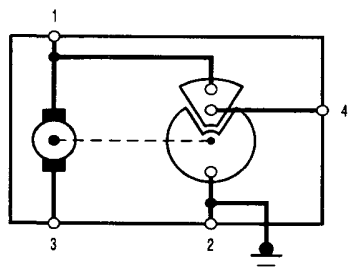


Wiper Motor Replacement

1. Remove the tailgate trim panel.
2. Remove the trim cover, outer nut, wiper arm, pivot cap, inner nut, washer, and rubber seal as shown below.

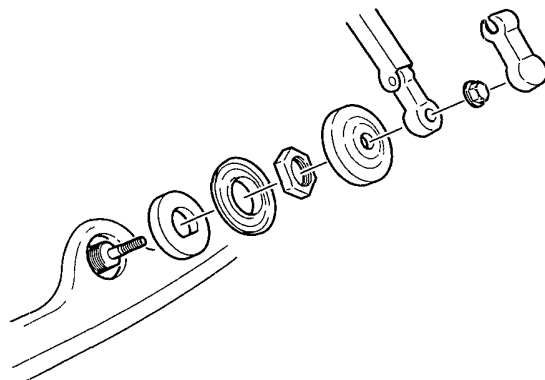


3. Disconnect the 4-P connector from the wiper motor.
4. Remove the three mounting bolts and the wiper motor assembly.

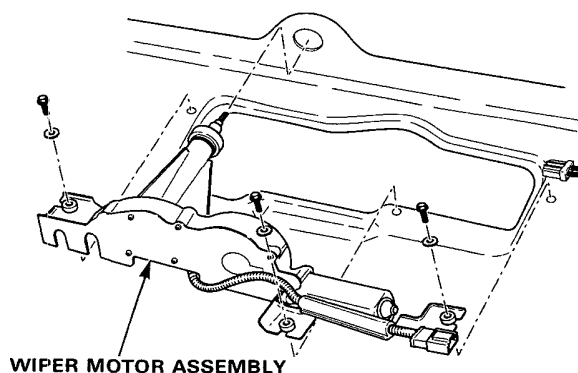



Washer Motors Test

1. Remove the front bumper and disconnect the 2-P connectors from the washer motors.
2. Test the washer motors operation by connecting battery positive to the $\oplus$ terminal and negative to the $\ominus$ terminal.

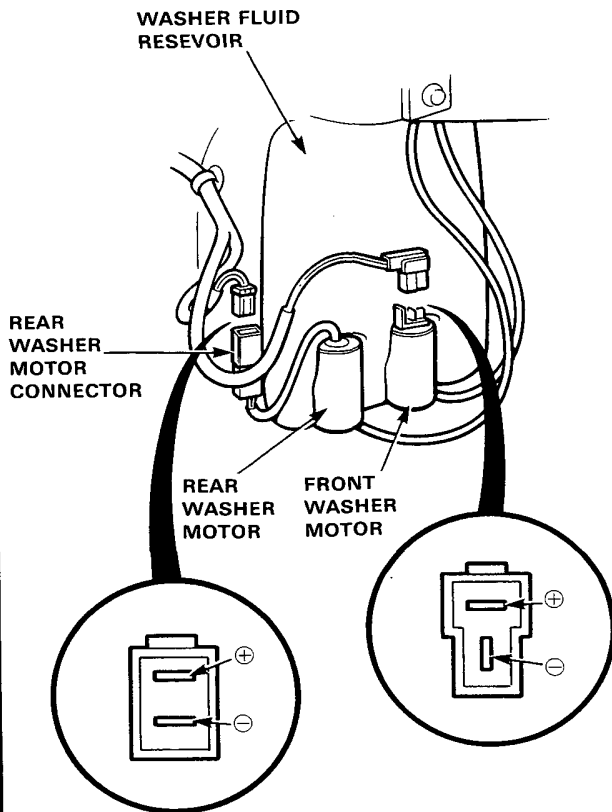

- If the motors fail to run smoothly or are not running, replace them.
- If the motors run smoothly, but there is not enough fluid pumped, check for disconnected, blocked or damaged washer hoses.

INTRODUCTION

How to Use This Manual

This supplement contains information for the 1991 ACCORD AERO DECK.

Refer to following shop manuals for service procedures and data not included in this supplement.

Description	Code No.
ACCORD CHASSIS Maintenance and Repair 90	62SM400
ACCORD SUPPLEMENT 91	62SM420
F18A/F20A/F22A ENGINE Maintenance and Repair	62PT400
H2 MANUAL TRANSMISSION Maintenance and Repair	62PX500
PX4B AUTOMATIC TRANSMISSION Maintenance and Repair	62PX400

The first page of each section is marked with a black tab that lines up with one of the thumb index tabs on this page. You can quickly find the first page of each section without looking through a full table of contents. The symbols printed at the top corner of each page can also be used as a quick reference system.

Special Information

⚠ WARNING Indicates a strong possibility of severe personal injury or loss of life if instructions are not followed.

CAUTION: Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTE: Gives helpful information.

CAUTION: Detailed descriptions of *standard* workshop procedures, safety principles and service operations are not included. Please note that this manual does contain warnings and cautions against some specific service methods which could cause **PERSONAL INJURY**, or could damage a vehicle or make it unsafe. Please understand that these warnings cannot cover all conceivable ways in which service, whether or not recommended by Honda, might be done, or of the possible hazardous consequences of each conceivable way, nor could Honda investigate all such ways. Anyone using service procedures or tools, whether or not recommended by Honda, *must satisfy himself thoroughly* that neither personal safety nor vehicle safety will be jeopardized.

All information contained in this manual is based on the latest product information available at the time of printing. We reserve the right to make changes at any time without notice. No part of this publication may be reproduced, stored in retrieval system, or transmitted, in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher. This includes text, figures and tables.

*(Asterisk) marked sections are not included in this manual.

First Edition 3/91 174 pages.

All Rights Reserved

HONDA MOTOR CO., LTD.
Service Publication Office

General Info



Special Tools



Specifications

specs

Maintenance



Engine



Fuel and Emissions




Transaxle



Steering*



Suspension*




Brakes*



Body



Washer and Air Conditioning



Electrical

