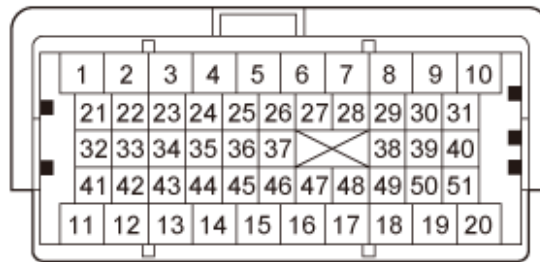



PCM CVT Control System PCM Connector for Inputs and Outputs**PCM Inputs and Outputs at Connector A □ (51P)**

Terminal side of female terminals

Terminal number	Wire color	Terminal name	Description	Signal
1	BLU	IG1_MISS_SOL (POWER SOURCE FOR SOLENOID VALVES)	Power source for solenoid valves	With ignition switch ON (II)/vehicle in ON mode: battery voltage
3	WHT	F_CAN-H (CAN COMMUNICATION SIGNAL HIGH)	Sends and receives communication signal	With ignition switch ON (II)/vehicle in ON mode: pulses
4	RED	F_CAN-L (CAN COMMUNICATION SIGNAL LOW)	Sends and receives communication signal	With ignition switch ON (II)/vehicle in ON mode: pulses
7	GRN	FI_MAIN_RLY_CL- (PGM-FI MAIN RELAY 1)	Drives PGM-FI main relay 1	With ignition switch ON (II)/vehicle in ON mode: about 0 V With ignition switch LOCK (0)/vehicle in OFF mode: battery voltage
9	ORN	FI_MAIN_RLY_OUT (POWER SOURCE)	Power source for PCM	With ignition switch ON (II)/vehicle in ON mode: battery voltage
13	LT GRN	STOP_SW (BRAKE PEDAL POSITION SWITCH)	Detects brake pedal position switch signal	With brake pedal released: about 0 V With brake pedal pressed: battery voltage
18*	PUR	PADDLE_SW_UP (PADDLE SHIFTER + (UPSHIFT SWITCH))	Detects paddle shifter + (upshift switch) signal	With ignition switch ON (II)/vehicle in ON mode and paddle shifter + (upshift switch) pressed: about 0 V With ignition switch ON (II)/vehicle in ON mode and paddle shifter + (upshift switch) released: battery voltage
19*	GRN	PADDLE_SW_DOWN (PADDLE SHIFTER - (DOWNSHIFT SWITCH))	Detects paddle shifter - (downshift switch) signal	With ignition switch ON (II)/vehicle in ON mode and paddle shifter - (downshift switch) pressed: about 0 V With ignition switch ON (II)/vehicle in ON mode and paddle shifter - (downshift switch) released: battery voltage
21	PNK	SHIFT_LOCK_SOL (SHIFT LOCK SOLENOID)	Drives shift lock solenoid	With ignition switch ON (II)/vehicle in ON mode, in P, brake pedal pressed, and accelerator pedal released: about 0 V
44	BRN	SCS (SERVICE CHECK SIGNAL)	Detects service check signal	With service check signal shorted with the HDS: about 0 V With service check signal opened: about 5.0 V

*: With paddle shifter

PCM Inputs and Outputs at Connector B △ (51P)

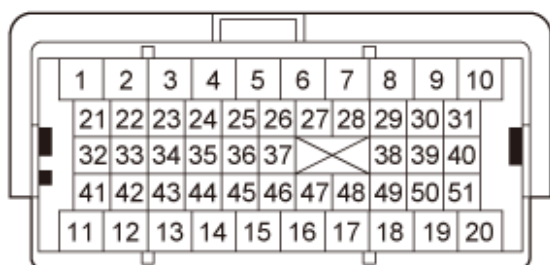

Terminal side of female terminals


Terminal number	Wire color	Terminal name	Description	Signal
1	BLK	PG(GND1) (PCM GROUND)	Ground for PCM	Less than 0.2 V at all times
3	BLK/YEL	IG1(F/PUMP) (IGNITION SIGNAL)	Detects ignition signal	With ignition switch ON (II)/vehicle in ON mode: battery voltage
4	GRN	LCCLS (CVT LOCKUP CLUTCH CONTROL SOLENOID VALVE)	Drives CVT lock-up clutch control solenoid valve	With ignition switch ON (II)/vehicle in ON mode: duty controlled
5	GRN/YEL	SG2 (SENSOR GROUND)	Sensor ground	Less than 0.2 V at all times
6	RED/BLK	CPCLS (CVT CLUTCH PRESSURE CONTROL SOLENOID VALVE)	Drives CVT clutch pressure control solenoid valve	With ignition switch ON (II)/vehicle in ON mode: duty controlled
7	GRN	DNLS (CVT DRIVEN PULLEY PRESSURE CONTROL SOLENOID VALVE)	Drives CVT driven pulley pressure control solenoid valve	With ignition switch ON (II)/vehicle in ON mode: pulses
8	WHT/RED	VEL_DD (CVT SPEED SENSOR)	Detects CVT speed sensor signal	With ignition switch ON (II)/vehicle in ON mode and when vehicle is stopped: about 0 V, or about 5.0 V Depending on front wheel rotation: pulses (about 2.5 V)
9	RED/YEL	TATF (TRANSMISSION FLUID TEMPERATURE SENSOR)	Detects transmission fluid temperature sensor signal	With ignition switch ON (II)/vehicle in ON mode: about 0.2—4.8 V (about 1.8 V with warmed up engine, depending on transmission fluid temperature)
10	BRN/WHT	DRLS (CVT DRIVE PULLEY PRESSURE CONTROL SOLENOID VALVE)	Drives CVT drive pulley pressure control solenoid valve	With ignition switch ON (II)/vehicle in ON mode: pulses
12	GRN/WHT	SOL_B (SHIFT SOLENOID VALVE B)	Drives shift solenoid valve B	With ignition switch ON (II)/vehicle in ON mode: ● In D, S, and L at normal driving: battery voltage ● In D, S, and L at idle: about 0 V
21	BLU/BLK	ATP_P (TRANSMISSION RANGE SWITCH P POSITION)	Detects transmission range switch P position signal	With ignition switch ON (II)/vehicle in ON mode: ● In P: about 0 V ● In any position other than P: more than 5.0 V
22	WHT/GRN	ATP_R (TRANSMISSION RANGE SWITCH R POSITION)	Detects transmission range switch R position signal	With ignition switch ON (II)/vehicle in ON mode: ● In R: about 0 V ● In any position other than R: battery voltage
29	YEL/BLU	VCC2 (SENSOR VOLTAGE)	Provides sensor reference voltage	With ignition switch ON (II)/vehicle in ON mode: about 5.0 V

*: With paddle shifter

Terminal number	Wire color	Terminal name	Description	Signal
39	BLU/RED	PDN (CVT DRIVEN PULLEY PRESSURE SENSOR)	Detects CVT driven pulley pressure sensor signal	Driven pulley fluid pressure 0 kPa: about 0.5 V Driven pulley fluid pressure 2,000 kPa: about 4.5 V
41	YEL/RED	VCC1 (SENSOR VOLTAGE)	Provides sensor reference voltage	With ignition switch ON (II)/vehicle in ON mode: about 5.0 V
44	RED/BLU	NDR (CVT DRIVE PULLEY SPEED SENSOR)	Detects CVT drive pulley speed sensor signal	With ignition switch ON (II)/vehicle in ON mode: about 0 V or about 5.0 V Depending on front wheel rotation: pulses (about 2.5 V)
45	RED/WHT	NT (TORQUE CONVERTER TURBINE SPEED SENSOR)	Detects torque converter turbine speed sensor signal	With ignition switch ON (II)/vehicle in ON mode: about 0 V or 5.0 V
46	YEL/GRN	ATP_D (TRANSMISSION RANGE SWITCH D POSITION)	Detects transmission range switch D position signal	With ignition switch ON (II)/vehicle in ON mode: ● In D: about 0 V ● In any position other than D: battery voltage
47	BRN	ATP_L (TRANSMISSION RANGE SWITCH L POSITION)	Detects transmission range switch L position signal	With ignition switch ON (II)/vehicle in ON mode: ● In L: about 0 V ● In any position other than L: about 5.0 V
48	YEL	ATP_RVS (TRANSMISSION RANGE SWITCH RVS POSITION)	Detects transmission range switch RVS position signal	With ignition switch ON (II)/vehicle in ON mode: ● In R: about 0 V ● In any position other than R: about 5.0 V
49	RED/BLK	ATP_N (TRANSMISSION RANGE SWITCH N POSITION)	Detects transmission range switch N position signal	With ignition switch ON (II)/vehicle in ON mode: ● In N: about 0 V ● In any position other than N: about 5.0 V
50*	RED/BLK	ATP_S (TRANSMISSION RANGE SWITCH S POSITION)	Sensor ground	Less than 0.2 V at all times
51	BLU/YEL	ATP_FWD (TRANSMISSION RANGE SWITCH FWD POSITION)	Detects transmission range switch FWD position signal	With ignition switch ON (II)/vehicle in ON mode: ● In D, S, and L: about 0 V ● In any position other than D, S, and L: about 5.0 V

*: With paddle shifter

PCM Inputs and Outputs at Connector C ○ (51P)

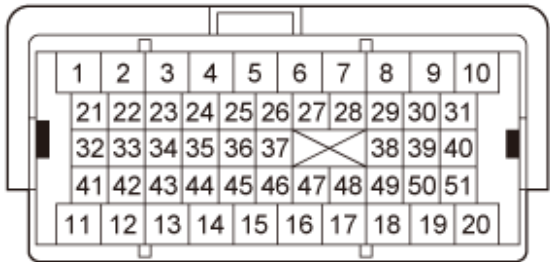

Terminal side of female terminals

Terminal number	Wire color	Terminal name	Description	Signal
20	BRN/YEL	LG(GND2) (LOGIC GROUND)	Ground circuit for PCM	Less than 0.2 V at all times
40	GRN/WHT	SG1 (SENSOR GROUND)	Sensor ground	Less than 0.2 V at all times