
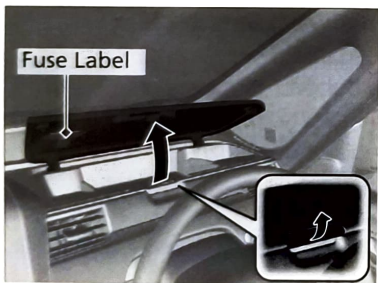


Fuse Locations

If any electrical devices are not working, set the power mode to VEHICLE OFF (LOCK) check to see if any applicable fuse is blown.

■ Engine Compartment Fuse Box Type A

Located on the passenger's side. Push the tabs to open the box.
Fuse locations are shown on the label stored in the upper box.
Locate the fuse in question by the fuse number and label number.

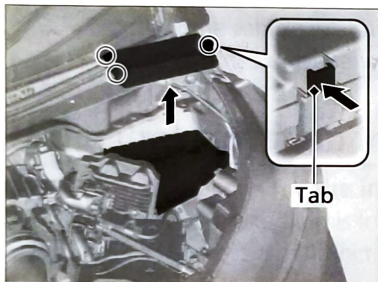


■ Circuit protected and fuse rating

	Circuit Protected	Amps
1 	Headlight Low Beam (Main)	20 A
2 	Contactor	30 A
3 	Hazard	10 A
4 	DBW	15 A
5 	Wiper	30 A
6 	Stop Light	7.5 A
7 	IGP	15 A
8 	Ignition Coil	15 A
9 	EOP	10 A
10 	INJ	20 A
11 -	-	-
12 	Main Fan	30 A
13 	ST MG	30 A
14 	MG Clutch	7.5 A
15 	Battery Sensor	7.5 A
16 -	-	-
17 	-	(10 A)
18 	Horn	10 A

	Circuit Protected	Amps
19 	-	(10 A)
20 -	-	-
21 	Back Up Main	15 A
22 	Interior Lights	7.5 A
23 	Sub Fan	30 A
24 -	-	-
25 	Start DIAG	7.5 A
26 -	-	-
27 -	-	-
28 -	-	-
29 	Back Up	10 A
30 	FI Sub Relay Out	10 A
31 	IGP2 Sub	7.5 A
32 	Left Headlight Low Beam	10 A
33 	Right Headlight Low Beam	10 A


■ Engine Compartment Fuse Box Type B

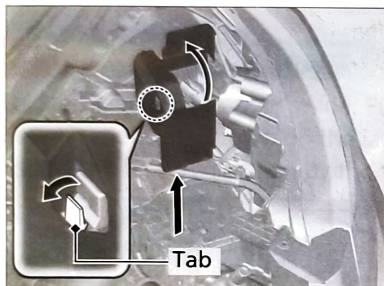

Located next to the battery ⊕ terminal in the engine compartment.


Pull up the cover on the ⊕ terminal, then remove it while pulling out the tab as shown.

Replacement of engine compartment fuses should be done by a dealer.

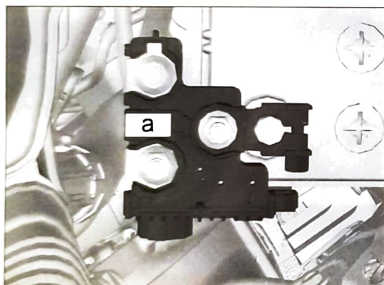

■ Circuit protected and fuse rating


		Circuit Protected	Amps
a		Main	100 A
b		Relay Box Main 1	70 A
c		Relay Box Main 2	80 A
d		BBC	80 A

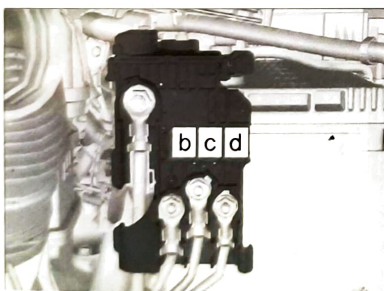


⊗ Engine Compartment Fuse Box Type B

Fuse rating and icon are shown on each fuse cover. Locate the fuse in question by the alphabetical letter shown on the cover and in the figure.

■ Driver's Side Interior Fuse Box Type A

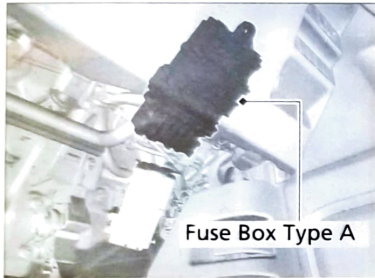

Located under the dashboard.
 Fuse locations are shown on the label stored
 in the upper box.
 Locate the fuse in question by the fuse
 number and label number.

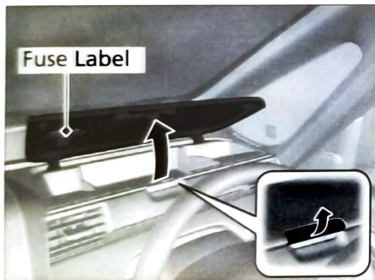


■ **Circuit protected and fuse rating**

	Circuit Protected	Amps
1 	Door Lock	20 A
2 -	-	-
3 	Smart	10 A
4 	Left Side Door Unlock	10 A
5 	Right Side Door Unlock	15 A
6 -	-	-
7 -	-	-
8 	Driver's Power Window	20 A
9 	Front Passenger's Power Window	20 A
10 	Rear Left Power Window	15 A
11 	Rear Right Power Window	15 A
12 	Passenger's Side Door Lock	10 A
13 	Driver's Side Door Lock	15 A
14 	-	(10 A)
15 	Driver's Side Headlight Hi Beam	10 A
16 -	-	-
17 	Active Cornering Lights*	(10 A)


	Circuit Protected	Amps
18 	-	(7.5 A)
19 	-	(7.5 A)
20 	Driver Side Auto Closer*	(20 A)
21 	Passenger Side Auto Closer	20 A
22 	Washer	15 A
23 	Rear Wiper Main	10 A
24 	A/C	7.5 A
25 -	-	-
26 	STARTER	7.5 A
27 	VSA/ABS	7.5 A
28 	SRS	10 A
29 	Passenger's Side Headlight High Beam	10 A
30 	ACG	10 A
31 	Power Window	10 A
32 	Fuel Pump	15 A
33 -	-	-
34 	Meter	7.5 A
35 	Mission SOL	7.5 A
36 	Accessory Power Socket (Front)	20 A

	Circuit Protected	Amps
37 	Accessory	7.5 A
38 -	-	-
39 	Option	7.5 A
40 	Rear Wiper	10 A
41 -	-	-
42 -	-	-

■ Driver's Side Interior Fuse Box Type B

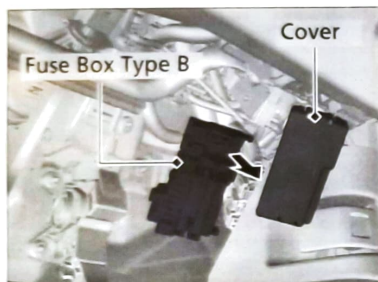

Located under the dashboard. Remove the cover to pull the upper side. Fuse locations are shown on the label stored in the upper box. Locate the fuse in question by the fuse number and label number.



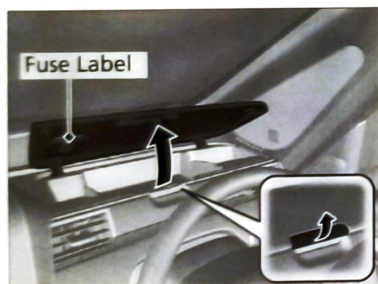


■ Circuit protected and fuse rating

	Circuit Protected	Amps
1	 EPS	70 A
	 Ignition Main	30 A
	 Fuse Box Main 2	50 A
	 ABS/VSA Motor	40 A
	 Fuse Box Main	30 A
	 Fuse Box Main 3	40 A
2	 Driver Side Power Sliding Door Motor*	(30 A)
	 Passenger Side Power Sliding Door Motor	(30 A)
	–	50 A
	 VMP1	(40 A)
	 VMP2	(30 A)
	 VMP2	(40 A)
3	 Heater Motor	30 A
4	 Ignition Main2	30 A
5	 ABS/VSA FSR	30 A
6	 –	(20 A)
7	 Small	10 A
8	 –	(10 A)

	Circuit Protected	Amps
9	 –	(7.5 A)
10	 ACC SOCKET (CONSOLE)	(20 A)
11	 Rear Demister	30 A
12	–	–
13	–	–
14	–	–
15	–	–

Inspecting and Changing Fuses

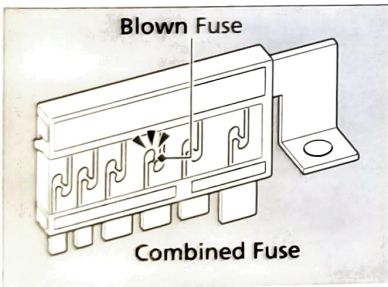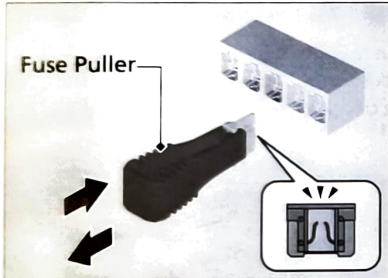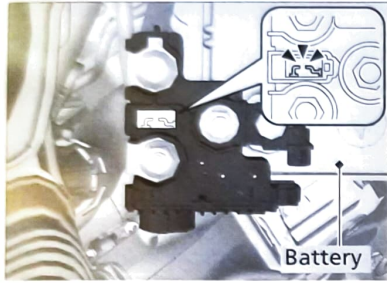

1. Set the power mode to VEHICLE OFF (LOCK). Turn headlights and all accessories off.
2. Check the fuses on the battery in the engine compartment.
 - If the fuse is blown, have it replaced by a dealer.
3. Remove the fuse box cover.
4. Inspect the small fuses in the engine compartment and the vehicle interior.
 - If there is a blown fuse, remove it with the fuse puller and replace it with a new one.
5. Check the large fuse in the driver's side interior fuse box type B.
 - If the fuse is blown, use a Phillips-head screwdriver to remove the screw and replace it with a new one.

► Inspecting and Changing Fuses

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chances of damaging the electrical system.

Replace fuse with a spare fuse of the same specified amperage.

Use the charts to locate the fuse in question and confirm the specified amperage on the fuse label.

► Fuse Locations P. 252

There is a fuse puller on the back of the engine compartment fuse box type A cover.