

Desk Dial · knob cheat sheet

Every screen of the knob with its four buttons (1 = left, 4 = right) and what a hold does.

Turn the knob to browse or set; press a button to act; a lit button marks the knob's current job.

hold 1 (0.6 s) = Home from anywhere



Home

- 1 Music
- 2 Win
- 3 Lights
- 4 Pause

hold 4 (1.0 s) = Knob to lights



Music

- 1 Home
- 2 Recent
- 3 Tracks
- 4 Pause


hold 1 (0.6 s) = Home



Recently Added

- 1 Back
- 2 Full screen
- 3 Playlists
- 4 Play


hold 4 (1.0 s) = Queue
hold 1 (0.6 s) = Home

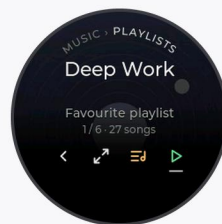

Playlists

- 1 Back
- 2 Full screen
- 3 Recent (lit)
- 4 Play

hold 4 (1.0 s) = Queue
hold 1 (0.6 s) = Home

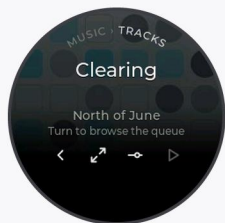

Tracks

- 1 Back
- 2 Up next
- 3 Seek
- 4 Play

hold 1 (0.6 s) = Home



Seek

- 1 Cancel
- 2 Up next
- 3 Set (lit)
- 4 Play

hold 1 (0.6 s) = Home



Up next

- 1 Back
- 2 Shuffle
- 3 Like
- 4 Play

hold 4 (1.0 s) = Play next
hold 1 (0.6 s) = Home



Windows

- 1 Home
- 2 Snap left
- 3 Snap right
- 4 Switch



Lights

- 1 Home
- 2 Scenes
- 3 Temp
- 4 All off

hold 1 (0.6 s) = Home



Colour temperature

- 1 Home
- 2 Scenes
- 3 Temp (lit)
- 4 All off

hold 1 (0.6 s) = Home



Scenes

- 1 Back
- 2 —
- 3 —
- 4 Run

hold 1 (0.6 s) = Home



Onshape

- 1 Tilt
- 2 Orbit
- 3 Undo
- 4 Pan