

Dispatching System User Manual

1. Installation & Environment Requirements

The minimum system configuration required to deploy this system is as follows:

- (1) Operating System (64-bit): Windows 10
- (2) CPU: Intel Core i5 8th generation or above
- (3) RAM: 8GB or above
- (4) Hard Disk Space: At least 20GB free space on C drive
- (5) Display Resolution: 1920*1080 or above
- (6) Network Card: Normal wireless communication with robots
- (7) Browser: Google Chrome or Microsoft Edge recommended

Note: If the customer site requires AI Sky- Eye recognition, the computer must be equipped with an NVIDIA discrete graphics card.


2. System Startup / Shutdown

Open the dispatching system folder

Double- click the Ezhan.exe quick startup program; the quick startup panel will appear

Control system startup and shutdown via Start System and Stop System

	data	2025/8/1 17:59	文件夹	
	envware	2025/8/2 10:26	文件夹	
	nginx	2025/8/2 10:32	文件夹	
	rcs_sdk	2025/8/2 14:26	文件夹	
	redis	2025/8/1 17:59	文件夹	
	__UNI__19086EA_0723151535.apk	2025/8/1 17:32	APK 文件	28,425 KB
	envware.zip	2025/8/1 17:58	压缩(zipped)文件...	604,369 KB
	Ezhan.exe	2025/8/1 17:32	应用程序	8,841 KB
	EzhanRcs.jar	2025/8/1 17:33	Executable Jar File	109,663 KB
	nginx.zip	2025/8/1 17:33	压缩(zipped)文件...	14,864 KB
	rcs_sdk.zip	2025/8/1 17:33	压缩(zipped)文件...	1,125 KB
	sprint_error.bat	2025/8/1 17:33	Windows 批处理...	1 KB
	sprint_log.bat	2025/8/1 17:33	Windows 批处理...	1 KB
	sprint_sdk_log.bat	2025/8/1 17:33	Windows 批处理...	1 KB

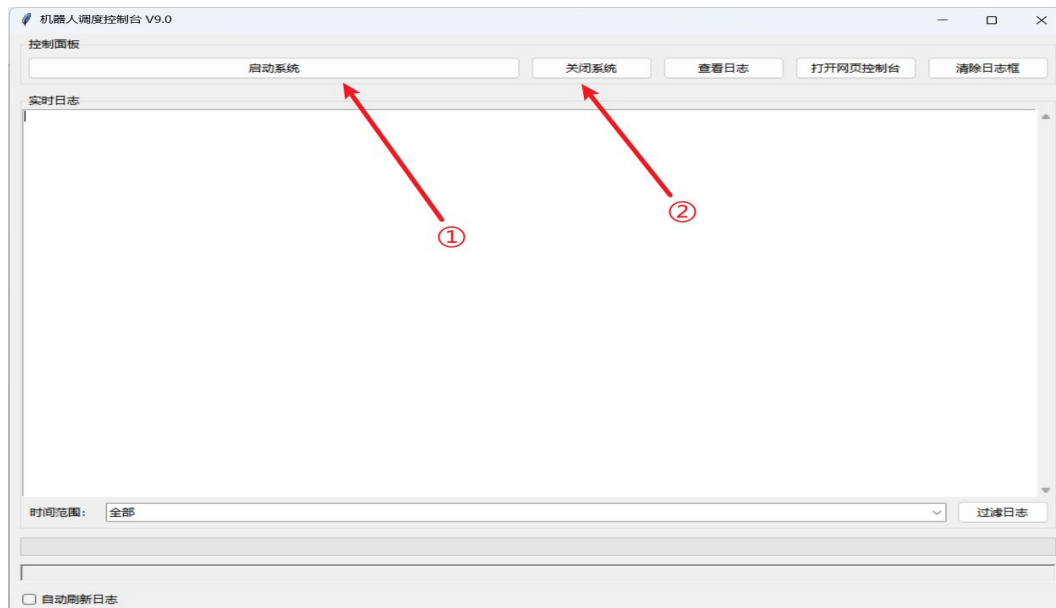


3. System Login

Enter the login URL in the browser: <http://localhost:8080/>

Default account:

Username: admin

Password: admin123

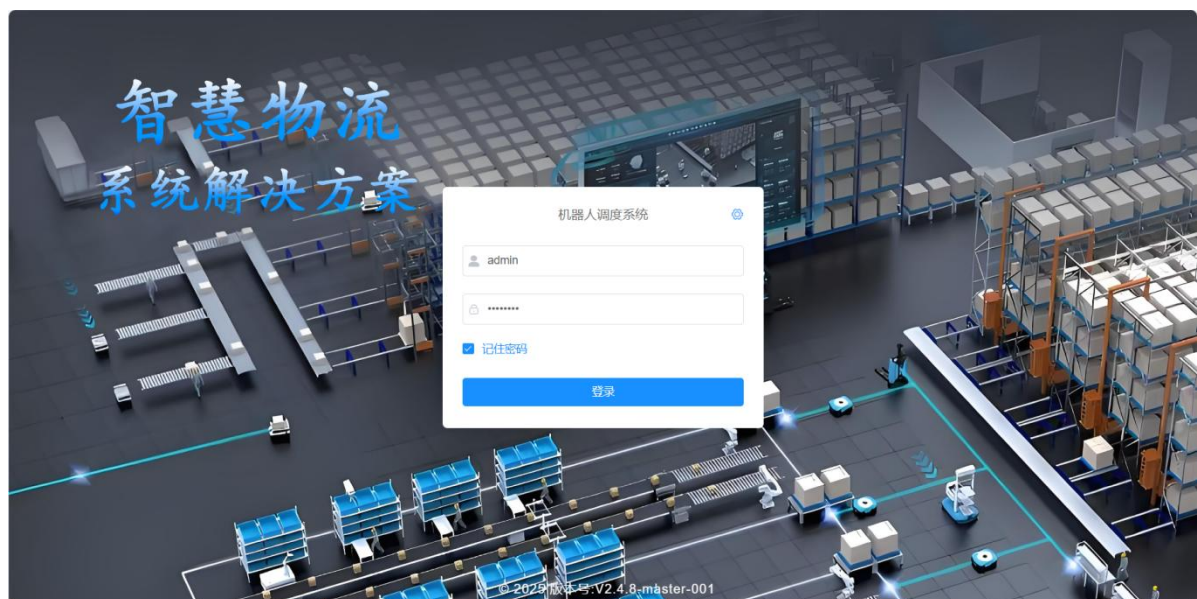


4. Function Usage

4.1 Home Page

The home page is the integrated dashboard for robot dispatching.

- ① Robot list: Real-time display of robots and online status
- ② Click to open task list: Display running and pending tasks in real time
- ③ Robot operation data
- ④ Robot icon on the map: Real-time position display

⑤ Station icon

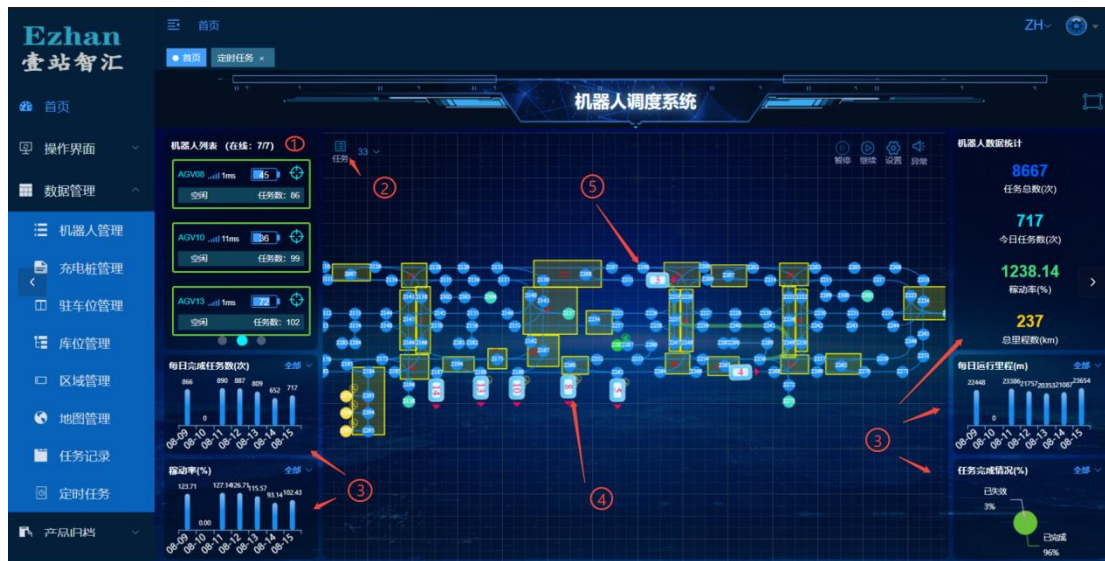

4.2 Task List

Displays running and pending tasks in real time

Click the Task icon to view detailed task data



4.3 Single Point Task

Click the robot card to open the details window (includes Release / Pause)

Enter the target station ID

Click Navigate to Station; the system will generate a single- point task

The robot will automatically move to the target station



4.4 Exception Information

Click the Exception icon to open the exception window


The window displays system exceptions and robot exceptions in real time



4.5 Location Management

Configure pickup/delivery stations for robots in Location Management

Robots can only perform loading/unloading tasks after location stations are configured

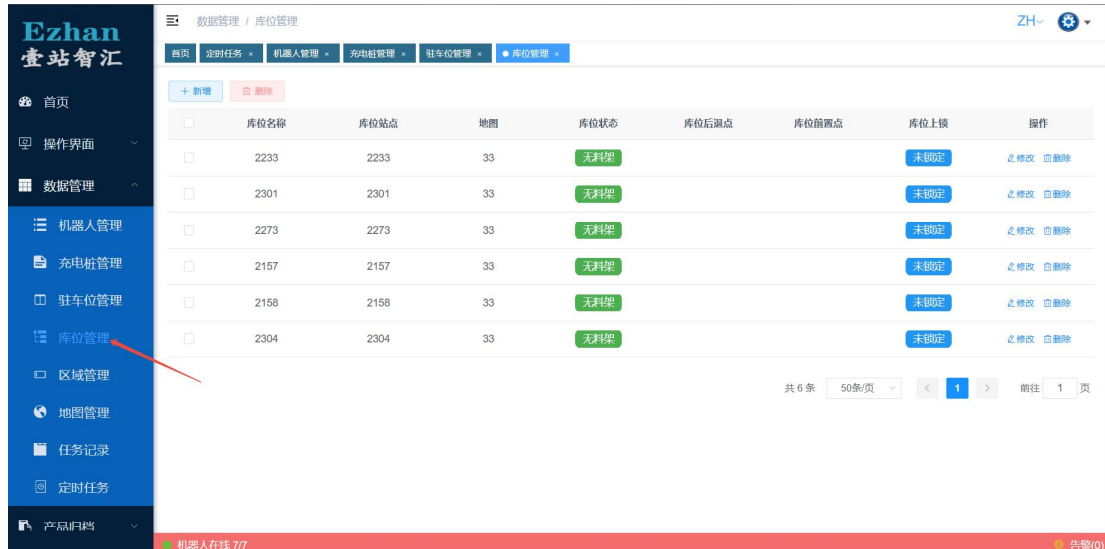

The screenshot shows the 'Ezhan 壹站智汇' web interface. The left sidebar contains navigation options: 首页, 操作界面, 数据管理, 机器人管理, 充电桩管理, 停车位管理, 库位管理 (highlighted with a red arrow), 区域管理, 地图管理, 任务记录, 定时任务, and 产品归档. The main content area is titled '数据管理 / 库位管理'. It features a table with columns: 库位名称, 库位站点, 地图, 库位状态, 库位后视点, 库位前视点, 库位上锁, and 操作. The table lists six rows of data, all with '无料架' (No material rack) status and '未锁定' (Not locked) status. At the bottom right, there is a pagination bar showing '共 6 条' (Total 6 items), '50条/页' (50 items per page), and a page number '1'.

4.6 Robot Management

Add new robots to the system in Robot Management to bring them online

Configure independent charging logic for each robot




The screenshot shows the 'Ezhan 壹站智汇' web interface. The left sidebar is the same as the previous screenshot, but the '机器人管理' (Robot Management) option is highlighted. The main content area is titled '数据管理 / 机器人管理'. It features a table with columns: 名称, 类型, 控制器, 地址, 车体长度, 车体宽度, 车体高度, 最低电量值, 可工作电量值, 闲时充电值, 充满电量值, 充电等待时间, and 停车等待时间. The table lists six rows of data for robots AGV03, AGV04, AGV08, AGV13, AGV14, and AGV05. Each row shows the robot's name, type (双轮驱动), controller (Ezhan-S), address, and various operational parameters. At the bottom right, there is a pagination bar showing '共 6 条' (Total 6 items), '50条/页' (50 items per page), and a page number '1'.

4.7 Charging Pile Management

Configure position information of charging piles


Customize charging pile positions as needed

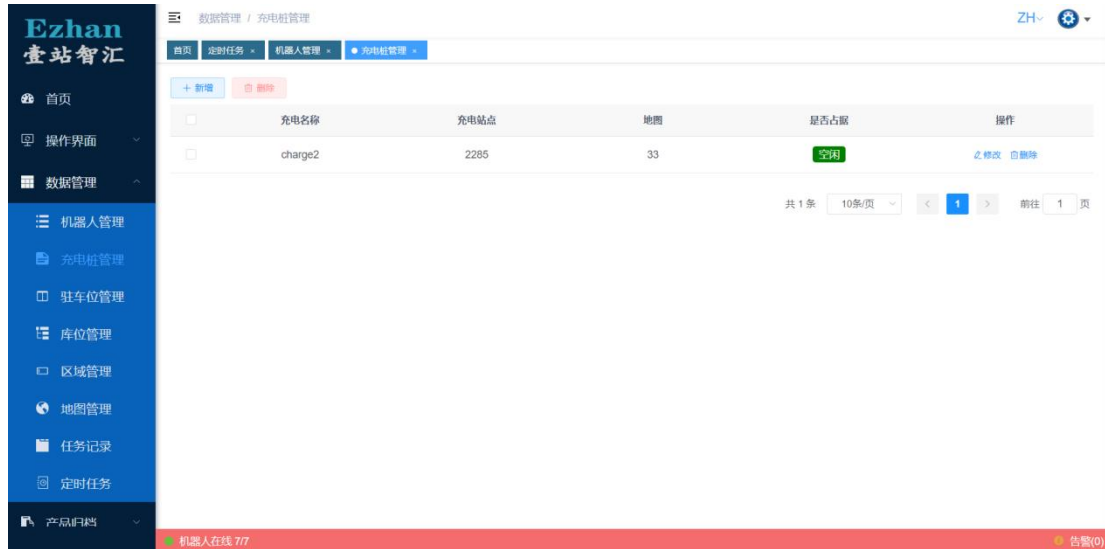

4.8 Parking Point Management


Configure position information of robot parking points

Customize parking positions according to on- site changes

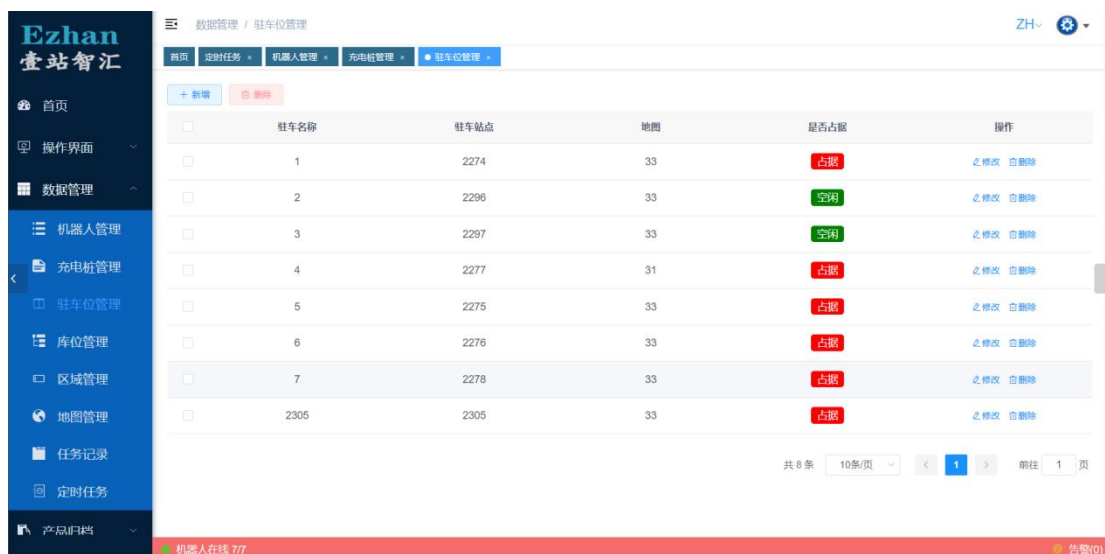

4.9 Area Management

Customize and divide areas (e.g., charging area, parking area) to display on the map.

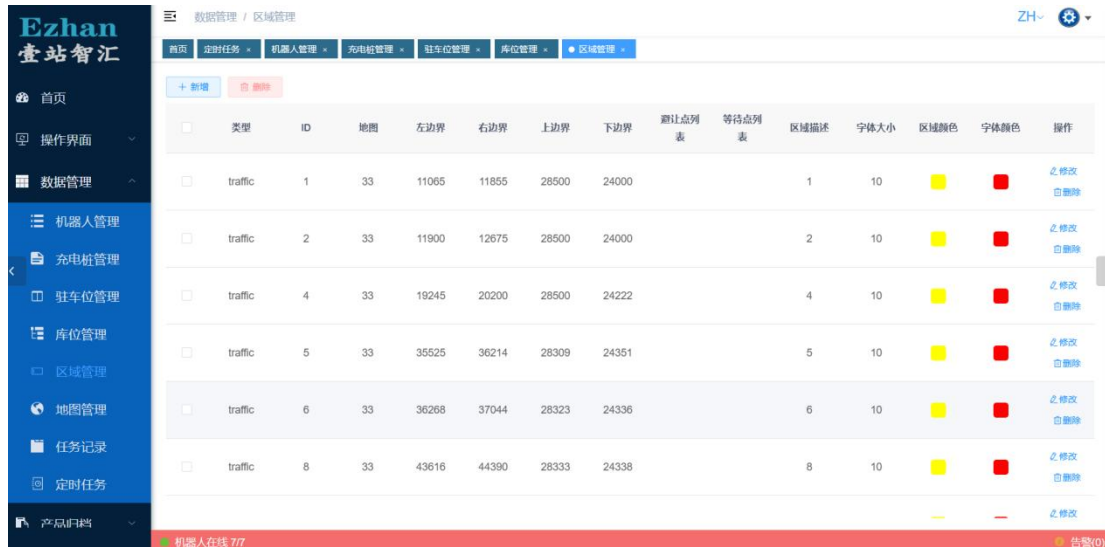

数据管理 / 区域管理

新增 删除

	类型	ID	地图	左边界	右边界	上边界	下边界	避让点列表	等待点列表	区域描述	字体大小	区域颜色	字体颜色	操作
☐	traffic	1	33	11065	11855	28500	24000			1	10	黄色	红色	修改 删除
☐	traffic	2	33	11900	12675	28500	24000			2	10	黄色	红色	修改 删除
☐	traffic	4	33	19245	20200	28500	24222			4	10	黄色	红色	修改 删除
☐	traffic	5	33	35525	36214	28309	24351			5	10	黄色	红色	修改 删除
☐	traffic	6	33	36268	37044	28323	24336			6	10	黄色	红色	修改 删除
☐	traffic	8	33	43616	44390	28333	24338			8	10	黄色	红色	修改 删除
☐												黄色	红色	修改


机器人在线 7/7 告警(0)

4.10 Map Management

Configure dispatching maps

Click Add to create multiple maps

Newly imported maps must be converted before use

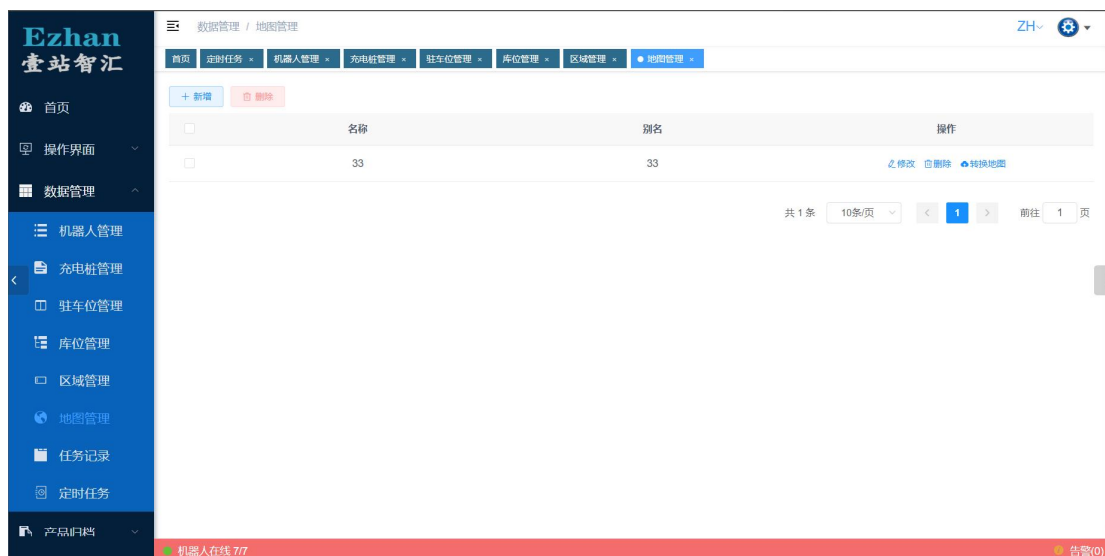

数据管理 / 地图管理

新增 删除

	名称	别名	操作
☐	33	33	修改 删除 切换地图

共 1 条 10 页/页 < 1 > 前往 1 页

机器人在线 7/7 告警(0)

4.11 Task Records

Displays tasks of all statuses

View task time, status, and support resending tasks

Ezhan

壹站智汇

首页

操作界面

数据管理

机器人管理

充电桩管理

驻车位管理

库位管理

区域管理

地图管理

任务记录

定时任务

产品归档

数据管理 / 任务记录

任务名称

请输入任务名称

任务编号

请输入任务ID

机器人ID

请输入机器人ID

任务状态

请选择任务状态

创建时间

选择开始时间

至

选择结束时间

搜索

重置

☐	任务编号	任务名称	机器人ID	执行时间	完成时间	任务状态	操作
☐	1755971326582	Park2296	3	2025-08-15 18:20:29		执行中	✕取消 ✓强制完成
☐	1755928443335	Park2274	4	2025-08-15 18:19:28		执行中	✕取消 ✓强制完成
☐	1755612455394	Park2277	14	2025-08-15 18:10:58	2025-08-15 18:14:41	已完成	
☐	1755854440677	Park2275	13	2025-08-15 18:07:23	2025-08-15 18:10:48	已完成	
☐	1755630981292	Park2276	10	2025-08-15 18:05:39	2025-08-15 18:07:53	已完成	
☐	1755428211414	Park2278	5	2025-08-15 17:54:24	2025-08-15 17:56:31	已完成	
☐	63066783	F02_2267	14	2025-08-15 18:08:29	2025-08-15 18:10:23	已完成	
☐	228126153	F02_2198	14	2025-08-15 18:06:10	2025-08-15 18:08:26	已完成	
☐	247615701	F02_2225	14	2025-08-15 18:01:53	2025-08-15 18:03:54	已完成	
☐	564815054	F02_2145	14	2025-08-15 18:03:56	2025-08-15 18:06:09	已完成	

机器人在线 7/7

告警(0)

5. System Update

When a new version is available or the dispatching system needs to be updated, updates include frontend update and backend update.

5.1 Backend Update

Upload the new backend package to the AGV server PC and rename it EzhanRcs.jar

Locate the dispatching system folder: ...\\dispatcher\\

Copy the updated backend package into the folder

When prompted to replace files, select Replace the files in the destination

名称	修改日期	类型	大小
data	2025/8/2 15:24	文件夹	
envware	2025/8/2 10:26	文件夹	
nginx	2025/8/2 10:33	文件夹	
rcs_sdk	2025/8/2 14:27	文件夹	
redis	2025/8/1 17:59	文件夹	
_UNI_19086EA_0723151535.apk	2025/8/1 17:32	APK 文件	28,425 KB
envware.zip	2025/8/1 17:58	压缩(zipped)文件...	604,369 KB
Ezhan.exe	2025/8/1 17:32	应用程序	8,841 KB
EzhanRcs.jar	2025/8/1 17:33	Executable Jar File	109,663 KB
sprint_error.bat	2025/8/1 17:33	Windows 批处理...	1 KB
sprint_log.bat	2025/8/1 17:33	Windows 批处理...	1 KB
sprint_sdk_log.bat	2025/8/1 17:33	Windows 批处理...	1 KB


5.2 Frontend Update

Upload the new frontend package to the AGV server PC, unzip it, and copy the dist folder

Locate the frontend path: ...\\dispatcher\\nginx\\html


Paste and replace the dist folder

If the page does not change after startup, clear the browser cache

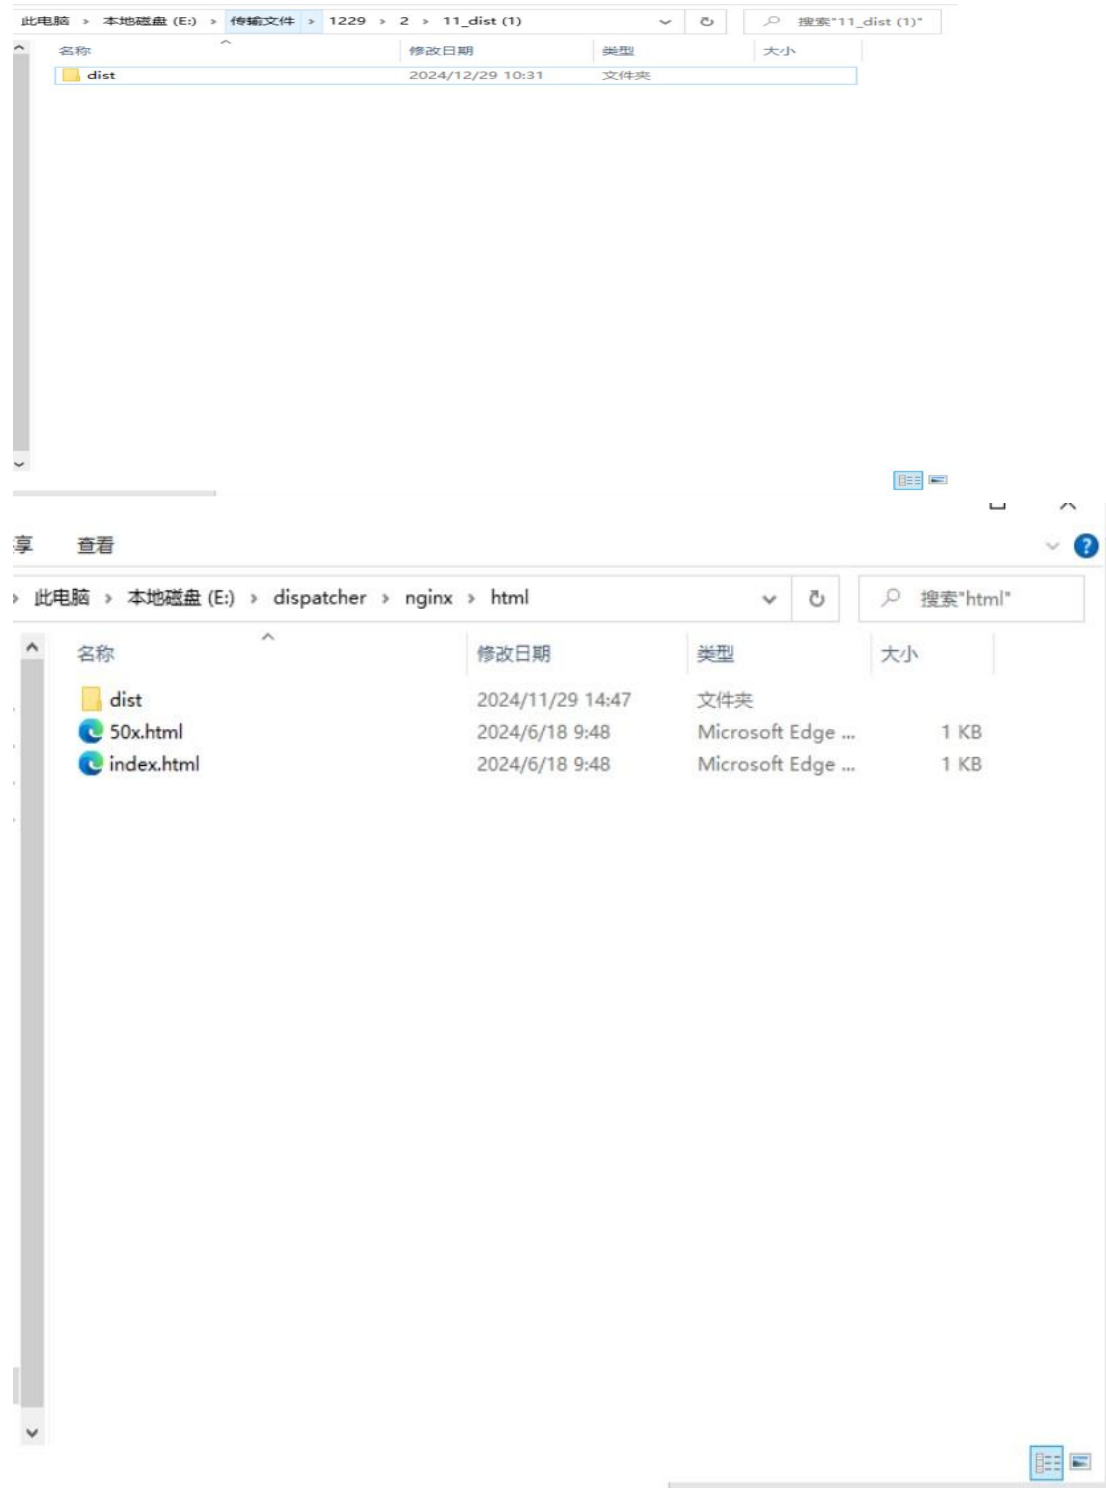


5.3 Dispatching System Map Update

Open the robot host computer, export the robot map, upload it to the server PC, and ensure map consistency

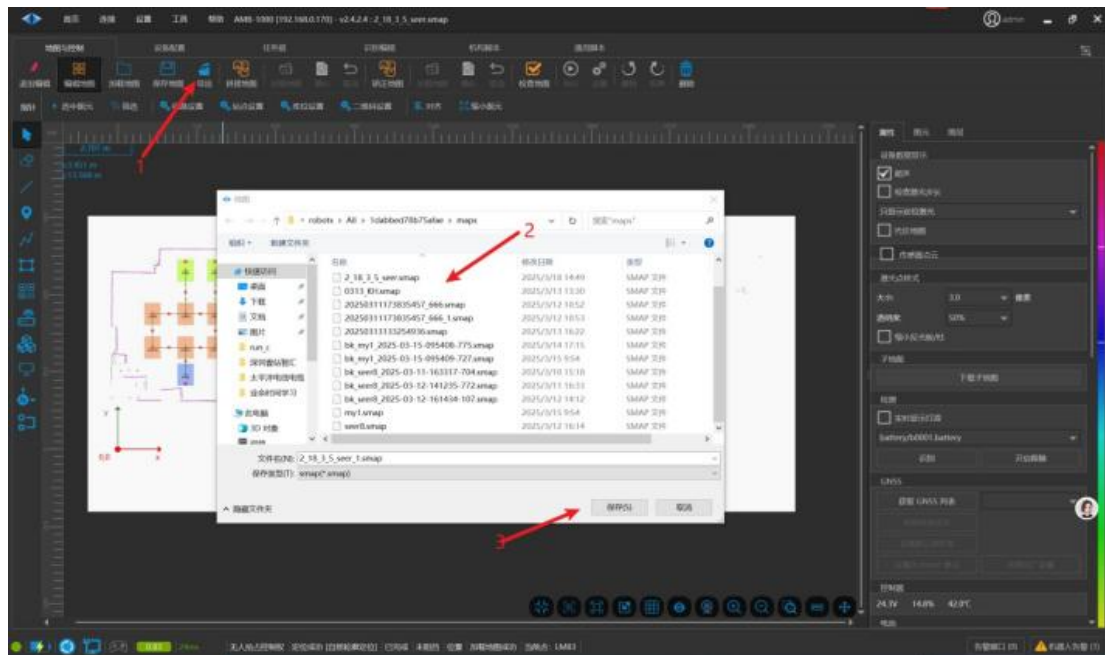

Copy the map file to the specified folder

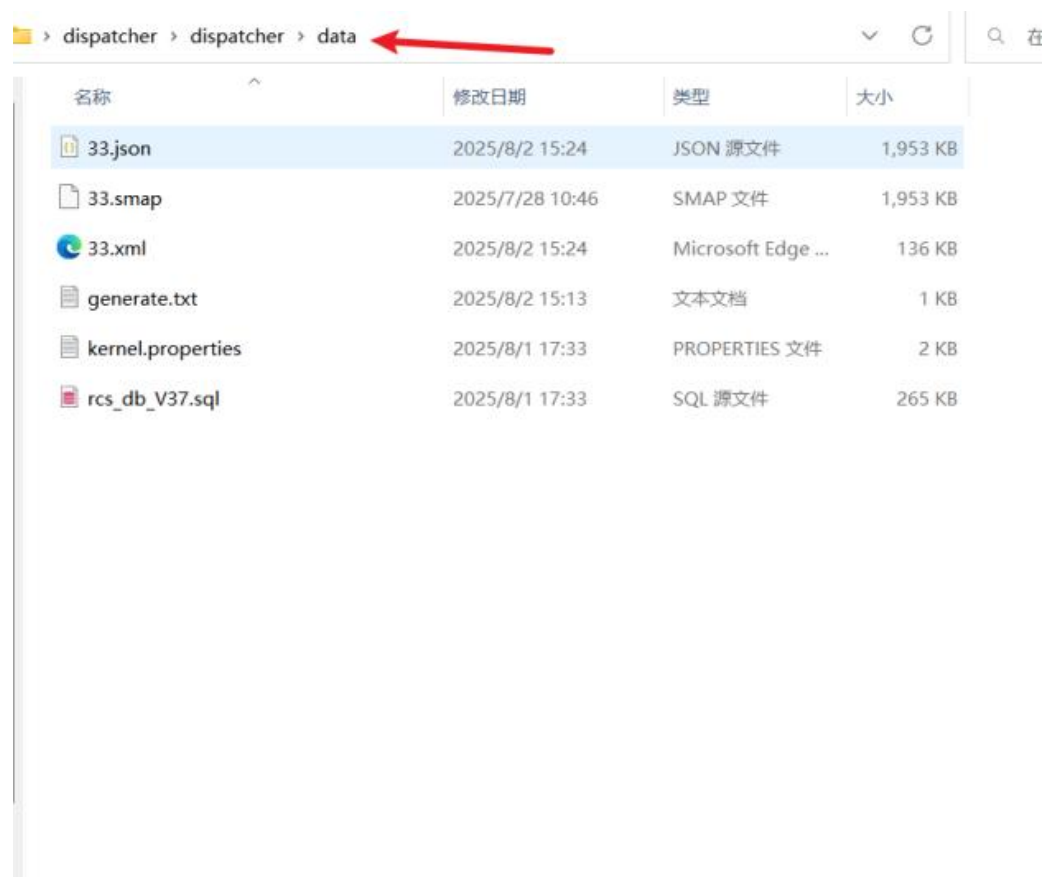


Open Map Management in the frontend and add a new map (name must match the exported map)

Select Convert Map and complete online conversion

① Open the Map Management page

- ② Add a new map
- ③ Note: The name of the new map must be consistent with the actual map file name
- ④ Click the Convert Map button and select the map to convert
- ⑤ Select the corresponding map

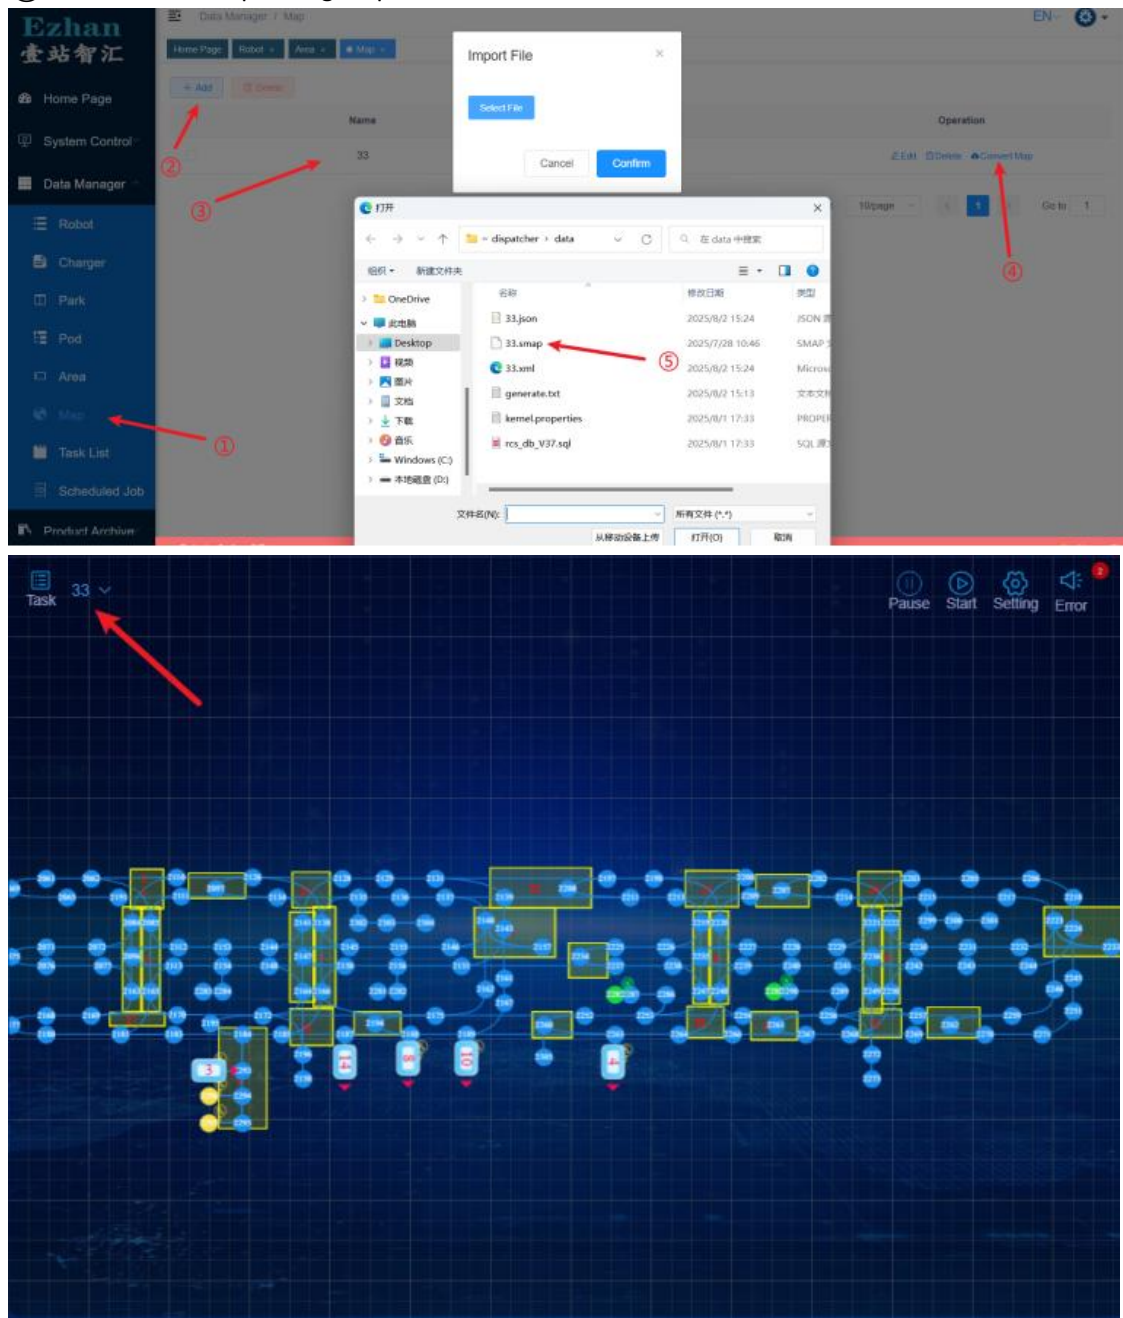


6. System Log View

Log paths:

Idm- log: Dispatching system logs

sdk- log: SDK logs

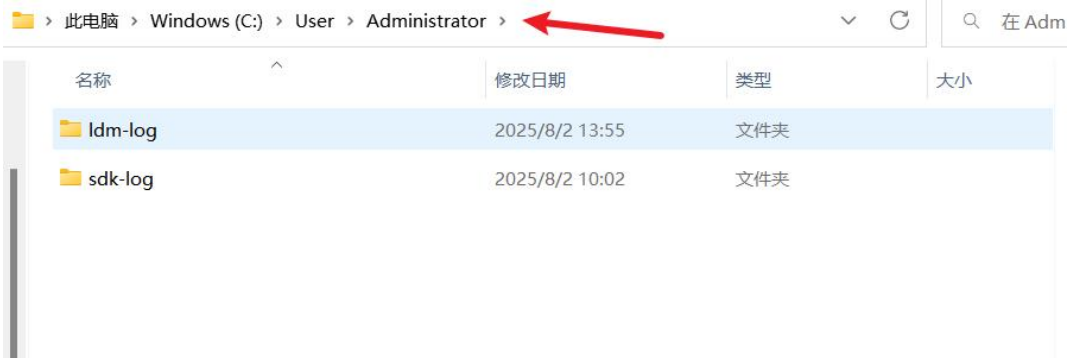


7. Administrator Account Assignment


Log in with the super administrator account

Username: admin

Password: admin123

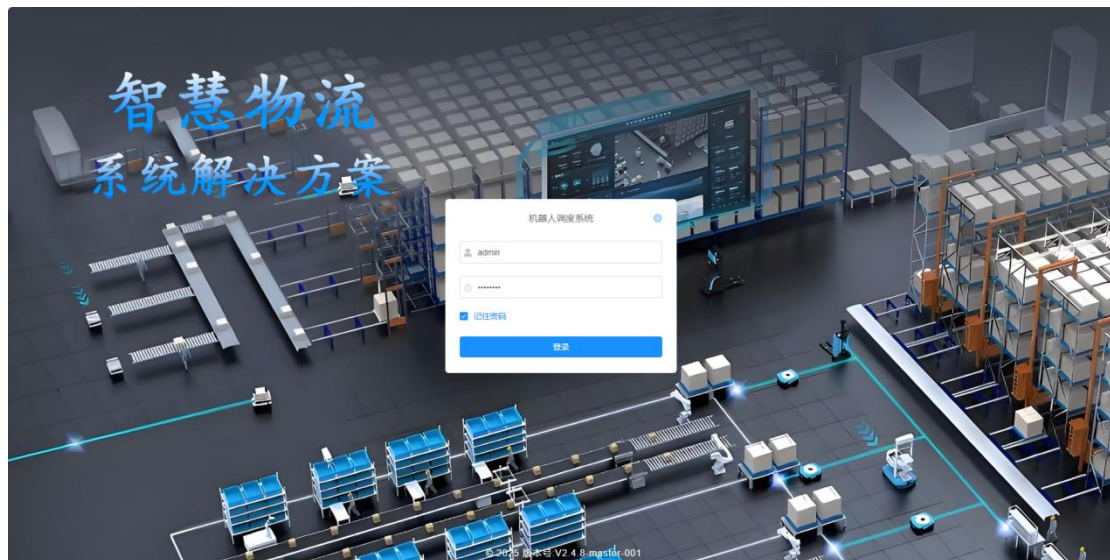


Go to Role Management to configure roles

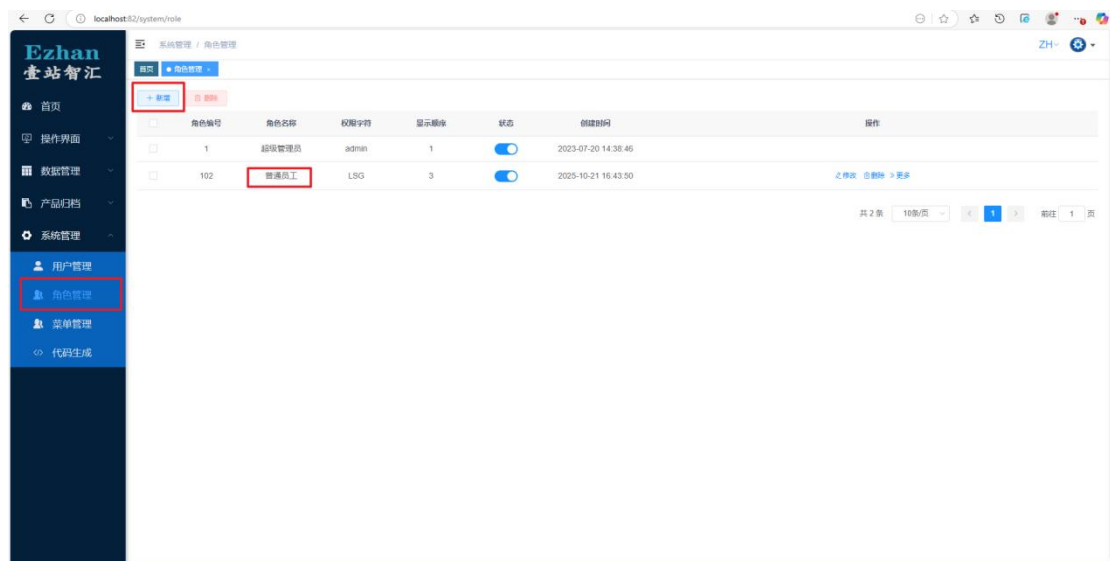


Click the Add button to configure the visible permission range of the role, as shown in the figure.
Example: If you only want to assign the Export permission of one menu to this role, simply check Export under the corresponding menu (Robot Management).




You can also modify the permission range of existing roles, as shown in the figure: click Modify.

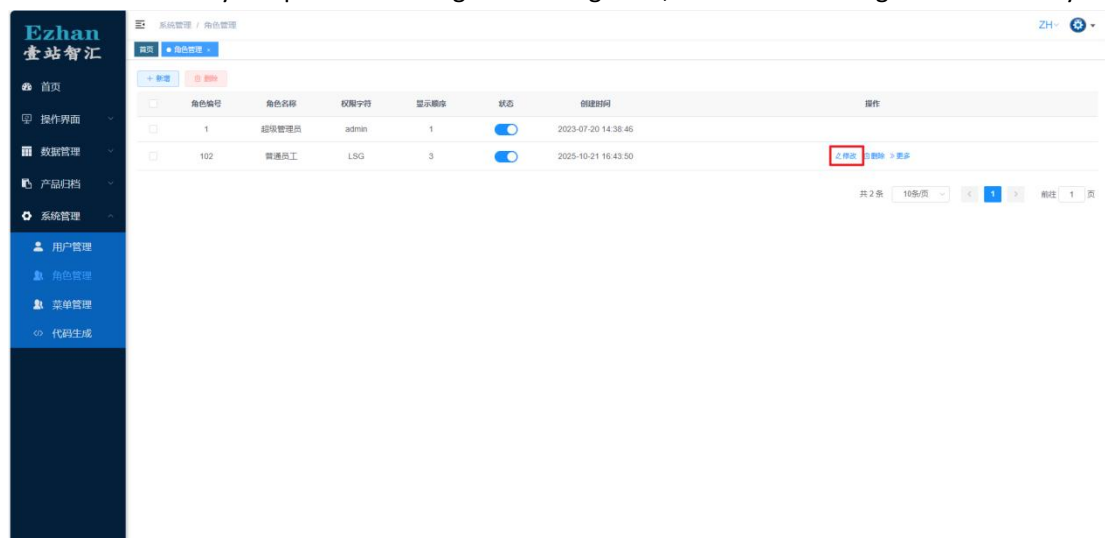

3. Add a new user, as shown in the figure: click Add.

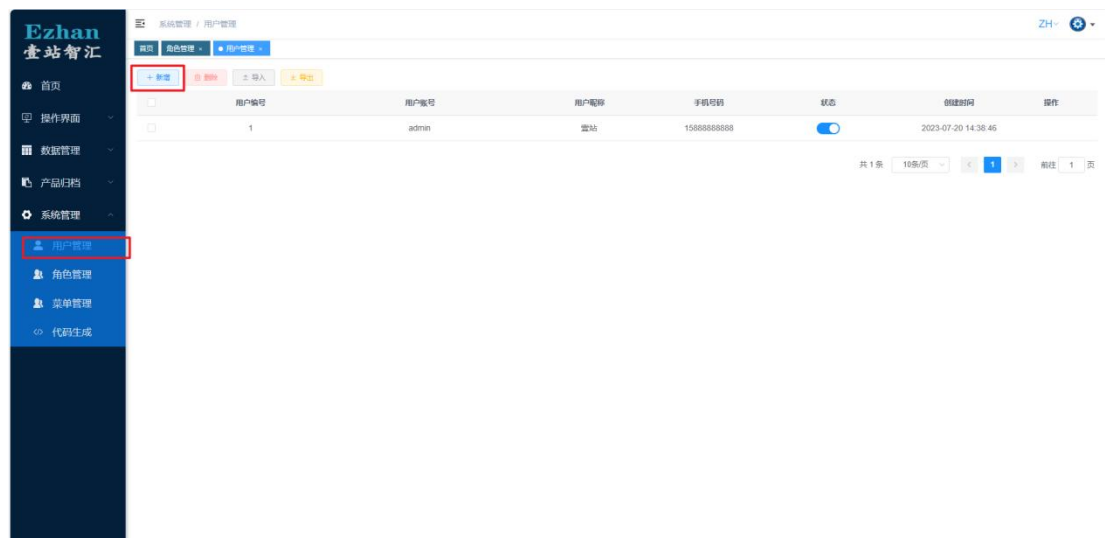

Please pay attention to the role selection; the user will have the permissions configured for this role.

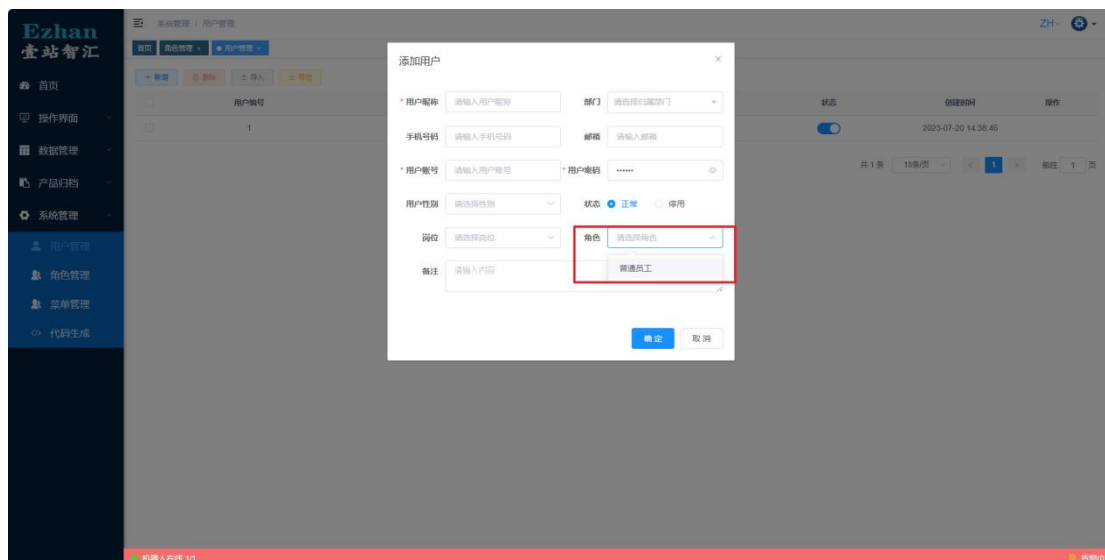

After the user is created, you can log in with the new user account and password.