


Présentation Stop & Go et RTK



Stop & Go

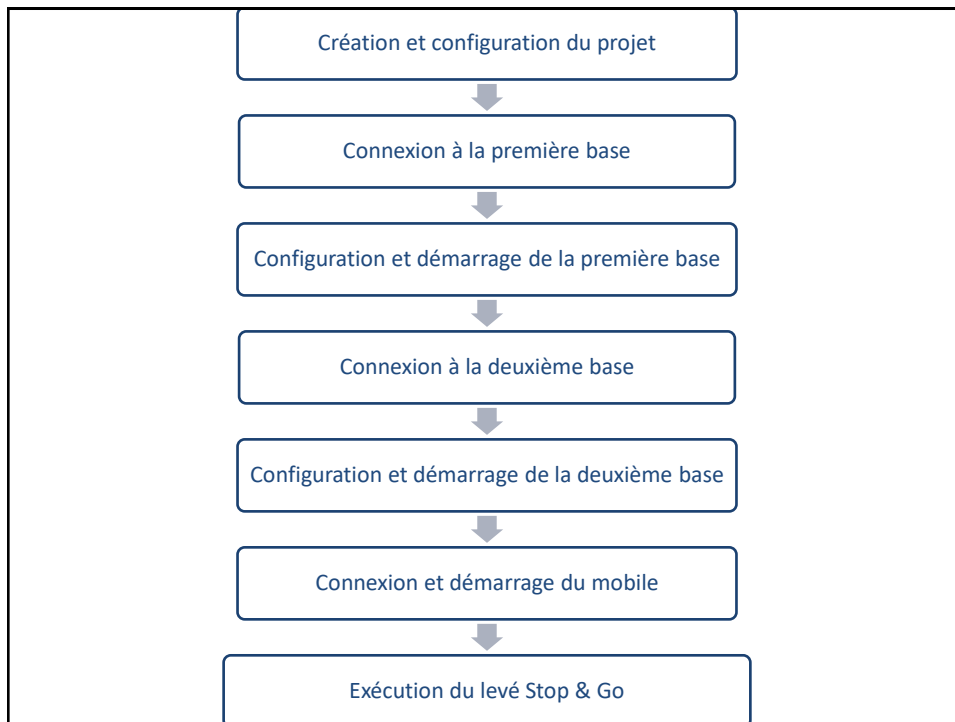


TOPCON Hyper V & Magnet Field







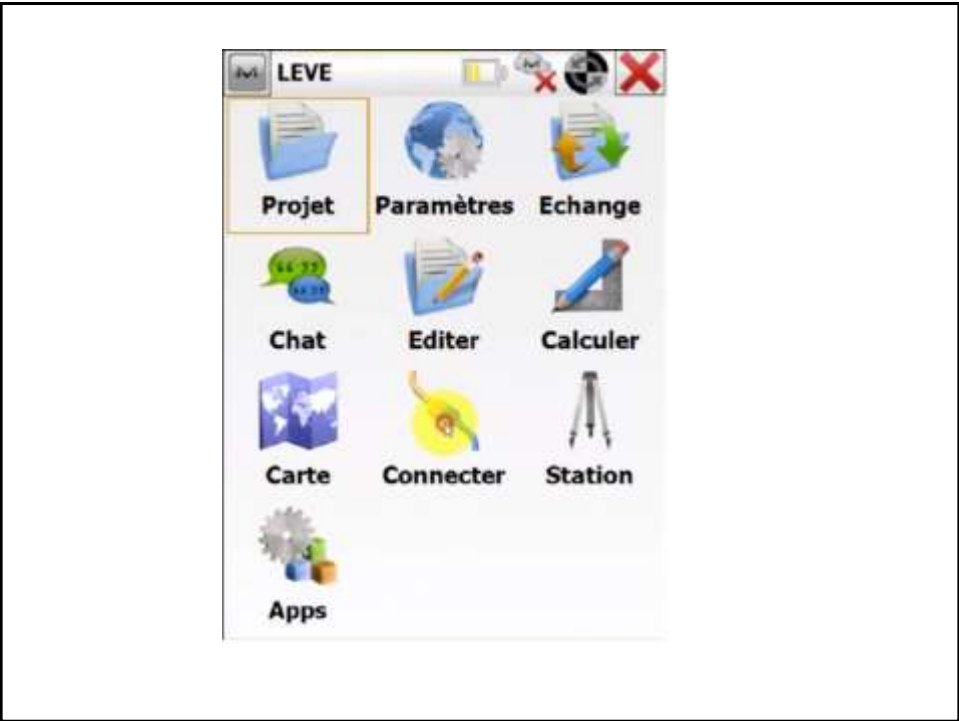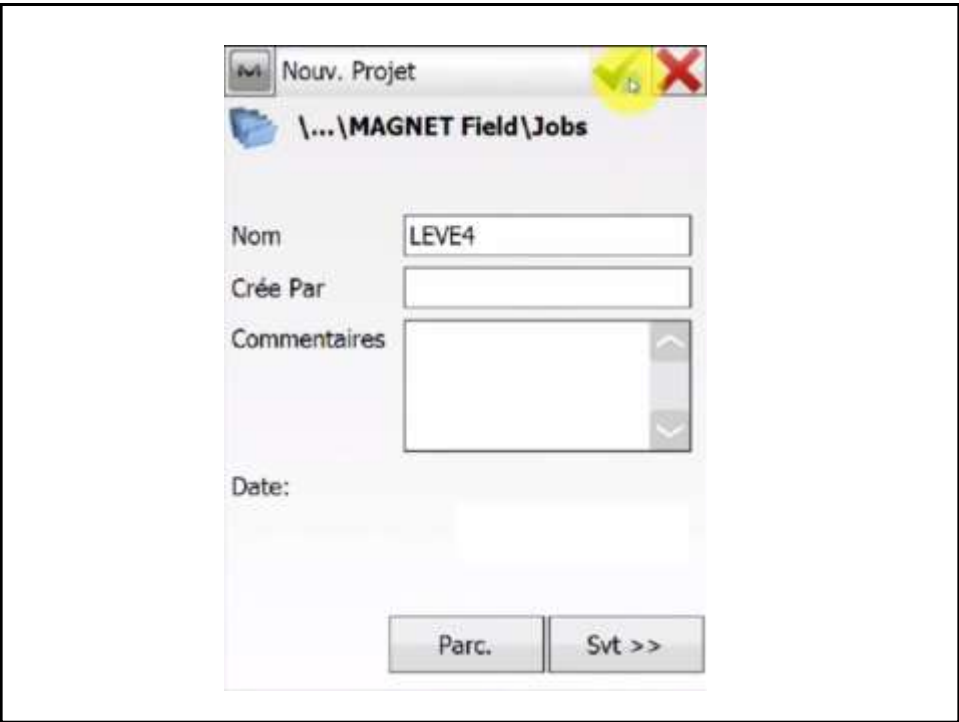


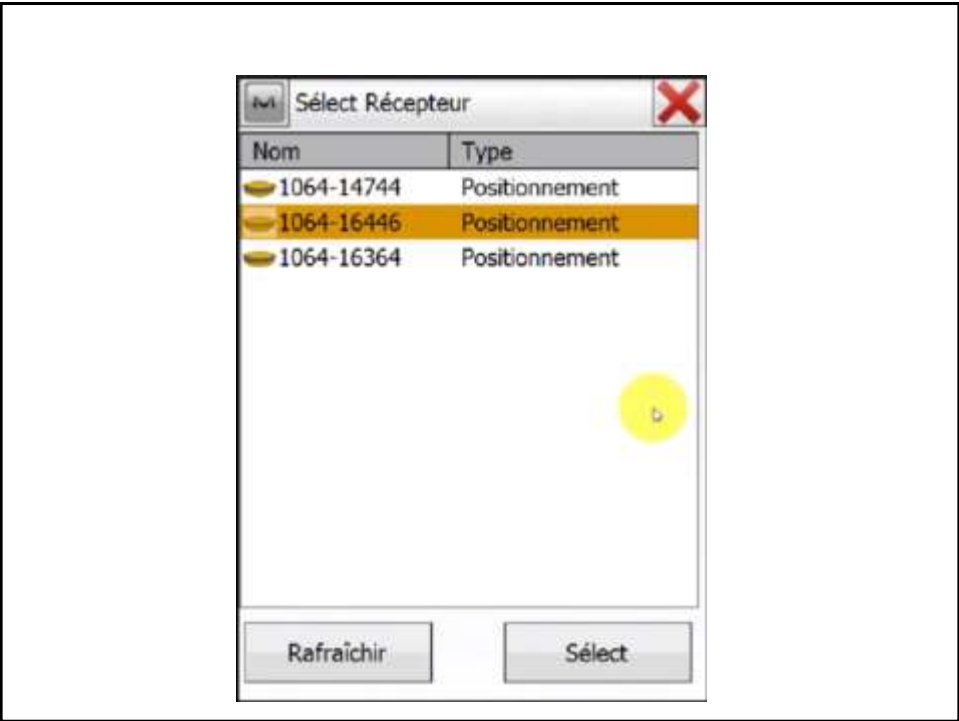




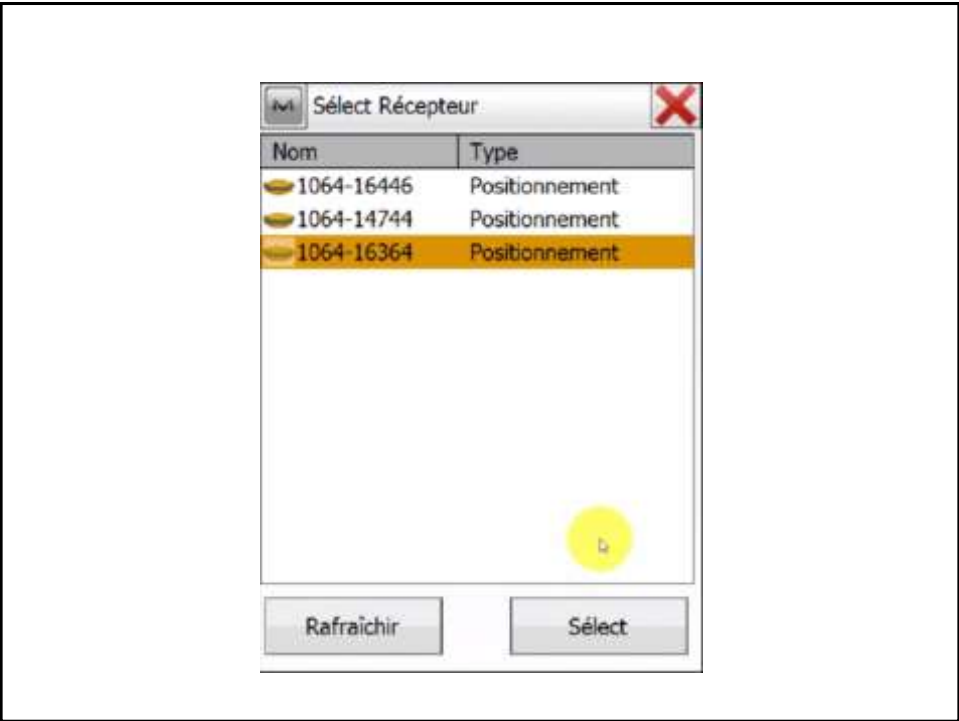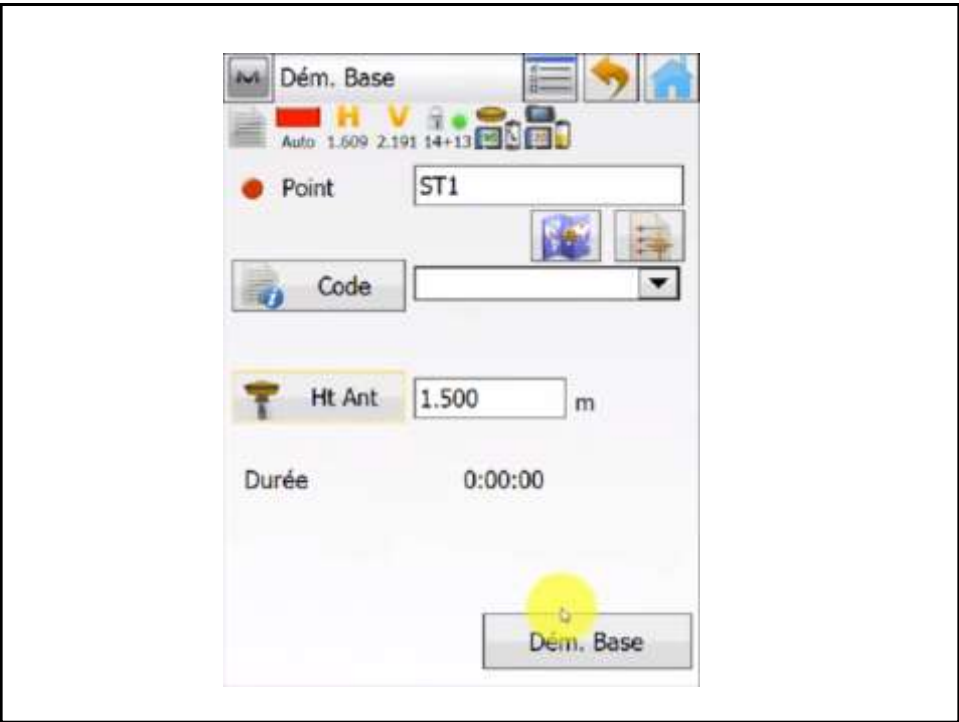







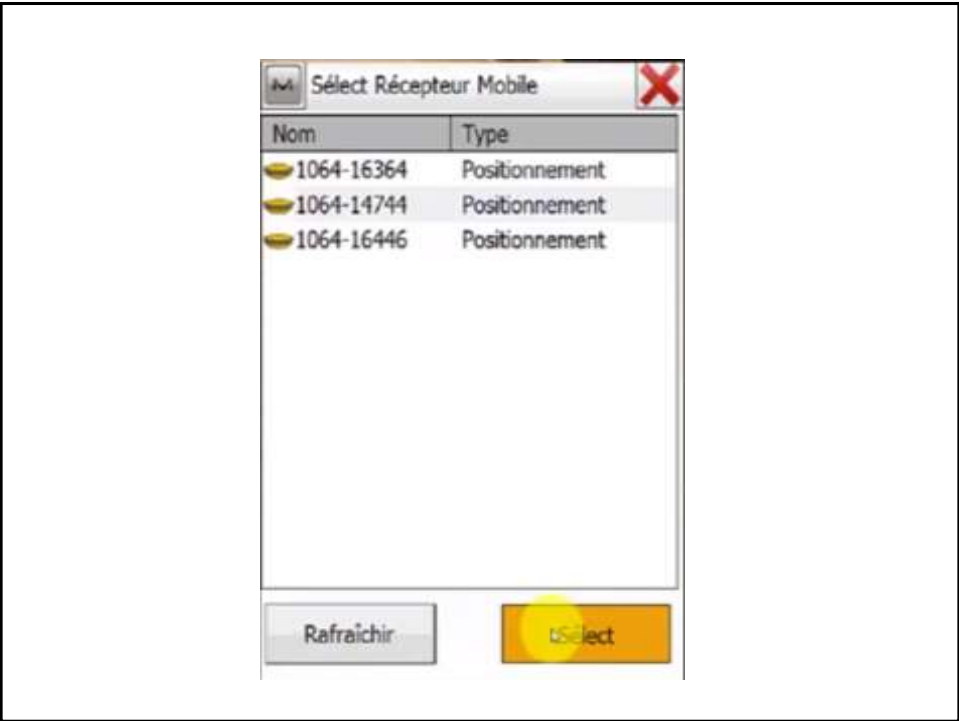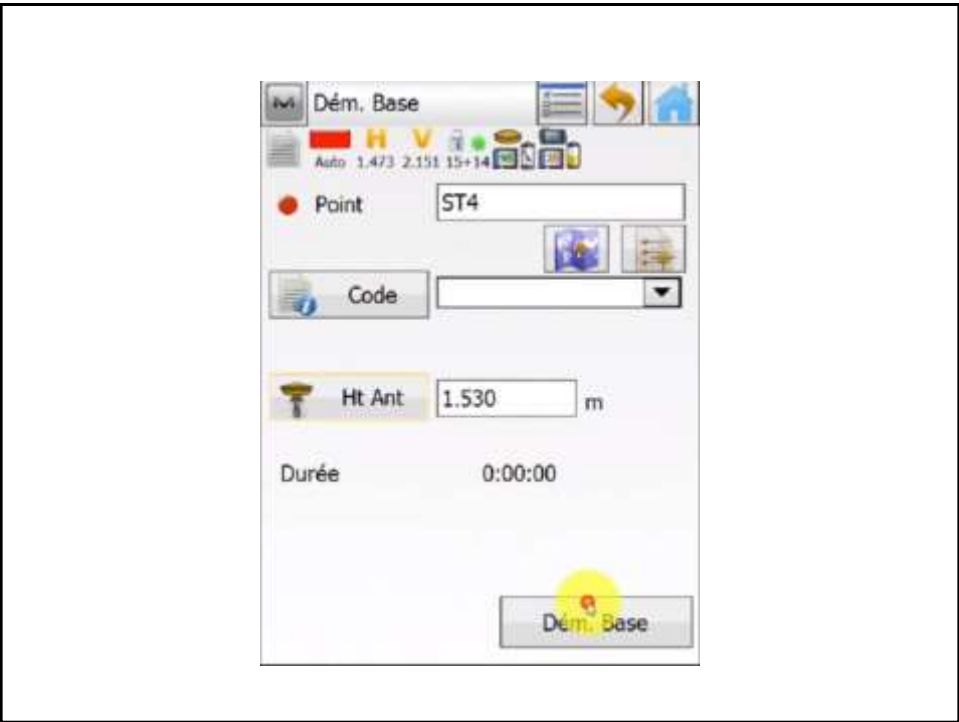







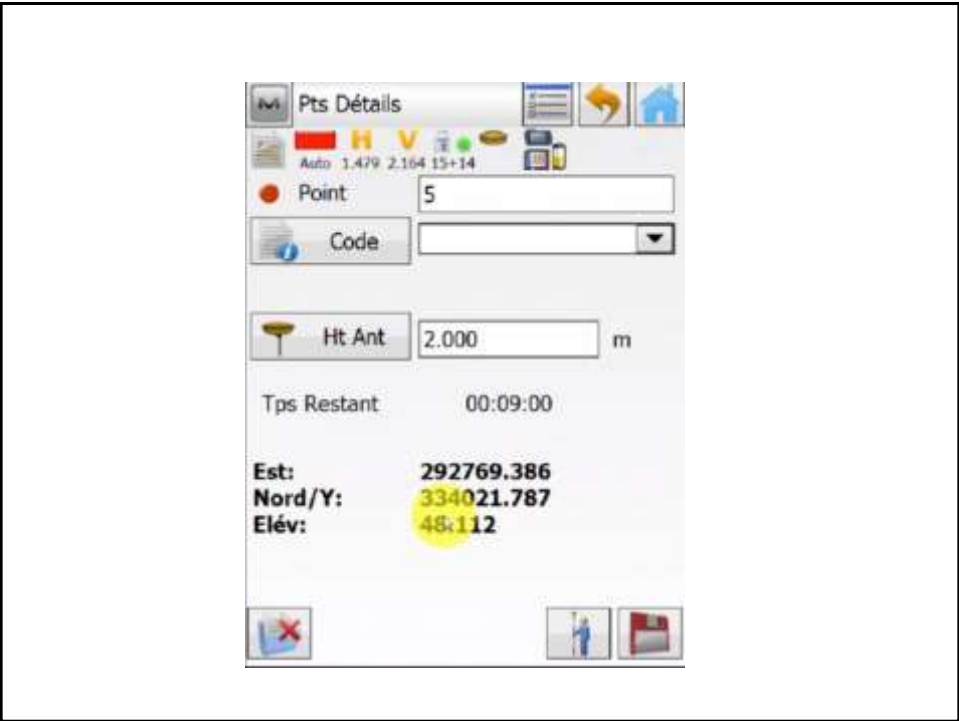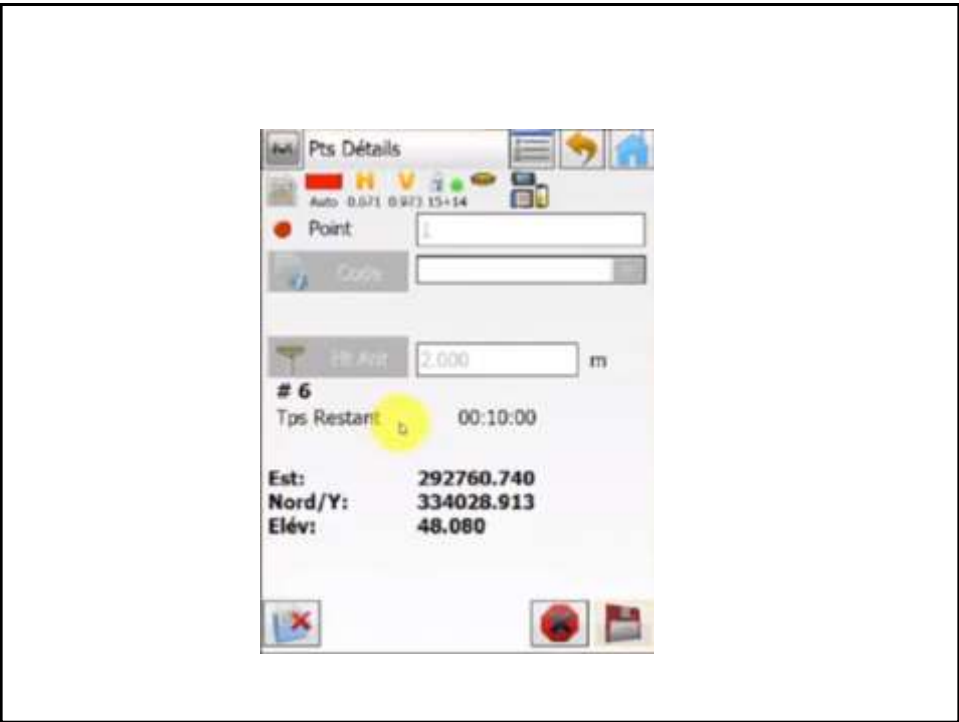





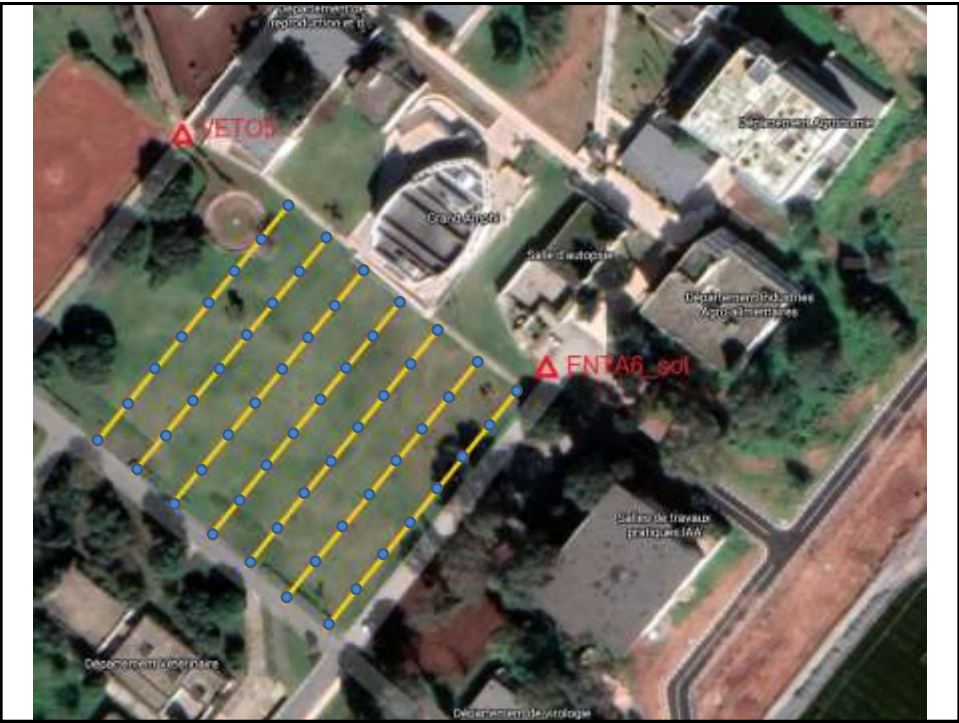


RTK

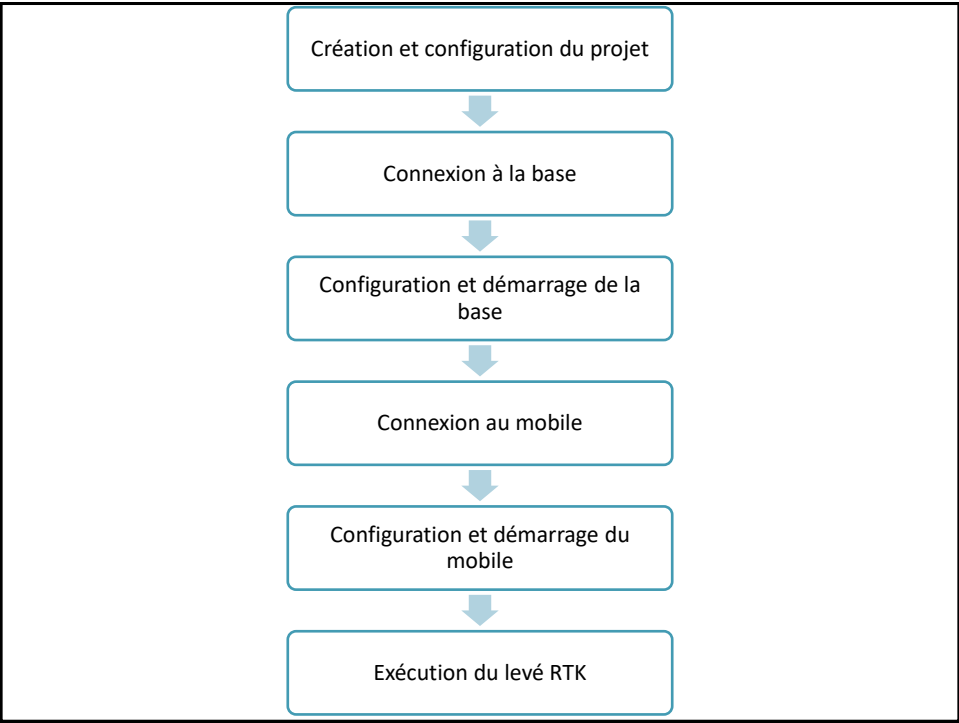



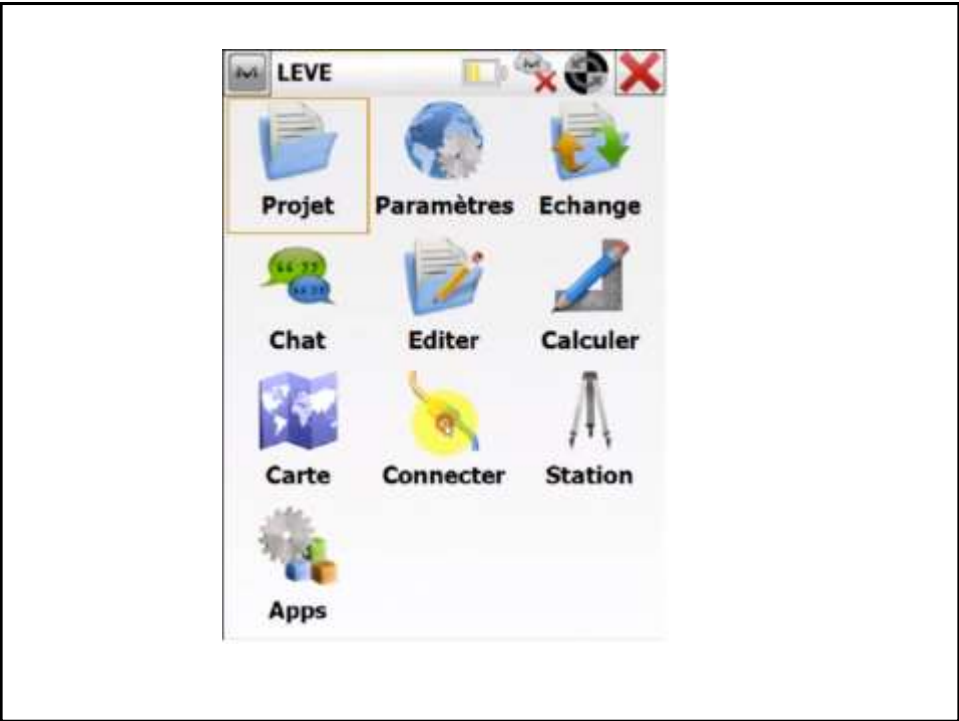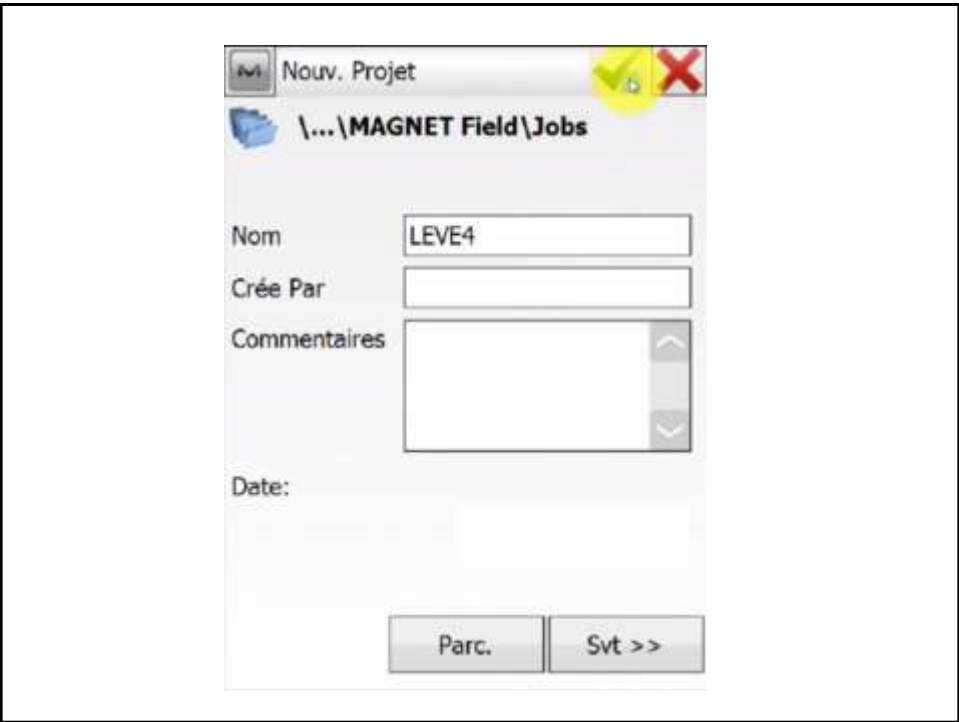

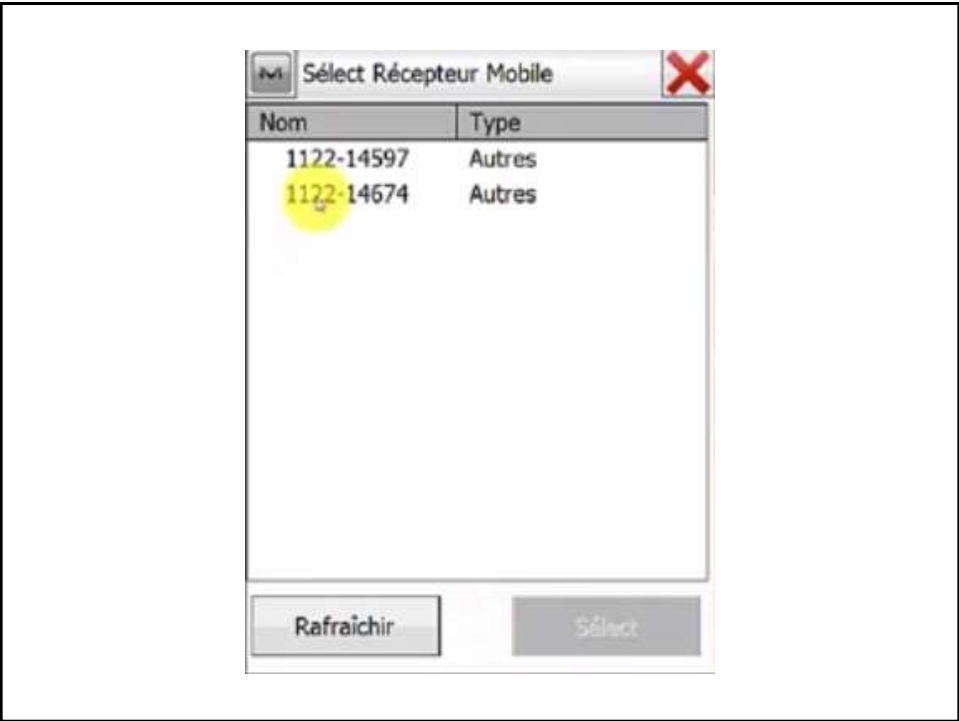

Dém. Base

Auto: 1.352 2.071 23+13

Grille: Zone 1 [MERCHI](m)

Point ST1

Code

Nord/Y 334027.300

Est 292756.227

Elév 46.849

1.600 m

Dém. Base

Prêt

The screenshot shows the 'Config Radio' dialog box. The 'Type' is 'Digital UHF II'. The 'Port Radio' is 'C'. The 'Canal' is '430.00000 (25 kHz)'. The 'Prot.' is 'PDL'. The 'Mod.' is 'GMSK'. There is a text box for 'Envoi de la Commande Radio'. At the bottom are buttons for 'Definir', 'Stop', and 'Obtenir Freq'.

