



Flipsky ESC Tool V1.4 macOS 的串口使用说明

1. 如图所示，在使用 macOS 上位机的时候插入串口会检测出两个串口设备，cu.usbmodem143201-flipsky 和 tty.usbmodem143201-flipsky。这是因为 macOS 的串口设计参考了传统 UNIX 系统的通信方式，这种方式将拨入（tty）和拨出（cu）通信分开，以更好地管理设备资源和连接稳定性。这种设计在 macOS 系统中延续了下来，所以会看到两个设备节点，我们直接使用 cu.usbmodem143201-flipsky 串口通信。

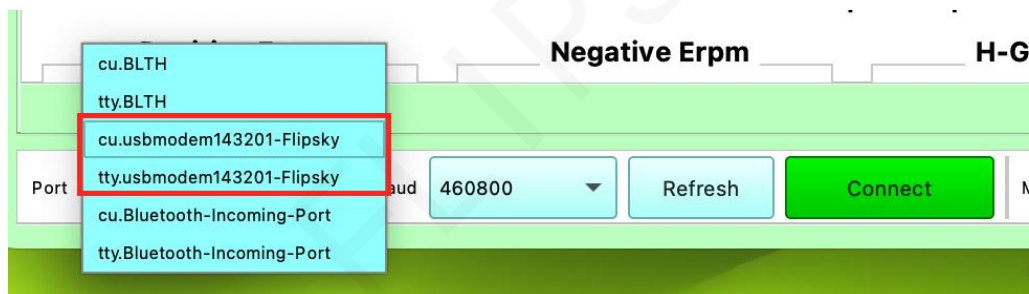

2. 选择 cu.usbmodem143201-flipsky 串口、波特率 460800,直接点击“Connect”进行连接。

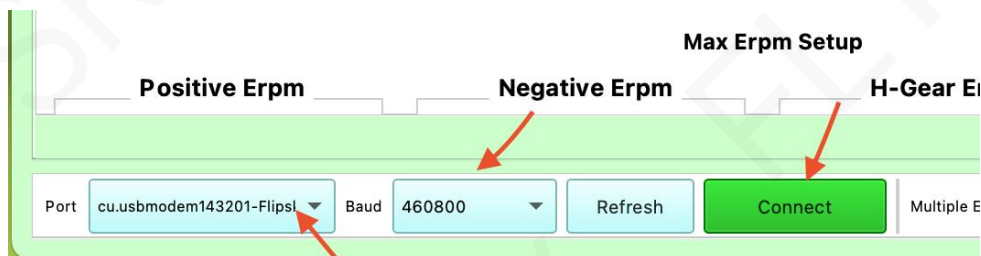


3. 在连接成功之后会显示“Disconnect”和电调的型号和 ID。

Positive Erpm Negative Erpm H-Gear Erpm M-Gear Erpm


Port: cu.usbmodem143201-Flipsi Baud: 460800 Refresh Disconnect Multiple ESCs MASTER:FT85BD V1.4 ID: 219

Flipsky ESC Tool V1.4 macOS serial port usage instructions

1. As shown in the figure, two serial devices, `cu.usbmodem143201-flipsky` and `tty.usbmodem143201-flipsky`, are detected when the serial port is inserted into the host computer of macOS. This is because the serial port design of macOS references the communication style of traditional UNIX systems, which separates dial-in (tty) and dial-out (cu) communication to better manage device resources and connection stability. This design continues in macOS, so you will see two device nodes, which we communicate directly using the serial port `cu.usbmodem143201-flipsky`.

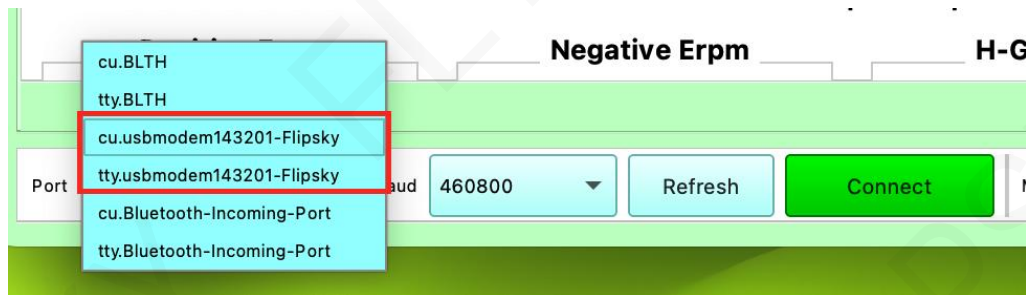

2. Select the serial port of `cu.usbmodem143201-flipsky`, baud rate 460800, and directly click "Connect" to connect.

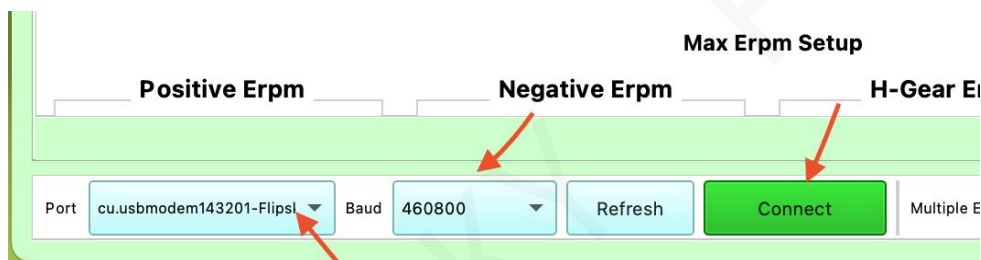

3. After the connection is successful, the Disconnect and power switch model and ID are displayed.

