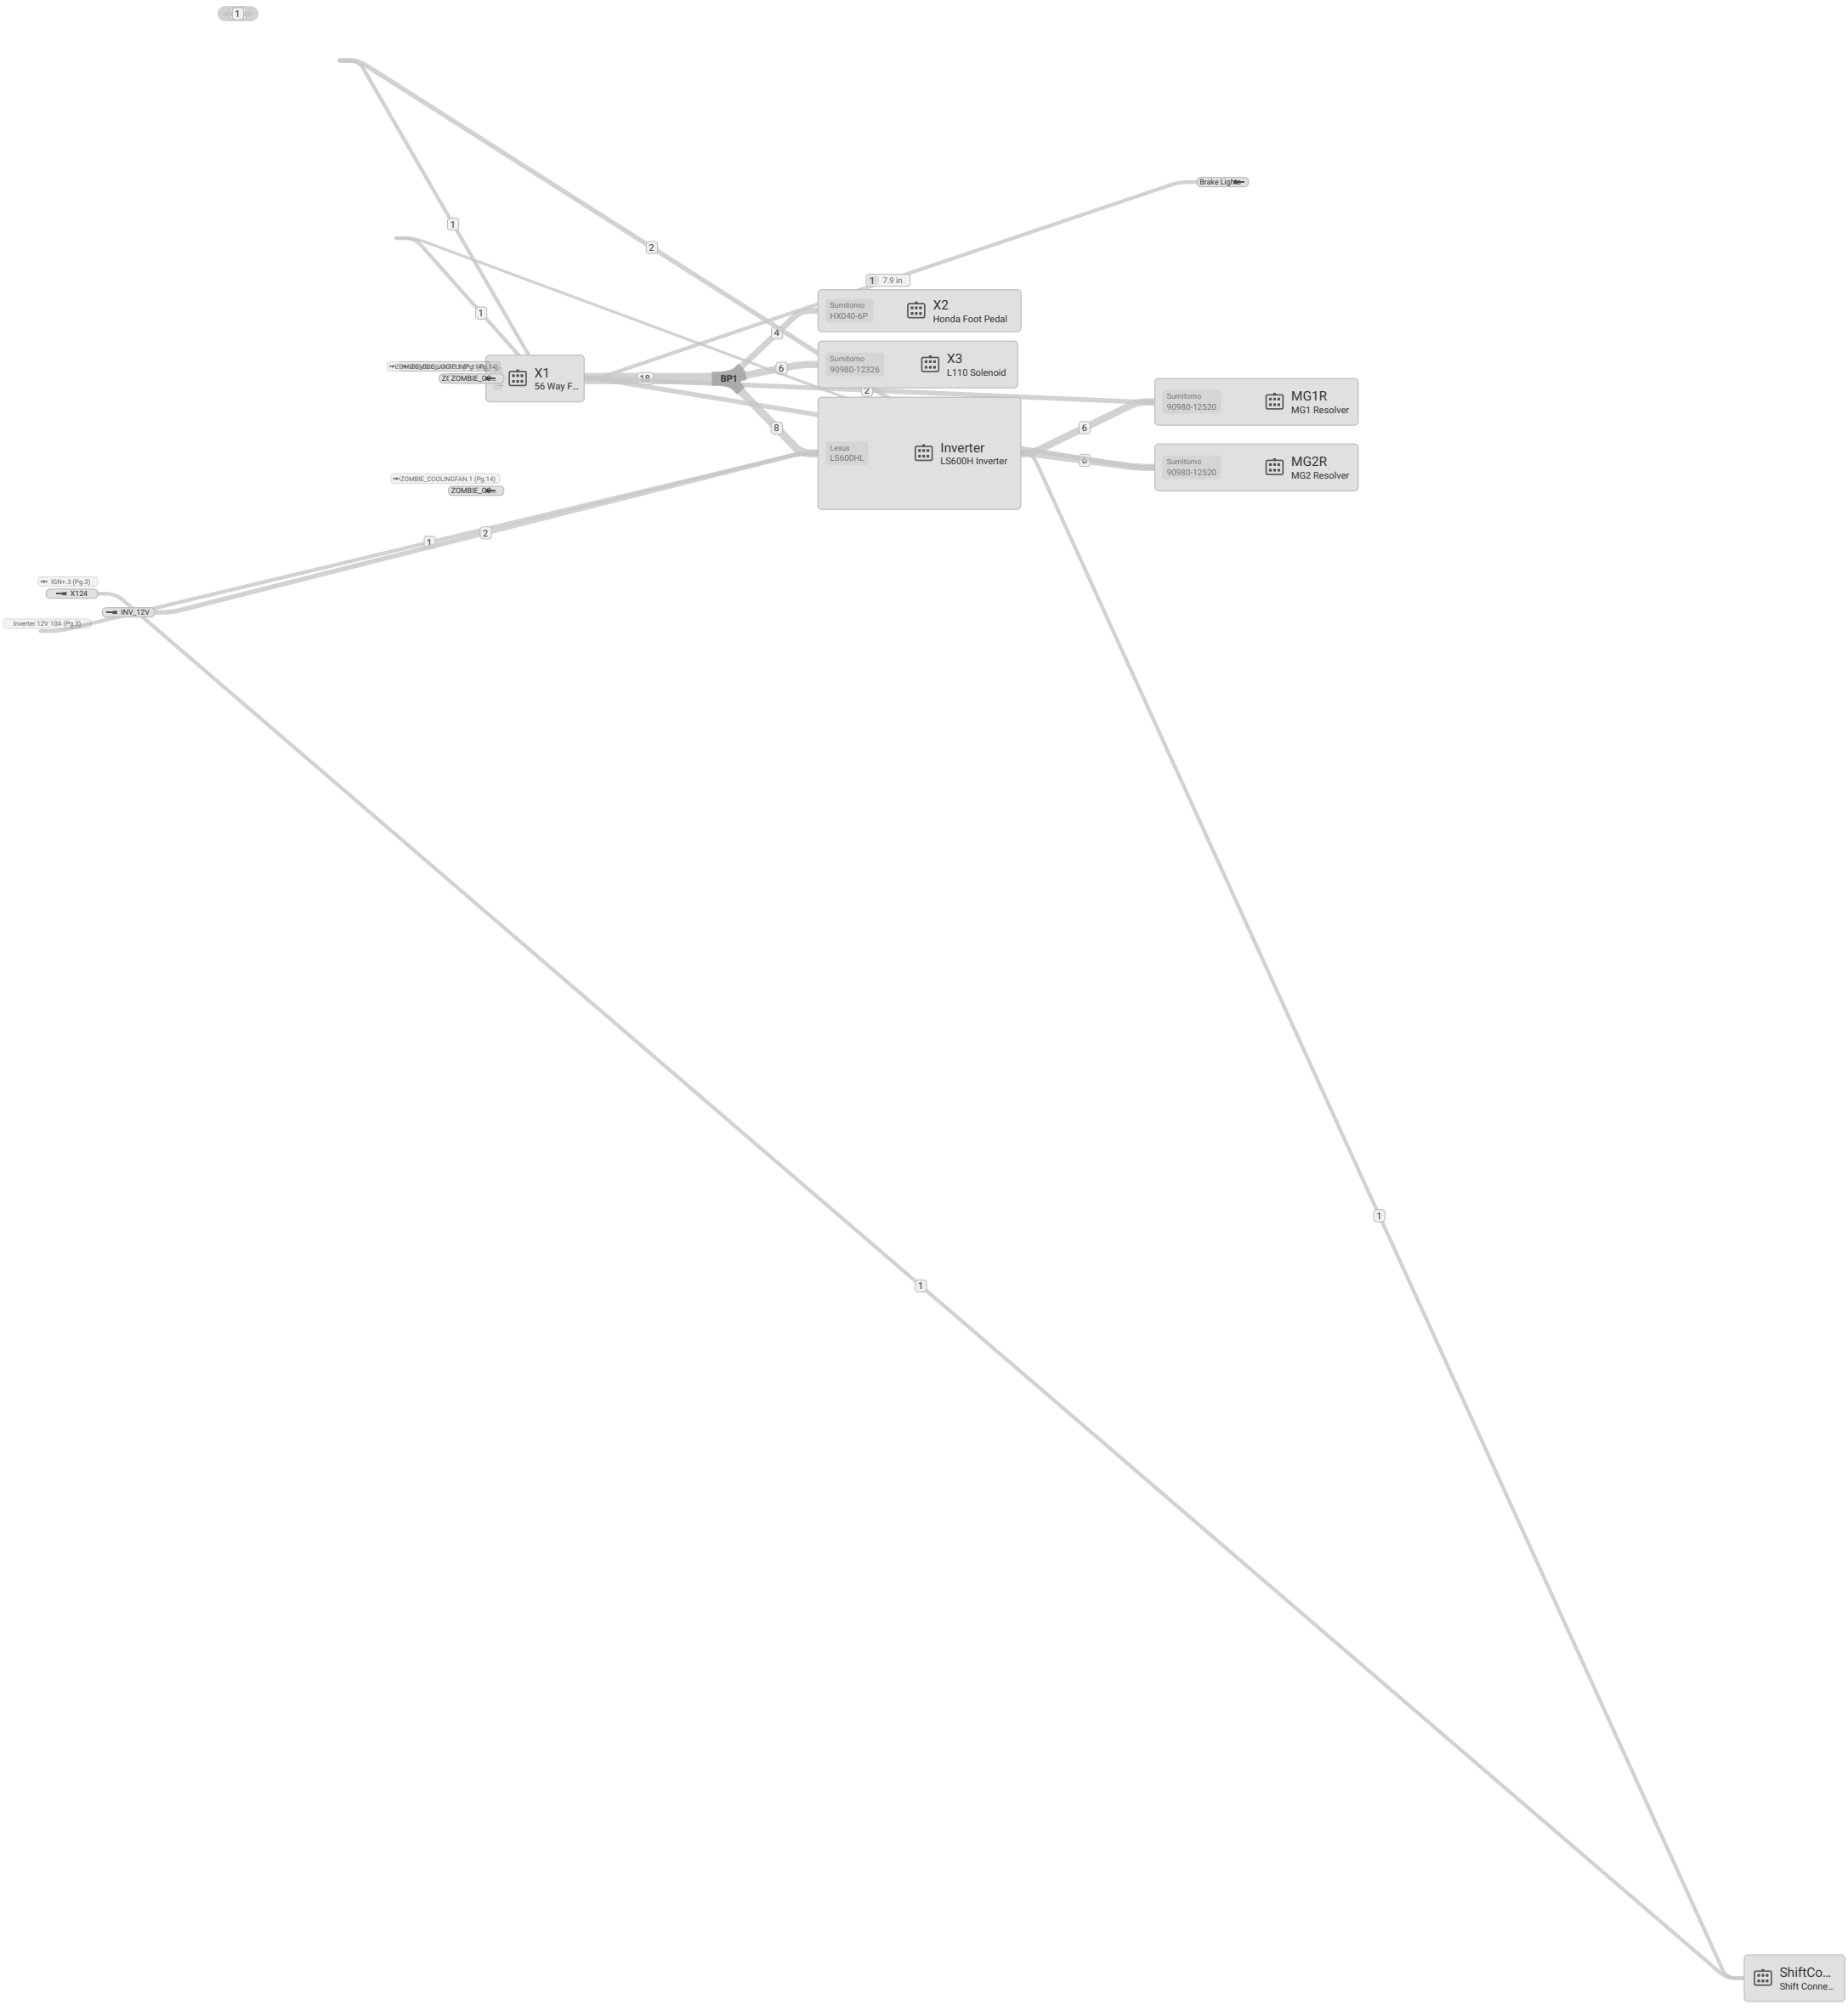

1
1
1
2
1
7.9 in
Brake Light
Sumitomo
HX040-6P
X2
Honda Foot Pedal
Sumitomo
90980-12326
X3
L110 Solenoid
X1
56 Way F...
18
BP1
4
6
2
8
Sumitomo
90980-12520
MG1R
MG1 Resolver
6
Sumitomo
90980-12520
MG2R
MG2 Resolver
Lexus
LS600HL
Inverter
LS600H Inverter
ZOMBIE_COOLINGFAN.1 (Pg.14)
ZOMBIE_O
1
2
IGN+.3 (Pg.3)
X124
INV_12V
Inverter 12V 10A (Pg.3)
1
1
ShiftCo...
Shift Conne...

ZOMBIE_COOLANTPUMP.1 (Pg.14)
ZOMBI...
ZOMBIE_COOLINGFAN.1 (Pg.14)
ZOMBI...

Aptiv
13669859

X1
56 Way F 1.5 SICMA Block

	RS232 Rx	1	
	RS232 Tx	2	
ZOMBIE_COOLANTPUMP.1	GP Out 3	3	
InDtsch12-M.5 (Pg.4)	GP Out 2	4	
	PWM 3	5	
Brake Lights.1	PWM 2	6	Brake Lights
ZOMBIE_COOLINGFAN.1	PWM 1	7	
	Analog 2 in	8	
	Analog 1 in	9	
	DAC 2	10	
	DAC 1	11	
MG2R.4	MG2 Temp -	12	
MG2R.8	MG2 Temp +	13	
MG1R.4	MG1 Temp -	14	
	Ignition T15 in	15	
Inverter.34	REQ-	16	
Inverter.35	REQ+	17	
Inverter.13	CLK-	18	
Inverter.14	CLK+	19	
Inverter.2	MTH-	20	
Inverter.3	MTH+	21	
Inverter.22	HTM-	22	
Inverter.23	HTM+	23	
	LIN	24	
	CAN EXT 3 L	25	
	CAN EXT 3 H	26	
InDtsch12-M.3 (Pg.4), DD_CAN.2 (Pg.8)	CAN EXT L	27	
InDtsch12-M.2 (Pg.4), DD_CAN.1 (Pg.8)	CAN EXT H	28	
MG1R.8	MG1 Temp +	29	
OilPump.6 (Pg.2)	Oil Pump PWM	30	
	GPOut1 DNC	31	
	Inverter Power LS S...	32	
InDtsch12-M.7 (Pg.4)	Main Contactor LS S...	33	
InDtsch12-M.6 (Pg.4)	Precharge LS Switch	34	
	Pot 2	35	
	Pot 1	36	
X3.3	Trans SP	37	
X3.8	Trans SL2-	38	
X3.7	Trans SL1-	39	
X3.12	Trans PB3	40	
X3.10	Trans PB2	41	
X3.9	Trans PB1	42	
PRNDL.4 (Pg.8), DD_CAN.6 (Pg.8)...	CAN EXT 2 L	43	
PRNDL.3 (Pg.8), DD_CAN.3 (Pg.8)...	CAN EXT 2 H	44	
X2.1	Throttle Ground	45	
X2.2	Throttle 2	46	
X2.5	Throttle 1	47	
X2.3	+5v Throttle	48	
	Brake Input	49	
ZOMBIE_LOGIC.1	GP12v Input	50	
	Hvrequest	51	
	Start	52	
	Reverse Direction	53	
	Forward Direction	54	
	Ground	55	
	Permanent +12V	56	

Lexus
LS600HL

Inverter
LS600H Inverter

	DRN2	1	
X1.20	MTH+	2	
X1.21	MTH++	3	
	NC	4	
	DRN5	5	
MG1R.7	GCSG	6	
MG1R.6	GSNG	7	
	DRN6	8	
MG1R.5	GRFG	9	
Inverter 12V 10A.OUT (Pg.3), INV_12V.1	BR2+	10	
INV_12V	BR2	11	INV_12V
	DRN4	12	
X1.18	CLK-	13	
X1.19	CLK+	14	
	NC	15	
	GI	16	
MG1R.3	GCS	17	
MG1R.2	GSN	18	
	NC	19	
MG1R.1	GRF	20	
	DRN1	21	
X1.22	HTM-	22	
X1.23	HTM+	23	
	ILK	24	
ShiftConn.3	HSDN	25	
	DRN7	26	
MG2R.5	MCSG	27	
MG2R.7	MSNG	28	
MG2R.6	MRFG	29	
	MRFG	30	
	GND1	31	
	GND2	32	
	DRN3	33	
X1.16	REQ-	34	
X1.17	REQ+	35	
	NC	36	
	NC	37	
MG2R.3	DRN8	38	
MG2R.2	MSN	39	
MG2R.1	MRF	40	

Sumitomo
90980-12520

MG1R
MG1 Resolver

Inverter.20	MRF	1
Inverter.18	MSN	2
Inverter.17	MCS	3
X1.14	GMTG	4
Inverter.9	MRFG	5
Inverter.7	MSNG	6
Inverter.6	MCSG	7
X1.29	GMT	8

Inverter 12V 10A.OUT (Pg.3)

Sumitomo
90980-12520

MG2R
MG2 Resolver

Inverter.40	MRF	1
Inverter.39	MSN	2
Inverter.38	MCS	3
X1.12	MMTG	4
Inverter.27	MRFG	5
Inverter.29	MSNG	6
Inverter.28	MCSG	7
X1.13	MMT	8

Sumitomo
90980-12326

X3
L110 Solenoid

	SL1+	1	
	SL2+	2	
X1.37	SP	3	
	E	4	
	NC	5	
	SP	6	
X1.39	SL1-	7	
X1.38	SL2-	8	
X1.42	PB1	9	
X1.41	PB2	10	
	THO	11	
X1.40	PB3	12	
	NC	13	

Sumitomo
HX040-6P

X2
Honda Foot Pedal

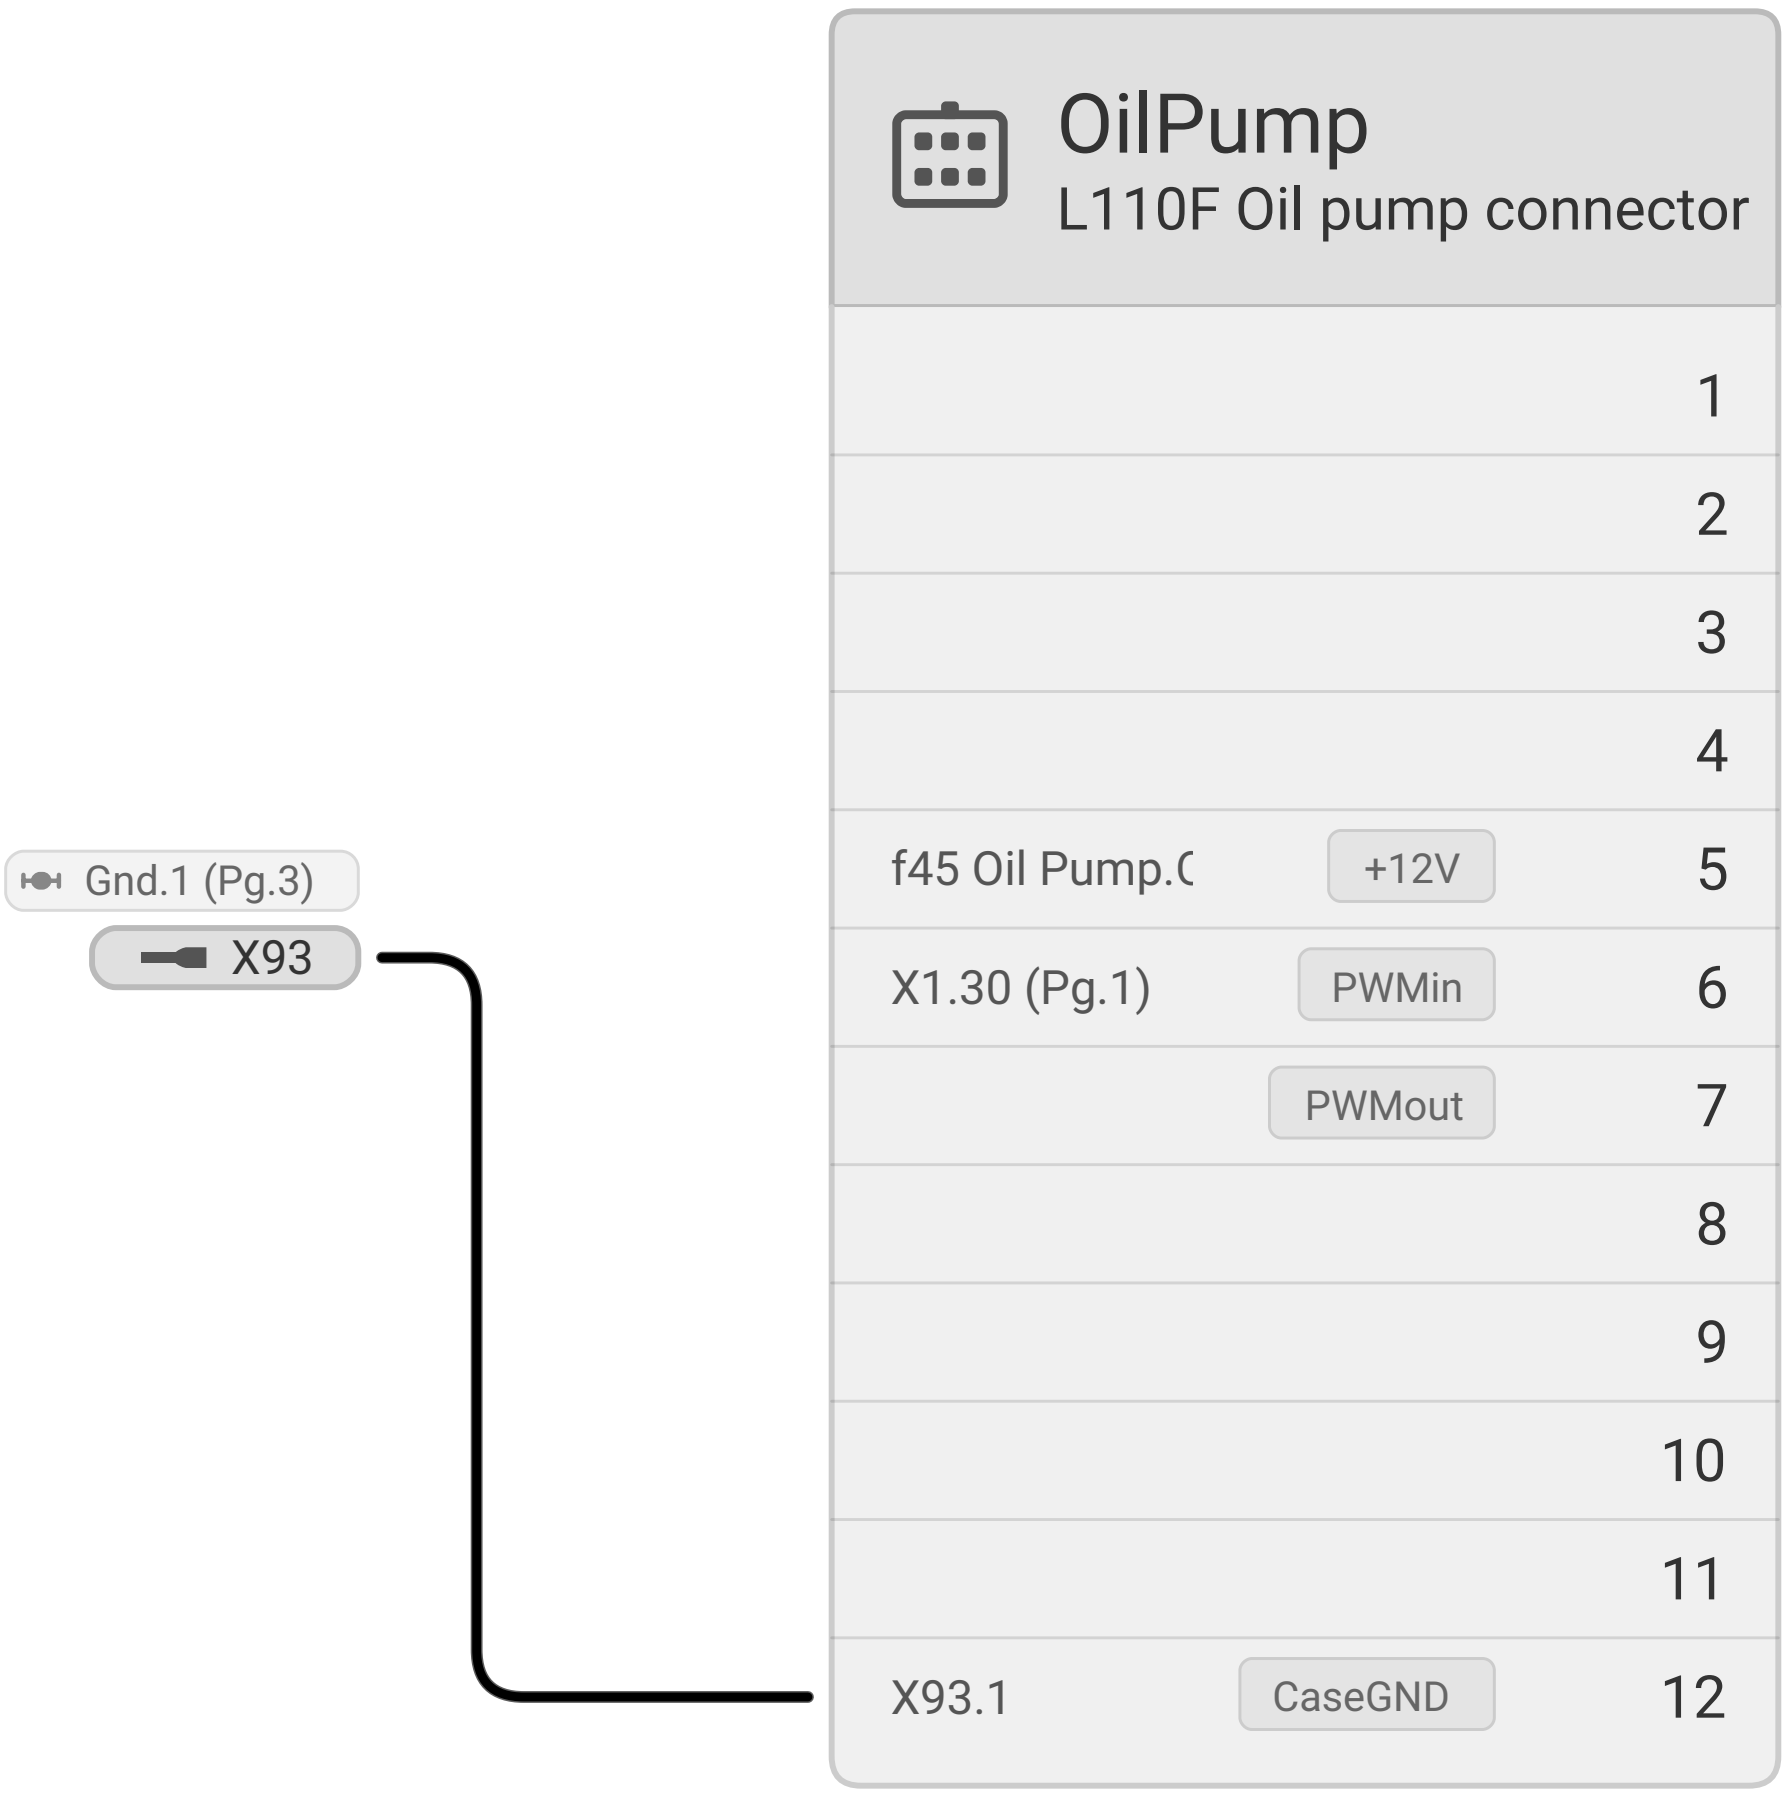
X1.45	GND	1
X1.46	APP2	2
X1.48	Vref1	3
	GND	4
X1.47	APP1	5
	Vref2	6

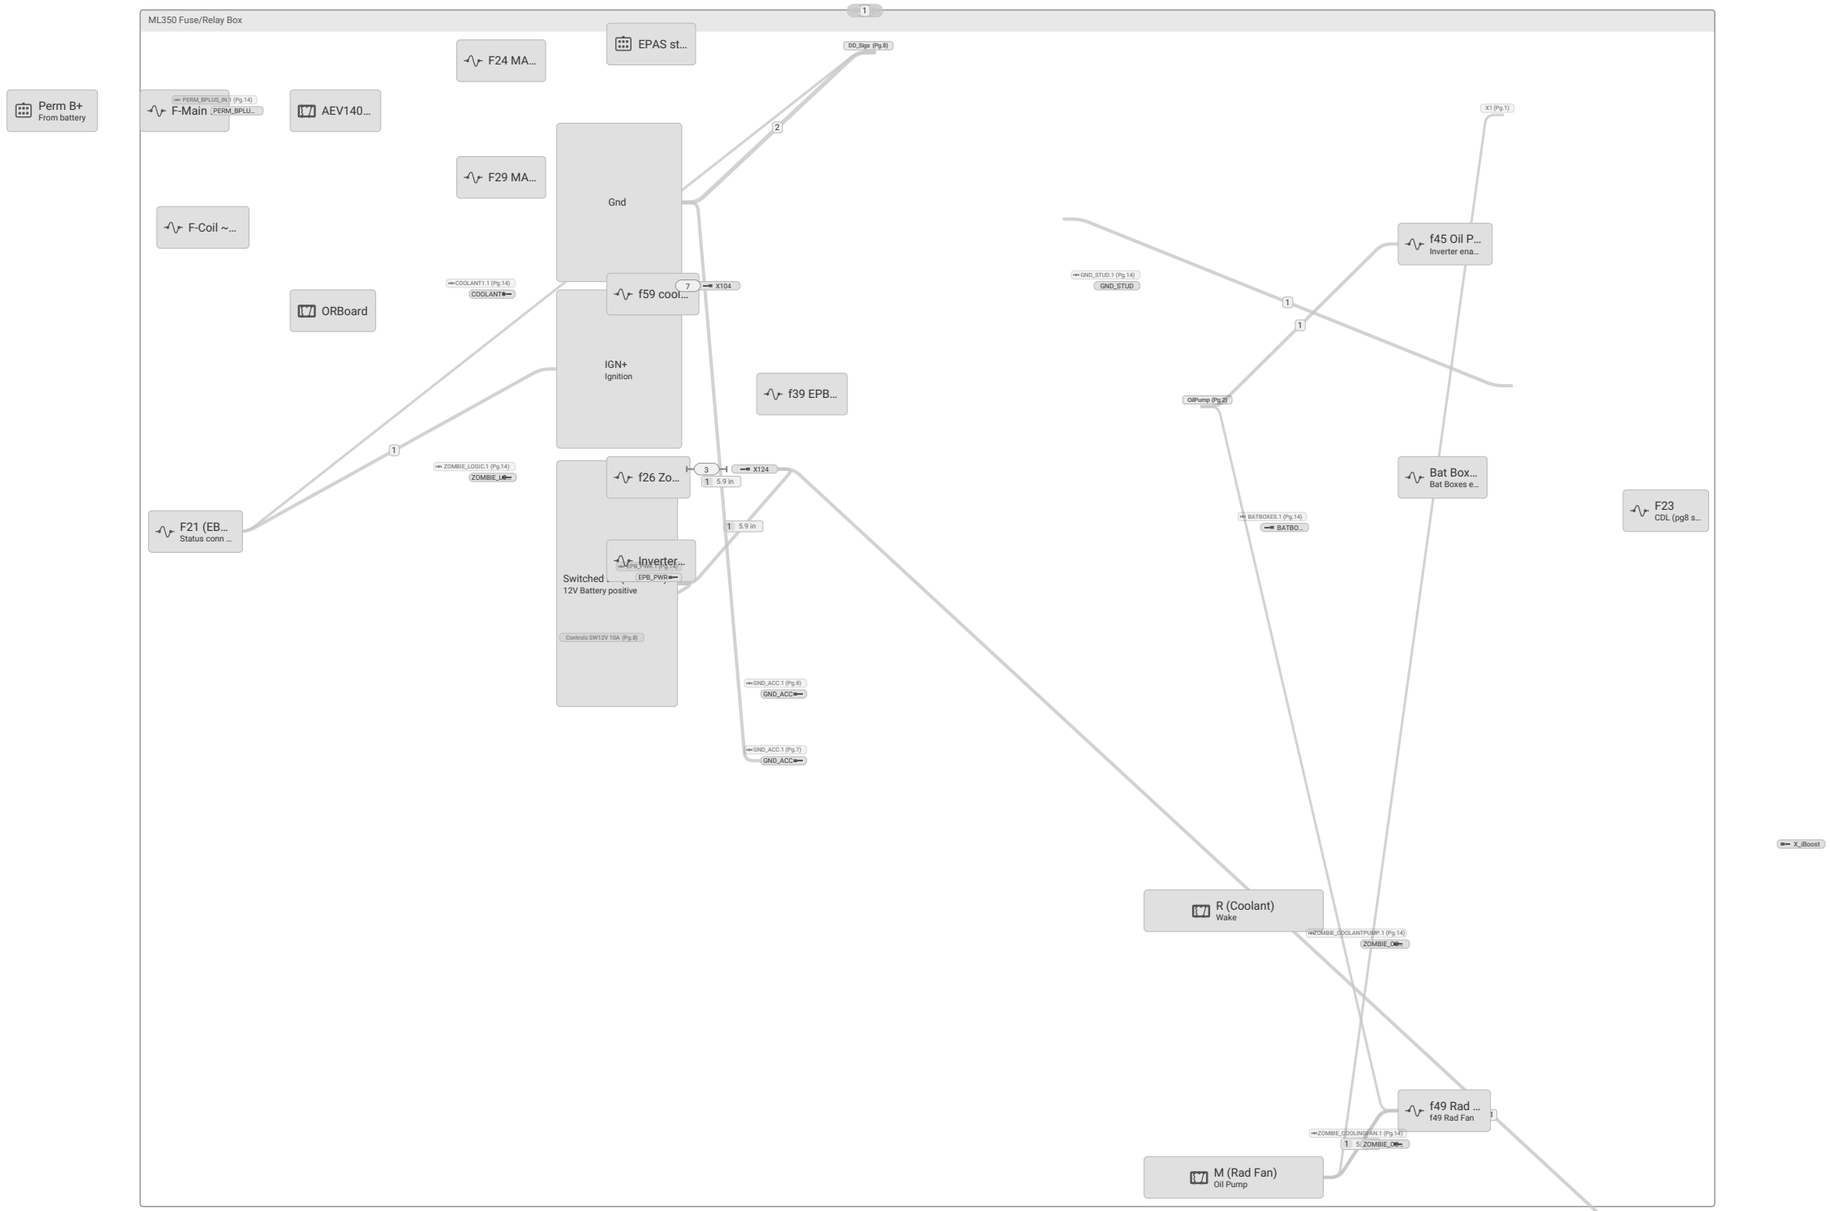
ShiftConn
Shift Connector

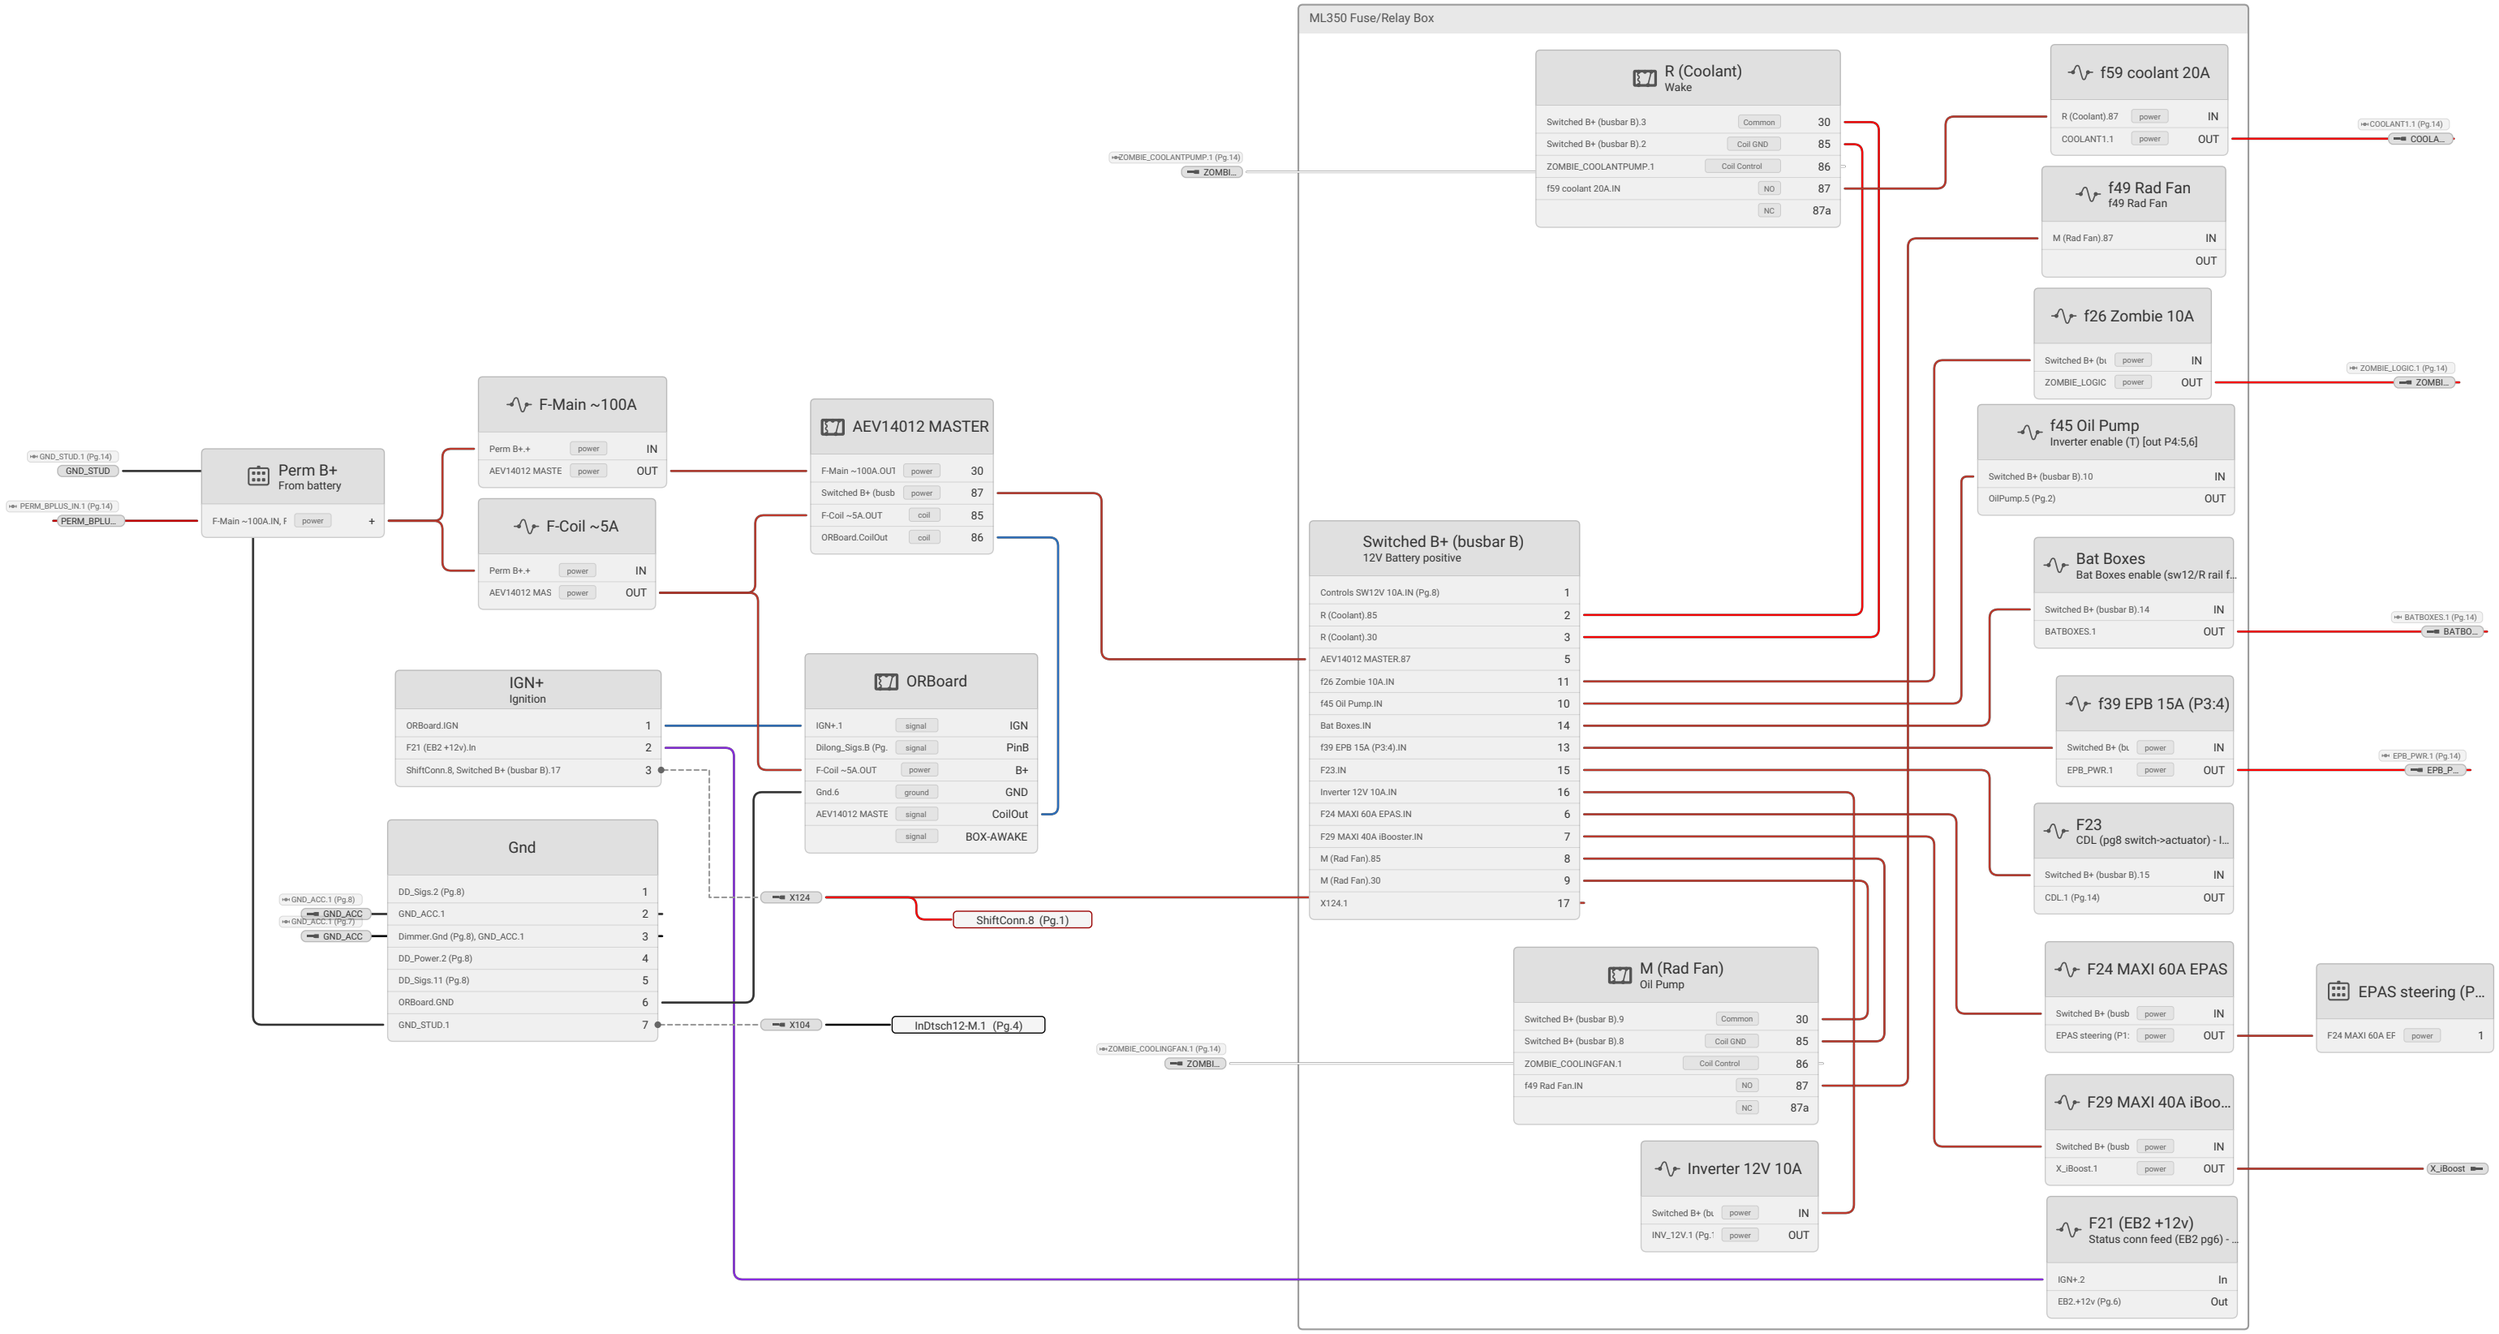
	D	1
	N	2
Inverter.25	P	3
	R	4
	MJ	5
	FD	6
	B	7
X124.1	B+	8
	RV	9

IGN+.3 (Pg.3)
X124
Switched B+ (busbar B).17 (Pg.3)

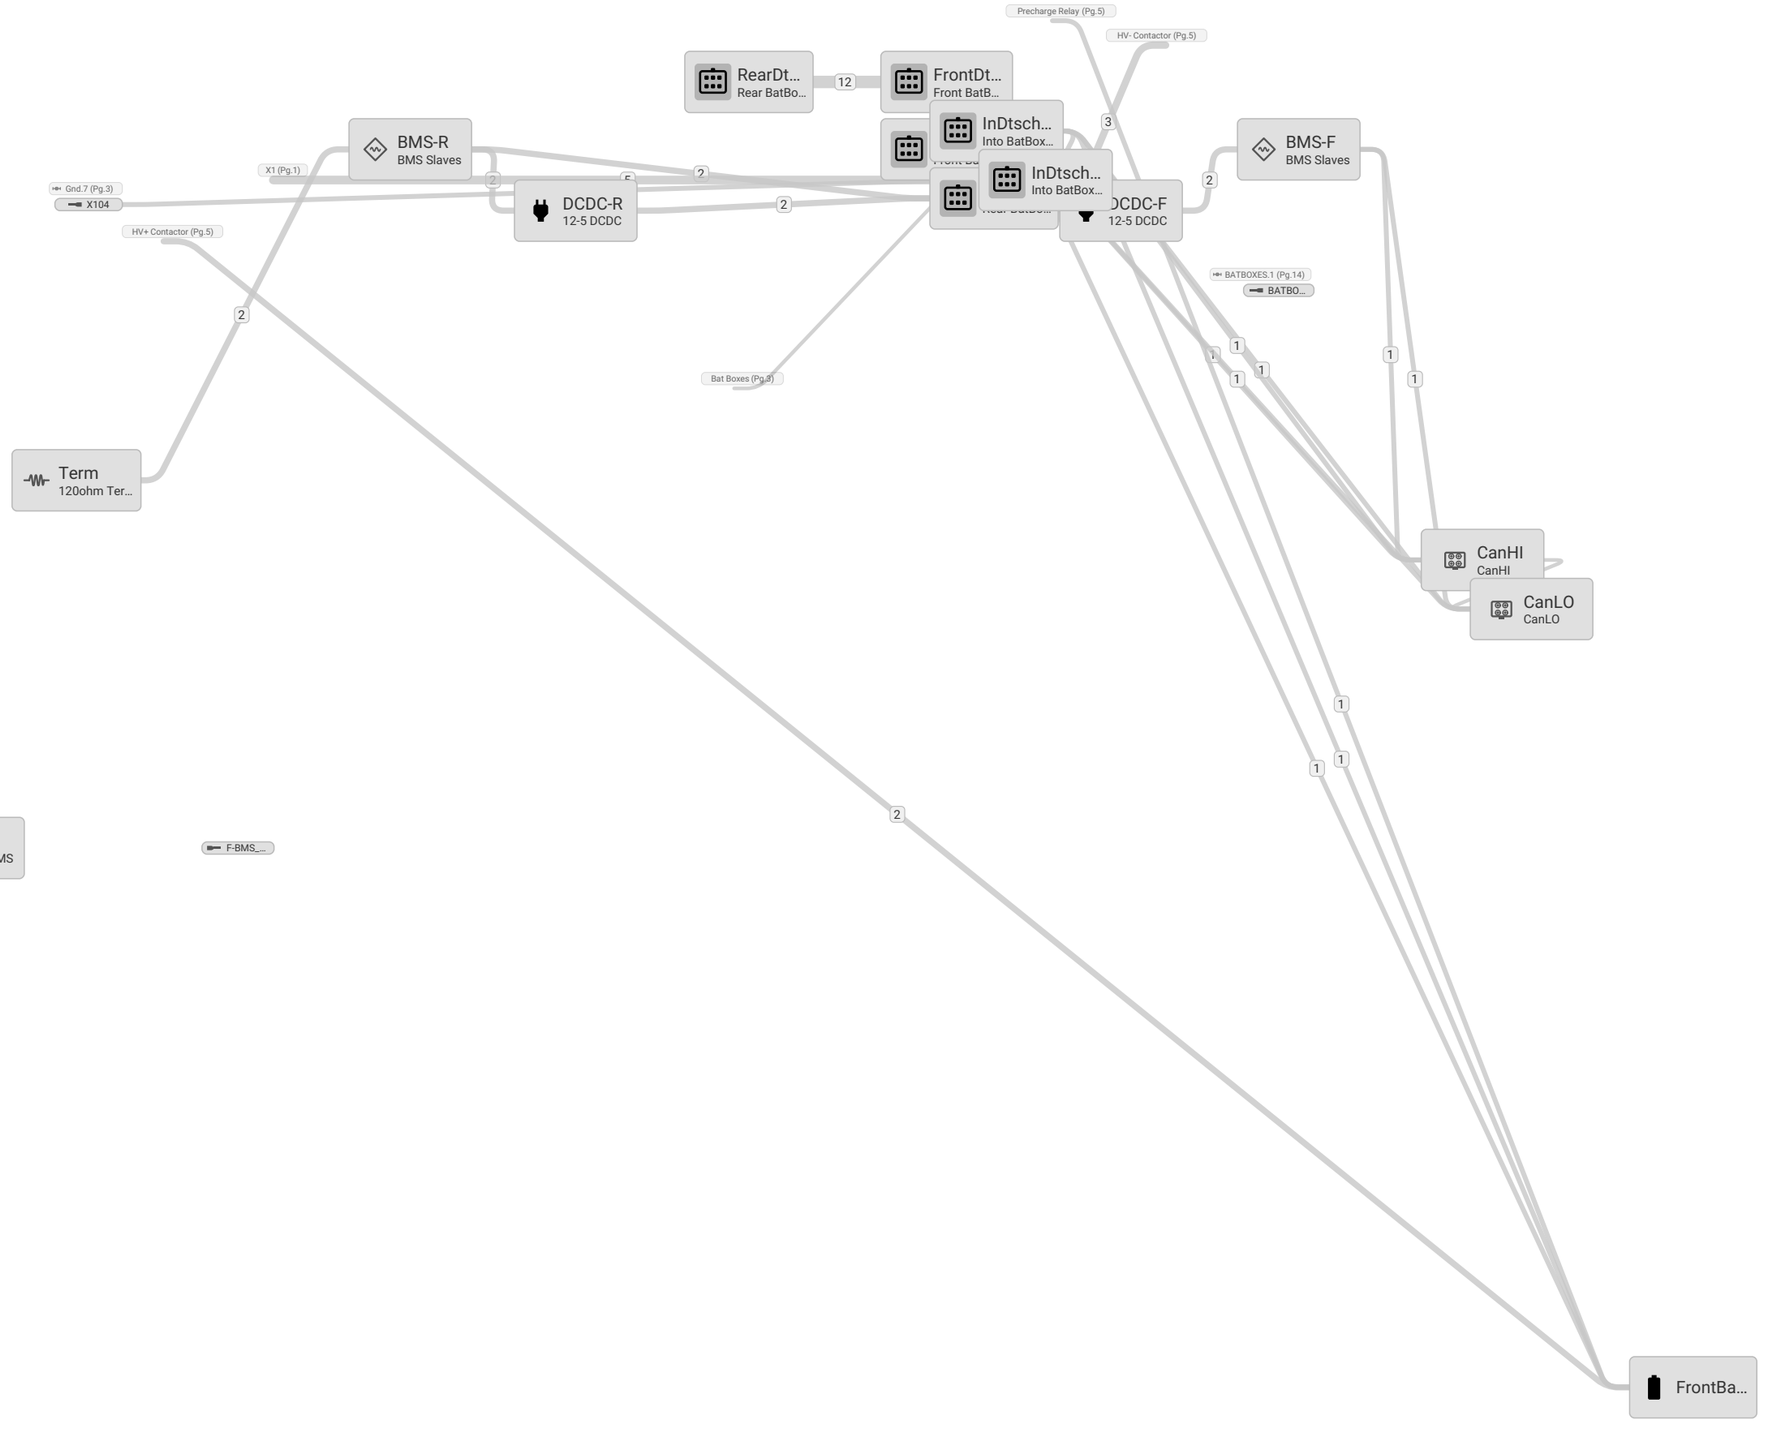

Gnd.1 (Pg.3)
X93
1
OilPump
L110F Oil p…
1
X1 (Pg.1)


OilPump
L110F Oil pump connector
1
2
3
4
f45 Oil Pump.C
+12V
5
X1.30 (Pg.1)
PWMin
6
PWMout
7
8
9
10
11
X93.1
CaseGND
12
Gnd.1 (Pg.3)
X93

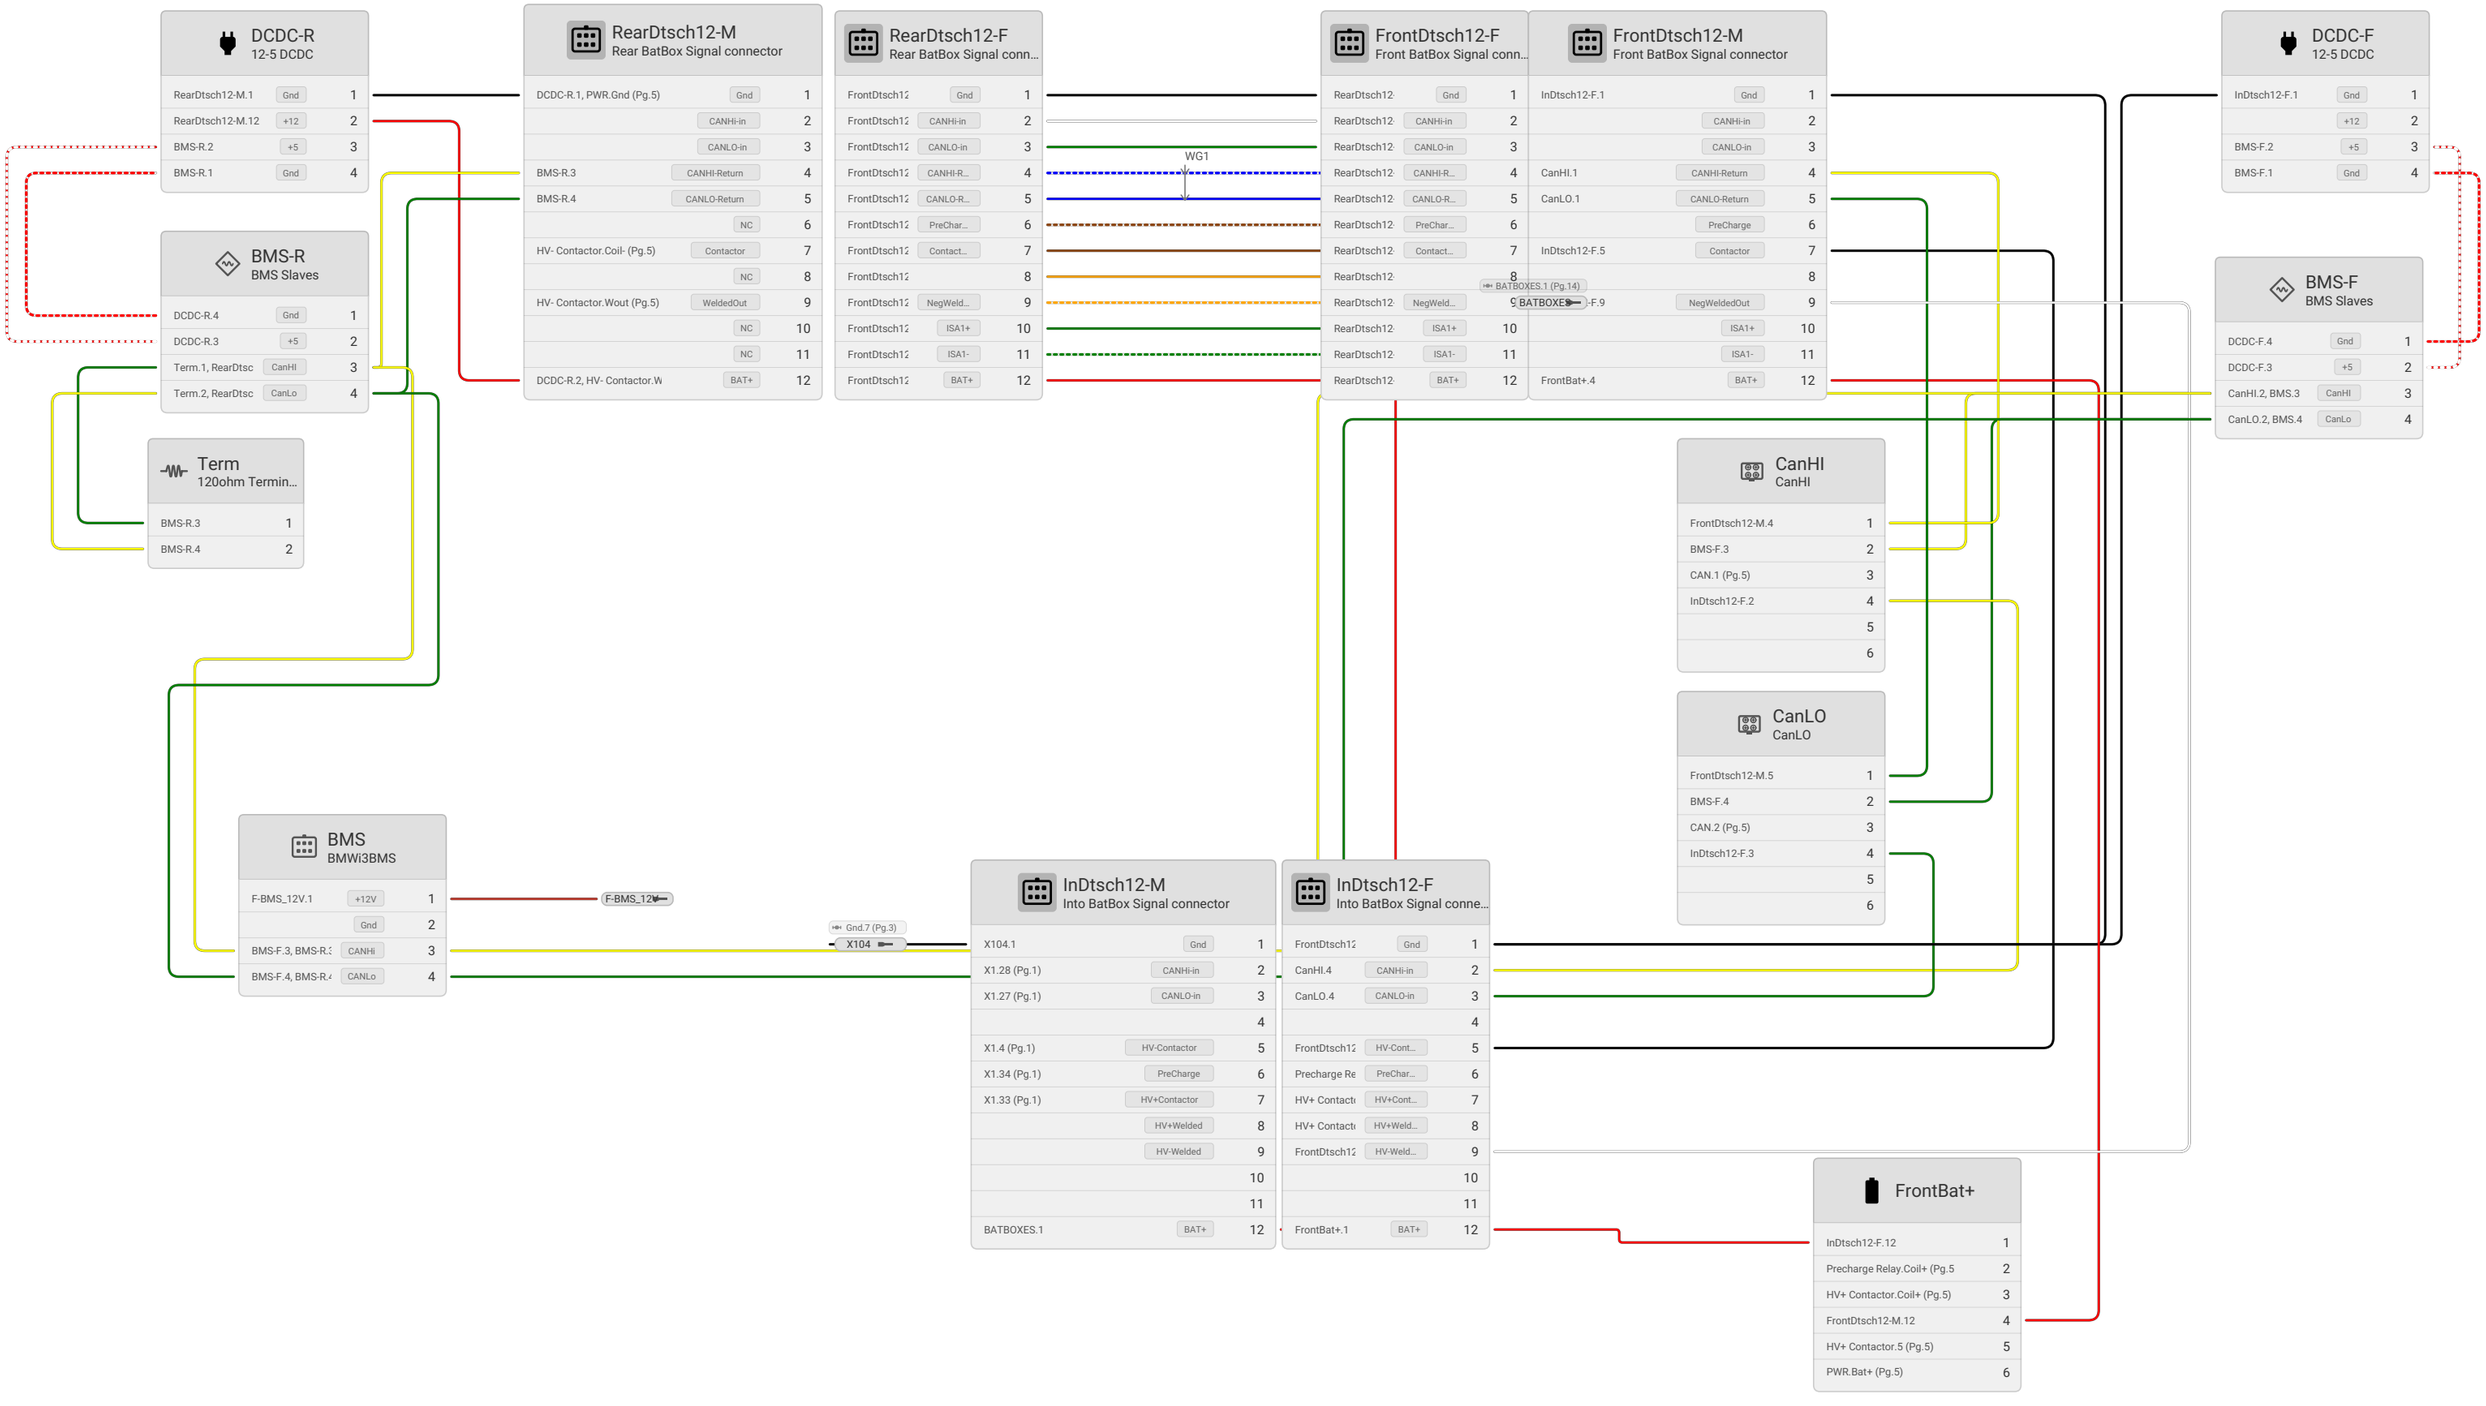

ML350 Fuse/Relay Box
Perm B+
From battery
F-Main
AEV140...
F24 MA...
EPAS st...
F29 MA...
F-Coil ~...
ORBoard
Gnd
IGN+
Ignition
f59 cool...
f39 EPB...
f26 Zo...
Inverter...
F21 (EB...
Status conn ...
Switched
12V Battery positive
f45 Oil P...
Inverter ena...
Bat Box...
Bat Boxes e...
F23
CDL (pg8 s...
R (Coolant)
Wake
M (Rad Fan)
Oil Pump
f49 Rad ...
f49 Rad Fan
X_IBoost

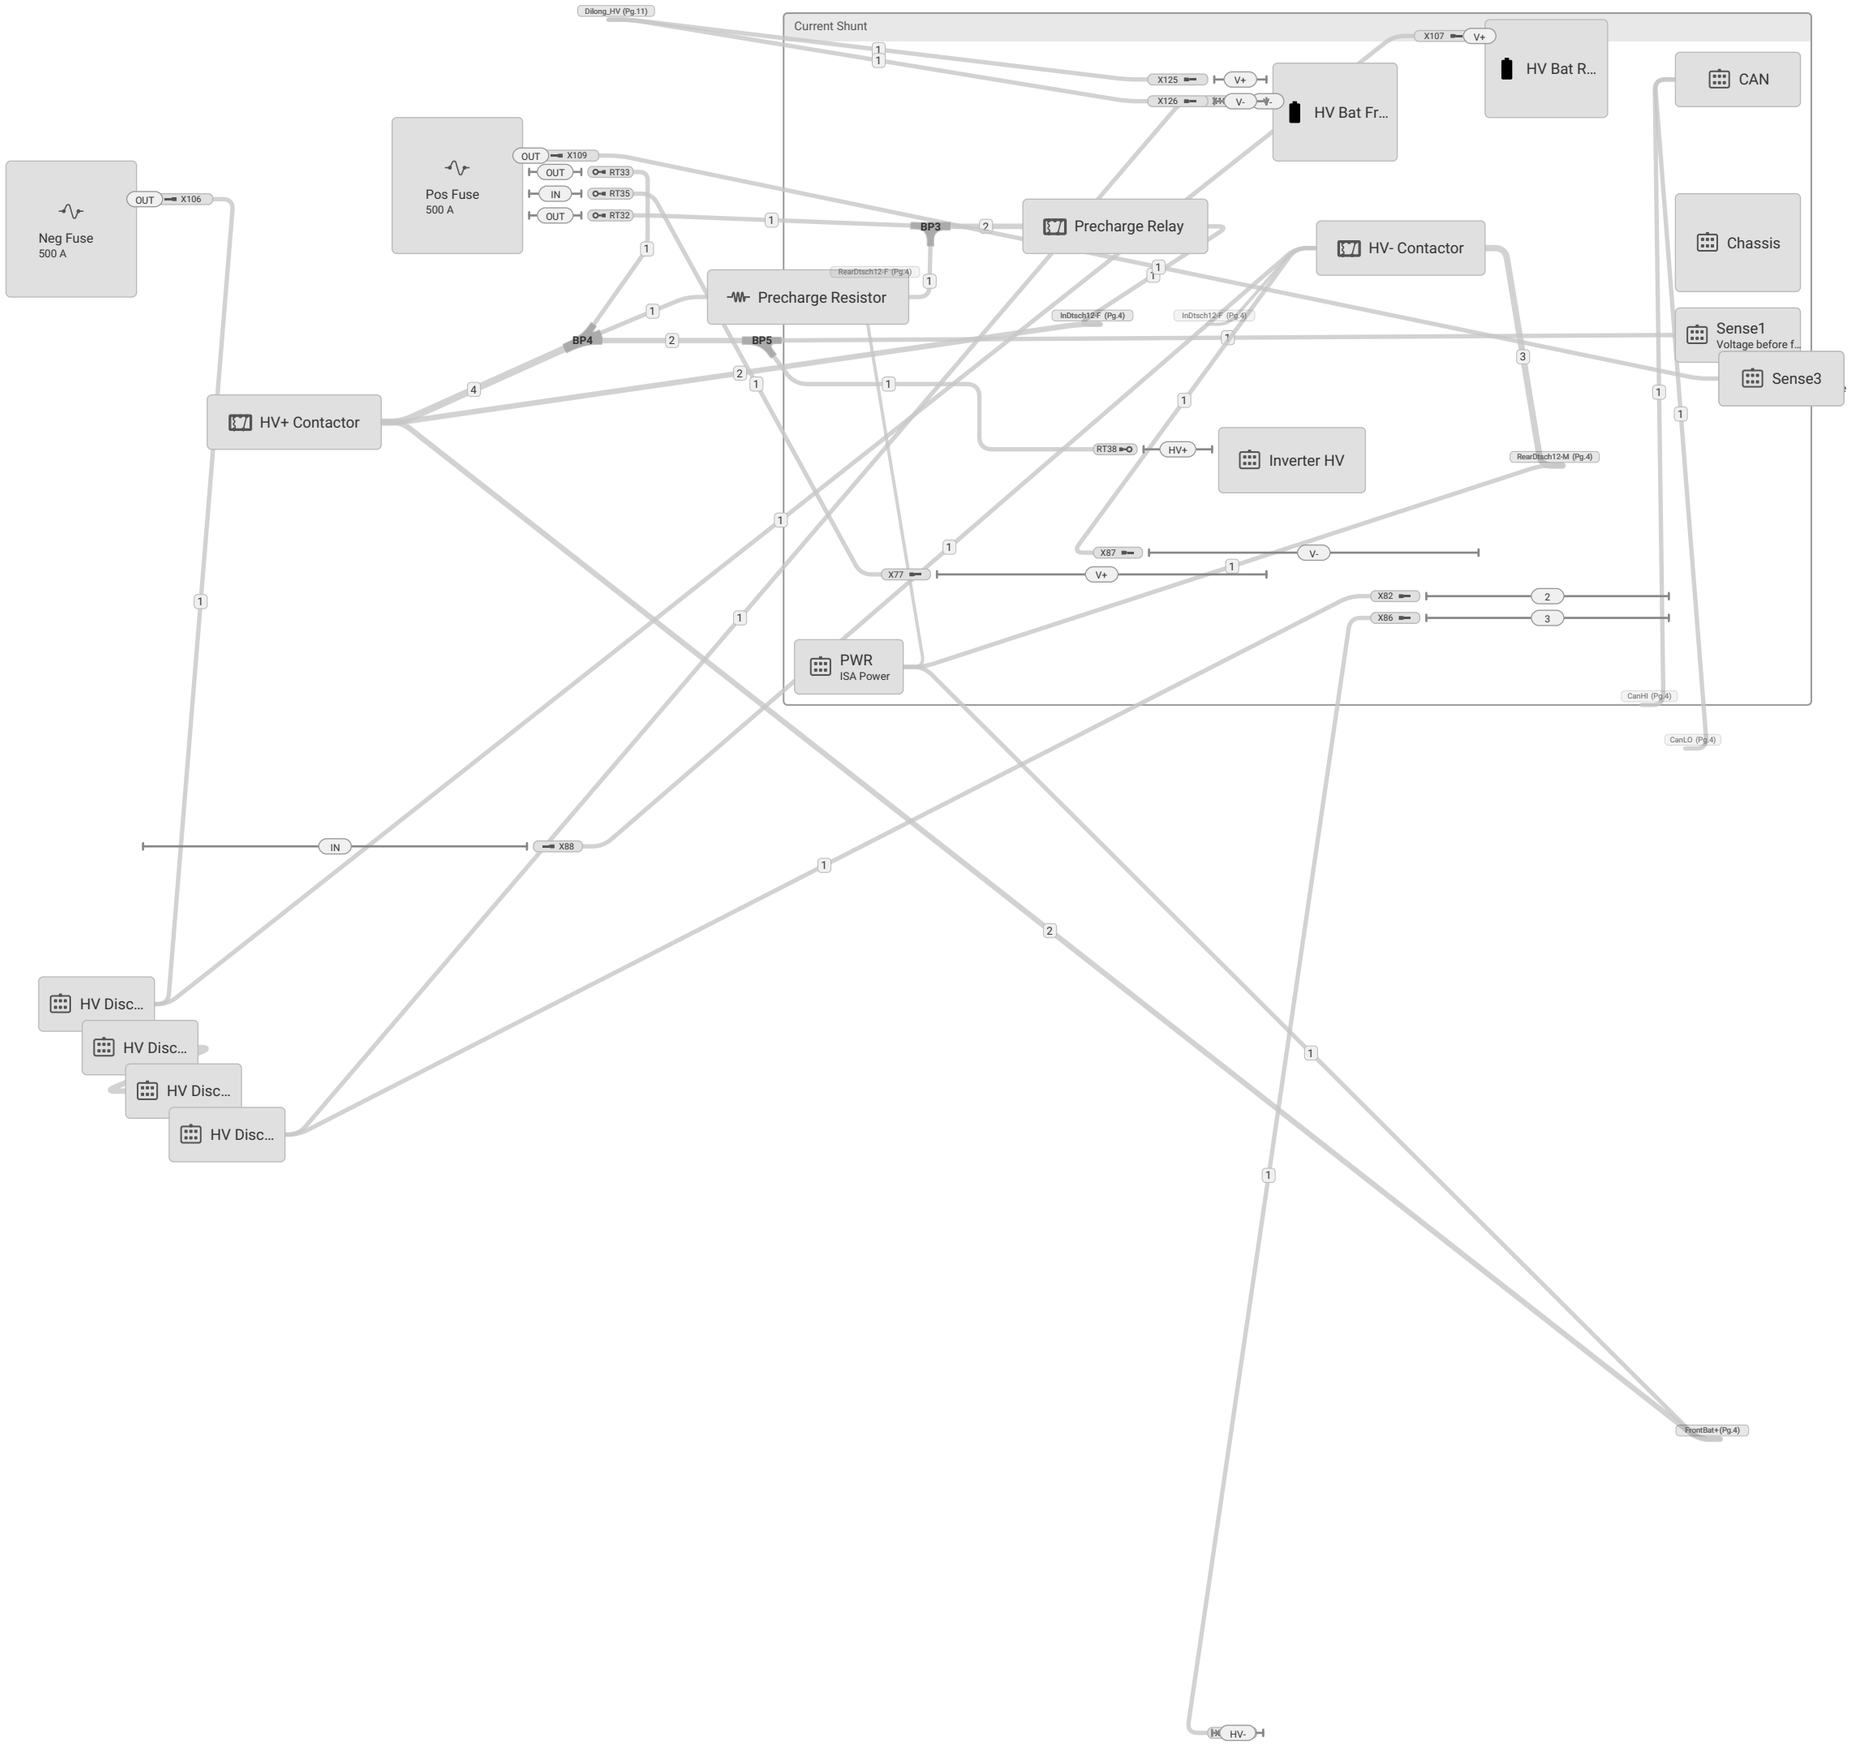


FuseRelay Panel — Schematic

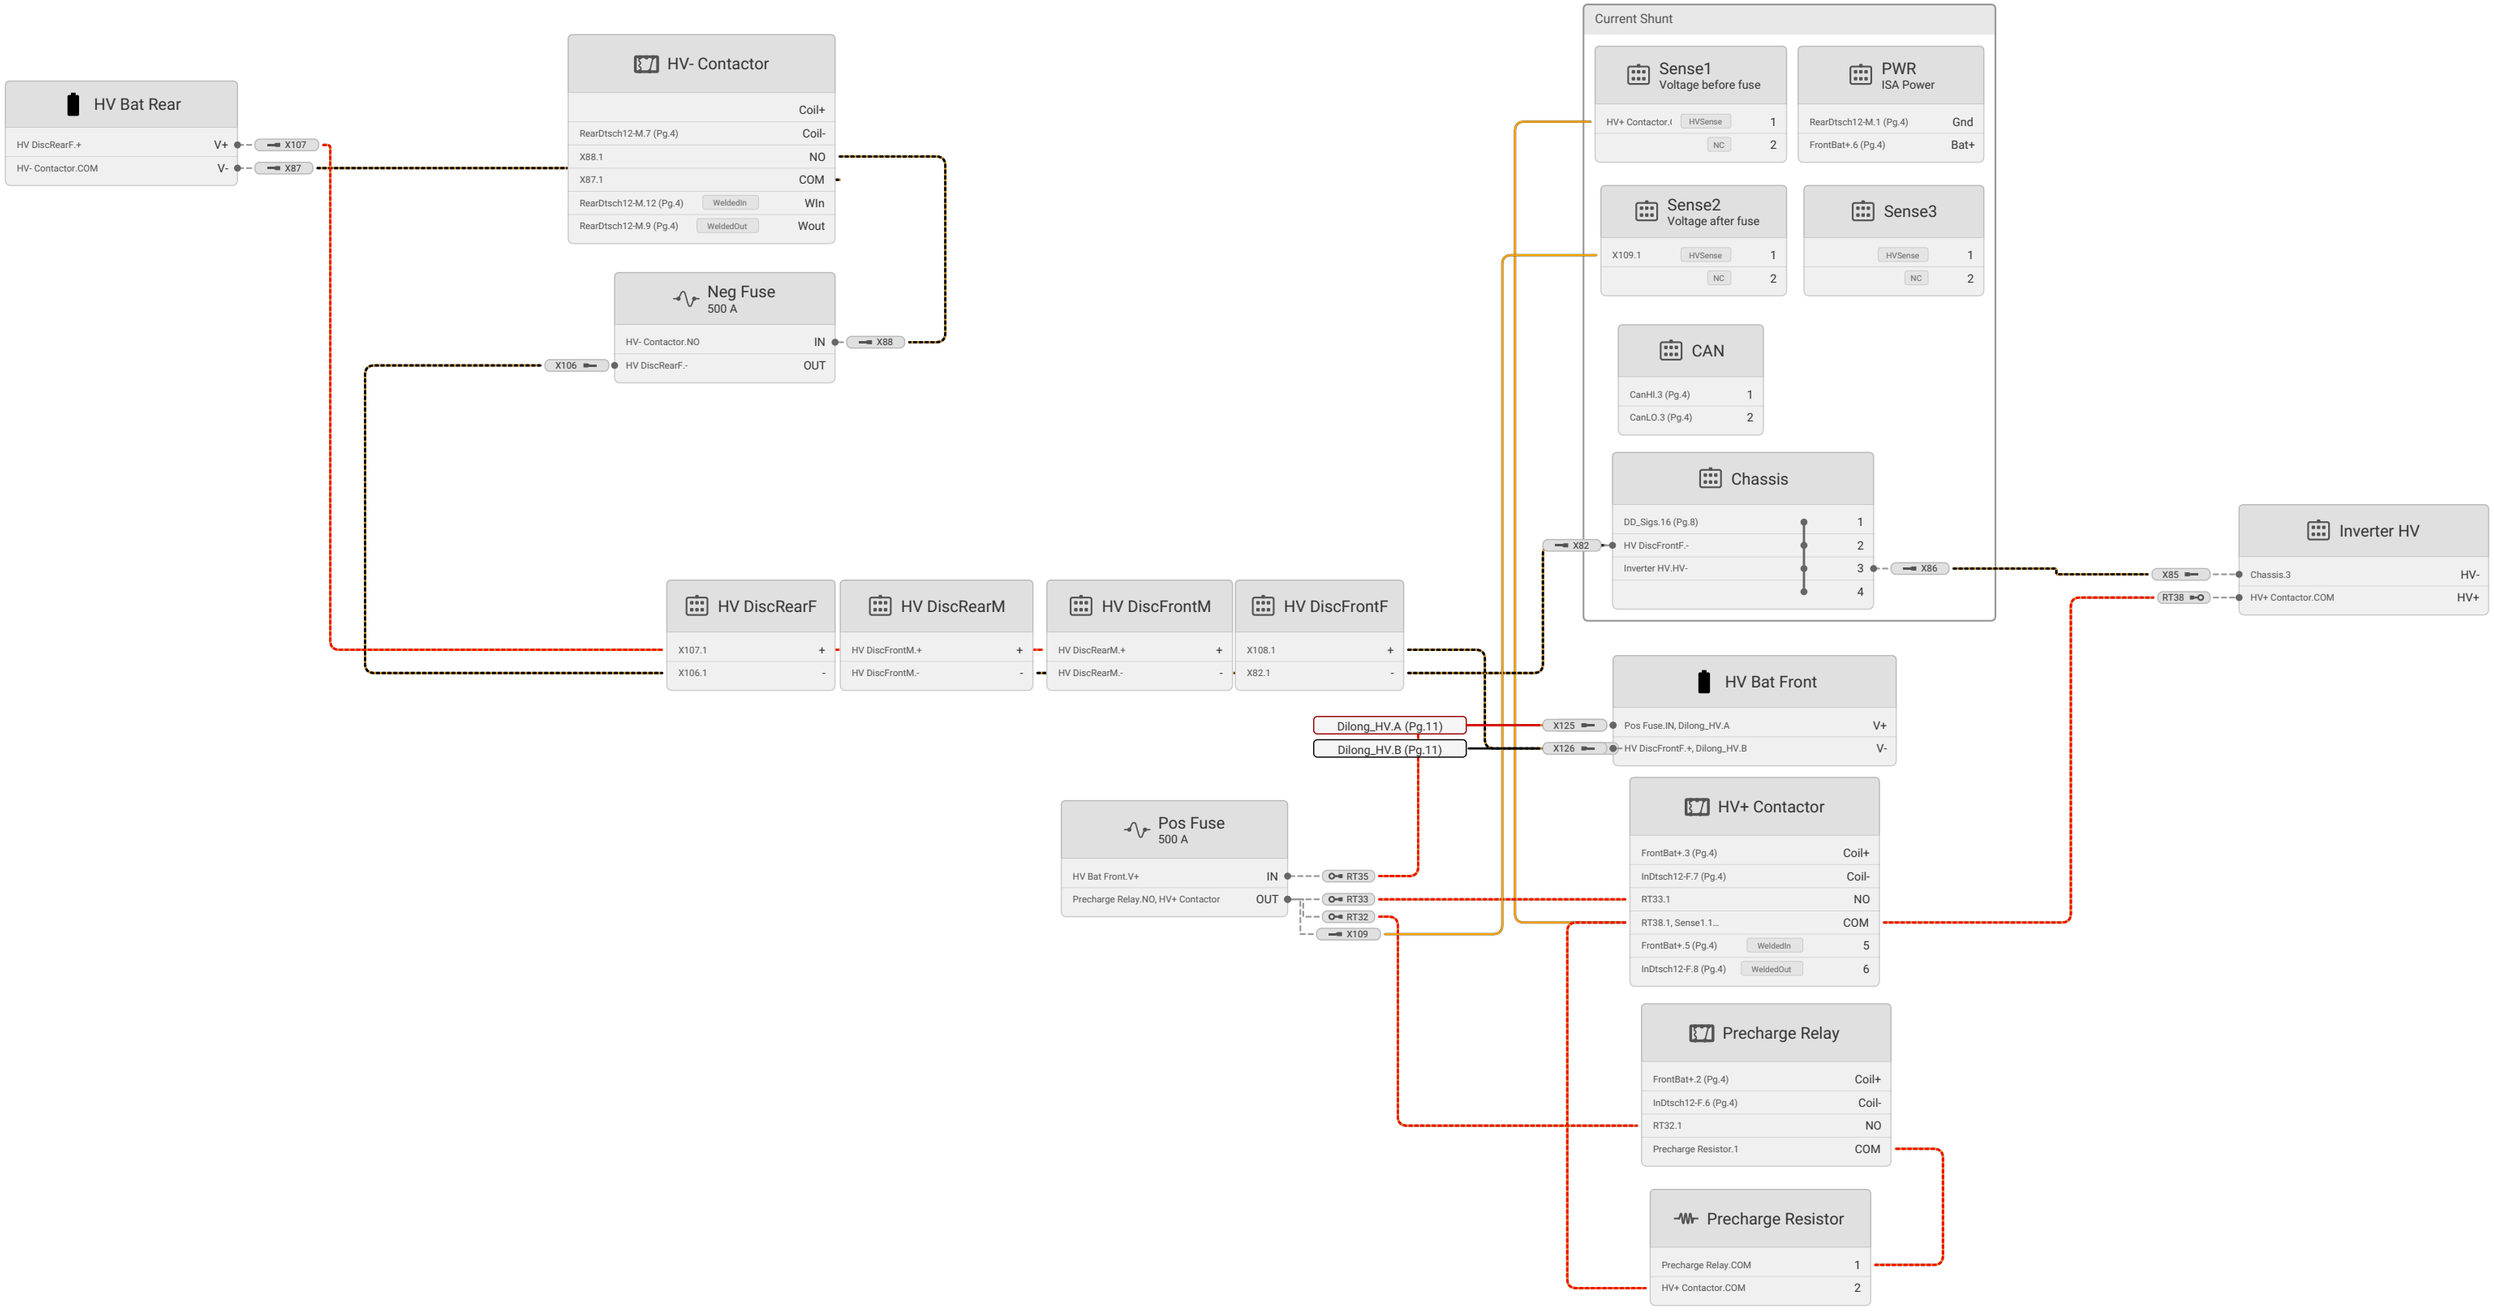


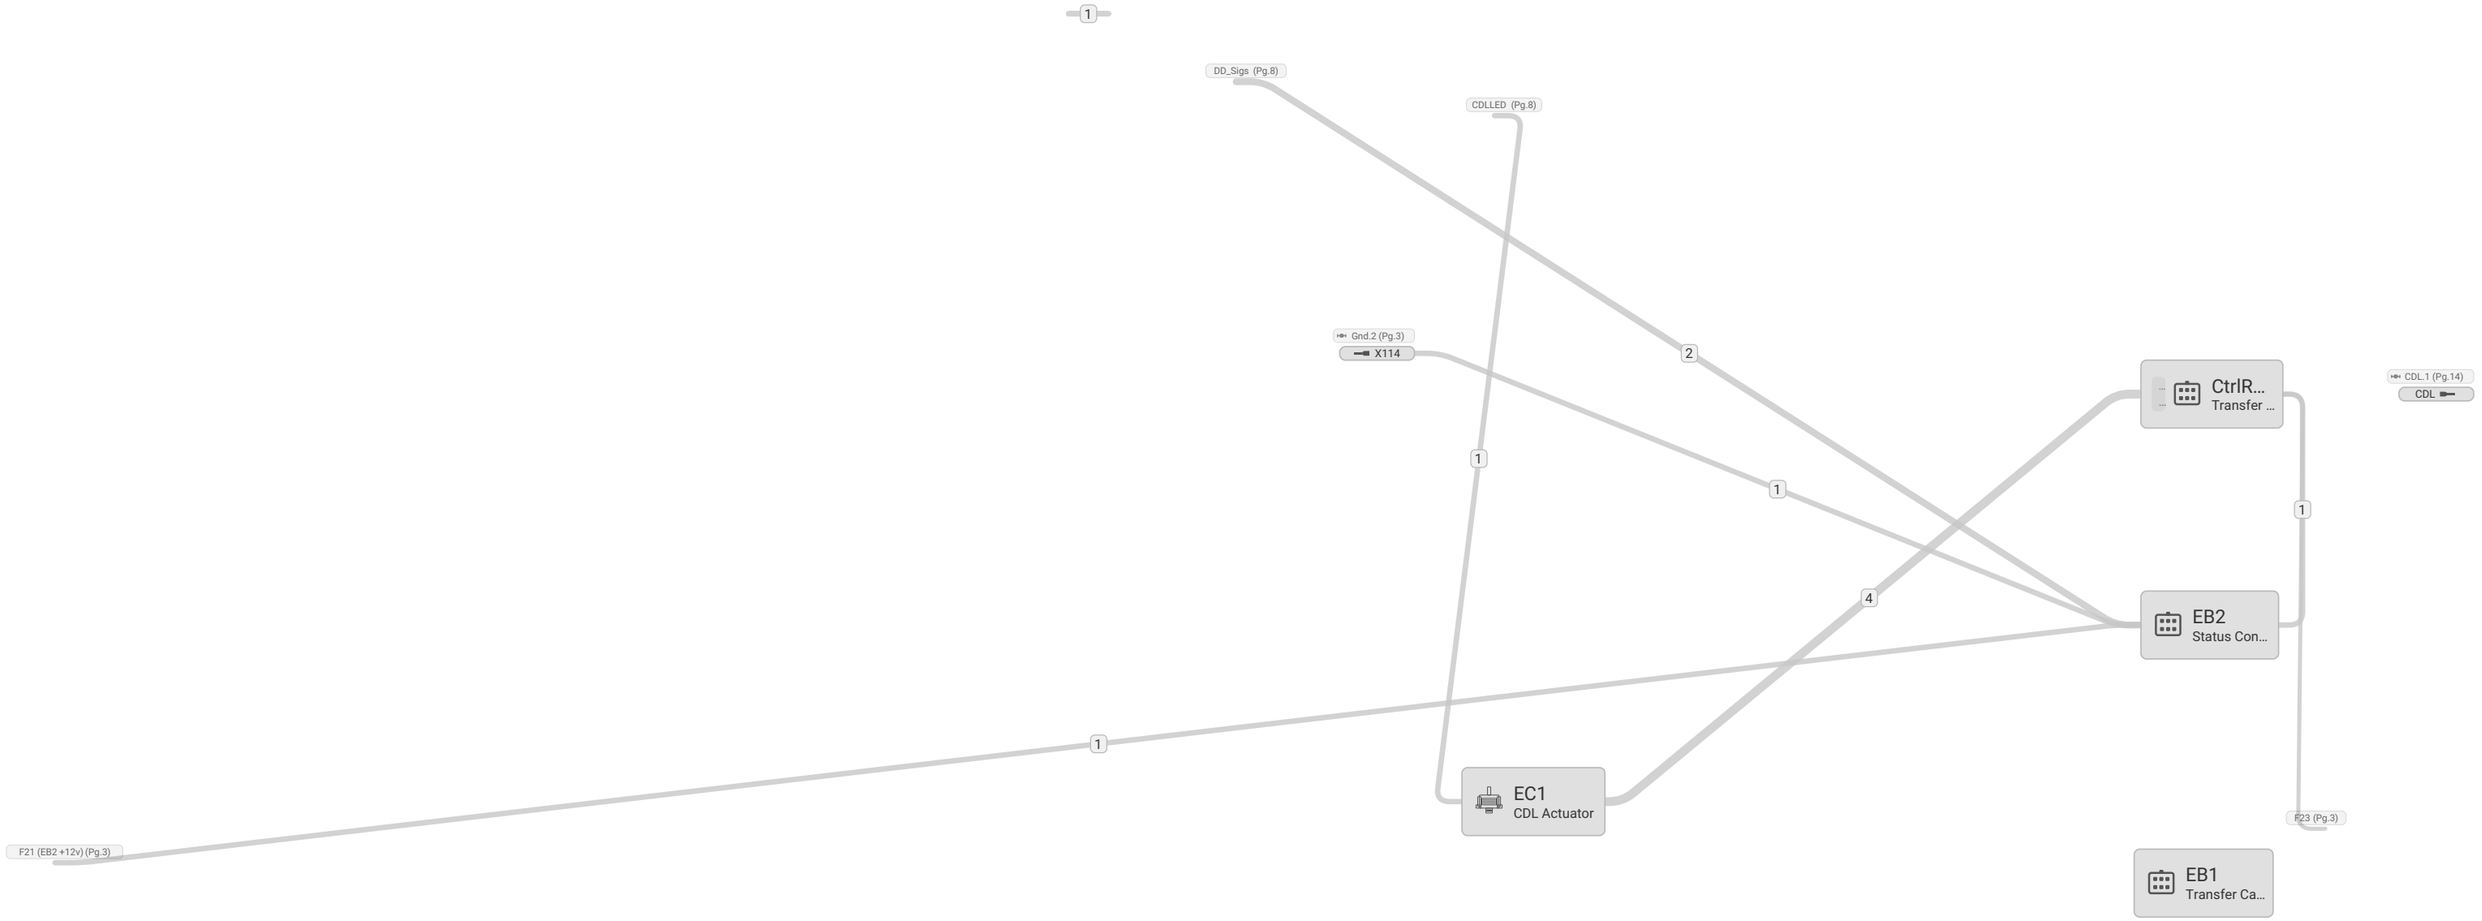
Battery box LV — Layout


DCDC-R
12-5 DCDC
RearDtsch12-M.1 Gnd 1
RearDtsch12-M.12 +12 2
BMS-R.2 +5 3
BMS-R.1 Gnd 4
BMS-R
BMS Slaves
DCDC-R.4 Gnd 1
DCDC-R.3 +5 2
Term.1, RearDtsc CanHI 3
Term.2, RearDtsc CanLo 4
Term
120ohm Termin...
BMS-R.3 1
BMS-R.4 2
RearDtsch12-M
Rear BatBox Signal connector
DCDC-R.1, PWR.Gnd (Pg.5) Gnd 1
CANHi-in 2
CANLO-in 3
BMS-R.3 CANHI-Return 4
BMS-R.4 CANLO-Return 5
NC 6
HV- Contactor.Coil- (Pg.5) Contactor 7
NC 8
HV- Contactor.Wout (Pg.5) WeldedOut 9
NC 10
NC 11
DCDC-R.2, HV- Contactor.W BAT+ 12
RearDtsch12-F
Rear BatBox Signal conn...
FrontDtsch12 Gnd 1
FrontDtsch12 CANHi-in 2
FrontDtsch12 CANLO-in 3
FrontDtsch12 CANHI-R... 4
FrontDtsch12 CANLO-R... 5
FrontDtsch12 PreChar... 6
FrontDtsch12 Contact... 7
FrontDtsch12 8
FrontDtsch12 NegWeld... 9
FrontDtsch12 ISA1+ 10
FrontDtsch12 ISA1- 11
FrontDtsch12 BAT+ 12
WG1
FrontDtsch12-F
Front BatBox Signal conn...
RearDtsch12 Gnd 1
RearDtsch12 CANHi-in 2
RearDtsch12 CANLO-in 3
RearDtsch12 CANHI-R... 4
RearDtsch12 CANLO-R... 5
RearDtsch12 PreChar... 6
RearDtsch12 Contact... 7
RearDtsch12 8
BATBOXES.1 (Pg.14)
RearDtsch12 NegWeld... 9 BATBOXES -F.9
RearDtsch12 ISA1+ 10
RearDtsch12 ISA1- 11
RearDtsch12 BAT+ 12
FrontDtsch12-M
Front BatBox Signal connector
InDtsch12-F.1 Gnd 1
CANHi-in 2
CANLO-in 3
CanHI.1 CANHI-Return 4
CanLO.1 CANLO-Return 5
PreCharge 6
InDtsch12-F.5 Contactor 7
8
NegWeldedOut 9
ISA1+ 10
ISA1- 11
FrontBat+.4 BAT+ 12
DCDC-F
12-5 DCDC
InDtsch12-F.1 Gnd 1
+12 2
BMS-F.2 +5 3
BMS-F.1 Gnd 4
BMS-F
BMS Slaves
DCDC-F.4 Gnd 1
DCDC-F.3 +5 2
CanHI.2, BMS.3 CanHI 3
CanLO.2, BMS.4 CanLo 4
CanHI
CanHI
FrontDtsch12-M.4 1
BMS-F.3 2
CAN.1 (Pg.5) 3
InDtsch12-F.2 4
5
6
CanLO
CanLO
FrontDtsch12-M.5 1
BMS-F.4 2
CAN.2 (Pg.5) 3
InDtsch12-F.3 4
5
6
BMS
BMWi3BMS
F-BMS_12V.1 +12V 1
Gnd 2
BMS-F.3, BMS-R.3 CANHi 3
BMS-F.4, BMS-R.4 CANLo 4
F-BMS_12V
Gnd.7 (Pg.3)
X104
InDtsch12-M
Into BatBox Signal connector
X104.1 Gnd 1
X1.28 (Pg.1) CANHi-in 2
X1.27 (Pg.1) CANLO-in 3
4
X1.4 (Pg.1) HV-Contactor 5
X1.34 (Pg.1) PreCharge 6
X1.33 (Pg.1) HV+Contactor 7
HV+Welded 8
HV-Welded 9
10
11
BATBOXES.1 BAT+ 12
InDtsch12-F
Into BatBox Signal conne...
FrontDtsch12 Gnd 1
CanHI.4 CANHi-in 2
CanLO.4 CANLO-in 3
4
FrontDtsch12 HV-Cont... 5
Precharge Re PreChar... 6
HV+ Contacto HV+Cont... 7
HV+ Contacto HV+Weld... 8
FrontDtsch12 HV-Weld... 9
10
11
FrontBat+.1 BAT+ 12
FrontBat+
InDtsch12-F.12 1
Precharge Relay.Coil+ (Pg.5 2
HV+ Contactor.Coil+ (Pg.5) 3
FrontDtsch12-M.12 4
HV+ Contactor.5 (Pg.5) 5
PWR.Bat+ (Pg.5) 6



HV Batteries — Layout


HV Bat Rear
HV DiscRearF.+
V+
X107
HV- Contactor.COM
V-
X87
HV- Contactor
Coil+
RearDtsch12-M.7 (Pg.4)
Coil-
X88.1
NO
X87.1
COM
RearDtsch12-M.12 (Pg.4)
WeldedIn
WIn
RearDtsch12-M.9 (Pg.4)
WeldedOut
Wout
Neg Fuse
500 A
HV- Contactor.NO
IN
X88
X106
HV DiscRearF.-
OUT
HV DiscRearF
X107.1
+
X106.1
-
HV DiscRearM
HV DiscFrontM.+
+
HV DiscFrontM.-
-
HV DiscFrontM
HV DiscRearM.+
+
HV DiscRearM.-
-
HV DiscFrontF
X108.1
+
X82.1
-
Current Shunt
Sense1
Voltage before fuse
HV+ Contactor.(
HVSense
1
NC
2
PWR
ISA Power
RearDtsch12-M.1 (Pg.4)
Gnd
FrontBat+.6 (Pg.4)
Bat+
Sense2
Voltage after fuse
X109.1
HVSense
1
NC
2
Sense3
HVSense
1
NC
2
CAN
CanHI.3 (Pg.4)
1
CanLO.3 (Pg.4)
2
Chassis
DD_Sigs.16 (Pg.8)
1
X82
HV DiscFrontF.-
2
Inverter HV.HV-
3
X86
4
Inverter HV
X85
Chassis.3
HV-
RT38
HV+ Contactor.COM
HV+
HV Bat Front
Dilong_HV.A (Pg.11)
X125
Pos Fuse.IN, Dilong_HV.A
V+
Dilong_HV.B (Pg.11)
X126
HV DiscFrontF.+, Dilong_HV.B
V-
Pos Fuse
500 A
HV Bat Front.V+
IN
RT35
Precharge Relay.NO, HV+ Contactor
OUT
RT33
RT32
X109
HV+ Contactor
FrontBat+.3 (Pg.4)
Coil+
InDtsch12-F.7 (Pg.4)
Coil-
RT33.1
NO
RT38.1, Sense1.1...
COM
FrontBat+.5 (Pg.4)
WeldedIn
5
InDtsch12-F.8 (Pg.4)
WeldedOut
6
Precharge Relay
FrontBat+.2 (Pg.4)
Coil+
InDtsch12-F.6 (Pg.4)
Coil-
RT32.1
NO
Precharge Resistor.1
COM
Precharge Resistor
Precharge Relay.COM
1
HV+ Contactor.COM
2


1
DD_Sigs (Pg.8)
CDLLED (Pg.8)
2
Gnd.2 (Pg.3)
X114
1
CtrlR...
Transfer ...
CDL.1 (Pg.14)
CDL
1
4
EB2
Status Con...
1
EC1
CDL Actuator
F23 (Pg.3)
F21 (EB2 +12v) (Pg.3)
EB1
Transfer Ca...

Toyota 89531-...

CtrlRelay
Transfer Case control relay

EC1.3	Motor1	1
	Gnd	2
EB2.+12V, CDL.1	Sw12v+	3
EC1.2	Motor2	4
EC1.6	Pos1	5
	NC	6
CDLSw.1 (Pg.8)	Lock	7
	NC	8
CDLSw.3 (Pg.8)	Unlock	9
EC1.5	Pos2	10

CDL.1 (Pg.14)
CDL

EC1
CDL Actuator

		1
CtrlRelay.4	Motor2	2
CtrlRelay.1	Motor1	3
CDLLED.2 (Pg.8)	IndicatorGnd	4
CtrlRelay.10	Pos2	5
CtrlRelay.5	Pos1	6

EB1
Transfer Case L4 Position

DD_Sigs.8 (P	TCASE_L...	2

EB2
Status Connector

CtrlR	+12v	+12V
DD_S	4WD Ind...	4WD
DD_S	VSS	VSS
	NC	NC
	Neutral	Neutral
X114	GND	GND
F21	+12	+12v
	RevLt	RevLt

Gnd.2 (Pg.3)
X114

1

DD_Sigs (Pg.8)

3

GND_ACC.1 (Pg.3)

GND_ACC

Gnd.4 (Pg.3)

X98

1 5.9 in

1

PkBrk (Pg.8)

RedLedCtrl (Pg.8)

2

2

2

Caliper

2020 Rav4 …

2

PBCtrl

RevUS Parki…

EPB_PWR.1 (Pg.14)

EPB_PWR

GND_ACC.1 (Pg.3)

GND_ACC

Caliper
2020 Rav4 Caliper

PBCtrl.1	MotorTop	1
PBCtrl.2	MotorBot	2

Gnd.4 (Pg.3)

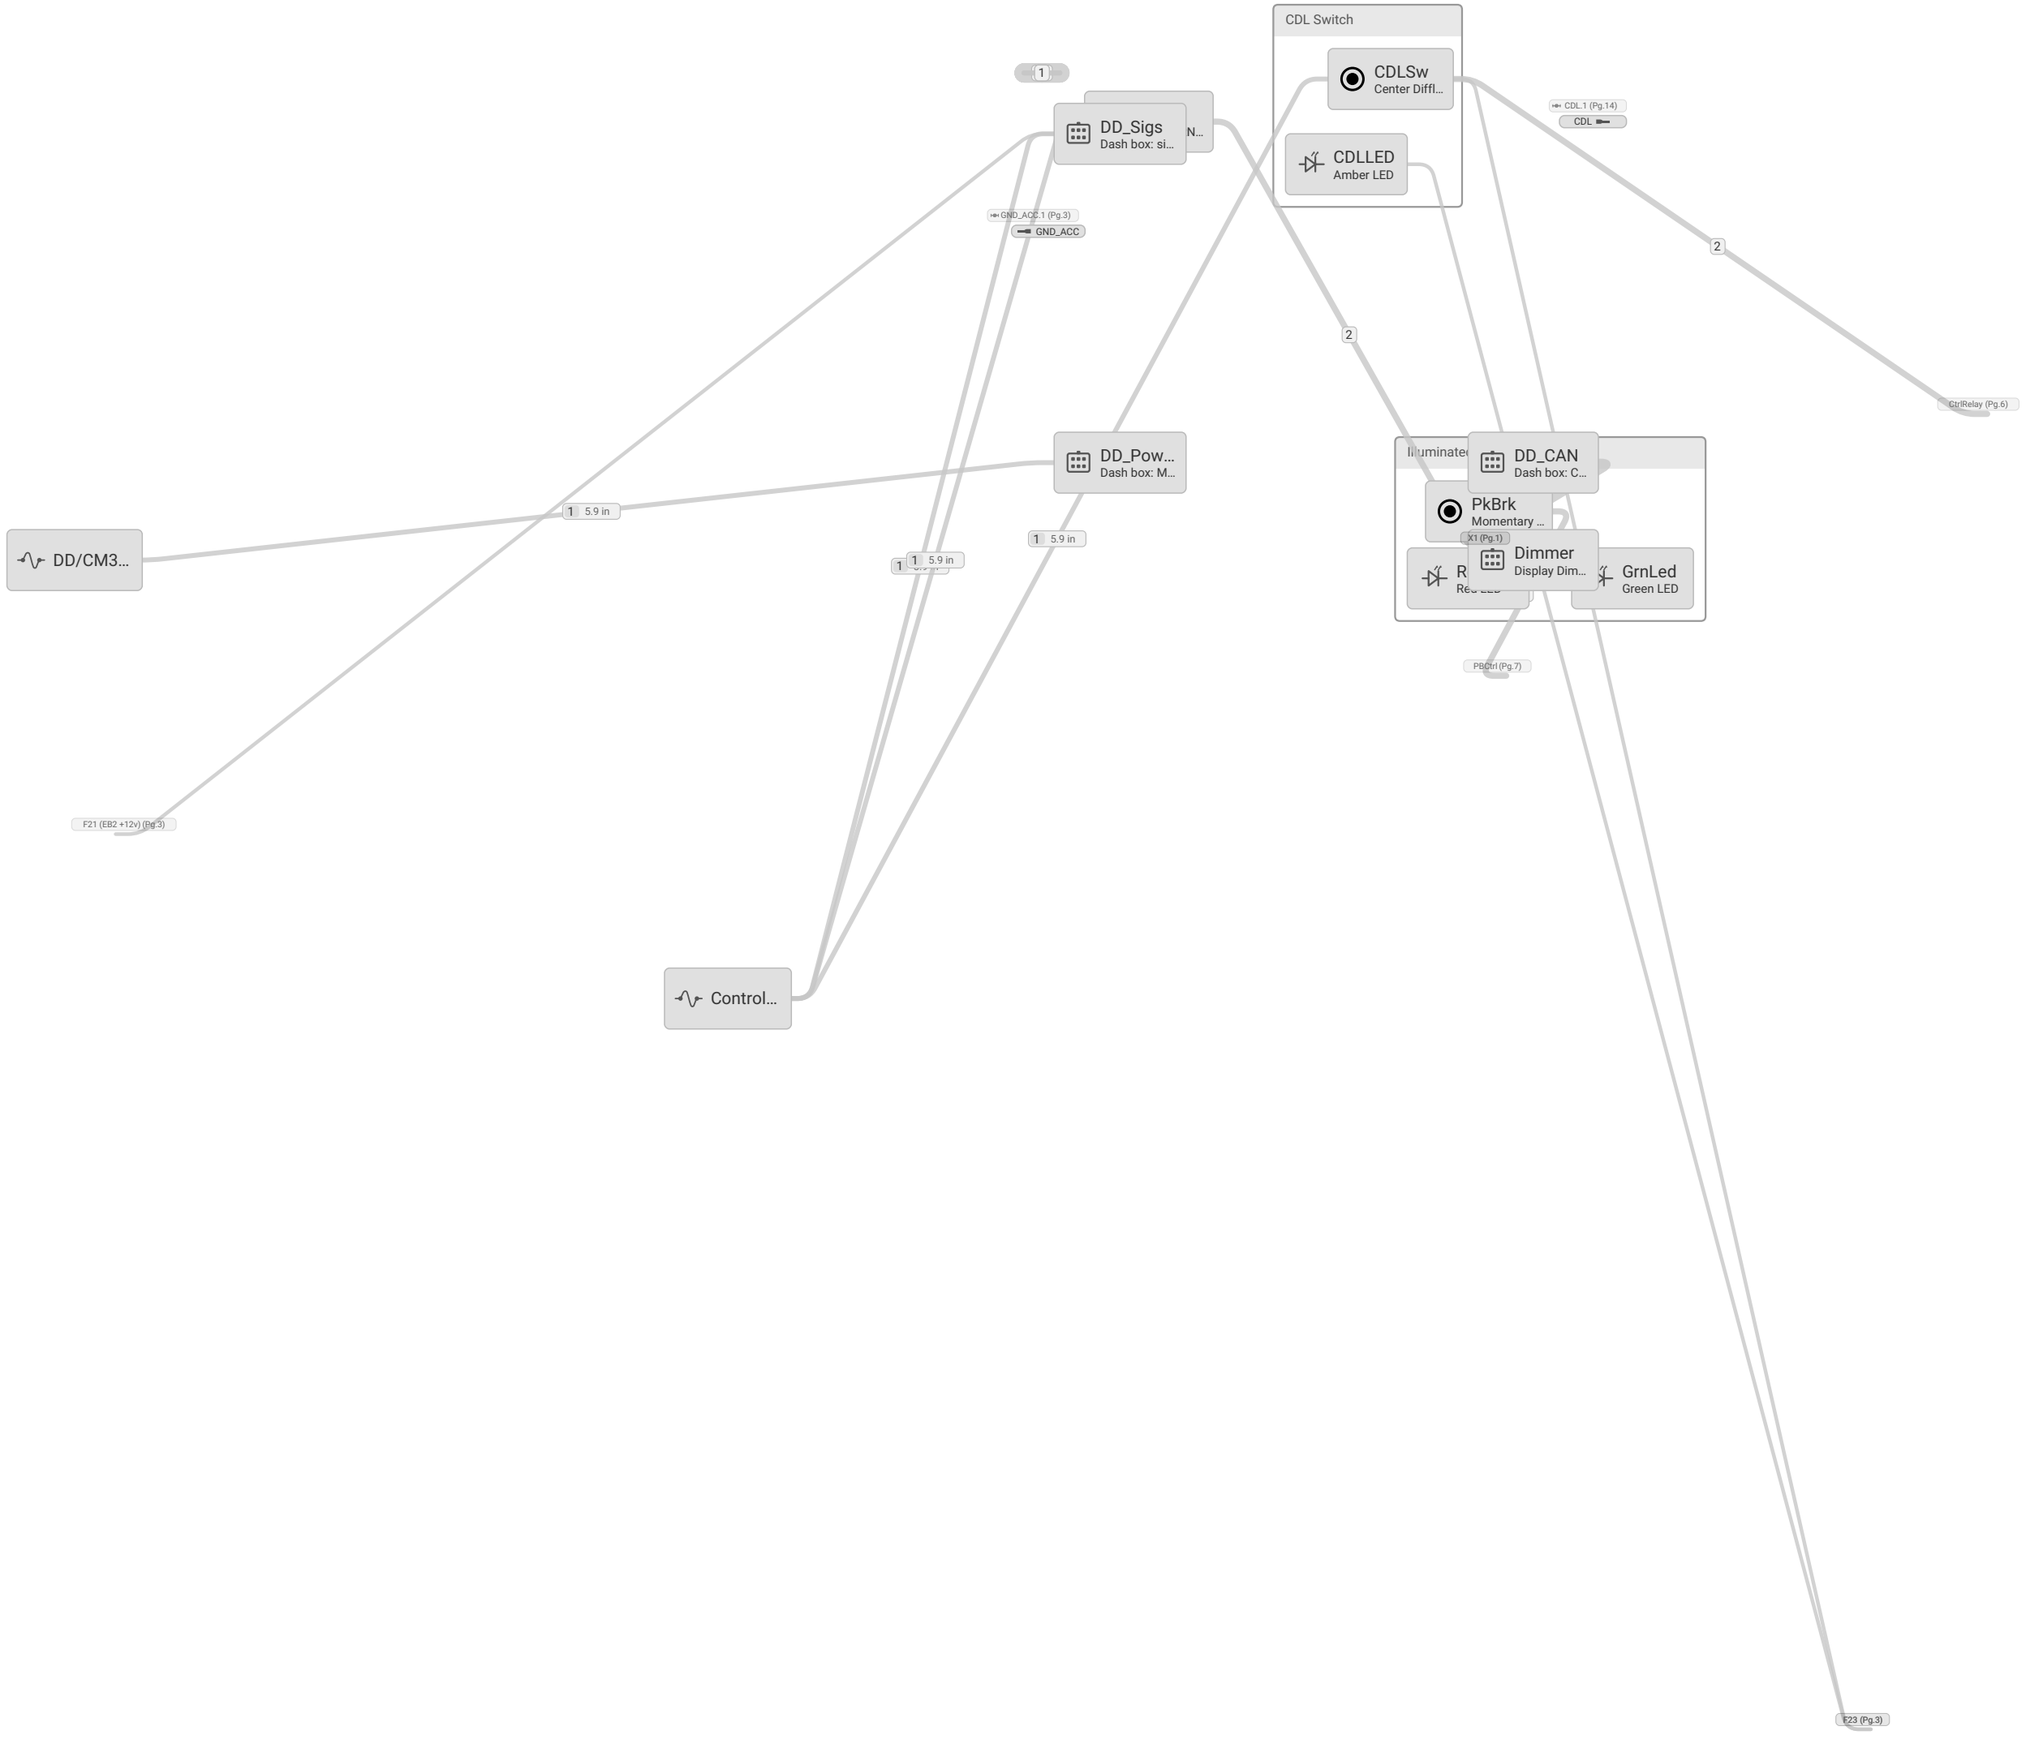
X98

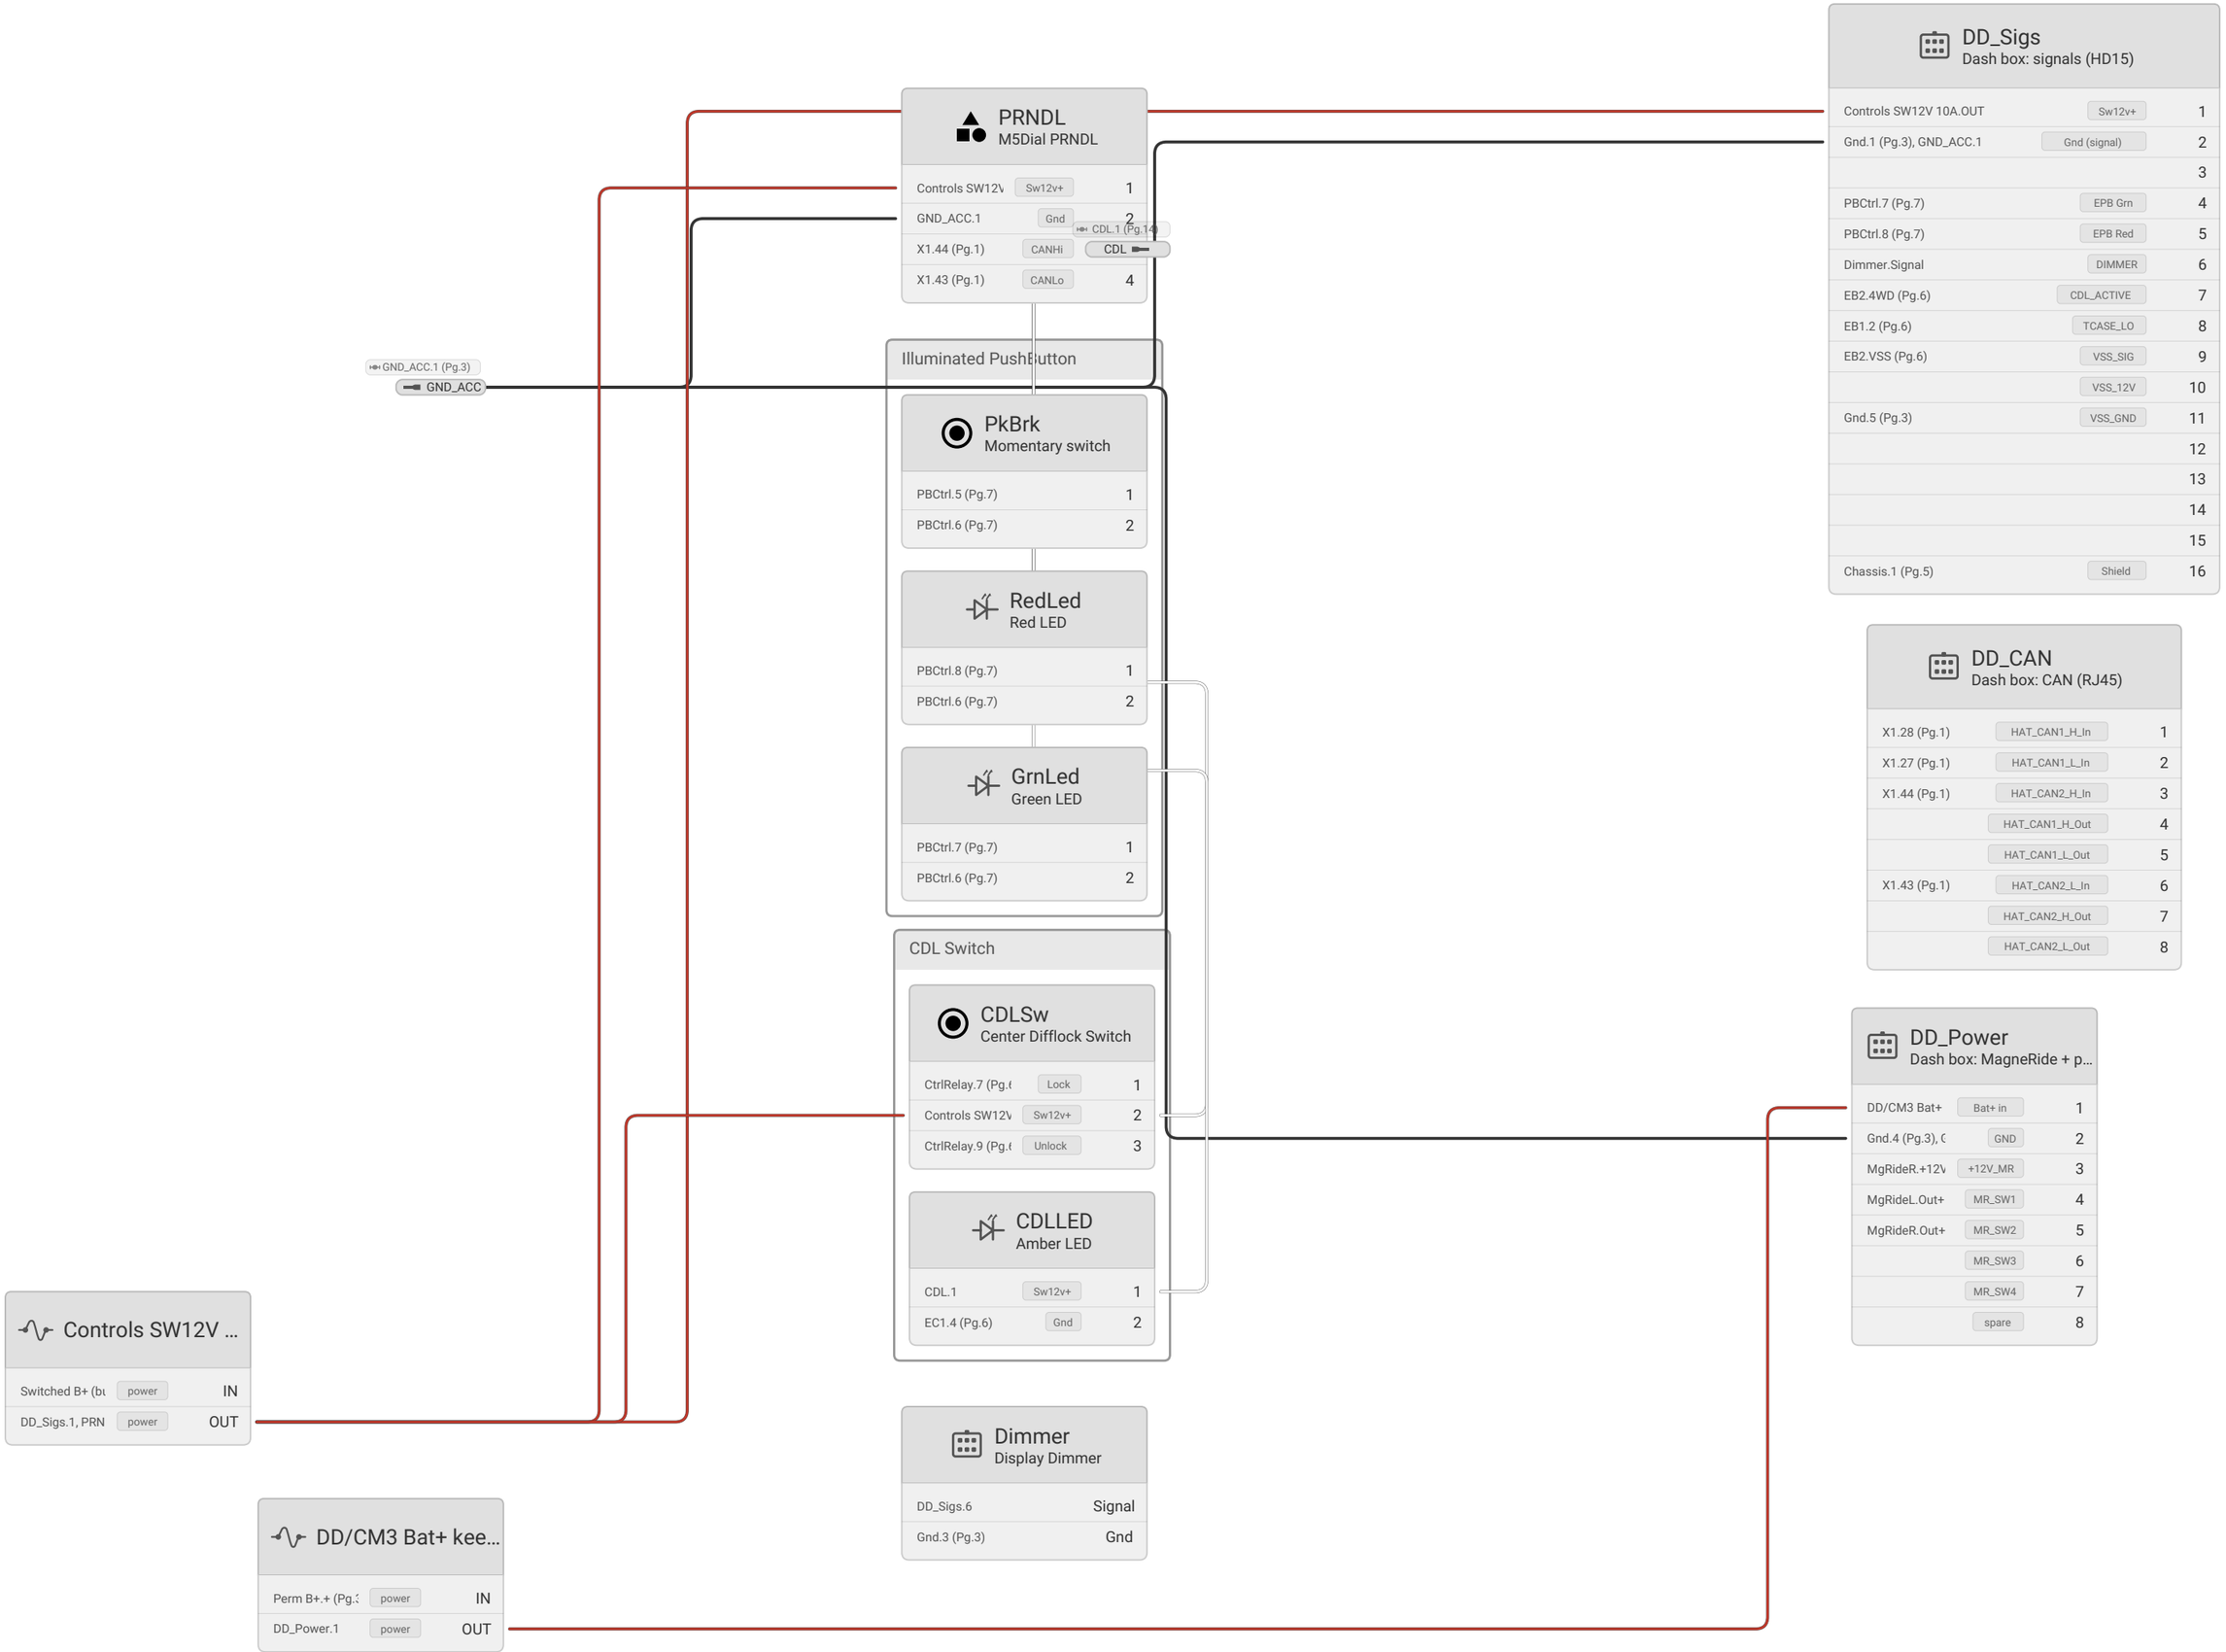
PBCtrl
RevUS Parking Brake controller

Caliper.1	Caliper1	1
Caliper.2	Caliper2	2
X98.1, GND_ACC.1	Ground	3
EPB_PWR.1	Sw12v	4
PkBrk.1 (Pg.8), DD_Sigs	Button	5
RedLed.2 (Pg.8), GrnLed	LEDGnd	6
GrnLed.1 (Pg.8), DD_Sigs	LEDGreen	7
RedLed.1 (Pg.8), DD_Sig	LEDRed	8

EPB_PWR.1 (Pg.14)

EPB_P...


CDL Switch
CDLSw
Center Diffl...
CDLLED
Amber LED
DD_Sigs
Dash box: si...
DD_Pow...
Dash box: M...
DD_CAN
Dash box: C...
PkBrk
Momentary ...
Dimmer
Display Dim...
GrnLed
Green LED
DD/CM3...
Control...
CDL.1 (Pg.14)
CDL
GND_ACC.1 (Pg.3)
GND_ACC
CtrlRelay (Pg.6)
X1 (Pg.1)
PBCtrl (Pg.7)
F21 (EB2 +12v) (Pg.3)
F23 (Pg.3)
5.9 in
5.9 in
5.9 in


PRNDL
M5Dial PRNDL
Controls SW12V
Sw12v+
1
GND_ACC.1
Gnd
2
CDL.1 (Pg.14)
X1.44 (Pg.1)
CANHi
CDL
X1.43 (Pg.1)
CANLo
4
GND_ACC.1 (Pg.3)
GND_ACC
Illuminated PushButton
PkBrk
Momentary switch
PBCtrl.5 (Pg.7)
1
PBCtrl.6 (Pg.7)
2
RedLed
Red LED
PBCtrl.8 (Pg.7)
1
PBCtrl.6 (Pg.7)
2
GrnLed
Green LED
PBCtrl.7 (Pg.7)
1
PBCtrl.6 (Pg.7)
2
CDL Switch
CDLSw
Center Difflock Switch
CtrlRelay.7 (Pg.
Lock
1
Controls SW12V
Sw12v+
2
CtrlRelay.9 (Pg.
Unlock
3
CDLLED
Amber LED
CDL.1
Sw12v+
1
EC1.4 (Pg.6)
Gnd
2
DD_Sigs
Dash box: signals (HD15)
Controls SW12V 10A.OUT
Sw12v+
1
Gnd.1 (Pg.3), GND_ACC.1
Gnd (signal)
2
3
PBCtrl.7 (Pg.7)
EPB Grn
4
PBCtrl.8 (Pg.7)
EPB Red
5
Dimmer.Signal
DIMMER
6
EB2.4WD (Pg.6)
CDL_ACTIVE
7
EB1.2 (Pg.6)
TCASE_LO
8
EB2.VSS (Pg.6)
VSS_SIG
9
VSS_12V
10
Gnd.5 (Pg.3)
VSS_GND
11
12
13
14
15
Chassis.1 (Pg.5)
Shield
16
DD_CAN
Dash box: CAN (RJ45)
X1.28 (Pg.1)
HAT_CAN1_H_In
1
X1.27 (Pg.1)
HAT_CAN1_L_In
2
X1.44 (Pg.1)
HAT_CAN2_H_In
3
HAT_CAN1_H_Out
4
HAT_CAN1_L_Out
5
X1.43 (Pg.1)
HAT_CAN2_L_In
6
HAT_CAN2_H_Out
7
HAT_CAN2_L_Out
8
DD_Power
Dash box: MagneRide + p...
DD/CM3 Bat+
Bat+ in
1
Gnd.4 (Pg.3), (
GND
2
MgRideR.+12V
+12V_MR
3
MgRideL.Out+
MR_SW1
4
MgRideR.Out+
MR_SW2
5
MR_SW3
6
MR_SW4
7
spare
8
Controls SW12V ...
Switched B+ (b
power
IN
DD_Sigs.1, PRN
power
OUT
DD/CM3 Bat+ kee...
Perm B+.+ (Pg.
power
IN
DD_Power.1
power
OUT
Dimmer
Display Dimmer
DD_Sigs.6
Signal
Gnd.3 (Pg.3)
Gnd

EPAS — Schematic

1

Dilon…
Dilong H…

Dilon…
Dilong A…

CHG_PINB.1 (Pg.14)

CHG_PINB

1 5.9 in

Dilong_…
Dilong char…

2

X1 (Pg.1)

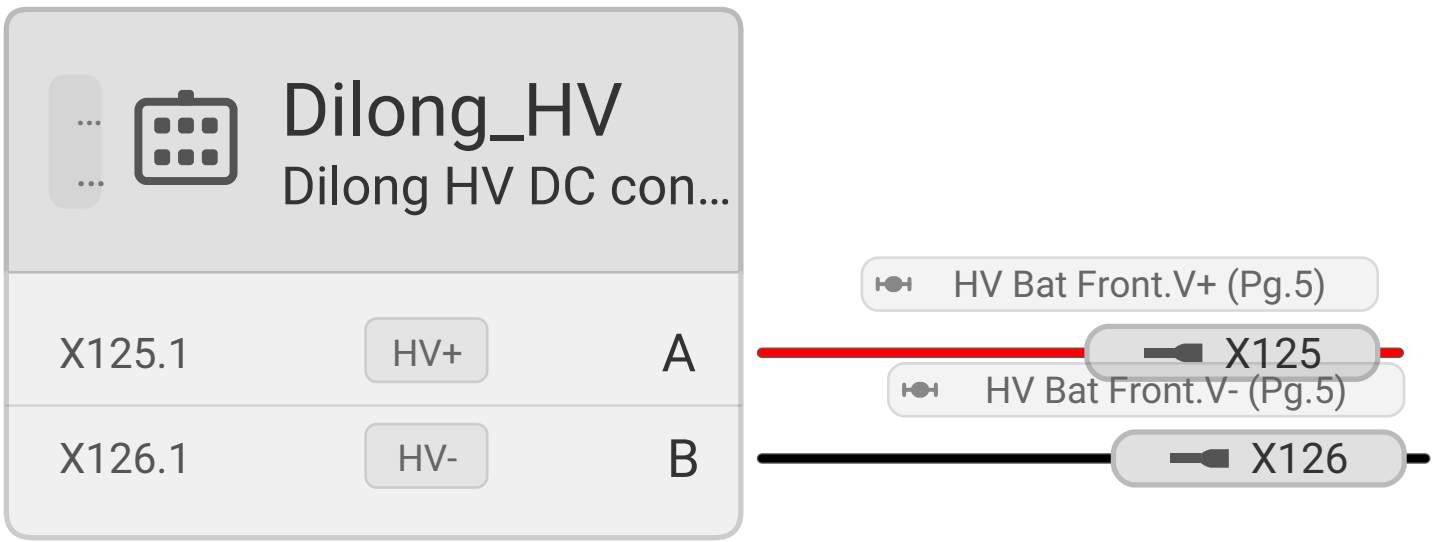
F-CHG_…

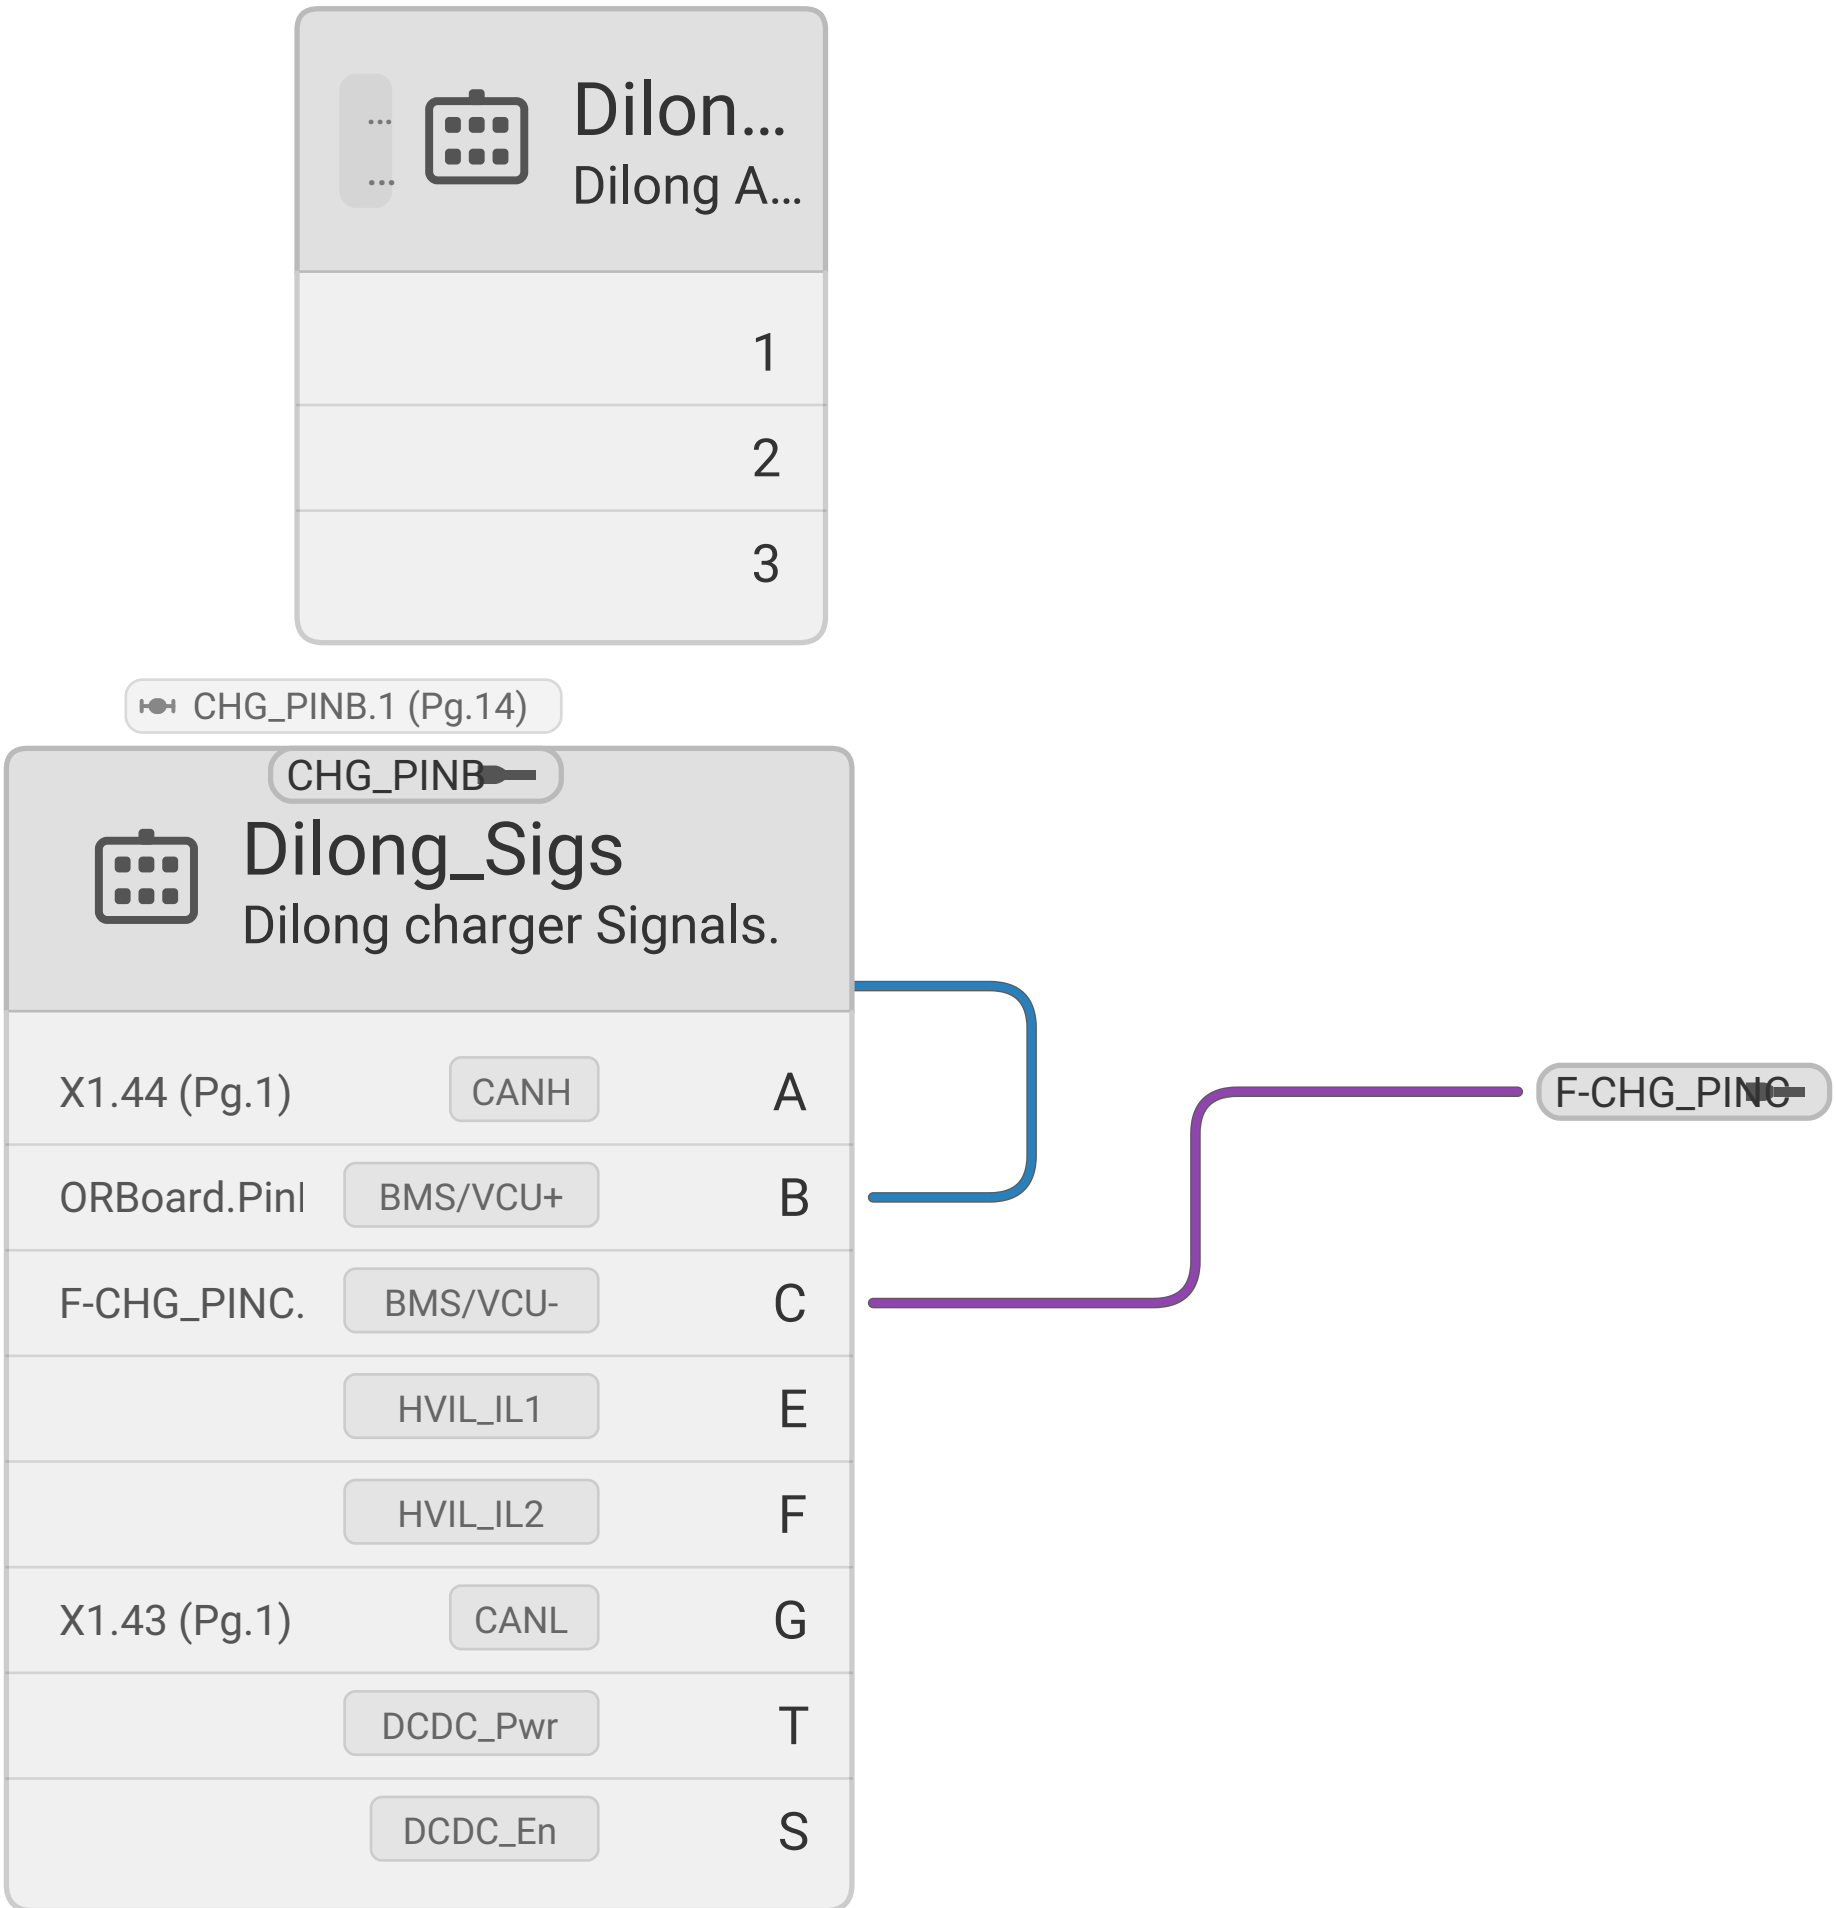
HV Bat Front.V+ (Pg.5)

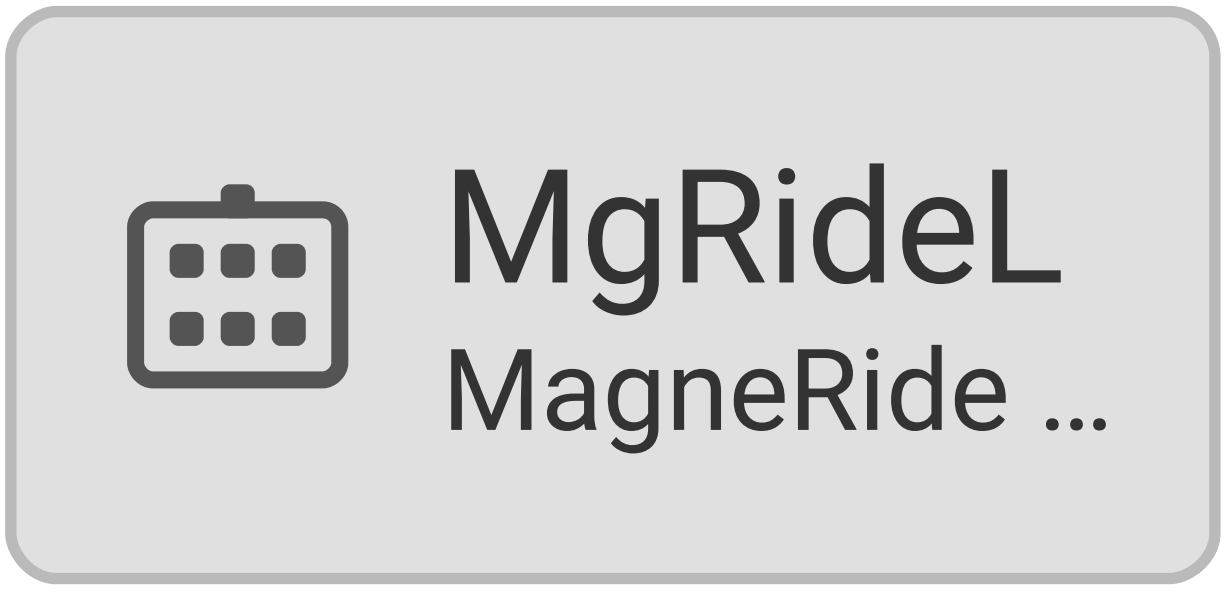
X125

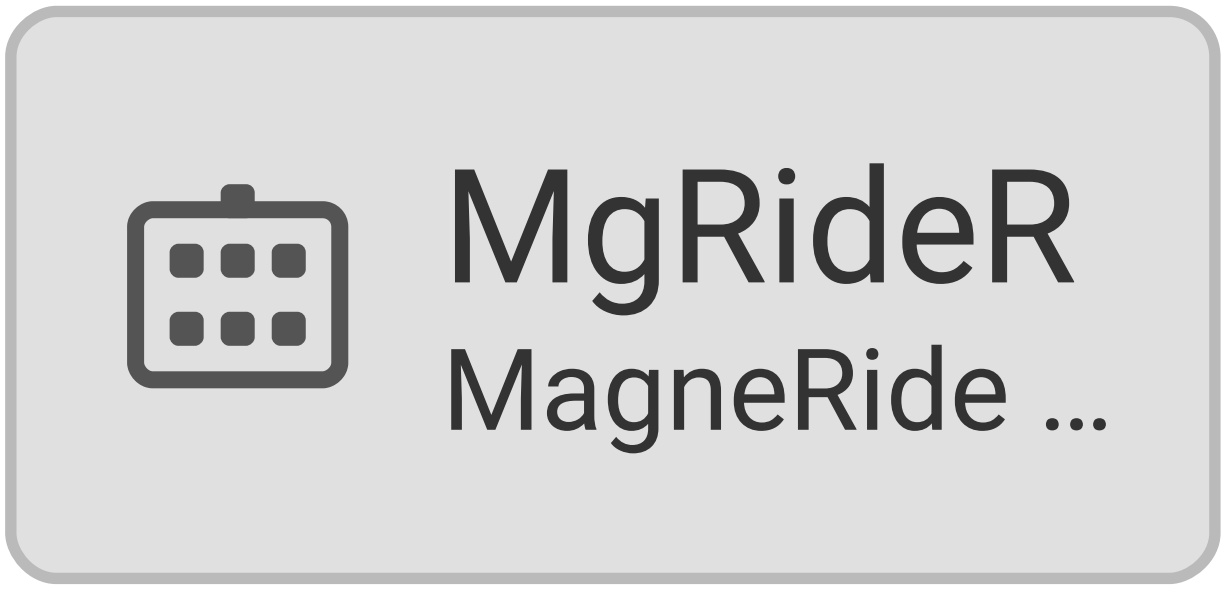
HV Bat Front.V- (Pg.5)

X126


Dilong_HV
Dilong HV DC con...
X125.1
HV+
A
X126.1
HV-
B
HV Bat Front.V+ (Pg.5)
X125
HV Bat Front.V- (Pg.5)
X126


Dilon...
Dilong A...
1
2
3
CHG_PINB.1 (Pg.14)
CHG_PINB
Dilong_Sigs
Dilong charger Signals.
X1.44 (Pg.1)
CANH
A
ORBoard.Pinl
BMS/VCU+
B
F-CHG_PINC.
BMS/VCU-
C
F-CHG_PINC
HVIL_IL1
E
HVIL_IL2
F
X1.43 (Pg.1)
CANL
G
DCDC_Pwr
T
DCDC_En
S


MgRideL
MagneRide …


MgRideR
MagneRide …

MgRideL

MagneRide Left Shock

DD_Power.4 (Pg.8)	Out+
DD_Power.3 (Pg.8)	+12V_MR

MgRideR

MagneRide Right Shock

DD_Power.5 (Pg.8)	Out+
DD_Power.3 (Pg.8)	+12V_MR

1

Cooling…
Cooling Pu…

RADFAN_PWR.1 (Pg.14)

1 5.9 k…

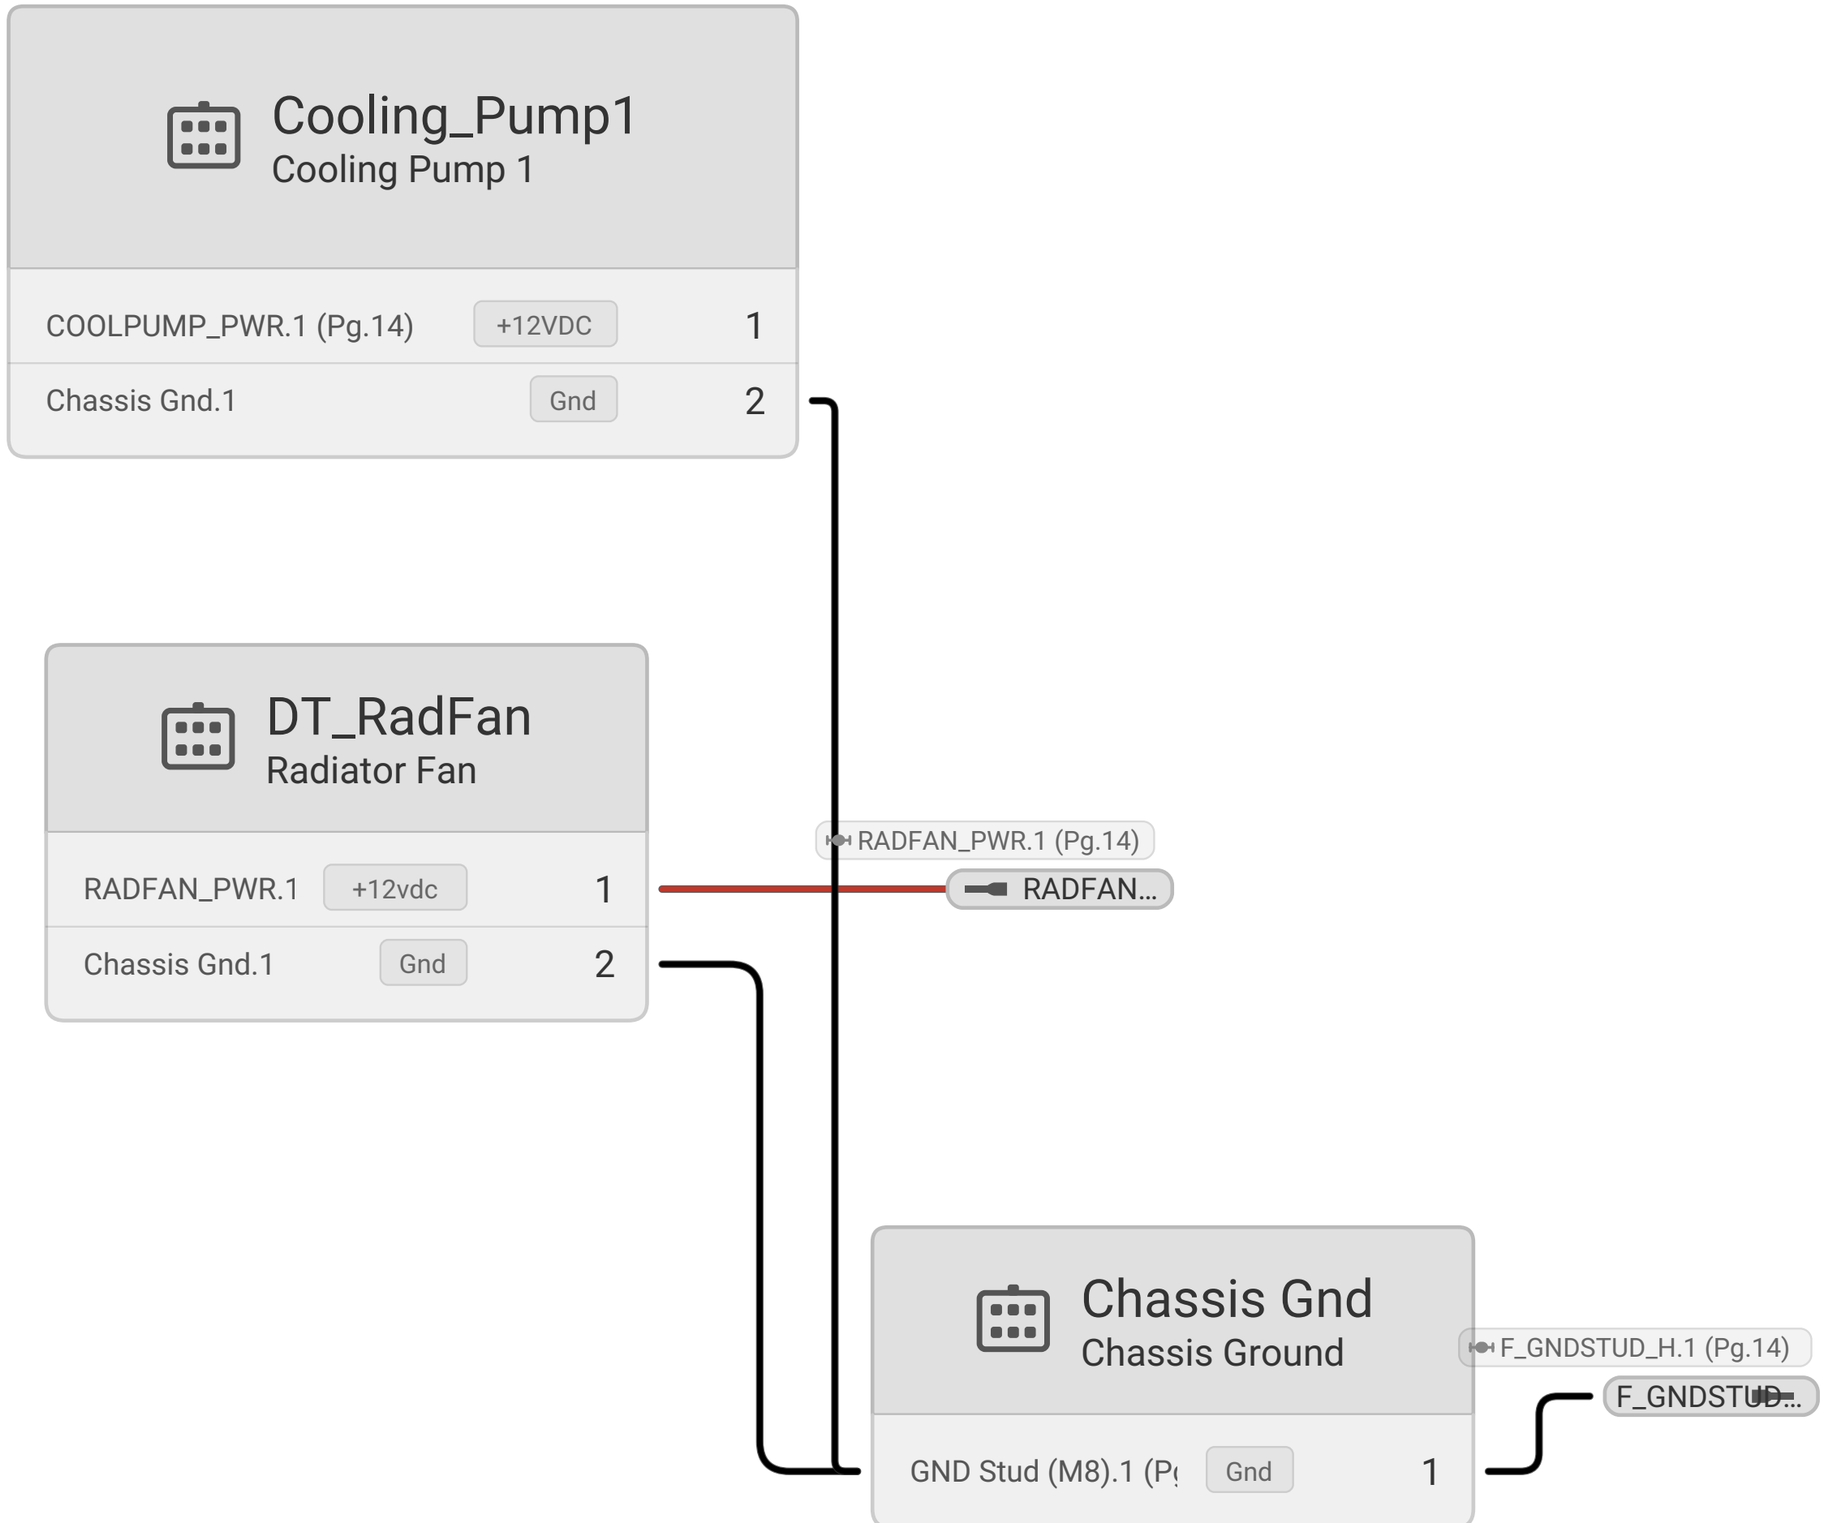
RADFAN_PWR

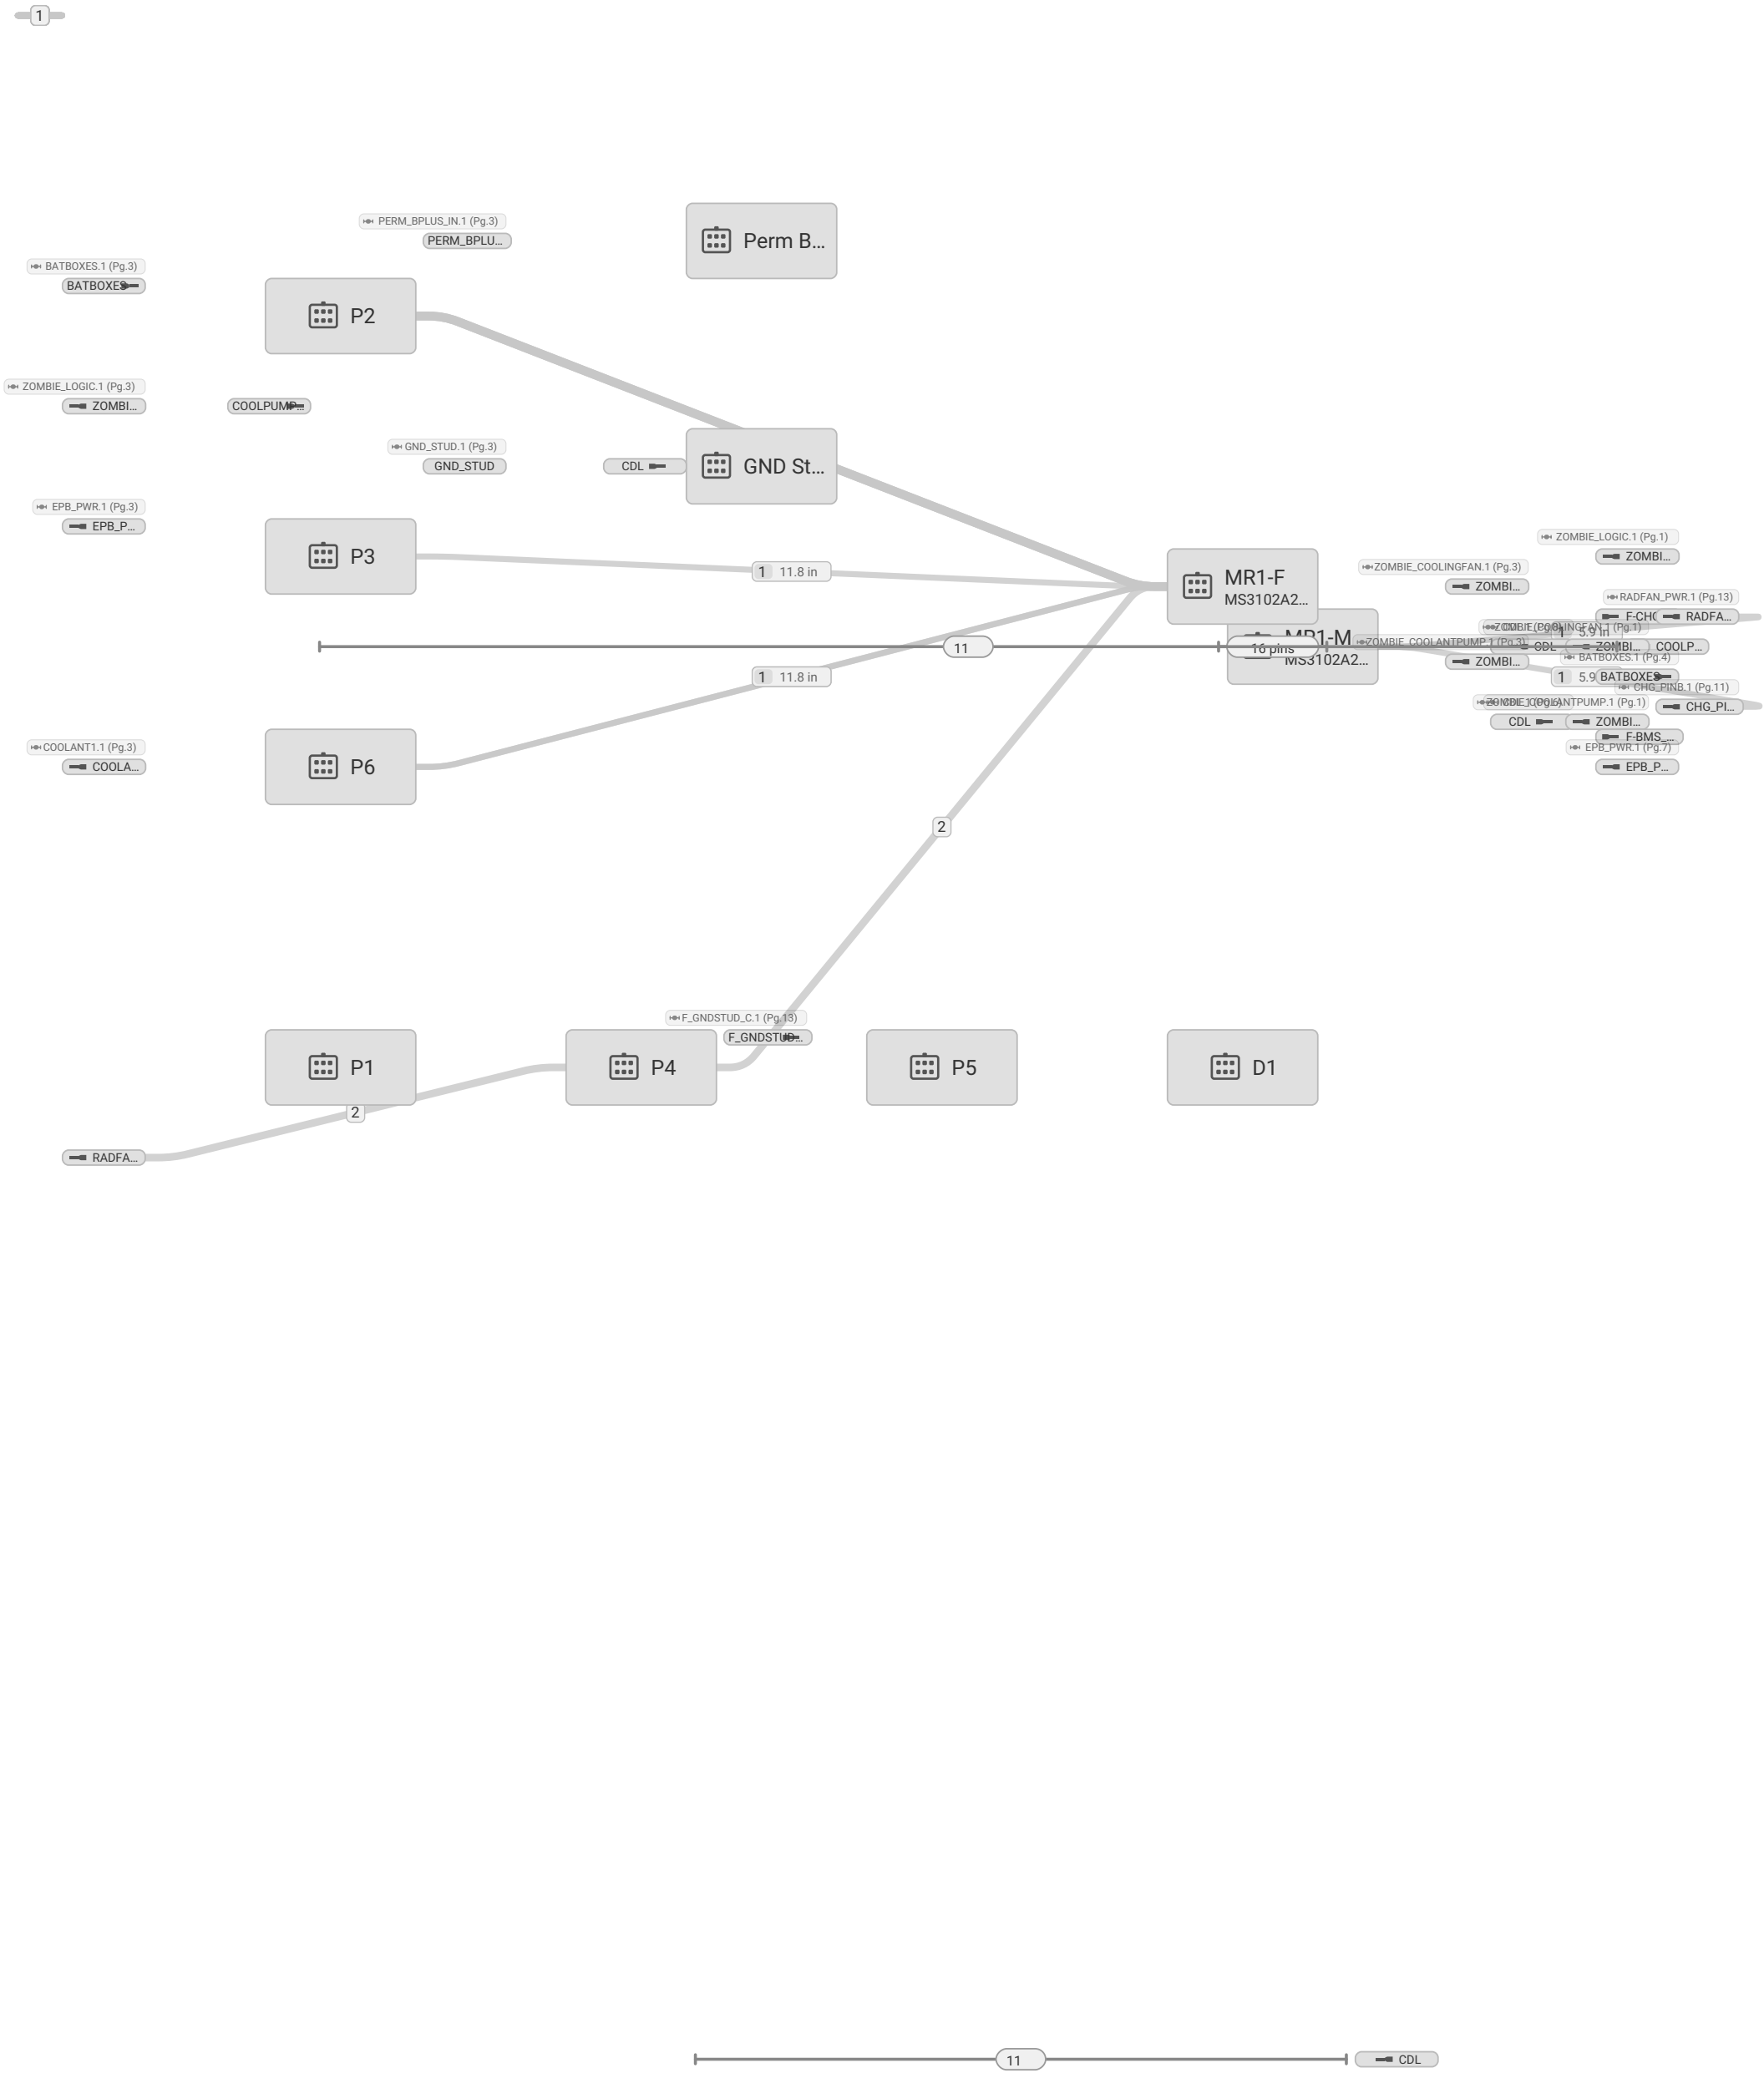
DT_Rad…
Radiator Fan

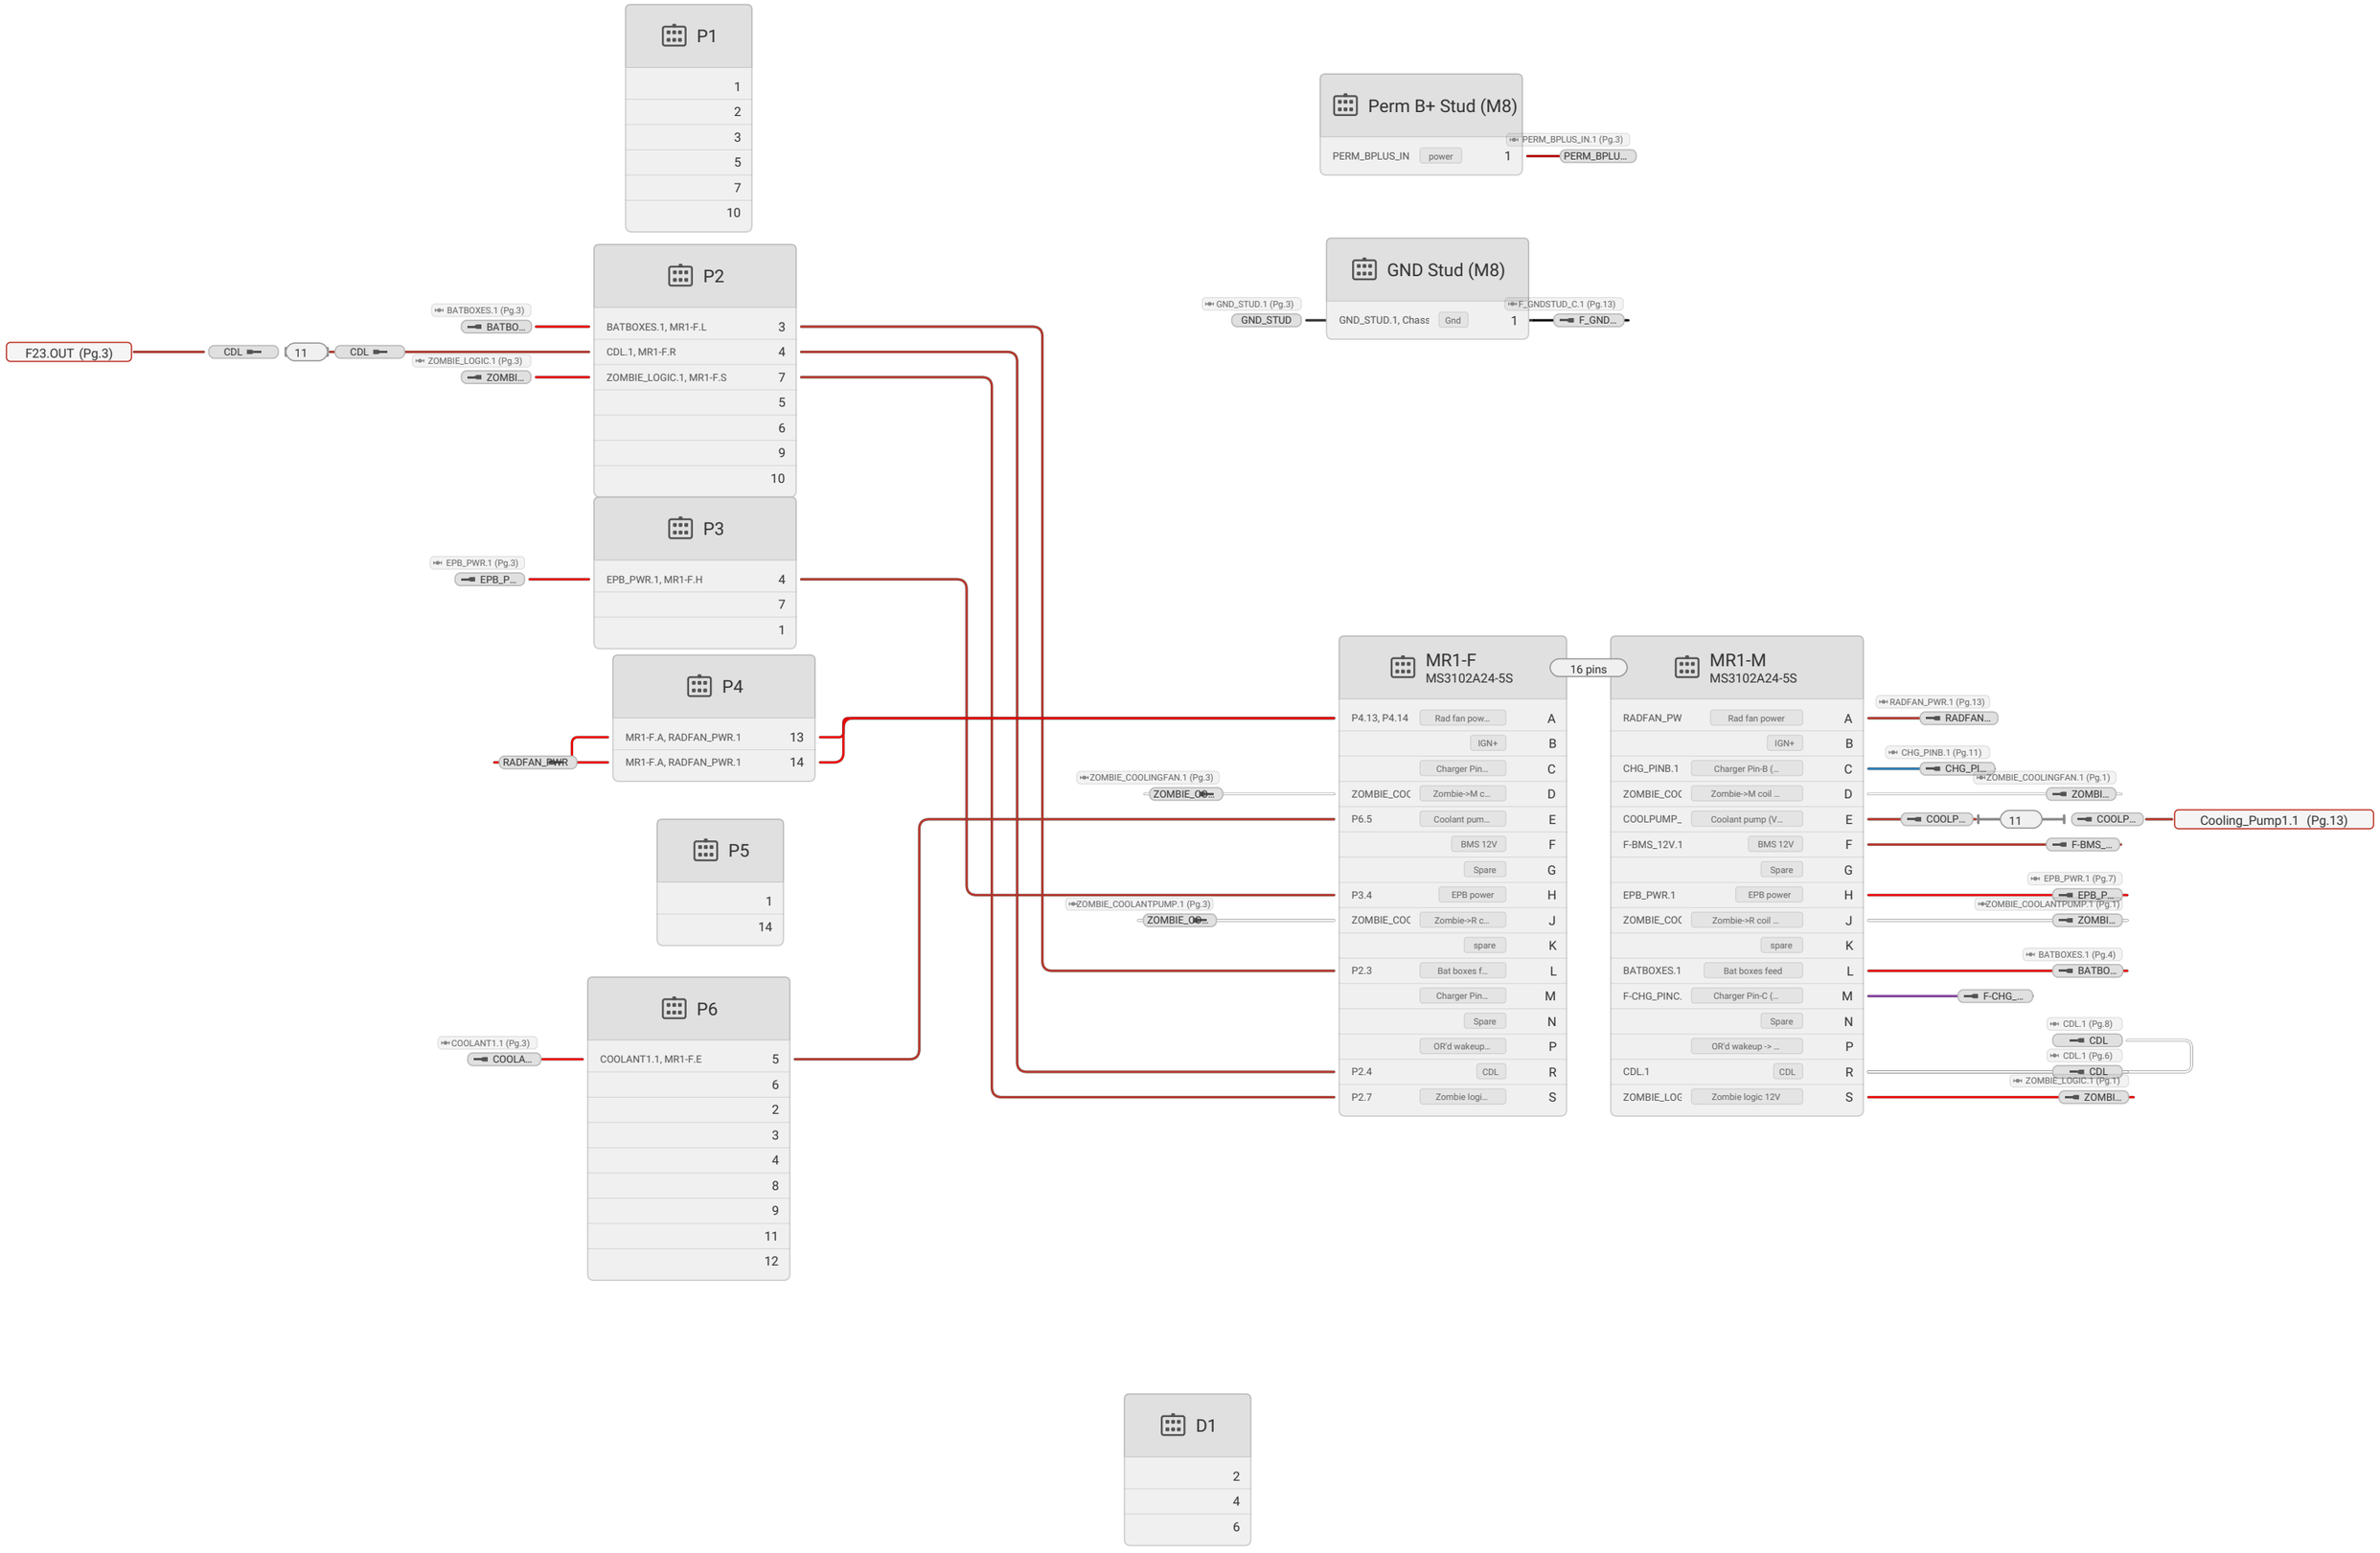
Chassis…
Chassis Gro…

F_GNDSTUD_H.1 (Pg.14)

F_GNDS…


Cooling_Pump1
Cooling Pump 1
COOLPUMP_PWR.1 (Pg.14)
+12VDC
1
Chassis Gnd.1
Gnd
2
DT_RadFan
Radiator Fan
RADFAN_PWR.1
+12vdc
1
Chassis Gnd.1
Gnd
2
RADFAN_PWR.1 (Pg.14)
RADFAN...
Chassis Gnd
Chassis Ground
GND Stud (M8).1 (P
Gnd
1
F_GNDSTUD_H.1 (Pg.14)
F_GNDSTUD...


1
PERM_BPLUS_IN.1 (Pg.3)
PERM_BPLU...
Perm B...
BATBOXES.1 (Pg.3)
BATBOXES
P2
ZOMBIE_LOGIC.1 (Pg.3)
ZOMBI...
COOLPUMP...
GND_STUD.1 (Pg.3)
GND_STUD
CDL
GND St...
EPB_PWR.1 (Pg.3)
EPB_P...
P3
1
11.8 in
MR1-F
MS3102A2...
ZOMBIE_LOGIC.1 (Pg.1)
ZOMBI...
ZOMBIE_COOLINGFAN.1 (Pg.3)
ZOMBI...
RADFAN_PWR.1 (Pg.13)
F-CHC
RADFA...
11
16 pins
MR1-M
MS3102A2...
ZOMBIE_COOLANTPUMP.1 (Pg.3)
CDL
ZOMBI...
COOLP...
BATBOXES.1 (Pg.4)
1
5.9 in
BATBOXES
CHG_PINB.1 (Pg.11)
CHG_PI...
F-BMS_...
EPB_PWR.1 (Pg.7)
EPB_P...
1
11.8 in
COOLANT1.1 (Pg.3)
COOLA...
P6
2
F_GNDSTUD_C.1 (Pg.13)
F_GNDSTUD...
P1
P4
P5
D1
2
RADFA...
11
CDL


P1
1
2
3
5
7
10
P2
BATBOXES.1 (Pg.3)
BATBO...
BATBOXES.1, MR1-F.L 3
CDL.1, MR1-F.R 4
ZOMBIE_LOGIC.1 (Pg.3)
ZOMBI...
ZOMBIE_LOGIC.1, MR1-F.S 7
5
6
9
10
F23.OUT (Pg.3)
CDL
11
CDL
P3
EPB_PWR.1 (Pg.3)
EPB_P...
EPB_PWR.1, MR1-F.H 4
7
1
P4
MR1-F.A, RADFAN_PWR.1 13
RADFAN_PWR
MR1-F.A, RADFAN_PWR.1 14
P5
1
14
P6
COOLANT1.1 (Pg.3)
COOLA...
COOLANT1.1, MR1-F.E 5
6
2
3
4
8
9
11
12
Perm B+ Stud (M8)
PERM_BPLUS_IN power 1
PERM_BPLUS_IN.1 (Pg.3)
PERM_BPLU...
GND Stud (M8)
GND_STUD.1 (Pg.3)
GND_STUD
GND_STUD.1, Chass Gnd 1
F_GNDSTUD_C.1 (Pg.13)
F_GND...
MR1-F
MS3102A24-5S
16 pins
MR1-M
MS3102A24-5S
P4.13, P4.14 Rad fan pow... A
IGN+ B
Charger Pin... C
ZOMBIE_COC Zombie->M c... D
P6.5 Coolant pum... E
BMS 12V F
Spare G
P3.4 EPB power H
ZOMBIE_COC Zombie->R c... J
spare K
P2.3 Bat boxes f... L
Charger Pin... M
Spare N
OR'd wakeup... P
P2.4 CDL R
P2.7 Zombie logi... S
RADFAN_PW Rad fan power A
IGN+ B
CHG_PINB.1 Charger Pin-B (... C
ZOMBIE_COC Zombie->M coil ... D
COOLPUMP_ Coolant pump (V... E
F-BMS_12V.1 BMS 12V F
Spare G
EPB_PWR.1 EPB power H
ZOMBIE_COC Zombie->R coil ... J
spare K
BATBOXES.1 Bat boxes feed L
F-CHG_PINC. Charger Pin-C (... M
Spare N
OR'd wakeup -> ... P
CDL.1 CDL R
ZOMBIE_LOC Zombie logic 12V S
ZOMBIE_COOLINGFAN.1 (Pg.3)
ZOMBIE_C...
ZOMBIE_COOLANTPUMP.1 (Pg.3)
ZOMBIE_C...
RADFAN_PWR.1 (Pg.13)
RADFAN...
CHG_PINB.1 (Pg.11)
CHG_PI...
ZOMBIE_COOLINGFAN.1 (Pg.1)
ZOMBI...
COOLP...
11
COOLP...
Cooling_Pump1.1 (Pg.13)
F-BMS_...
EPB_PWR.1 (Pg.7)
EPB_P...
ZOMBIE_COOLANTPUMP.1 (Pg.1)
ZOMBI...
BATBOXES.1 (Pg.4)
BATBO...
F-CHG_...
CDL.1 (Pg.8)
CDL
CDL.1 (Pg.6)
CDL
ZOMBIE_LOGIC.1 (Pg.1)
ZOMBI...
D1
2
4
6